THE SHARPER IMAGE

"Now You Can Find It!"®

SI676 Instructions

Image to come

SHARPER IMAGE DESIGN™

Read and save these instructions.

Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

This item was created by Sharper Image Design, our company's own product development group. Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,

Richard

Richard Thalheimer Founder, Chairman and Chief Executive Officer

Call 1-800-344-4444 for 24-7 ordering and customer service, or go to www.sharperimage.com, our complete online store.

Table of Contents

Introduction

"Now You Can Find It!"[®] consists of a Base, a mounting bracket and eight individual Locators.

Attach a Locator to an object and the next time you need to find the object, press the matching button on the Base. The Base signals the Locator to beep and the beeps lead you to the Locator (and the object).

For both products, replace the batteries if they are weak or if the product does not appear to function properly.

Batteries

The "Now You Can Find It!"[®] Base runs on two AA alkaline batteries. Each of the color-coded Locators run on CR2032 button lithium coin-cell batteries.

The first set of batteries for the locators have been factoryinstalled. Battery life varies according to frequency of use, but batteries for the Locators should be changed at least once a year.

For both products, replace the batteries if they are weak or if the product does not function properly.

Mounting Bracket and Locator Discs

The mounting bracket can be attached to any convenient location using double-sided adhesive, the magnetic strip or by placing a screw in the wall and sliding the keyhole on the back over the screw.

When the Base is slid onto the bracket, the base automatically turns off.

To personalize the button names, lift off the clear protector, Wrote a name on the card or apply one of the icon stickers next to the button.

Attach the Locator using its keyring or double-sided adhesive pad.

Operation

- 1. The Base must be detached from the bracket.
- 2. Press the button on the Base that matches the color of the Locator you are trying to find.
- 3. The Base sends out several "Search" signals. If the signal reaches the Locator, it will signal back with a series of "beeps."

It may be necessary to move around the area and press the button several times before you are able to locate the object. The Locator and Base will communicate within a 30 foot range.

Statement of FCC/DHHS Compliance

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This product complies with DHHS Rule 21 subchapter J at date of manufacture.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

Statement of FCC/DHHS Compliance

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

One Year Warranty

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for one year from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department 2901-A West 60th Street Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2003

Sharper Image Corporation 650 Davis St., San Francisco, CA 94111 (415) 445-6000

Shop online: www.sharperimage.com

Due to continuing improvements, actual product may differ slightly from the product described herein. V1 11/03

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV NTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.