

Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

This item was created by Sharper Image Design, our company's own product development group. Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,



Richard Thalheimer  
Founder, Chairman and Chief Executive Officer

Call 1-800-344-4444 for 24-7 ordering and customer service or go to [www.sharperimage.com](http://www.sharperimage.com), our complete online store.

## Table of Contents

|   |            |
|---|------------|
| Important Information .....               | 5          |
| Battery Installation .....                | 6          |
| Quick Start .....                         | 8          |
| Floor Selection .....                     | 9          |
| Program Operation .....                   | 10         |
| Charging Indicators and Floor Cones ..... | 12         |
| Remote Control Operation .....            | 13         |
| Cleaning the Dustbin .....                | 14         |
| Additional Information .....              | 16         |
| Warranty .....                            | Back Cover |

## Package Contents

- (1) e-Vac Robotic Vacuum Cleaner
- (1) Remote Control
- (1) Rechargeable Battery Pack
- (1) 9V Battery (For Remote Control)
- (1) Power Supply Pack & (1) Power Supply Pack Cord
- (4) Floor Cones
- (3) Washable Dust Filters (1 Installed and 2 Spare)

## Important Information


Please read this product instruction manual for important safety information and operating instructions.

- Install and fully charge the battery pack before the first use.
- Unplug from outlet when not in use and before servicing.
- Use only as described in this user manual.
- For the first few uses, operate e-Vac until the battery fully discharges and the battery indicator LED turns red, then charge it fully before using again. (This will give maximum battery performance for the life of the battery.)
- Rechargeable battery performance and product running time will increase after the first few charges.
- Check the dustbin after 45 minutes of operation or anytime the e-Vac performance decreases.
- Keep hair, loose clothing, fingers and all parts of the body away from openings.
- Do not allow children to operate this product unsupervised.
- Do not continue to use if any part of this product is damaged, return it to the place of purchase for servicing.

## Battery Installation and Charging

Charging times will vary, depending on the battery temperature.

- The battery pack installs into the bottom of e-Vac.
- Angle the battery into the compartment, inserting the long tab into the matching slot on the edge of the battery compartment.
- Lower the battery pack until it snaps securely into place.
- Attach the power cord to the power pack and plug the power pack into a standard household outlet.
- Connect the power plug into the DC charging jack on the e-Vac. (The jack is located just below the right side of the e-Vac handle.)
- Charge for at least six hours before initial use.

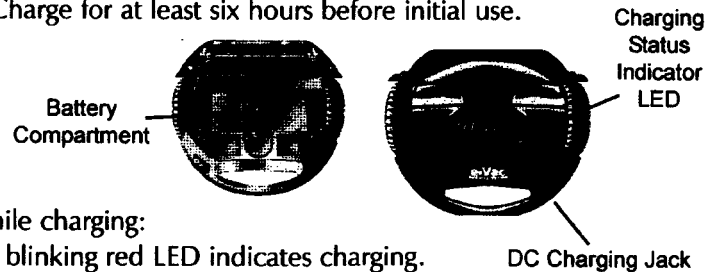


While charging:  
A blinking red LED indicates charging.  
A green LED indicates a full charge.

6

## Remote Control Battery

The remote control requires a 9V alkaline battery.

- Remove the paper tab from the battery terminals before installing.
- Twist the bottom of the remote to remove the battery compartment cover.
- Install the 9V battery with the battery terminals going into the unit.
- Match the large circular terminal on the battery to the larger opening slot inside the bottom of the remote.
- Replace the cover.

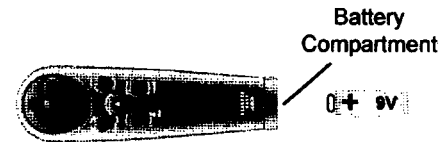

Note: The battery only fits correctly in one orientation. Turn the battery 180 degrees if the battery prevents the cover from locking back into place.

7

## Main Power Switch

The main power switch is located next to the DC jack and must be on for e-Vac to respond to commands. Switch the main power off for long-term storage or to prevent accidental operation.

## Quick Start Operation


- Disconnect e-Vac from the charger.
- If the power switch is not already on, toggle the power switch it to the ON position.
- Select the type of floor e-Vac will be cleaning (Hard/Soft).
- Select the vacuum time (15, 30 or MAX minutes).
- Press the Standby/Run button to begin operation.
- Press the Standby/Run button again to cancel.

Important: e-Vac has many sensors that help it navigate perilous situations. It will not allow itself to fall forward over an edge. **DO NOT** interfere or try to "catch" e-Vac as it approaches the edge of a drop. Doing so might confuse its sensors and actually cause it to fall.

## Floor Type Selection

Select floor type by repeatedly pressing the FLOOR TYPE button directly on the e-Vac control panel or remote control. A blue LED indicates the active selection.


- Select SOFT for cleaning carpets with maximum sweeping action of the rolling brush.
- Select HARD for tile, wood, linoleum and other smooth surfaces for gentle sweeping, reduced friction and optimal hard surface cleaning.

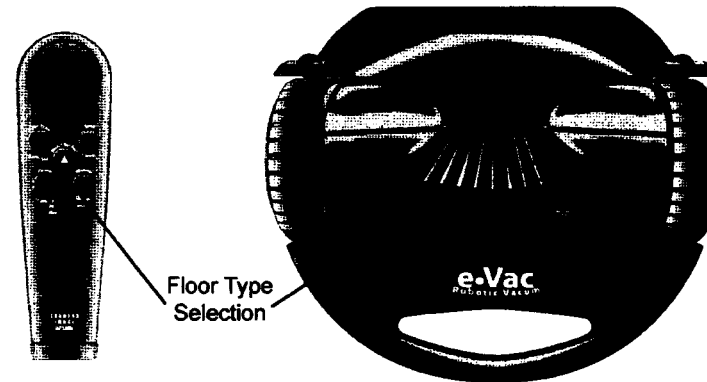

## Standard Vacuuming Program

Select vacuum time by repeatedly pressing the VACUUM TIME button directly on the e-Vac control panel or remote control. A blue LED indicates the active selection.

- The e-Vac shuts off after the programmed time expires.
- MAX will run the unit until the battery completely exhausts (about 45 minutes on a full charge).
- Press the STANDBY/RUN button to toggle on or off the vacuum program.

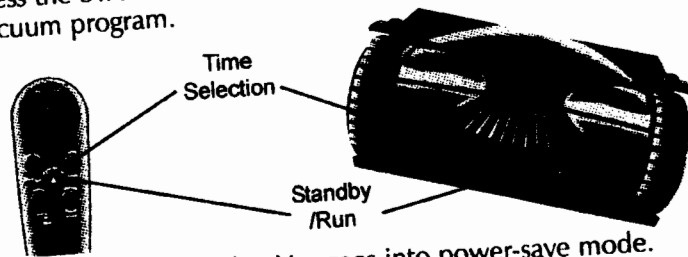


If no buttons are pressed, e-Vac goes into power-save mode. The battery LED indicator will double flash to indicate that the unit is on but in power-save. e-Vac will shut itself off according to its battery level. Press any button to end power-save mode and reactivate the panel lights.

## Spot-Cleaning Program

In the spot-cleaning program, e-Vac concentrates cleaning efforts on the area directly in front of its location when activated.

- Place e-Vac directly behind the area you want it to clean.
- Press the SPOT CLEAN button on the remote or control panel.
- Press the STANDBY/RUN button to toggle on or off the vacuum program.

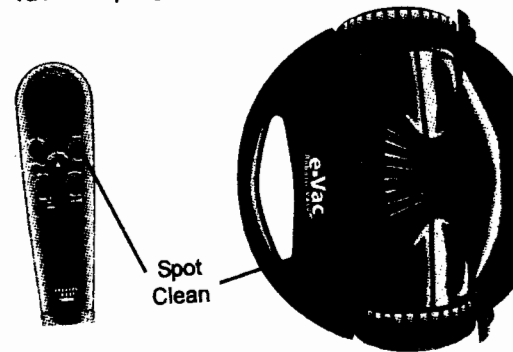

Sweeps  
Over the  
Area in  
Front

### Charging Indicators

In charge mode (connected to the charger):

- A blinking red LED indicates the battery is charging.
- A solid green LED indicates a full charge.

In operating mode (disconnected from charger):

- An amber LED indicates the battery is low.
- A green LED indicates a sufficient charge (5-45 minutes of operation remains).

### Optional Use of Floor Cones

Use the floor cones to prevent e-Vac from entering a specific area or from crossing from carpet to floor while in the SOFT floor mode.


Place the cones up to 12 inches apart to prevent e-Vac from moving into an area.

Cones are not necessary to block edges or stairway landings.

### Remote Control Operation

The Floor Type, Vacuum Time, Standby/Run and Spot Clean buttons on the remote control are identical in function to those on the control panel. Unique functions of the remote control include an On/Off button for the vacuum and a button activated joystick.

- The vacuum on/off button turns the vacuum and brushes off for quieter operation while moving e-Vac from place to place.
- In the programmed cleaning modes, the joystick on the remote steers e-Vac while the active program continues to run. The center button will stop any active cleaning program and put the remote into full remote control mode.
- In full remote control mode, the joystick on the remote moves e-Vac forward and reverse, or turns it left and right.

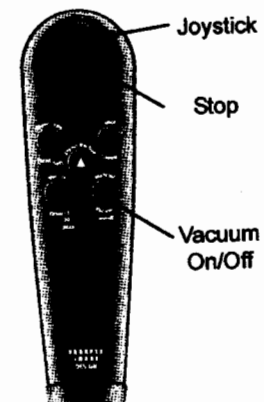

## Accessing and Cleaning the Dustbin

Check and empty the dustbin often to assure maximum performance.

### Unlock the compartment.

- Press on the circle graphic on the dustbin release (located above the control panel).

- Remove the dustbin compartment.



Caution: The edge of the dustbin locks to the lid. Do not pull on the locked lid.

### Remove the lid and empty the dustbin.

- To prevent spilling, hold upright.
- Press on the edge of the transparent container—below the locking tab on the lid.
- Pivot the lid from the container.
- Empty the dustbin into a trash can.



Dustbin Release

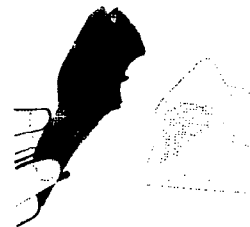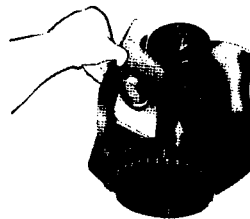

## Accessing and Cleaning the Dustbin

### Inspect and clean the dustbin filter.

- Inspect the filter and wash if extremely dirty.
- As needed, remove and wash the filter in warm sudsy water, rinse and air-dry.

Rotate between the included filters to allow continued operation while a washed filter is drying.

### Reassemble the dustbin.

- Place the filter between the rear wall of the dustbin and the tabs at the bottom. (Clear away any particles at the bottom of the dustbin to assure that the filter seats properly.)
- Push the filter against the rear of the dustbin. (The circular rib on the filter inserts into the rubber gasket of the dustbin.)

Important: The filter must rest against the back of the dustbin.

- Align the blue and green dots on the dustbin and lid.
- Press the pieces together until the tabs lock into place.
- Slide the container back into the main housing.
- Press down on the left and right edges of the lid to lock the compartment back into place.

### Additional Information

If the power switch is turned on, the unit is put into Standby mode with the settings defaulted to SOFT floor and a duration of 15 minutes. Standby mode means that all motors are off and the unit is waiting for programming, activation, or a signal from the remote control.

If the unit is in Standby mode without any activity, the unit enters Power-Save mode. Pressing any button on the unit or the remote will return the unit to Standby mode.

While in any vacuuming or spot clean program, press any button on the remote control to change operation.

If the brushes become tangled or the unit is trapped and cannot work its own way out, e-Vac will shut itself off and the CHECK BRUSH LED will flash. Turn off the main power switch and clean away any materials collected on the brush. Remove the brush if necessary to clean/clear obstructions. CHECK BRUSH LED will stop flashing when the obstruction is removed.

If it is lifted during operation, e-Vac stops and cancels its program. To resume operation, place it back down on the floor and restart the program.