

STL SI727 User Manual

The Si727 is an Vacuum cleaner which can clear you room automatically. You can also control it by a remote control unit.

1. Insert the battery into the battery compartment under the main unit.
2. Connect the 18V adapter to the main unit to charge the battery. The red LED flashes during charging. When the battery is fully charge the green LED then turns on.
3. Turn on the power switch at the side of the main unit.
4. Select the cleaning time 15 minutes / 30 minutes / MAX (until the battery is low) by press and release the TIME button until the correspondence LED is turned on.
5. Select the floor surface condition HARD / SOFT (carpet) by press and release the HARD / SOFT button until the correspondence LED is turned on.
6. If you only want to clean a small area, press the SPOT button to start cleaning. If you only want to clean the whole room, press the START button to start cleaning.
7. When the bumper of the unit hits something, the unit will find a better way to run.
8. When the unit detects a step, the unit will turn backward to prevent dropping out of the step.
9. When the unit detects the wall, the unit controls the wheel motors to run along the wall.
10. When the cleaning time is exceed the preset time, the unit will stop. If no key is pressed within 30 seconds, the unit will go into sleep mode to save power. All LEDs are turned off.
11. During cleaning process, if the battery is too low, the unit will stop running, turns on the low battery LED (red) and waiting for charge.
12. You can control the main unit by a remote control unit. If the main unit is in sleep mode (all LEDs are turned off), press the POWER button on the remote control to wake up the main unit. The LEDs on the main unit will turn on. Press and release the TIME or HARD/SOFT on the remote control to select the cleaning time or the floor surface condition.
Press SPOT button on the remote control to start cleaning a small area or press the START button on the remote control to clean the whole room. When the unit is cleaning automatically, press the DRIVE button on the remote control to stop the main unit and then press the joy stick on the remote control to control the main unit to run forward/backward/turn left/ turn right.
13. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.