

Confidential

WR-2 Alarm Receiver User Manual

WR-2 is a centralized alarm receiver to receive alarms transmitted by different models of alarm Transmitters: WT-1, WP-1, WFM-1. It gives audio and visual indication to tell which programmed transmitter is sending the alarm.

1. Control Buttons

- 1.1 POWER button
- 1.2 ALARM RESET button
- 1.3 PROGRAM button
- 1.4 CONFIRM button

2. Indicators

- 2.1 Power on indicator
- 2.2 Programming Indicator
- 2.3 Station Indicator

3. Power Connector

- 3.1 9V AC adapter

4. Installation

- 4.1 Plug in the AC adapter
- 4.2 Press the Power button to turn on the power. The red LED should be ON.
- 4.3 Program the alarm transmitters into the monitor locations using the procedures in Section 5.
- 4.4 Test the completion of installation by pressing the "Check" button on the Model WT-1 transmitter or activate an alarm from the Pendant (Model WP-1) or wireless floor mat transmitter (Model WFM-1)

5. Program a Model WT-1 Sentry Transmitter Location

- 5.1 Press PROGRAM button on Receiver for two seconds
- 5.2 Green LED will lit
- 5.3 Red Station LED will flash
- 5.4 Alarm tone pattern #1 will sound at low level
- 5.5 Press PROGRAM button to select the next empty location
- 5.6 Alarm tone pattern #2 will sound at low level
- 5.7 Press CHECK button on Transmitter until a long beep is heard from the Receiver and the station LED stops flashing
- 5.8 Press PROGRAM to program next empty station
- 5.9 Press CONFIRM button to return to normal monitor mode
- 5.10 programming can be checked any time by pressing the CHECK button on the Transmitter

6. Program a Model WP-1 Pendant Location

- 6.1 Press PROGRAM button on Receiver for two seconds
- 6.2 Green LED will lit
- 6.3 Red LED will flash indicating the first empty station location
- 6.4 Alarm tone pattern #1 will sound at low level
- 6.5 Press PROGRAM button to select the next empty location
- 6.6 Alarm tone pattern #2 will sound at low level

- 6.7 Press ALARM button on Pendant until a long beep is heard from the Receiver and the station LED stops flashing
- 6.8 Press PROGRAM to program next empty station
- 6.9 Press CONFIRM button to return to normal monitor mode

7. Program a Model WFM-1 Sentry Mat Location

- 7.1 Press PROGRAM button on Receiver for two seconds
- 7.2 Green LED will lit
- 7.3 Red LED will flash indicating the first empty station location
- 7.4 Alarm tone pattern #1 will sound at low level
- 7.5 Press PROGRAM button to select the next empty location
- 7.6 Alarm tone pattern #2 will sound at low level
- 7.7 Press the Floor Mat to close the contact until a long beep is heard from the Receiver and the station LED stops flashing
- 7.8 Press PROGRAM to program next empty station
- 7.9 Press CONFIRM button to return to normal monitor mode

8. Program a Model WSR-1 Repeater

- 8.1 Press PROPRAM button on Receiver for two seconds
- 8.2 Green LED will lit
- 8.3 Press CHECK button on Repeater until a long beep is heard from the Receiver and the station LED stops flashing

9. Error tone in Programming

- 9.1 If all locations are occupied, sound an error tone "beep beep beep" after PROGRAM button is pressed
- 9.2 If the same ID as an programmed device is received, sound en error tone "beep beep beep"

10. To erase a programmed location

- 10.1 Press Program and alarm Reset button together for two seconds
- 10.2 The first programmed location LED will flash
- 10.3 Alarm tone pattern #1 will sound at low level
- 10.4 Press Program to select the next location
- 10.5 Alarm tone pattern #2 will sound at low level
- 10.6 Press Alarm Reset to erase a location
- 10.7 A long beep will sound and the LED will be off
- 10.8 Press Confirm button to return to normal monitor mode

11. Receiving Sentry alarms

- 11.1 when an alarm is triggered, the LED will flash at 2 Hz and the corresponding alarm pattern will sound
- 11.2 Care taker should press the ALARM RESET button to indicate that someone will visit the patient.
- 11.3 The LED will stop flashing but remains lit.
- 11.4 If there are more than one alarm received, press the ALARM RESET button again will select the next alarm location
- 11.5 The corresponding alarm pattern will sound
- 11.6 Press CONFIRM button to select the station to visit
- 11.7 The LED will flash slowly at one second interval
- 11.8 After the alarming situation is cleared, the Alarm transmitter will send a signal to the Receiver to turn off the LED
- 11.9 If the alarm is from a Pendant or Floor Mat the LED will be off after steps 10.1 - 10.6.

12. Out of Range Monitoring (for Transmitter Model WT-1 only)

- 12.1 Out of range is checked by the receiver every 60 seconds.

12.2 Operating procedure is same as Sentry alarm except a single tone alarm at 2 HZ is sounded.

13. Battery Low Indication

13.1 When Battery Low message is received, the corresponding LED will flash at 0.5 Hz.

13.2 Other operating procedure is same as Sentry alarm except

14. Log off Sentry Transmitter

14.1 When an alarm is triggered, Care giver can log off the Sentry Transmitter by steps 10.4 - 10.7

14.2 The Receiver will not monitor out of range for a logged off Transmitter.

15. Specification

RF frequency: 915 Mhz ISM band transceiver

Power: 9V AC adapter

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.