

WSR-1 RF Repeater User Manual

WSR-1 is a RF repeater to extend the operating range of the Wireless Sentry system.

1. Control Buttons

- 1.1 POWER button
- 1.2 PROGRAM button

2. Indicators

- 2.1 Power on indicator
- 2.2 Programming Indicator
- 2.3 Function Indicator

3. Power Connector

- 3.1 9V AC adapter

4. Installation

- 4.1 Plug in the AC adapter
- 4.2 Press the Power button to turn on the power. The red LED should be ON.
- 4.3 Program the Repeater ID into the Alarm receiver WR-1 or WR-2. Refer to the appropriate alarm receiver operation manual.
- 4.4 Test the completion of installation by pressing the "Check" button on the Model WT transmitter or activate an alarm from the Pendant (Model WP-1) or wireless floor mat transmitter (Model WFM-1)

5. Normal Operation

- 5.1 Mount the WSR-1 Repeater unit at a place some where between the farthest Transmitter and the Alarm Receiver
- 5.2 No attention is required as all alarm signals will be repeated automatically.

6. Specification

- RF frequency: 915 Mhz ISM band transceiver
- Power: 9V AC adapter

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.