

Drift X170

User Manual

1. Introduction

The Drift X170 is a wireless sports action camera designed primarily for extreme sports such as skiing, snowboarding and mountain biking. The camera is designed to allow users to capture action colour video and audio in high resolution onto either built-in memory or removable media.

The camera is supplied with a wireless remote control that allows the user to start and stop recording remotely.

2. Package Contents

- a. Camera unit
- b. Remote control
- c. 2 x AA batteries
- d. Remote control
- e. USB cable
- f. AV cable
- g. User manual
- h. Helmet mount (including the universal clip and screw mounting)
- i. Nylon headstrap
- j. Goggle mount
- k. Short clip strap
- l. Velcro pad
- m. Handlebar mount

3. Usage

- a. Camera unit
 - i. The camera unit has four buttons: "Play/Record", "Menu", "Up" and "Down"
 - ii. When the camera is off, press the "Play/Record" button to turn the camera on. When the camera is on, hold down the "Play/Record" button for a few seconds to turn the camera off
 - iii. Press the "Menu" button to change the settings on the camera. In the menu, use the "Up" and "Down" buttons to navigate and the "Play/Second" button to select an option. Use the "Menu" button to go back to the previous level.
- b. Remote control
 - i. The remote control has two buttons: "Record" and "Stop"
 - ii. Press the "Record" button to start recording
 - iii. Press the "Stop" button to stop recording
- c. USB connection to computer

- i. Plug the small end of the USB cable into the camera, and the other end into a free USB port in the computer
 - ii. The camera will show up as a new drive on the computer
 - iii. Double click files from the new drive for playback
 - d. AV cable
 - i. Plug the small end of the AV cable into the camera, and the other end into the appropriate AV (composite) sockets on a TV
 - ii. The camera will divert all display from the LCD to the TV screen
 - iii. Remove the AV cable to resume viewing on the LCD screen
4. Specifications
 - a. Main camera
 - i. Power: DC 3V, 2x AA size batteries
 - ii. RF receiver: 433.92MHz ISM band
 - b. Remote control
 - i. Power: DC 3C, 1x CR2032 size battery
 - ii. RF transmitter: 433.92MHz ISM band

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Please visit www.driftnnovation.com for further information.