


Controller modes & instructions


The transmitter built-in two modes, Mode 1 & Mode 2, in line with different customer's usage pattern. Keep pushing button B to right, than turn on the transmitter power to change Mode 1 or Mode 2.

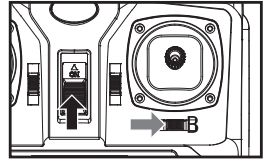

MODE 1


Operating direction

Hover up and down

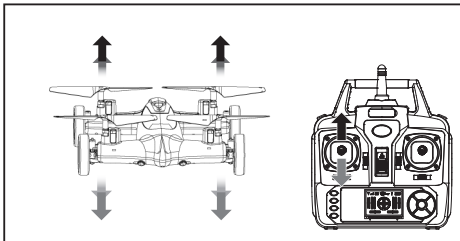


Push the throttle up or down, the quadcopter flies upward or downward.

Forward and backward

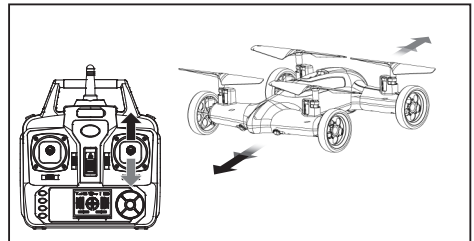


Push the direction lever up or down, the quadcopter flies forward or backward.

Turn Left and Right

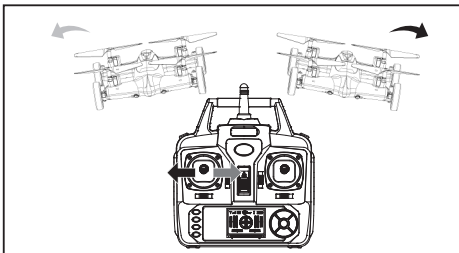

Pull the throttle left or right, the quadcopter turns to left or right.


Sideward fly

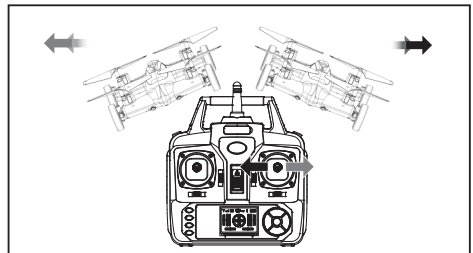

Pull the direction lever left or right, the quadcopter flies to left side or right side.


Fine-tuning operation

Forward/Backward fine-tuning

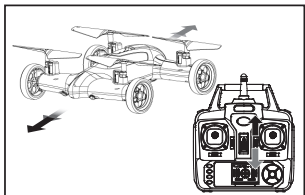


When the quadcopter keeps flying forward / backward, you can correct it by pressing fine-tuning button down / up.

Sideward fly fine-tuning

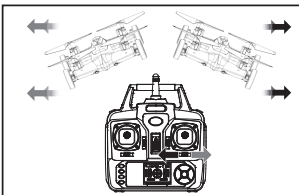

When the quadcopter keeps flying to left / right side, you can correct it by pressing the fine-tuning button right / left.

Turn left/right fine-tuning

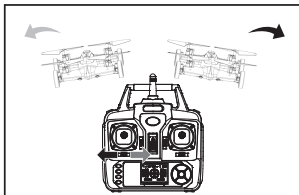


When the quadcopter keeps rotating to left /right, you can correct it by pressing the fine-tuning button right / left.

MODE 2


Operating direction

Hover up and down

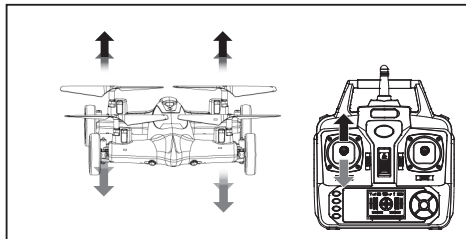


Push the throttle up or down, the quadcopter flies upward or downward.

Forward and backward

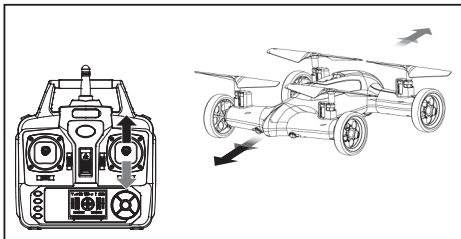


Push the direction lever up or down, the quadcopter flies forward or backward.

Turn Left and Right

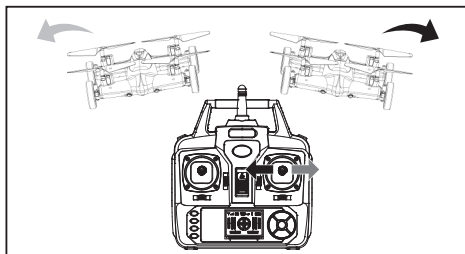

Pull the direction lever left or right, the quadcopter turns to left or right.

Sideward fly

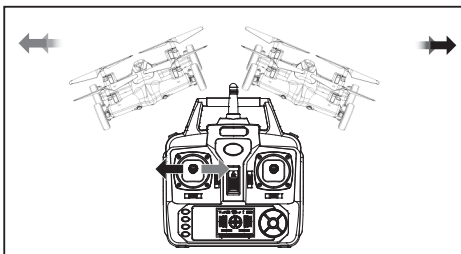

Pull the throttle left or right, the quadcopter flies to left side or right side.