


2) Lower: The landing gear will lower to its lowest position for landing.

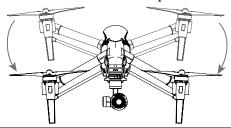

Deformation of aircraft on the ground do not use function, so as not to damage the camera.

RTH Button: Press and hold this button to start the Return to Home (RTH) procedure.

The LED around the RTH Button will blink white to indicate the aircraft is entering RTH mode. The aircraft will then return to the last recorded Home Point. Press this button again to cancel the RTH procedure and regain the control of the aircraft.

USB Port: Connect your mobile device to the USB Port to access all of the camera and aircraft features available in the DJI app.


HDMI Port: Connect an HD compatible monitor to the HDMI port to see what your camera sees in full HD.

Upgrade Port: Use this port to connect the GL658A to a PC or Mac and upgrade the firmware. The relevant Assistant software must be installed and open on your computer.

CAN Port: Reserved for future use.

3. Connecting Mobile Device and C1

- Step 1: Position the mobile device holder as the picture shown, then plug the holder into the mounting hole and tighten the screw.
- Step 2: Attach the holder to neck strap attachment and tighten.
- Step 3: Press the button on the side to hold the mobile device and secure.

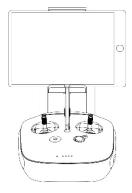

Step 4: Connect the mobile device to C1 USB port via micro-USB cable.

4. Powering on C1

Press the power button once to check the current battery level. Press once and then press again and hold for 2 seconds to power on the C1. (Repeat the above steps again to power off the C1)


Ready to Fly

- 1. Place the aircraft on flat ground in an open place with rear LED flight indicators facing you, and then power on the C1 and aircraft.
- 2. Connect C1 and mobile device.
- 3. Launch DJI App, make sure the GPS mode has been selected.
- 4. Calibrating Compass

Always calibrate compass before your flight.

- Step 1: Go into the App camera GUI and tap the status button, select "calibrate compass" to start the process, the rear LED flight indicator will be solid blue at this time.
- Step 2: Hold aircraft horizontally then rotate 360° around the center axis until rear LED flight indicator will be solid green.
- Step 3: Hold aircraft vertically with nose pointing to the ground, rotate 360° around the center axis until rear LED flight indicator will be blink purple. The process is completed.

If rear LED flight indicator is solid red, calibration has failed. Re-calibrate by repeating step 1-3.

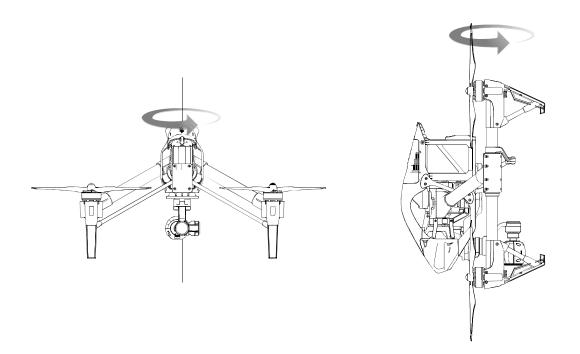

5. Description of rear LED indicator

Blinking purple : GPS > = 6 or hover assistant is functioning, it is safe for flight.

Blinking yellow: No GPS protection. Blinking red: System error occurs.

* Refer to Appendix for more information.

6. Go into the camera GUI and tap check list, ensure everything is functioning normal.

Flight

1. Taking off: Start motors by pulling both control sticks to the bottom corners. Release sticks once motors start. Slowly push the left(throttle) stick up to take off.








Landing: Switch the transformation switch to lower position before landing. Gently pull the left (throttle) stick down to lower the aircraft until it touches the ground. When landing on the ground, pull the throttle stick to the bottom, then pull both sticks to bottom corners to stop motors. Power off the aircraft prior to power off the C1.



2. C1 Operation

This section explains how to use the various features of the C1.

C1	Aircraft	Remarks
(Mode 2)	(indicates nose direction)	Kemarks
		Moving the left stick up and down changes the aircraft's elevation. Push the stick up to ascend and down to descend.
		Push the throttle stick up to takeoff.
		When both sticks are centered, the DJI Inspire 1
		will hover in place.
© Q		The more the stick is pushed away from the center position, the faster the DJI Inspire 1 will change elevation. Always push the stick gently to prevent sudden and unexpected elevation changes.
<u> </u>	Morud Pus	Moving the left stick to the left or right controls the
		rudder and rotation of the aircraft.
		Push the sick left to rotate the aircraft counter
		clock-wise, and push the stick right to rotate the
		aircraft clockwise. If the stick is centered, the DJI
		Inspire 1 will stay facing its current direction.
·		The more the stick is pushed away from the center position, the faster the DJI Inspire 1 will rotate.
		Moving the right stick up and down changes the
		aircraft's forward and backward pitch.
		Push the stick up to fly forward and down to
	→	backward. The DJI Inspire 1 will hover in place if
		the stick is centered.
		Push the stick further away from the center

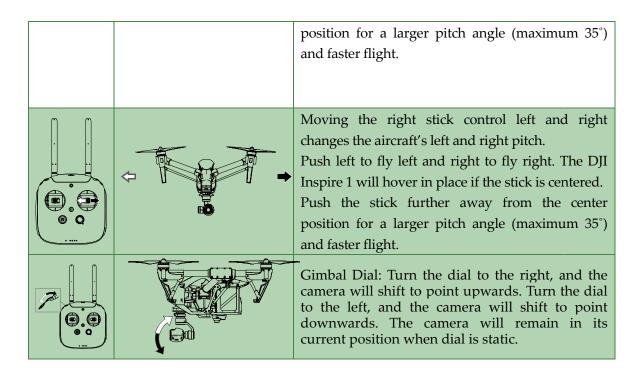

3. Return Home

Press and hold the return home button for a while until the LED surround the button blinking white, the return home procedure is in process. Press once to stop the procedure.



It is recommend to take off the aircraft until the rear LED light blinks purple. Do not stop the motor during flight.

Aerial Photograph

- 1. Set the part of camera parameter through the camera setting button on the C1; Tap the shutter button\record button and play back button to shutter\recording and preview the picture; Adjust the tilt angle of gimbal by using the gimbal dial.
- 2. Set all of the camera parameter, control camera to shutter \recording and play back via DJI App, it can also be use when you are using ground station function.
- 3. Synchronize the SD card data to mobile device.

Appendix

GL658A Status LED

Alarm	C1 Status		
None	The GL658A is functioning normally but is not connected with		
None	the aircraft.		
None	The GL658A is functioning normally and is connected with the		
None	aircraft.		
None	The C1 has been set as the slave		
	The CI has been set as the slave		
B-B-B	GL658A error. Launch the Assistant software to learn more.		
•••	GEOGOTETOL Eaglief the Assistant Software to learn more.		
BBBB	Warning that the aircraft has low battery level.		
	, ,		
B-B-B	The GL658A has been idle for 10 minutes.		
Sound	GL658A Status		
В	Sending Return to Home command to the aircraft.		
BB	Aircraft Return to Home in progress.		
BBBBB			
	Aircraft is returning home		
	Therefore is recurring none		
	None None None B-B-B BBBB B-B-B Sound B BB		



The GL658A Power LEDs will blink red, sound an alert, and then automatically power off after 3 seconds when the battery level is critically low. If this occurs during flight, your DJI Inspire 1 will enter Failsafe Mode and Return to Home, which cannot be interrupted.

C1 battery level indicator description



Aircraft smart battery indicator description

The Battery Level Indicators display how much remaining power the battery has. When

the battery is powered off, press the Power Button once. The Battery Level Indicators will light up to display the current battery level. See below for details.

The Battery Level Indicators will also show the current battery level during charging and discharging. The indicators are defined below.

Q

≺: LED is on.

: LED is flashing.

: LED is off.

Battery Level				
LED1	LED2	LED3	LED4	Battery Level
~	~	Y	Y	87.5%~100%
\prec	~	X		75%~87.5%
~	~	X	\prec	62.5%~75%
<	~		< < < < < < < < < < < > < < < < < < <	50%~62.5%
~	~	\prec	\prec	37.5%~50%
\prec			\prec	25%~37.5%
~	~	\prec	\prec	12.5%~25%
	< < < < < < < < < < < > < < < < < < <	< < < < < < < < < < < < < < < < < < <	\prec	0%~12.5%
\prec	\prec	\prec	\prec	<0%

Battery Life

The battery life indicates how many more times the battery can be discharged and recharged before it must be replaced. When the battery is powered off, press and hold the Circular Power Button for 5 seconds to check the battery life. The Battery Level Indicators will light up and/or blink as described below for 10 seconds:

Battery Life				
LED1	LED2	LED3	LED4	Battery Life
~	~	Y	4	90%~100%
<	\prec	\		80%~90%
~	~	X	\prec	70%~80%
\prec	<		< < < < < < < < < < < < < < < < < < <	60%~70%
~	~	\prec	\prec	50%~60%
\prec		< < < < < < < < < < < < < < < < < < <	< < < < < < < < < < < > < < < < < < <	40%~50%
~	~	\prec	\prec	30%~40%
	< < < < < < < < < < < < < < < < < < <		< < < < < < < < < < < < < < < < < < <	20%~30%
\prec	\prec	\prec	\prec	20%

 Λ

When battery life reaches 0%, it can no longer be used.

For more information about the battery, launch DJI App and check the information under the battery tab.

2.3 Charging the Smart Battery

1. Connect Battery Charger to a power source (100-240V 50/60Hz).

- 2. Open the Protection Cap and connect the Smart Battery to the Battery Charger. If the battery level is above 75%, turn on the battery before charging.
- 3. The Battery Level Indicator will display the current battery level during charging.
- 4. The Smart Battery is fully charged when Battery Level Indicators are all off.

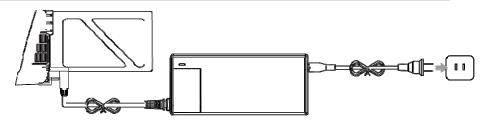


Figure 7

Battery Level Indicators while Charging				
LED1	LED2	LED3	LED4	Battery Level
	\prec	\prec	\prec	0%~25%
		< < < < < < < < < < < < < < < < < < <	< < < < < < < < < < < < < < < < < < <	25%~50%
			\prec	50%~75%
				75%~100%
< < < < < < < < < < < > < < < < < < <	< < < < < < < < < < < > < < < < < < <		< < < < < < < < < < < < < < < < < < <	Fully Charged

Rear LED indicator Description

Rear LED Flight Indicator	Status		
Purple lights blinking	GPS signal detected, and more than 6 GPS satellites are		
quickly	connected		
Yellow lights blinking	GPS signal detected, but less than 6 GPS satellites are		
quickly	available		
Green lights blinking	Operating in IOC mode		
slowly	Operating in IOC mode.		
Rear LED Flight Indicator	Warnings		
Yellow and Green lights	Command calibration is no assisted		
blinking alternately	Compass calibration is required.		
Yellow lights blinking	Low battery level warning.		
quickly	Low battery level warring.		
Red lights blinking	Critical low battery warning		
quickly	Critical low battery warruing		
Blue lights blinking	C1 signal lost.		
quickly	C1 Signal 105t.		
White lights blinking	IMU error		
quickly	INTO ETIOI		



If a system error occurs, connect your DJI Inspire 1 to the DJI Inspire 1 Assistant for more detailed diagnostic information and potential solutions.

Specifications

Battery			
Model (Standard)	TB47		
Voltage	22.2V		
Energy	99.9Wh		
Net Weight	570g		
Model (Option)	TB48		
Voltage	22.8V		
Energy	129.96Wh		
Net Weight	570g		
Charger (Standard)			
Output Power	100W		
Charging Time	85min for 4500mAh; 103 min for 5700mAh		
Charger (Option)			
Output Power	180W		
Charging Time	49min for 4500mAh; 56 min for 5700mAh		
Camera			
Operating Temperature	perature 0°C to 40°C		
Resolution	1240M		
FOV (Field of View)	94°		
CMOS	1/2.3"		
Lens	F/2.8(21mm equivalent)		
Lens	Anti-distortion filter		
	Single shoot		
	Burst shoot(BURST: 3/5/7 frames per second, AEB: 3/5 frames		
Shooting Mode	per second,0.7EV Bias)		
	Time lapsed		
	UHD: 4096x2160p24/25, 3840x2160p24/25/30		
HD Recording Mode	FHD: 1920x1080p24/25/30/48/50/60		
TID Recording Wode	HD: 1280x720p24/25/30/48/50/60		
	FAT32/exFAT		
Commonted File Former			
Supported File Format	Photo format: JPEG, DNG		
_	Video format: MP4/MOV (MPEG-4 AVC/H.264)		
Support SD Card Types	SD/SDHC/SDXC Micro SD		
GL658A			
Operating Frequency	2.404GHz~2.480GHz		
	5.738GHz~5.808GHz		
Transmitting Distance			
(outdoor and	2km or above		
unobstructed)	00 10		
Receiver (1%PER)	-93dBm		

Working Current / Voltage	1.2A@7.4V
Battery capacity	6000mAH
Optical Flow	
Sensor Frequency	50HZ
Velocity Range	<8m/s (2m above ground)
Altitude Range	5cm-500cm
Operating Environment	Rich pattern surface with adequate lighting (Lux > 15)
Operating Range	0-2.5m

<u>FAQ</u>

•

.

•

•

•

•

Standard Logo



Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. **DJI Inspire 1 should be installed and operated with minimum distance 20cm between the radiator& your body.**This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

IC RSS warning

This device complies with Industry Canada licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC Radiation Exposure Statement:

This equipment complies with IC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

DJI Inspire 1 should be installed and operated with minimum distance 20cm between the radiator& your body.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.