

# DJI MATRICE 600


## User Manual

V 1.0

2015.12


# Installation

## Mounting the Frame Arms

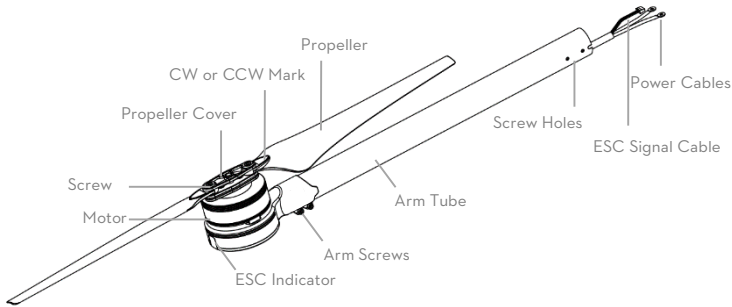


### 1. Preparing the frame arms.

- 1) Check all propellers for cracks. Ensure all the screws are secured in position.
  - 2) Ensure all motors are mounted correctly and firmly and free from obstruction.
  - 3) Ensure that all the cables are intact.
  - 4) Mount all arms with red motor base to M1 and M2 (both sides of the NO.1 battery compartment) to indicate the nose direction of the M600.
  - 5) Identify the CW and CCW marks on the propellers. Mount the frame arms with the CCW mark to M1, M3 and M5 positions of the center frame. Mount the arms with the CW mark to M2, M4 and M6 positions of the center frame.
2. Insert the frame arm into the arm connector on the center frame with the propeller outwards. Rotate the frame arm to align the screw holes on the frame arm and the connector. Then insert and tighten four M3x6.5 screws.
3. Pull the cables of the frame arm through the arm stopper and the wire outlet on the lower plate of the center frame. Then insert the stopper into the arm connector.

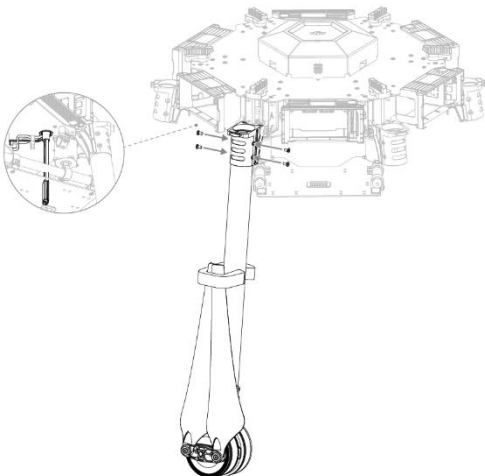


### 4. Gently lift the frame arm.


5. Twist the red knob to lock each arm in place. Be sure there is an audible click, which indicates a proper lock. Check the arm for movement. To store, untwist the knob and lower the frame arm.

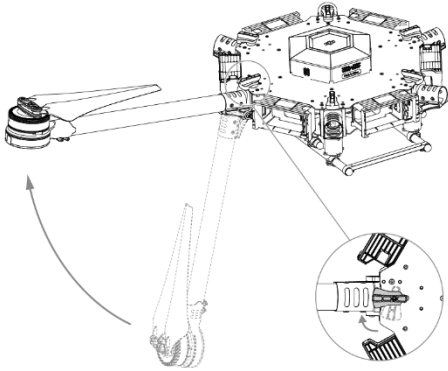

6. Remove the lower cover of the center frame to connect the power cables and the ESC signal cable.
7. Pull all the cables of the frame arm through the cable fixing ring on bottom of the center frame.
8. Plug each ESC signal cable into the slot near each arm on the center frame.
9. Connect the power cables to the center frame. Each cable must be screwed into a positive (+) or negative (-) gold bracket. Each bracket will have two cables of the same color screwed into it. Red cables are positive and black cables are negative.

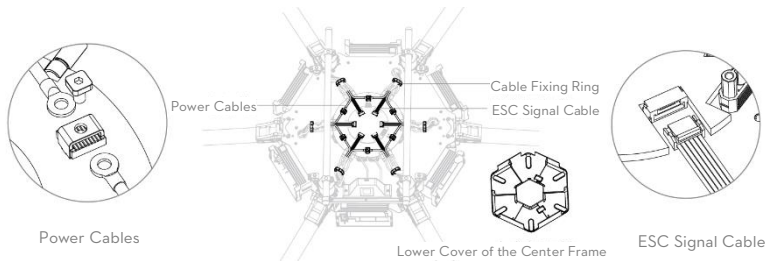


10. Ensure all ESC cables, and power cables are correctly installed onto the center frame.
11. Double check all frame arms. Frame arms M1 and M2 are the forward facing (nose direction), frame arms M4 and M5 are facing backward. Seen from the top, motors on arms M1, M3 and M5 rotate counter clockwise while those on arms M2, M4 and M6 rotate clockwise.

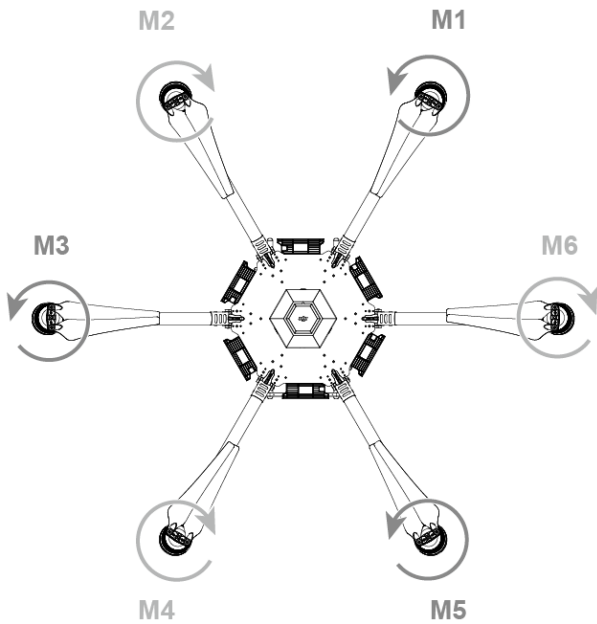


## Mounting the Servo Set




DO NOT mix the mounting position between the left and right servo set. Identify the left servo set by locating the control board that is integrated on the left servo set.

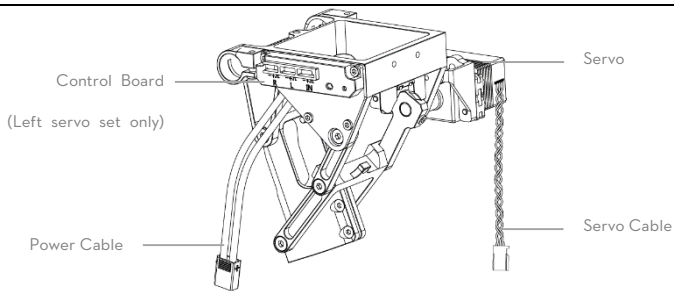


1. Insert the servo mounting rod into the outer mounting hole on the center frame, mounting holes on the servo set and inner mounting hole on the center frame respectively. Ensure that the left servo set is mounted on the left hand side (seeing from tail)of the aircraft.
2. Align the screw holes of the connector on the center frame and the screw holes on the middle of the servo set. Insert and tighten two M3x6.5 screws (thumb).

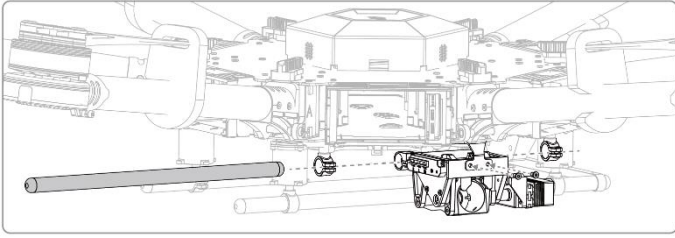

3. Align the cable fixing ring and the screw holes on the bottom of the servo set. Tighten the M3x5 screws.

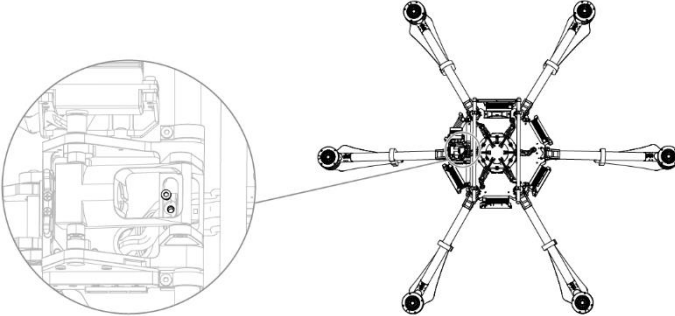



4. Tighten the M3x6.5 screws to secure the servo set on the mounting rod.

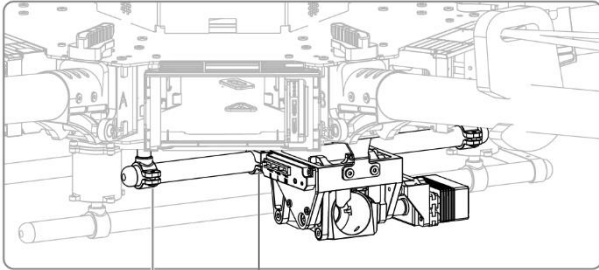

M3x6.5 M3x6.5

5. Connecting the Servo Cables.

- 1) Connect the left servo cable to "L" port on the control board.
- 2) Connect the right servo cable to "R" port on the control board.

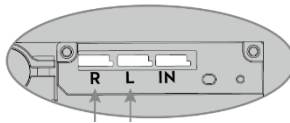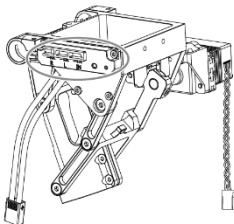

Right Servo Cable Left Servo Cable


## Mounting the Landing Gear




Do not mix the cabling between the left and right servo, otherwise the landing gear cannot function properly.

Arrange the wiring neatly to avoid the cables being cut by frame edges.

The antennas are attached to the landing gears on its delivery. Pull out the antenna cables from the landing gear legs before mounting.

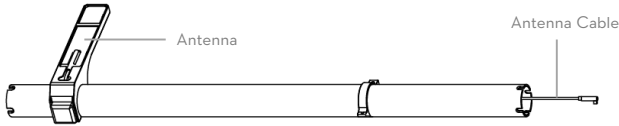


- 1) Insert one landing gear leg into each landing skid tube and secure it in place by tightening the M3×8 (socket cap) screw.
- 2) Insert the landing gear leg into the connector on the servo set. **DO NOT** damage the antenna cable.
- 3) Rotate the landing gear leg until its slots are aligned to the fins in the connector. Then tighten the M3x8 screws on the connector.
- 4) Connect both springs on the legs to the center frame.

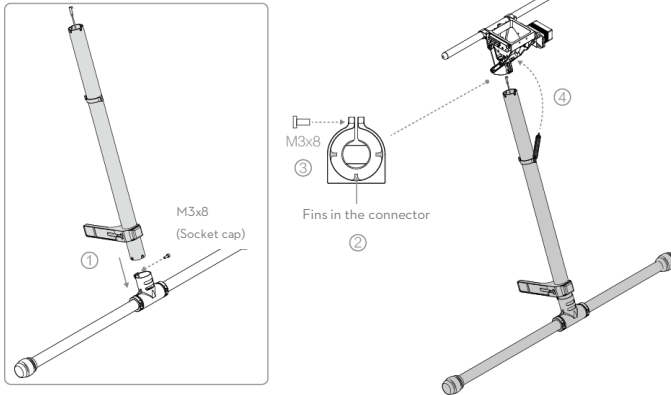

Note the initial length of spring is 58.5 mm and it is stretched to 70 mm in its final position.

## Mounting the Lightbridge 2 Air System

1. Remove the upper cover of the center frame, four M3x6.5 screws (thumb), mounting plate and the flight controller.

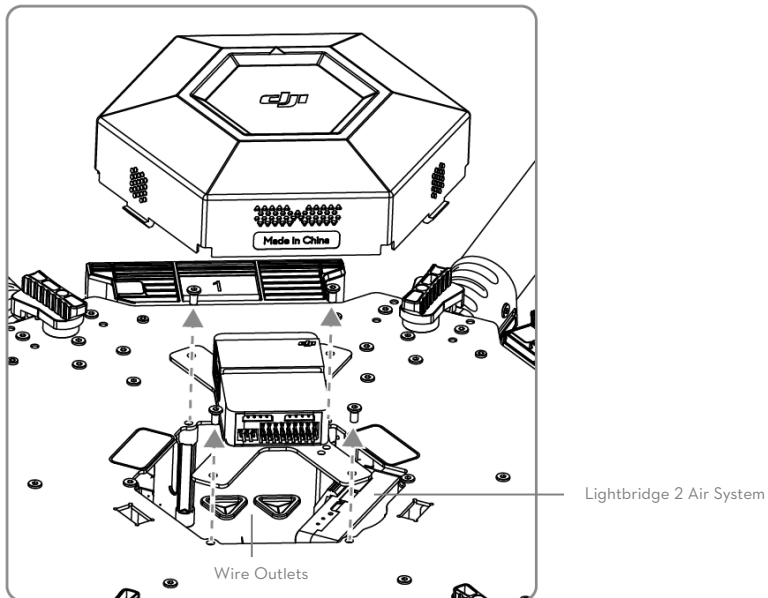

2. Open the fixing bracket and then remove the Lightbridge 2 air system.
3. Pull the two antenna cables from the triangular wire outlets (between M4 and M5) on the lower plate of the center frame. Connect them to the antenna ports on the Lightbridge 2 air system.
4. Mount the Lightbridge 2 air system back into the bracket. DO NOT damage the antenna cables.



If using the AV / HDMI port of the Lightbridge 2 air system, connect the corresponding cables first.

5. Connect the Micro USB cable on back of the Aircraft Status Indicator to the Micro USB port of the Lightbridge 2 air system.




Install the antennas before powering on the Air System.

When connecting the antennas, ensure the connector pin is aligned with the port hole, and DO NOT apply excessive force to avoid damaging the pin.

## Mounting the Flight Controller

1. Connect the F1 port of the flight controller to the "IN" port of the landing gear control board via the servo cable.

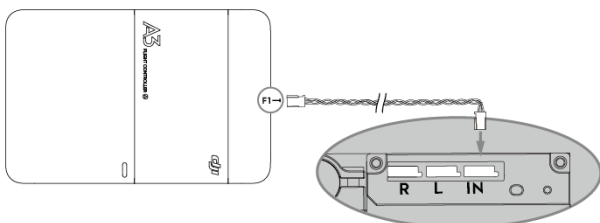

2. Connect the servo cables from No.1 to No.6 to the corresponding port of the flight controller. Connect the No.7 servo cable to the M7 port of the flight controller. Connect the No.9 servo cable to the iESC port of the flight controller.
3. Connect the Aircraft Status Indicator cable to the LED port of the flight controller.
4. Connect the DBUS port of the Lightbridge 2 air system to the RF port of the flight controller via the DBUS cable.




Use the included DBUS cable ONLY. Otherwise the Lightbridge 2 air system cannot function properly.

---

5. If using a DJI gimbal, refer to the corresponding user manual for more information on how to connect.
6. Re-mount the flight controller mounting plate with four M3x6.5 screws (thumb).

## Mounting GPS Module

1. Attach the collapsible GPS mount to one side of the center frame using M2.5x8 screws.
2. Mount a GPS module to the GPS mount with a strut. Ensure the arrow points toward the nose (M1, M2). Insert two M2x4 screws into the two connectors above and under the extension rod.

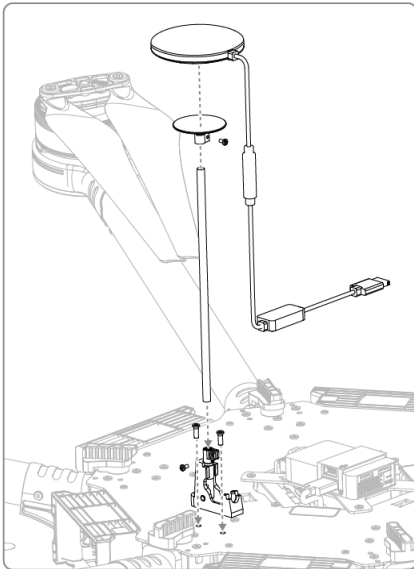

3. Attach the CAN HUB of the GPS module onto the plate of the center frame.
4. Plug the CAN cable into the CAN1 port on the flight controller.



Mount the GPS with an extension rod to avoid interference from the center frame power board.

Ensure the extension rod is firm and stable before every flight.

Avoid catching your fingers in the collapsible mount when folding for transportation.

---



## Mounting the Upper and Lower Covers of the Center Frame

1. Re-mount the upper cover of the center frame. Note that the arrow points toward the nose (M1, M2) and DO NOT damage the cables.
2. Re-mount the lower cover of the center frame. Note that the two square holes are aligned to the two XT30 ports on the lower plate of the center frame. DO NOT damage the cables.
3. Connect the servo power cable to the XT30 port (6S LiPo) on the lower plate of the center frame.

# Intelligent Flight Battery

## Installing the Battery




There are six battery compartments on the M600. Six intelligent flight batteries are required to fly the aircraft.

It's strongly recommended to fully charge all the intelligent flight batteries before using them together.

Insert the six Intelligent Flight Batteries into the battery compartments.

## Powering ON/OFF

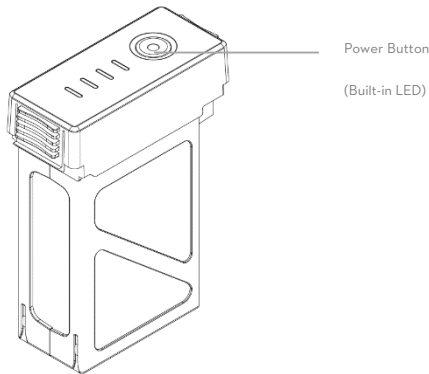

**Powering On:** Press the Power Button once, then press again and hold for 2 seconds to power on. The Power LED will turn red and the Battery Level Indicators will display the current battery level.

**Powering Off:** Press the Power Button once, then press again and hold for 2 seconds to power off.


The M600 has six intelligent flight batteries and advanced battery management system. When powering on one of the batteries, the battery management system will read all batteries' information and judge the power supply conditions. If the power supply is OK, other batteries will power on automatically. Otherwise, there will be a prompt on the DJI GO app. Power off just one of the batteries, and then other batteries will power off automatically.

If there is a prompt on the DJI GO app, follow the tips to adjust your batteries.


# Remote Controller

## Preparing Remote Controller

Tilt the Mobile Device Holder to the desired position then adjust the antenna as shown.

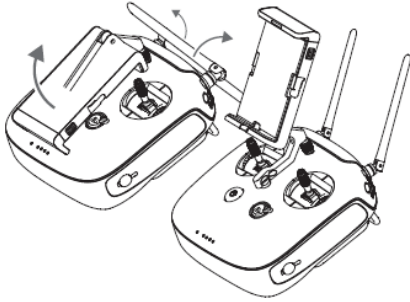

## Remote Controller Diagram

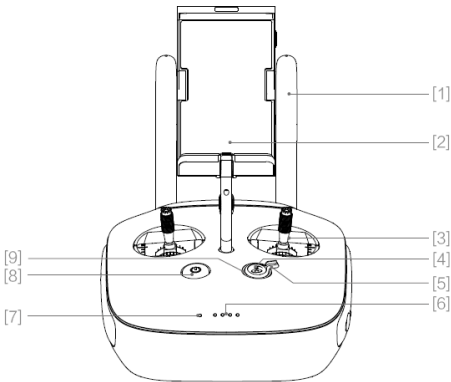

### [1] Antennas

Relays aircraft control and video signal.

### [2] Mobile Device Holder

Mounting place for your mobile device.

### [3] Control Stick

Controls aircraft orientation.

### [4] Return Home (RTH) Button

Press and hold the button to initiate Return to Home (RTH).

### [5] Transformation Switch

Toggle the switch up or down to raise or lower the landing gear.

### [6] Battery Level LEDs

Displays the current battery level.

[7] Status LED


Displays the power status.

[8] Power Button

Used to power on or power off the remote controller.

[9] RTH LED

Circular LED around the RTH button displays RTH status.

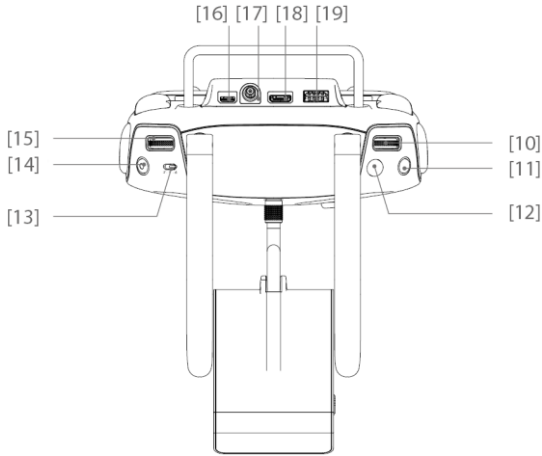

[10] Camera Settings Dial

Turn the dial to adjust camera settings. Only functions when the remote controller is connected to a mobile device running the DJI GO app.

[11] Playback Button

Playback the captured images or videos.

[12] Shutter Button

Press to take a photo. If in burst mode, the set number of photos will be taken with one press.

[13] Flight Mode Switch

Used to switch between P, A and F mode.

[14] Video Recording Button

Press to start recording video. Press again to stop recording.

[15] Gimbal Dial

Use this dial to control the tilt of the gimbal.

[16] Micro USB Port

Reserved.

[17] SDI Port


Connect a SDI display device.

#### [18] HDMI OUT Port

Connect an HD compatible monitor.

#### [19] USB Port

Connect to mobile device to access all of the DJI GO app controls and features.

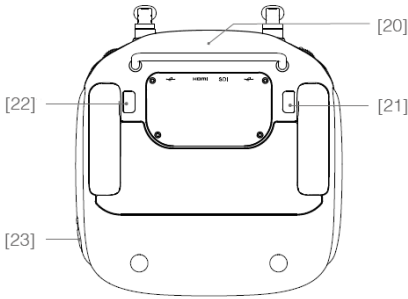

#### [20] GPS Module

Used to pinpoint the location of the remote controller.

#### [21] Back Left Button

Customizable button in DJI GO app.

#### [22] Back Right Button

Customizable button in DJI GO app.

#### [23] Power Port


Connect to a power source to charge the remote controller's internal battery.

## Remote Controller Operations

### Powering On and Off the Remote Controller


The M600 remote controller is powered by a 2S rechargeable battery with a capacity of 6000mAh. The battery level is indicated by the Battery Level LEDs on the front panel. Follow the steps below to power on your remote controller:

1. When powered off, press the Power Button once and the Battery Level LEDs will display the current battery level.
2. Then, press and hold the Power Button to power on the remote controller.
3. The Remote Controller will beep when it powers on. The Status LED will blink green (slave remote controller blinks solid purple) rapidly, indicating that the remote controller is linking to the aircraft. The Status LED will show a solid green light when linking is completed.
4. Repeat step 2 to power off the remote controller after finish using it.

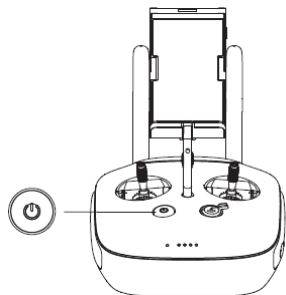


## Charging Remote Controller

Charge the remote controller via supplied charger.

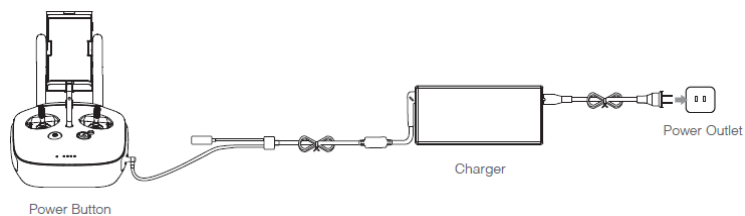

## Controlling Camera

Shoot videos or images and adjust camera settings via the Shutter Button, Camera Settings Dial, Playback Button and Video Recording Button on the remote controller.

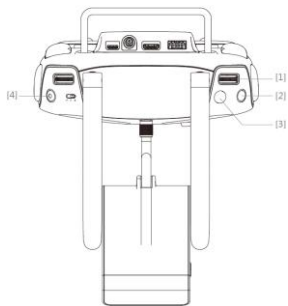

### [1] Camera Settings Dial

Turn the dial to quickly adjust camera settings such as ISO and shutter speed without letting go of the remote controller. Move the dial button to left or right to view the pictures or videos in playback mode.

### [2] Playback Button

Press to view images or videos that have already been captured.

### [3] Shutter Button


Press to take a photo. If burst mode is activated, multiple photos will be taken with a single press.

### [4] Recording Button

Press once to start recording video, then press again to stop recording.


### Connecting Mobile Device

1. Press the button on the side of the Mobile Device Holder to release the clamp, adjust it to fit then attach your mobile device.
2. Connect your mobile device to the remote controller with a USB cable.
3. Plug one end of the cable into your mobile device, and the other end into the USB port on the back of the remote controller.

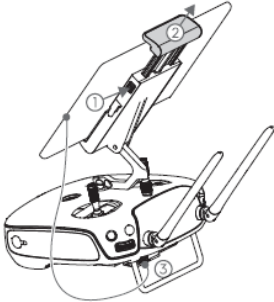

### Optimal Transmission Range


The signal transmission between aircraft and remote controller perform best within the range that displayed in the picture shown below:

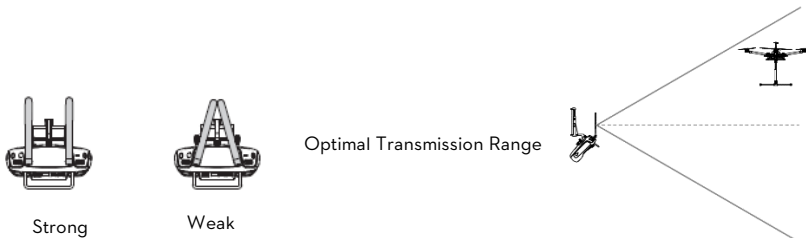







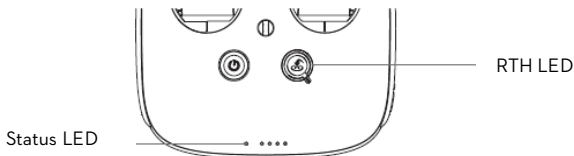



Ensure the aircraft is flying within the optimal transmission range. Adjust the distance and position between the operator and the aircraft to achieve optimal transmission performance.

### Remote Controller LED

The Status LED reflects connection status between Remote Controller and aircraft. The RTH LED shows the Return to Home status of the aircraft. The table below contains details on these indicators.



Status LED	Alarm	Remote Controller Status
 — Solid Red	 chime	The remote controller is not connected with the aircraft.
 — Solid Green	 chime	The remote controller is connected with the aircraft.
 ..... Blinking Red	D-D-D.....	Remote controller error.
 ..... Red and Green/ Red and Yellow Alternate Blinks	None	HD Downlink is disrupted.
RTH LED	Sound	Aircraft Status
 — Solid White	 chime	Return to Home procedure begins.
 ..... Blinking White	D . . .	Sending Return to Home command to the aircraft.
 ..... Blinking White	DD . . . .	Aircraft Return to Home in progress.



# DJI GO App

Use this app to control the gimbal, camera and other features of your flight system. The app also comes with the Library, Explore, and Me sections for configuring your aircraft and sharing your content with friends. It is recommended that you use a tablet for the best experience.




When connecting to the aircraft for the first time, ensure your mobile device is connected to the internet and follow the instructions to set up the app.

## Equipment

On the Equipment page, you can enter Camera View, visit the Academy or view your flight records.

### Camera View

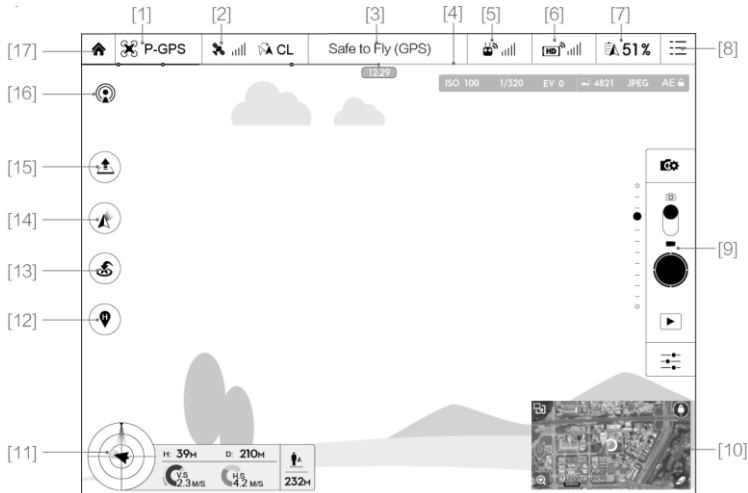

#### [1] Flight Mode



The text next to this icon indicates the current flight mode.

Tap to enter MC (Main Controller) settings. Modify flight limits, perform compass calibration, and set the gain values on this screen.

#### [2] GPS Signal Strength



This icon shows the current strength of GPS signals. Green bars indicates adequate GPS strength.

#### [3] System Status



**Safe to Fly (GPS)**: This icon shows current aircraft system status, such as GPS signal health.

#### [4] Battery Level Indicator




The battery level indicator dynamically displays the battery level. The color zones on the battery level indicator represent different battery levels.


#### [5] Remote Controller Signal

: This icon shows the strength of remote controller signal.

#### [6] HD Video Link Signal Strength


: This icon shows the HD video downlink signal strength between the aircraft and the remote controller.

#### [7] Battery Level

: This icon shows the current Intelligent Flight Battery level.

Tap to enter battery information menu, set the various battery warning thresholds and view the battery warning history in this page.

#### [8] General Settings

: Tap this icon to enter General Settings page. Select parameter units, reset the camera, enable the quick view feature, adjust the gimbal roll value and toggle flight route display on this page.

#### [9] Camera Operation Bar

Function



: Tap to adjust camera settings, such as video format and digital filters.

Shutter



: Tap this button to take a single photo.

Record



: Tap once to start recording video, then tap again to stop recording. You can also press the Video

Recording Button on the remote controller, which has the same function.

Playback



: Tap to enter playback page. You can preview photos and videos as soon as they are captured.

Camera Settings and Shooting Mode




: Tap to enter the Camera Settings page and switch from camera shooting mode from manual to auto.

#### [10] Map

Display the flight path of the current mission. Tap to switch from the Camera GUI to the Map GUI.



#### [11] Flight Telemetry

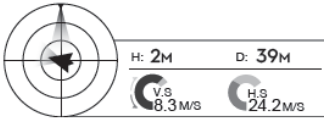

**Flight Parameters:**

Height: Vertical distance from home point.

Distance: Horizontal distance from home point.

Vertical Speed: Vertical flying speed.


Horizontal Speed: Horizontal flying speed.

**Flight Attitude and Radar Function:**


Flight attitude is indicated by the flight attitude icon.

- (1) The red arrow shows which direction the aircraft is facing.
- (2) Light blue and dark blue areas indicate pitch.
- (3) Pitching of the boundary between light blue and dark blue area shows roll angle.

[12] Home Point Settings



 : Tap this button to reset the current home point. You may choose to set the aircraft take-off location, the remote controller’s current position, or the aircraft’s current position as the Home Point.

[13] Return to Home (RTH)


 : Initiate RTH home procedure. Tap to have the aircraft return to the latest home point.

[14] Gimbal Operation Mode


[15] Auto Takeoff/Landing

 /  : Tap to initiate auto takeoff or landing.

[16] Livestream

 : This icon indicates the current video feed is being broadcast live on YouTube. Ensure that mobile data service is available on your mobile device.

[17] Back

 : Tap to return to the main GUI.

**Library**

Director is an intelligent video editor built into the DJI GO app. After recording several video clips and downloading them to your mobile device, go to Director on the home screen. You can then select a template and a specified number of clips which are automatically combined to create a short film that can be shared immediately.

**Explore**


Find out about our latest events, featured products and trending Skypixel uploads in the Explore page.

## Me

If you already have a DJI account, you will be able to participate in forum discussions, earn Credits in the DJI Store, and share your artwork with the community.





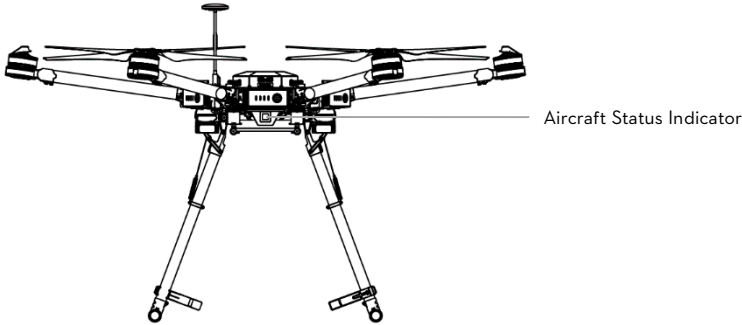





# Flight

## Aircraft Status Indicator



Aircraft Status Indicator shows the system status of the flight controller. Refer to the table below for more information about the Aircraft Status Indicator:

### Aircraft Status Indicator Description

Normal	
 ..... Red, Green and Yellow Flash Alternatively	Power on and self-check
 x4 Blinks Yellow Four Times	Aircraft warming up
 ..... Green Flashes Slowly	Safe to Fly (P mode with GPS)
 ..... Yellow Flashes Slowly	Safe to Fly (A mode but No GPS)
Warning	
 ..... Fast Yellow Flashing	Remote Controller Signal Lost
 ..... Slow Red Flashing	Low Battery Warning
 ..... Fast Red Flashing	Critical Low Battery Warning
 ..... Red Flashing Alternatively	IMU Error
 – Solid Red	Critical Error
 ..... Red and Yellow Flash Alternatively	Compass Calibration Required

## Starting/Stopping the Motors

### Starting Motors

The Combination Stick Command (CSC) listed below are used to start the motors instead of simply pushing the stick

up. Ensure that you perform the CSC in one motion.



## Stopping Motors

There are two methods to stop the motors.

Method 1: When the M600 has landed, push the throttle down, then conduct CSC. Motors will stop immediately.

Release both sticks once motors stop.

Method 2: When the aircraft has landed, push the throttle down and hold. The motors will stop after 3 seconds.



DO NOT perform CSC when aircraft is in midair, otherwise the motors will be stopped.

# Specifications

Structure	
Diagonal Wheelbase	1133.5 mm
Dimensions	1668 mm×1517 mm ×749 mm (with propellers, frame arms and GPS mount unfolded)
	1133 mm× 981 mm ×749 mm (with propellers folded, frame arms and GPS mount unfolded)
	557 mm×519 mm ×551 mm (with propellers, frame arms and GPS mount folded)
Weight (with six TB47S batteries)	8810 g
Weight (with six TB48S batteries)	9320 g
Max Takeoff Weight	14.8 kg
Performance	
Hovering Accuracy (P Mode)	Vertical: 0.5 m, Horizontal: 1.5 m
Max Angular Velocity	Pitch: 300°/s, Yaw: 150°/s
Max Tilt Angle	25°
Max Ascent Speed	5 m/s
Max Descent Speed	3 m/s
Max Wind Speed Resistance	8 m/s
Max Speed	20 m/s (ATTI mode, no payload, no wind)
	19 m/s (GPS mode, no payload, no wind)
	17 m/s (ATTI or GPS mode, using six TB47S Intelligent Flight Batteries with payload of 6 kg, no wind)
Hovering Time (with six TB47S batteries)	No payload: 42 min, with payload of 6 kg: 16 min
Hovering Time (with six TB48S batteries)	No payload: 45 min, with payload of 5.5 kg: 18 min
* The hovering time data is based on no-wind environment, hovering at 10 m above the sea level until landing with a battery level of 10%	

## Propulsion System

Motor Model	DJI 6010
Propeller Model	DJI 2170
ESC Model	DJI E SERIES I240

## Flight Control System

Model	A3
-------	----

## Other

Operating Temperature Range	-10 to 40 °C
Compatible DJI Gimbals	Zenmuse X3, Zenmuse X5; Zenmuse Z15 Series HD Gimbal: Z15-A7, Z15-BMPCC, Z15-5D III, Z15-GH4; Ronin-M
Retractable Landing Gear	Standard

## Remote Controller

Operating Frequency	920.6 MHz-928 MHz (Japan Only) 5.725-5.825 GHz; 2.400-2.483 GHz
Transmitting Distance (unobstructed, free of interference)	FCC: 5 km CE: 3.5 km
EIRP	10 dBm @ 900 m, 13 dBm @ 5.8 G, 20 dBm @ 2.4 G
Video Output Port	USB, Mini-HDMI
Power Supply	Built-in battery
Charging	DJI charger
Mobile Device Holder	Tablet or Smart Phone
Output Power	9 W
Operating Temperature Range	-10 to 40 °C



Storage Temperature Range	Less than 3 months: -20 to 45°C More than 3 months: 22 to 28°C
Charging Temperature Range	0 to 40°C
Battery	6000 mAh LiPo 2S
Max Tablet Width	170 mm
<b>Charger</b>	
Model	A14-100PIA
Voltage	26.3 V
Rated Power	100 W
<b>Battery (Standard)</b>	
Model	TB47S
Capacity	4500 mAh
Voltage	22.2 V
Battery Type	LiPo 6S
Energy	99.9 Wh
Net Weight	595 g
Operating Temperature Range	-10 to 40°C
Storage Temperature Range	Less than 3 months: -20 to 45°C More than 3 months: 22 to 28°C
Charging Temperature Range	0 to 40°C
Max Charging Power	180 W
<b>Battery (Optional)</b>	
Name	Intelligent Flight Battery
Model	TB48S
Capacity	5700 mAh

Voltage	22.8 V
Battery Type	LiPo 6S
Energy	129.96 Wh
Net Weight	680 g
Operating Temperature Range	-10 to 40°C
Storage Temperature Range	Less than 3 months: -20 to 45°C More than 3 months: 22 to 28°C
Charging Temperature Range	0 to 40°C
Max Charging Power	180 W

## **FCC Warning Message**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This M600 should be installed and operated with minimum distance 20cm between the radiator& your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **IC RSS Warning**

This device complies with Industry Canada licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference,including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**IC Radiation Exposure Statement:**

This equipment complies with IC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This M600 should be installed and operated with minimum distance 20cm between the radiator& your body.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**KCC Warning Message**

“해당무선설비는 운용 중 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다.”

“해당 무선설비는 운용 중 전파혼신 가능성이 있음”

**NCC Warning Message**

Administrative Regulations on Low Power Radio Waves Radiated Devices warning:

**Article 12**

Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to an approved low power radio-frequency devices.

**Article 14**

The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved.

The said legal communications means radio communications is operated in compliance with the Telecommunications Act.

The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.