

USER'S MANUAL

TO PROGRAM SAFE

1. "*" + "*" + 1113 + "*" + 6
2. Enter four digits of serial number + "#"
3. Enter first master code + "#"
4. Enter second master code + "#"
5. Enter four digits room number + "#"
6. Enter the connecting transmitter number + "#"

To set the next safe
Repeat step "5" and "6"

IMPORRANT: THE FACTORY DEFAULT SETTING OF THESE CODES MUST BE CHANGED FOR EACH HOTEL AT THE TIME OF INITIAL INSTALLATION TO ENSURE MAXIMUM SECURITY.

TO CLOSE SAFE

Press in user's code (4 digits)

Press "#" button to lock safe

The door will automatically close

NOTE: AFTER DOORCLOSED, THE USER'S CODE WILL BE SHOWN AGAIN TO REMIND USER.

TO OPEN SAFE

Press in user's 4digits code

Door will automatically open.

TO SET CLOCK

Open safe by either master code or EHO one times

Press "*" button twice

Enter 807027 + "#"

Enter Year (2 digits) + Month (2digits) + Date (Two digits)

Press "#" button to change to second window

Enter Hour (2digits) + Minutes (2digits) + Second (2digits)

Press "#" button to confirm all the setting

TO SET FIRST MASTER CODE

Open safe by either master code or EHO one times

Press "*" button twice

Enter 720708 + "#"

Enter the first old master code (factory default setting is 999999)

Enter new 6 digits as first master code

Press "#" button to confirm all the setting

TO SET SECOND MASTER CODE

Open safe by either master code or EHO one times

Press "*" button twice

Enter 630689 + "#"

Enter the second old master code (factory default setting is 888888)

Enter new 6 digits as first master code

Press "#" button to confirm all the setting

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.