

## USER'S MANUAL

1. "\*" + "\*" + 6683 + "\*" + 6
2. Enter four digit serial code + "#"
3. Enter 3 digit of transmitter own code + "#"
4. Enter 3 digit of next transmitter code + "#"

To set the next transmitter:  
Repeat step "3" and "4"

### TO SET SAFE TSETTING MODE

Press "\*" + "\*" + "311189" + "#"

Press any key for 2 seconds, the tasting mode will be stopped.

### FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.