

 **SAGEM** **My X5-2**



**SAGEM SA**

**Mobile Phones Division**

Tel. +33 1 40 70 88 44 - Fax +33 1 40 70 66 40 - [www.sagem.com](http://www.sagem.com)  
Le Ponant de Paris - 27, rue Leblanc - 75512 PARIS CEDEX 15 - FRANCE  
SAGEM SA - Société anonyme à directeur et conseil de surveillance  
capital : 36 405 229 € - 562 082 909 RCS PARIS



You have just purchased a SAGEM phone, we congratulate you; it is recommended that you read this handbook carefully in order to use your phone efficiently and in the best conditions.



Your phone can be used internationally in the various networks (GSM 900 MHz and DCS 1800 MHz or PCS 1900 MHz, depending on model) depending on the roaming arrangements with your operator.

We remind you that this phone is approved to meet European standards.

#### **WARNING**

Depending on the model, network configuration and associated subscription cards, certain functions may not be available.

Ensure that your SIM card is a 3 V SIM type that is compatible with your phone. Inserting an incompatible card will be indicated by a message when your phone is switched on. Contact your operator.



Your phone is identified by its IMEI number. Write this number down, and do not keep it with your phone, because you may be asked for it in the event of your phone being stolen, in order to prevent it from being used, even with a different SIM card. In order to display the IMEI on your phone's screen, type: \*#06#.



SAGEM is a trademark of SAGEM SA.  
AT is a registered trademark of Hayes Microcomputer Products Inc.  
Hayes is a registered trademark of Hayes Microcomputer Products Inc.  
T9 is protected by one or more of the following US patents: 5,818,437, 5,953,541, 5,187,480, 5,945,928, 6,011,554 and other patents are being applied for worldwide.  
Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.  
The WAP navigator and some message softwares (i-mode) are under licence Openwave.  
The WAP navigator and the softwares included are the exclusive property of Openwave. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of these softwares.  
© 2003 GAMELOFT - All rights reserved - GAMELOFT is a registered trademark of GAMELOFT S.A. - All rights reserved.  
Wellphone™ and SmartCom™ are registered trademarks owned by SmartCom SARL France.





Weight: 96 g

Size: 107 x 46 x 19 mm

Original battery: Lithium ion 920 mAh

Battery life calls/standby: up to 4 h 45 mn/370 h (see page 19 how to increase the efficiency of your phone)

Multimedia objects supported:

Audio formats: iMelody, Midi, wave

Graphic formats: wbmp, bmp, png, gif, animated gif, jpeg, .3gp

Size of memory available for messages:

100 SMS

300 Kb for MMS (inbox, outbox and drafts together; MMS depending on option)

Size of memory available for the phonenook and the multimedia objects: 4 MB

Maximum size of each message:

SMS < 160 characters

MMS < 100 Kb for outgoing, 100 Kb for incoming messages (depends on the phone configuration and on the operator reservations)

Using temperature: from - 10°C to + 55°C



## CE Conformance Document

SAGEM SA declare under its sole responsibility that the product Triple Band GSM 850/DCS 1800/PCS 1900 Type M2004 conforms to the requirements of the following EEC directives:

EEC Directive	1999/5/CE
Safety	EN 60950
EMC	EN 301 489-1 EN 301 489-7

This phone is marked CE in accordance with RTTE directive with CEM EN301489-7 norme implementation, suited to the 850/1800/1900 work frequencies. It is not intended to be used in Europe.

Low voltage directive	73/23/CEE
Network	3GPP TS 51.010-1 v 5.4.0 Requirements GT01 v 4.7.0 TBR 19 Edition 5 TBR 20 Edition 3 TBR 31 Edition 2 TBR 32 Edition 2 EN 301 419-1 EN 301511

## FCC Conformance Document

FCC Part 24	
Network	NAPRD03.ver 2.11.2
Health	Draft IEEE Std 1528-200x



P. KLEIN  
Development Director, Mobile Phones Division

## Safety Information for Wireless handled phones

Use of your phone is subject to safety rules designed to protect the user and his or her environment.

### Exposure to Radio Frequency Signals

- Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out frequency (RF) signals.
- In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:
  - ANSI C95.1 (1992)\*
  - NCPR Report 86 (1986)<Exposant>\*
  - ICNIRP (1996)<Exposant>\*
- Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).
- The design of your phone complies with the FCC guidelines (and those standards).
- For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.  
Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

### Phone Operation

- Normal position: hold the phone as you would any other phone with the upper zone (back of the LCD display) pointed up and over your shoulder.
- Tips on efficient operation: for your phone to operate most efficiently, do not touch cover unnecessarily the top part of the phone with your hand. This would cover the integrated antenna and affect call quality and may cause the phone to operate at a higher power level than otherwise needed.

\*. American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission and Non-Ionizing Radiation Protection.

## Safety Information for Wireless handled phones

### Driving

- Check the laws and regulations on the use of wireless phones in the areas where you drive. Always obey them. Also, if using your phone while driving please:
  - Give full attention of driving, driving safely is your first responsibility
  - Use hands-free operation, if available
  - Pull off the road and park before making or answering a call if driving conditions so require.

### Electronic Devices

- Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.
- Some phone accessories allow to reduce the radiation interferences of the phone. Please contact your distributor.

### Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON
- Should not carry the phone in the breast pocket
- Should use the ear opposite to the pacemaker to minimize the potential for interference
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

### Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

## Safety Information for Wireless handled phones

### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so.

Hospitals or health care facilities may be using equipment that could be sensitive to sensitive external RF energy.

### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

### Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

### Blasting Areas

To avoid any interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

### Potentially Explosive Atmospheres

- Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.
- Areas with a potentially explosive atmosphere are often but not always clearly marked. They include fueling areas such as gasoline stations; below deck on boats, fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

## Safety Information for Wireless handled phones

### For Vehicles equipped with Air Bag

An air bag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

### Electrical Safety

- Only use the appropriate chargers recommended in the manufacturer's catalog. Using another charger may prove dangerous and could invalidate the warranty of your phone.
- The main power socket should be easily accessible.
- Make sure that the main voltage corresponds to the level marked on the charger identification plate.

### General Precautions

- Do not try to open your phone and repair it yourself. The manufacturer cannot be held liable for any resulting damage.
- Any work done by an unqualified and unauthorized person will invalidate your warranty.
- Do not use your phone in humid places (bathroom, swimming pool, etc.). Protect it from splashing water and other liquids.
- Do not expose your phone to extreme temperatures.
- Keep your phone out of reach of small children. Do not allow them to play with it, it is not a toy.
- Only use your phone with original accessories. Failure to comply with these rules will invalidate your warranty.
- Remember to disconnect the charger before removing the battery.
- The physical and chemical processes used in rechargeable batteries mean that temperature limits must be followed during rapid charging. Your phone automatically protects the batteries from extreme temperatures.
- If the phone is disconnected from the battery for an extended period of time, it will lose the time and the recorded voice messages.

### WARNING

- The manufacturer cannot be held liable for any failure to comply with the above recommendations or for any misuse.
- The software program developed by SAGEM SA remains the exclusive property of SAGEM SA. It is therefore highly prohibited to modify, translate, decompile or disassemble this software program or any part thereof.
- SAGEM SA may not be held responsible for the contents of messages, software or objects downloaded and/or for any direct or indirect consequential damage to the phone itself.





## Safety Information for Wireless handled phones

### Emergency Calls

#### IMPORTANT

- This phone, like any PCS phone, operates using radio signals, PCS and landline networks, and user-programmed functions. As a consequence a connection in all conditions cannot be guaranteed. Therefore you should never rely solely upon any PCS phone for essential communications (e.g. medical emergencies).
- To make or receive any calls, this phone must be switched on and in service area with adequate PCS signal strength. Emergency calls may not be possible on all PCS networks or when certain network services and/or phone features are in use. Check with local Service Providers.
- When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your PCS phone may be the only means of communication at the scene of an accident - do not terminate the call until given permission to do so.
- If certain features are in use (such as Keyguard), you may first need to turn those features off before you can make an emergency call. Consult this manual and your local PCS Service Provider.


#### Emergency Calling

- If the phone is not on, press .
- Key in emergency number for your present location (e.g. 911 or other official emergency number).
- Press .
- If you dial 911 during a call, the phone terminates the current call and attempts to make a call to the emergency number 911.

#### FCC/INDUSTRY CANADA NOTICE

Your phone may cause TV or radio interference (e.g. when using phone in close proximity of receiving equipment). The FCC/INDUSTRY Canada can require you to stop using your phone if such interference cannot be eliminated. If you need assistance, contact your local dealer. This device complies with parts 15 and 68 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interferences.

## Menus

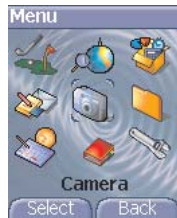

### Games

### WAP

### Applications

- ToDo
- Calculator
- Converter
- Alarm
- Timer

### Messages

- Compose
- Inbox
- Outbox
- Sentbox
- Drafts
- Options
- Memory
- Local info.
- Call Voice Mail
- Mailing Lists

### Camera

### Multimedia

- My Pictures
- My Sounds
- Memory
- Help

### Organizer

- See month
- See week
- See today
- See date
- Calendar menu
- Help

### Phonebook

- Contacts menu

### Settings

- Sounds
- Display
- Camera
- Languages
- Calls
- Security
- Networks
- Short cuts
- Date/Time
- Connectivity
- Help

## Contents

---

<b>Page 7</b>	<b>Menus</b>
<b>Page 12</b>	<b>Your phone package - Accessories</b>
<b>Page 13</b>	<b>Description</b> Programmable keys and Short cut keys Necklace attachment
<b>Page 15</b>	<b>Navigation principles</b>
<b>Page 16</b>	<b>Initial screen</b>
<b>Page 17</b>	<b>Activating your phone</b> Information on the SIM card Installing the SIM card and the battery Getting started
<b>Page 19</b>	<b>Using your phone</b> Freeing the antenna Increase the efficiency of your phone Hands-free mode Charging the battery
<b>Page 21</b>	<b>Phonebook</b> Using the phonebook Storing a new contact Contacts menu Options from a contact saved Sending a vCard Receiving a vCard
<b>Page 26</b>	<b>Messages</b> Compose SMS Compose MMS Receiving messages Inbox Outbox Sentbox Drafts

## Contents

---

	Sending options
	Memory
	Local information
	Calling voicemail
	Mailing list
<b>Page 37</b>	<b>Camera</b>
	Take and send a photo
<b>Page 39</b>	<b>Multimedia</b>
	My Pictures
	Edit a photo
	My Sounds
	Memory
<b>Page 42</b>	<b>WAP</b>
	The WAP Menu
	Configuring WAP parameters
	WAP Logging on
	Downloading objects
	WAP Logging off
	GPRS
<b>Page 46</b>	<b>Games</b>
<b>Page 47</b>	<b>Applications</b>
	Services
	ToDo
	ToDo menu
	ToDo actions menu
	Sending a vCal
	Receiving a vCal
	Exchange of data with a PC
	Calculator
	Converter
	Alarm
	Timer



## Contents

---



**Page 54**

### **Organizer**

Calendar menu  
Sending a vCal  
Receiving a vCal

**Page 56**

### **Settings**

Sounds  
    Volume and ring tone  
    Vibrate  
    Silent mode  
    Beeps  
    Recorder  
Display  
    Skins  
    Wallpaper  
    Screensaver  
    Operator logo  
    Contrast  
    Energy saving  
Camera  
Languages  
Calls  
    Call forward  
    View last calls  
    Counters  
    Display number  
    Call waiting  
    Automatic redial  
    Blacklist  
    Voicemail  
    ALS  
Security  
    Keypad locking  
    PIN number  
    PIN2 number



## Contents


---

	Phone code
	Confidentiality
	Operator
	Call barring
	Fixed dialling
	Cost
	Networks
	Short cuts
	Date / Time
	Set Date/Time
	Automatic update
	Display
	Time zone
	Summer time
	Connectivity
	IrDA
	Serial Speed
	Car kit
	WAP settings
	Help
<b>Page 77</b>	<b>Care and safety information</b>
	Safety
	SAR - FCC CERTIFICATION
	Advice for limiting exposure to radiofrequency (RF) fields
<b>Page 80</b>	<b>Warranty</b>
<b>Page 83</b>	<b>End User Licence Agreement (EULA), for the software</b>
<b>Page 87</b>	<b>Java™</b>
<b>Page 91</b>	<b>Troubleshooting</b>
<b>Page 95</b>	<b>Index</b>

## Your phone package

When you open the box, check that all items are present:

- 1 - Phone
- 2 - Charger
- 3 - Battery
- 4 - User guide
- 5 - CD  
(depending on model)

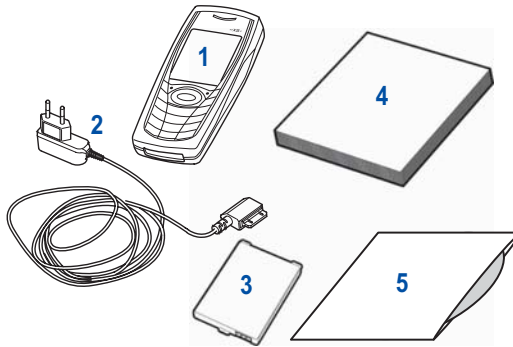

## Accessories

You can also find (as an option) or order the following accessories:

- Pedestrian kit (\*)
- Additional battery
- Additional charger (\*)
- USB cable (with associated drivers) and serial cable to connect your phone to a PC
- Cigar lighter charger (\*)
- Colored covers









(\*) *These accessories are identical to the ones provided for the earlier 3000 series and MYX-x.*

## Description

### Programmable keys and Short cut keys



Microphone


-  **Hold down:** Switch on/off  
*In a call context:* Reject a call - hang up  
*In menus:* Return to initial screen
-  **Long press:** Activate/Deactivate hands-free mode  
*In call context:* Call - receiving a call
-  **Right programmable key:** (Function available depending on model)  
*In initial screen:* Access to certain functions (shortcuts)  
*In menus:* Access to the selection shown on screen in the tab (\*)
-  **Left programmable key:** (Function available depending on model)  
*In initial screen:* Access to certain functions (shortcuts)  
*In menus:* Access to the selection shown on screen in the tab (\*)
-  Previous choice/increase value/up  
*During call:* Increase volume
-  Next choice/reduce value/down  
*During call:* Reduce volume
-  Up input field/move left
-  Down input field/move right
- OK** *In the initial screen:* access to main menu.  
*In the menus:* context-sensitive access to different functions.  
*During a call:* take a call.
- \* 0 #** **Press briefly** and **[OK]** key: activate or deactivate keypad locking  
*In call reception mode:* Short press stops ring tone  
*In ring tone setting mode:* Activate / deactivate ring tone
- When composing a message:**  
*Short press:* switches from one input mode to another (T9, ABC, 123)  
*Long press:* upper case/lower case
- # 3 #** **Hold down:** *In initial screen:* Silent mode  
Zoom mode (see **Messages** and **WAP** menus)

(\*) *In this manual, when a function is chosen by pressing on this key, square brackets are used (e.g.: [Save]).*




## Description

### Necklace attachment

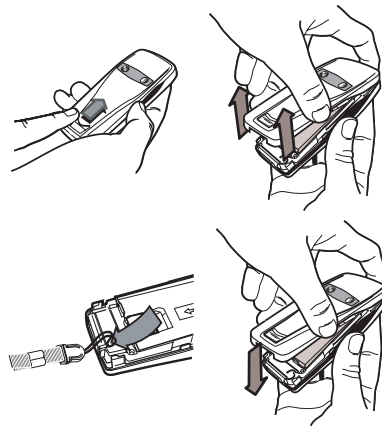

Insert the necklace into the notch located in the right bottom of the inside part of the phone.

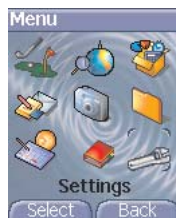

## Navigation principles





*These basic principles bring a great intuitiveness to your phone.*

**Validate** by pressing the  key or the **OK** key.


**Cancel** by pressing the  key.


The thumbnails at the bottom of the screen refer to the   keys.


In the menus, a title bar reminds you of the previous level.


The   navigation keys are used to navigate from one menu to another within the same menu structure.


From the home page, pressing the    or  keys displays the icons of the main menus.

The  key is used to go from a menu to a sub-menu.


The  key is used to go from a sub-menu to a menu.

The  key (press briefly) is used to go back to the initial screen (current function is abandoned).

In some menus there is a **Help** menu (  icon) which informs you on the various functions of the sub-menus.

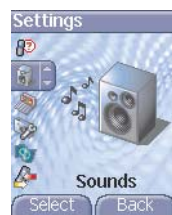

## Initial screen

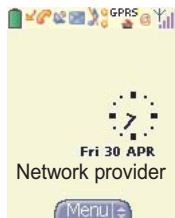

The initial screen contains the following information:

### 1 - The title bar icons:

- Battery
- Calls forwarded
- Call (establishing the call)
- Call (hands free)
- Message (reception of a message, message memory full)
- FAX communication
- DATA communication
- Silent mode
- Message in answering machine
- WAP (@) communication
- GPRS
- Home zone
- Roaming
- Keypad locking
- Protected WAP logon
- Protected WAP logon icon with certificate
- Signal strength level (5 bars).

### 2 - Date and time, in digital or analog mode

### 3 - Network provider

### 4 - Thumbnail centred on bottom line:

the main « Menu » thumbnail shows that the menu can be accessed via the ▼ ▲ ◀ ▶ keys.

 
*The following information may also be displayed:*

« 1 message received »; or « 1 call ».

*They can be deleted by pressing key briefly.*

## Activating your phone

### Information on the SIM card



To use your phone, you need a card called SIM card. It contains personal information that you can modify:

Secret codes (PIN(s): Personal Identification Numbers), these codes allow you to protect access to your SIM card and phone.

Phonebook,

Messages,

How special services work.


Your phone is compatible with the SIM 3V cards.

#### WARNING

This card must be handled and stored with care in order not to be damaged. If you should lose your SIM card, contact your network provider or your SMC (Services Marketing Company) immediately.  
Please keep your SIM card out of reach of young children.

## Activating your phone

### Installing the SIM card and the battery

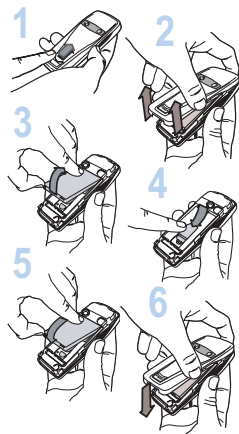

The SIM card is inserted under the phone's battery. Ensure that the phone is switched off and the charger disconnected.

- 1 Turn the phone back and push lock button upwards.
- 2 Remove the back cover by lifting bottom end first.
- 3 Take out battery if already installed.
- 4 Slide the SIM card, with cut corner as shown on the phone, into the card holder with fold face down.
- 5 Place the battery by positioning first the top of it, as shown on the battery.
- 6 Replace the back cover, clicking in first the upper part then the lower and pushing the back catch downwards into the lock position.

### Getting started


When you switch on your phone for the first time, you must configure it with various settings that will remain by default until you choose to modify them (depending on model).

After entering your PIN code and the date and time, make your choice for the following settings: time zone, daylight savings, skin, wallpaper, screensaver, ring tone, volume, vibrate and voicemail number.

If there are contacts saved in your SIM card, you are invited, if you wish, to copy them in the phone contacts memory.

## Using your phone

### Freeing the antenna

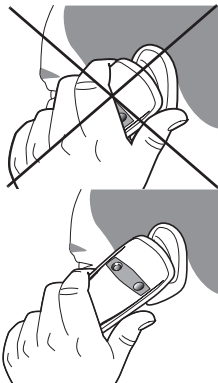

The antenna is integrated in your phone, under the back cover at the top. Avoid putting your fingers on this area when the phone is switched ON. If your fingers obstruct the antenna, the phone may have to operate with a higher power level than usual; decreasing its efficiency quickly. It could also affect the quality of your communications.

#### Non ionising radiation

To obtain maximum satisfaction from your phone, use it in a vertical position. Your personal safety can only be improved by doing so.

### Increase the efficiency of your phone

- Don't press the keys when not necessary: each keypress activates the backlight, and uses much power.
- Don't obstruct the antenna with your fingers.


### Hands-free mode

During a call, press twice the  key or the **OK** key to switch into hands-free mode.

**WARNING:** do not use the phone in hands-free mode near to your ear, or you may suffer hearing loss.

## Using your phone

### Charging the battery

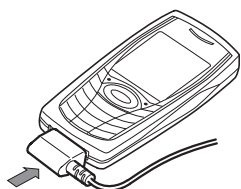

Your phone is powered by a rechargeable battery. A new battery must be charged for 4 hours at least before being used for the first time. It reaches its optimum capacity after a few cycles of use.

When your battery has been discharged, the phone displays the state (empty battery icon flashes). In this case recharge your battery for at least 15 minutes before making any calls in order not to be cut off in the middle of a call.

#### To recharge the battery:

Connect the charger to a socket.

Plug the end of the cable into the bottom connector of the phone.

The phone is then charging up. The battery icon is scrolling up and down to indicate that it is charging. When the battery is fully charged, the charging stops on its own. Disconnect the cable.

When charging, the battery may warm up, this phenomenon is normal.

#### WARNING

There is danger of explosion if the battery is placed in an incorrectly way or if it is exposed to fire.

Do not short circuit it.

The battery does not have any part that you can change.

Do not try to open the battery casing.

Use only the appropriate chargers and batteries as shown in the phone manufacturer's catalogue.

The use of other types of chargers or batteries may be dangerous or invalidate the warranty.

Used batteries must be disposed of in the appropriate places.

We advise you to take the battery out if you plan not to use the phone for extended periods.

You are strongly advised not to connect your phone to the charger if it doesn't contain a battery.

The charger is a safety step-down transformer, it is forbidden to modify, alter or replace it by another component (power supply plug, etc).

## Phonebook



The phonebook allows you to store numbers that you call regularly. These numbers can be stored in the SIM card or in the phone.

To store a contact in the phone memory, the following fields can be filled:


last name, first name, numbers, email, URL, address, company, comments, ringtone, photo.

The fields coloured with red are mandatory.

To store a contact in the SIM card, only the last name and number fields must be filled.

The storage capacity will depend on the SIM card. Please contact your network provider to get that information.

### Using the phonebook

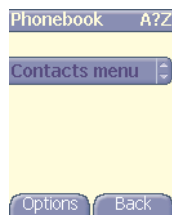

In the initial screen, press the **▼** key to access the main menus. The first menu proposed is **Phonebook**.

Press the **OK** key to enter the menu.

The list of your correspondents appears. By default, the cursor is positioned on the first name in alphabetical order.

If you are using your phone and SIM card for the first time, the phonebook list will be empty, only the **Contacts menu** function will be available.

Different icons inform you of the position in the phonebook where the contact is stored:



contact stored in the SIM card



contact stored in the phone




if the Fixed Dialling option is activated, only those contacts may be called. See **PIN2 number** and **Fixed dialling** in **Security Menu** for more details about this activation.



## Phonebook



### Storing a new contact

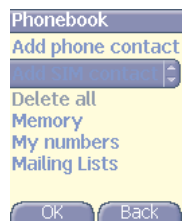

Depending on the location where you want to store a new contact, select **Add phone contact** to store it in the phone memory or **Add SIM contact** to store it in the SIM card memory or in the Fixed Dialling (Fixed Dialling is available depending on PIN number 2 options of your SIM card).

#### Adding a contact in the SIM card memory

- Select the **Contacts menu** and press the **OK** key.
- Select **Add SIM contact** and press the **OK** key.
- Select **SIM card** or **Fixed directory** and press the **OK** key.
- Enter the last name and press the **OK** key.
- Enter the number and press the **OK** key.
- Press [**Save**] to store it.




#### Adding a contact in the phone memory

- Select the **Contacts menu** and press the **OK** key.
- Select **Add phone contact** and press the **OK** key.
- Enter the last name and press the **OK** key.
- Enter the number and press the **OK** key.
- Fill in other fields if you want.
- Press [**Save**] to store it.

## Phonebook




### Contacts menu

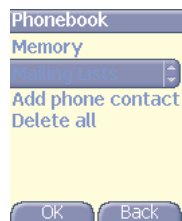

#### Mailing lists

You can create a mailing list with contacts to whom you want to send SMS or MMS.

- Select the **Contacts menu** and press the **OK** key.
- Select **Mailing Lists** and press the **OK** key. The phone asks you to confirm the creation of a new list.
- Select the list type (SMS or MMS) and press the **OK** key.
- Enter a name and press the **OK** key.
- Then, on a list press [**Options**]. Select **Add contact** each time you want to add a contact in the list.

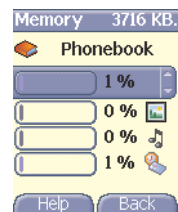

#### Memory

Select **Memory** and validate. Select SIM or Phone and validate.

Phone: the screen displays the amount of memory used. The memory capacity is shared between the phonebook and various other features. If you lack memory, check if you can free some space from another feature.

SIM: available memory only for contacts.

#### My numbers


You can create the entries corresponding to your own numbers in order to consult them when necessary.

Select **My numbers** and validate. Enter the different details and validate.

## Phonebook



### Options from a contact saved

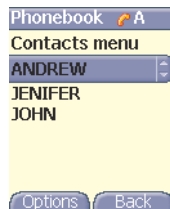

#### Displaying a contact

Select a contact from the list using the **▼ ▲** keys and press the **OK** key. The name and the number are displayed.

**Note:** By directly pressing one character, the phone will display the first contact saved in the phonebook, starting with it.

To display the different options, select a contact from the list using the **▼ ▲** keys and press **[Options]**.

#### Modify contact

Modify what you want and validate then select **Save** once the modifications completed.

#### Copy to SIM / Copy to phone

This allows you to copy your phonebook entries from one memory to the other. Only the name and the first phone number will be copied.

#### Delete

Validate deletion of entry.

#### Send message

To send a message (SMS or MMS) (see chapter **Messages**).

#### Send by


To send a message (SMS, MMS or by IrDA) (see chapter **Messages**).

#### My numbers

(See page 23).

#### Memory

(See page 23).

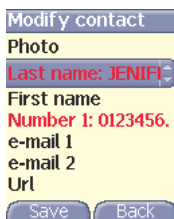

## Phonebook




### Mailing lists

(See page 23).

### Calling a contact

Several ways:

- Select a contact. Press the  key to start the call.
- Select a contact, press the **OK** key, his number is displayed, press **[Call]** to start the call.
- Direct call from the initial screen: type the number with which the contact was saved then \* $\theta_{\phi}$  (example : 21 \* $\theta_{\phi}$ ) or the number then # $\phi^{\rho}$ , the number is displayed, confirm.

### Sending a vCard

*It is possible to send a vCard from each contact stored in the phonebook.*

vCards can be sent to another phone supporting vCard.

On a contact in the phonebook, please select the **Send by** option menu item (SMS, MMS or IrDA).

If the vCard is sent successfully, an information message is displayed.

vCards can be sent as an attachment to an SMS or MMS message. See **Compose MMS** on page 29.

### Receiving a vCard

When a vCard is received enclosed to an SMS or MMS message, the message « You have received 1 message » is displayed.

Open the MMS from the inbox. Press **[Options]** and select **Extract**; select the vCard among the list of objects attached to this MMS, and add this contact to the phonebook by pressing the **OK** key. A message is displayed to confirm the action.

## Messages





From this menu, you are able to send SMS and MMS. MMS is a Multimedia Message Service, which allows you to enclose audio files, images and others rich contents to your messages; these messages can even be composed of several slides. MMS are differently invoiced than SMS are. Please contact your network provider to get more information on their cost.

This menu has been compiled in collaboration with magic4™.

magic4

### Compose SMS

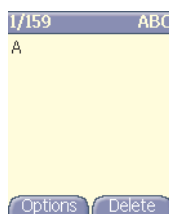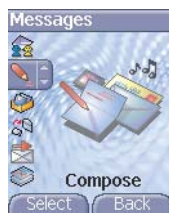

On the **Messages** menu, please select the **Compose** menu and validate. Choose the **SMS** option.

*The language used is the one selected on the display of the phone (if the language selected is not compatible with the Easy Message T9™, the English language will be automatically selected).*

When typing a text, a counter showing the number of characters deducted is displayed at the top of the screen (depending on model). This counter is not displayed if an icon or sound is inserted into the SMS.

When the text has been entered, [**Options**] is used to access the functions offered:

**Save** is used to save a draft in memory

**Send** is used to send the message by entering the correspondent's number or selecting it in the phonebook

**T9 options** (see page 27)

**ABC mode** (see page 28)

**123 mode** (see page 28)

**Quit** is used to delete all text entered and quit

**Activate/deactivate zoom** is used to modify size of characters

**Formatting** is used to enrich a text

**Insert** to insert an image or sound into your message (see page 29).

## Messages

*The Easy Message T9™ mode helps you to easily write your short messages.*



### Using T9 Mode

Press once the key corresponding to the letter chosen and compose the word by continuing to press the keys corresponding to the various letters without paying attention to the display: the word is highlighted.

If you agree on the word proposed on the screen, press the **0** key to validate it (the **0** key inserts a space), and go on writing the next word.

However, the same sequence of keys pressed can correspond to several words, existing on the dictionary. If the word that appears is not the word you expected, press the **▼▲** keys to scroll through the words corresponding to this key sequence.

Once you agree on the word proposed on the screen, press the **0** key to validate it (the **0** key inserts a space), and go on writing the next word.

If the word you are expected is not proposed, please add characters until you get the message **Add the word?** Press **Yes** and validate if the word displayed suits you or modify this word before adding it in the dictionary.









## Messages



In the input screen, the  key is used to access other input options.

### Input modes



When composing a message:  
The navigation keys assume the following functions:

-  **key:**  
Last word
-  **key:**  
Next word
-  **key:**  
Previous line
-  **key:**  
Next line
-  **key:**  
Deletes last letter
-  **key:**  
Message options
-  **key (long press):**  
Zoom mode (changes size of characters)
-  **key (short press):**  
Access to symbol table


**Editor mode:** The **ABC mode** is used to write words that do not exist in the dictionary. To get a particular character, please press the corresponding key several times: the characters will scroll down on your screen. **Mode 123** is used to add numbers.

**Insert mode** is used to add symbols, animations, call group icons and tunes. Images and sounds can be of two types: pre-defined or customized. Pre-defined images and sounds are smaller, especially suited to exchanging messages.

#### Upper case

A short press of the  key will display the next letter in upper case. Two short presses on the  key allow you to switch to upper case editing mode for the whole message. Two short presses again, switches back to lower case.

#### Punctuation characters

Punctuation characters are obtained thanks to key 1 (except in **123 mode**), or with the help of **Insert** mode (fast access by briefly pressing the  key).


#### Accented characters

Accented characters are generated automatically in T9 mode. In ABC mode accented characters are available by pressing the key supporting the non-accented character in succession.

## Messages



### Compose MMS

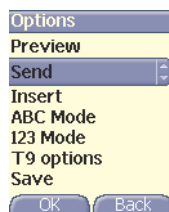

On the **Messages** menu, please choose the **Compose** menu and validate. Select the **MMS** option.

When the text has been entered, [**Options**] is used to access the functions offered:

**Insert** to insert multimedia objects such as images, animations and sounds into your message.

**T9 options** (see page 27)

**ABC mode** (see page 28)

**123 mode** (see page 28)

**Slide** to compose a slideshow of the multimedia objects.

**Preview** to see a presentation of the multimedia objects.

**Cancel** is used to delete all text entered and quit

#### Saving the message

Select **Save**. It is saved in the **Drafts** menu.

#### Sending the message

- Once the text entered, press the **OK** key or press [**Options**] and select **Send**.

- Enter the receiver's number (or take it in your phonebook pressing [**Contacts**]) and press the **OK** key.  
You can enter an e-mail address.

**Note:** It is possible that the voice message format (.amr) is not supported by some PC. See your PC provider.

*Warning: some message sendings may fail if the message content is too big.*



## Messages



Pressing **[Options]** before sending the message gives access to different options:

- **Send options:** can be used to indicate the period of validity, activate/deactivate a request delivery report, a priority, a delivery time or a sender visibility.
- **Add mailing list:** this option allows you to select a mailing list to which the message is sent (see chapter **Phonebook**).
- **Add recipient:** this option allows you to add another recipient.
- **ABC/123:** this option allows you to modify the text before sending the message.
- **Add subject:** this option allows you to add a subject to the message.

## Messages



### Receiving messages

When you receive a message, the phone plays the ring tone that you selected, and the message icon  comes on the screen of your phone.

If you do not read the messages, this icon remains displayed on the screen. When it flashes, the memory is full.

Receiving icons, backgrounds or tunes can take several seconds. An icon is blinking when the download of your message is in progress.

Note that you have two different possibilities for receiving MMS: automatically or manually; if « manual mode » is activated, then you will receive only a notification in your Inbox, meaning that a MMS is available on the MMS Server; select Retrieve in the options when you want to retrieve the MMS from the server.

For more details about automatic and retrieval modes, see « Sending options » on page 34.


Please contact your network provider to get more information on icons, backgrounds or tunes downloading.

## Messages



*Received messages are stored in the SIM card or in the phone until you choose to delete them.*

### Inbox

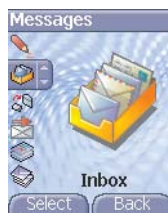

On the **Messages** menu, please choose the **Inbox** menu and **[Select]**. Each message shows the presence of any attachments, the time and date the message was received and its size.

Messages are listed in chronological order, the latest one being displayed first.


The quantity of Not Read and Not Retrieved messages is shown. Not Retrieved and Not Read messages are shown in bold.

Select a message and press the **OK** key. Choose one of the options given.

Enclosures (pictures or sounds), which you receive, can be extracted in order to be used later on (stored...).

You can consult them in the corresponding menus (WAP bookmarks in **WAP**, ring tones in **Sounds**, wallpapers in **Display**).

### Outbox

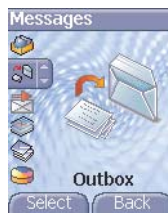

This menu displays the messages that failed to send. You can therefore try to send them again.

## Messages



### Sentbox



The **Sentbox** menu is used to store all your sent messages if you activated the option **Store sent messages** in the **Options** menu (see page 34).

Too many messages saved will quickly fill up the available memory and no further messages will be received.


For each message, its characteristics (shown with an icon) and the time (or date) of sending are displayed on the screen.

Select a message and press the **OK** key.

Choose one of the options given: Read, Modify, Forward, Delete, Delete all.

### Drafts

*When you store a composed message, it is stored among the drafts.*

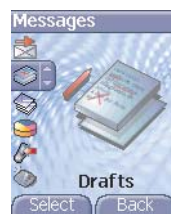

On the **Messages** menu, please choose the **Drafts** menu and press the **OK** key.

Select a message and press **[Options]**. The options are: Delete, Read, Modify, Details.

If you select a message and press the **OK** key, you can modify it.



If you want to send it, select **Modify** then press **[Options]** and select **Send**.

## Messages



### Sending options

Several sending options are offered.

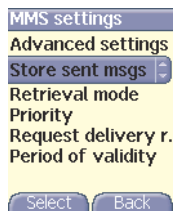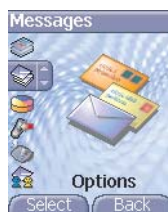

On the **Messages** menu, please choose **Options** and [**Select**]. Choose one of the options given: SMS or MMS.

The SMS sending options are: message centre number, store sent message, acknowledgment, reply given, period of validity (during that period, the network provider will try to send the message), message format.

The MMS options are:

- **Store sent messages:** (it is highly recommended that you keep this function deactivated, in order to avoid a full memory),
- **Retrieval mode:** if you are in a poor coverage area, it may be more convenient to choose the manual retrieval mode which gives you the retrieve later option.
- **Priority:** selection of a priority to send a message.
- **Request delivery report:** request of a delivery report when sending a message.
- **Period of validity**

#### Advanced settings:


- **Send delivery report:** sending a delivery report when receiving a message.
- **MMS ignore:** if you want to deactivate the reception of any MMS in your phone.
- **MMS server:** to select another MMS provider, or set the parameters of a new MMS provider.
- **Sender visibility:** you choose to display or not your phone number on the receiver's phone screen, with that message.
- **Maximum size**

## Messages



### Memory

*You may know the memory available for saving messages.*

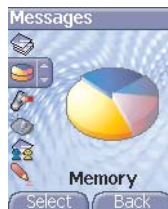


On the **Messages** menu, please select the **Memory** option and [**Select**].  
Choose one of the options given: SMS or MMS.

The SMS screen displays the memory available either on the SIM card or on the phone.

The MMS screen displays how much memory is used in Kbytes.

### Local information

*This menu is used to activate reception of local information broadcast by the network.*

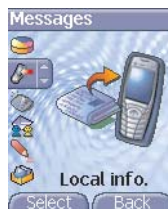

*You can choose whether you want to receive this information or not (please contact your network provider).*


On the **Messages** menu, please select the **Local info.** menu and [**Select**].

## Messages



### Calling voicemail


*This function allows you to call your voicemail.*

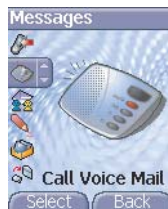

On the **Messages** menu, please select the **Call Voice Mail** option and **[Select]**.

**Note:** if your voicemail number has not been entered yet, you must enter it in the menu **Settings/Calls/Voicemail**.

### Mailing list

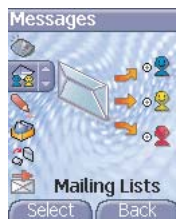

This menu displays the mailing lists created in the phonebook.

To display the different options, press **[Options]**.


- **Properties:** allows you to see the type of mailing list and the number of contacts.
- **Delete:** allows you to delete the mailing list.
- **Send message:** allows you to compose and send a message to the contacts of the mailing list.
- **Add mailing list:** allows you to create a new mailing list.
- **Modify name:** allows you to modify the mailing list name.
- **Add contact:** allows you to add a contact to the mailing list.

## Camera



This menu allows you to take photos and use them for different purposes. For instance, you can send them to another phone or an Internet address, store them, use them as wallpapers or screen savers...

### Take and send a photo

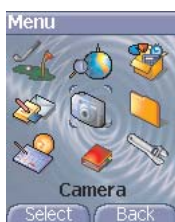

Before taking a picture, some features need to be set. See the **Settings/Camera** menu.

From the initial screen, press **▼** or **▲** to display the main menu and select the **Camera** menu.

The camera is now on. Look into your phone display and position your subject. Move your phone to position your photo.

Before taking a picture, there are various adjustment settings:

- To activate one of the three available zoom levels, use the **▼ ▲** keys.
- You can set the photo layout (landscape or portrait) using the **►** key.
- You can set the luminosity using the **◀** key:
  - ▬▬▬ : in case of neon or halogen lighting, : outdoor, : low luminosity.
- To take a picture with a 5, 10 or 15 second time delay, press **[Timer]**.

#### Taking and/or sending a picture

- Press **OK**, the photo is taken and stays on the phone display.

*Warning: if you press **[Back]**, you will go back to the previous screen and lose the photo you have just taken.*

- Press **OK** if you want to send the photo immediately.
- Press **[Save]** to save your photo and display the different options (see next page).

If there is not enough memory to save the photo, a warning message appears, prompting you to confirm whether you want to go on.



## Camera



Once taken, the photo appears on the phone display. The name is made up with a number.

**Note:** using the camera during a call may disturb the call quality.

The options are:

- **New...:** allows you to take a new photo,
- **Rename:** allows you to modify the name of a photo,
- **Send by:** allows you to send the photo by MMS or IrDA (see the **Message** menu).
- **Editor:** various options to modify a photo (see chapter **Multimedia**, part **Edit a photo**).
- **PlanetSagem:** photos that have been taken can be saved onto a PC through a cable or IrDA using the MPAS (My Pictures And Sounds) utility which can be downloaded from [www.planetsagem.com](http://www.planetsagem.com).
- **Add to contact:** allows you to assign a picture to a contact saved in the phonebook.

Select one of the options with the ▼ ▲ keys and validate.


## Multimedia

*This menu gives you easy access to your favourite photos, pictures and sounds.*



### My Pictures

*This menu gives you access to your pictures.*

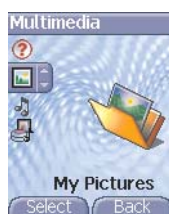

On the **Multimedia** menu, please select the **My Pictures** menu and **[Select]**.

The pictures stored are displayed on the screen. Please, use the ▼ ▲ keys to select one of them.

Once you have selected a picture, press **[Options]**.

Select one of the options in the list with the ▼ ▲ keys and validate.

- **Use as:** allows you to use the picture as a wallpaper or screen saver.
- **Delete:** allows you to delete a picture.
- **Delete all:** allows you to delete all pictures.
- **Rename:** allows you to rename a picture.
- **Send by:** makes it possible to transmit a picture (NB: you may not send any copyrighted picture).

You can import or export pictures to or from a computer using My Pictures And Sounds (MPAS), available from [www.planetsagem.com](http://www.planetsagem.com).

**Properties:** properties of the picture selected.

**New photo:** allows you to take a new picture.

The **Pictures menu** allows you to delete all the pictures or to take a new photo.

## Multimedia



### Edit a photo

On the **Multimedia** menu, please select the **My Pictures** menu and **[Select]**. Select a photo and the **Editor** option, the **Editor** menu appears.

Select one of the edit functions with the ▼ ▲ keys and validate:


- **Sepia**: allows you to change colors into sepia,
- **Zoom**: allows you to magnify certain parts of your photo,
- **Adjustment**: allows you to improve contrast,
- **Emboss**: allows you to modify a photo with an embossed grey tint,
- **Negative**: allows you to change a photo into negative,
- **Grey Scale**: allows you to change color into black and white,
- **Add mark**: allows you to add special characters or drawings to your photo,
- **Add frame**: allows you to surround your photo with a frame,
- **Contrast**: allows you to increase or decrease the contrast of your photo,
- **Sharpen**: allows you to sharpen a photo,
- **Blur**: allows you to add blur to a photo.

## Multimedia



### My Sounds

*This menu gives you access to your sounds.*

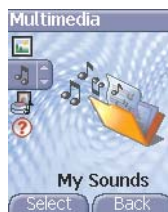


To access your sounds, use the same procedure as for your pictures (see the **My Pictures** menu).

You can import or export sounds to or from a computer using My Pictures And Sounds (MPAS), available from [www.planetsagem.com](http://www.planetsagem.com).

### Memory

*This menu indicates the memory size used by the different features of your phone.*

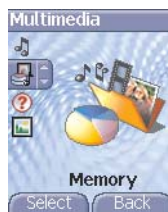

On the **Multimedia** menu, please select the **Memory** menu and **[Select]**.

Use the ▼ ▲ keys to select the different features using memory. You can see the memory capacity used by each individual feature.

## WAP



*WAP (Wireless Application Protocol): a protocol that translates the Internet language into WML and HTML languages that can be read by a phone. The WAP function allows you to log onto certain Internet sites. You can log onto sites that allow you to download ringtones, icons, animated screensavers, Java™ applications to your phone.*


### The WAP Menu

The WAP navigator is under licence:



The WAP navigator and the softwares included are the exclusive property of Openwave. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of these softwares.

You can activate the magnifying glass to increase the size of the characters by holding down the **#jP** key.

The **Services** menu, a dropdown menu, can be accessed at all times when navigating through WAP pages pressing the  key.

It contains the following sub menus:

**Welcome:** logs onto the home page, (carries the name of your access provider)

**Bookmarks:** is used to save in a phonebook the names and addresses of Internet sites in order to make the access easy.

You can receive bookmarks from messages and add them to this list (see chapter on SMS).

You can also send messages by SMS: select a bookmark, press **[Options]**, then select **Send by message**.

**Go to URL:** this menu allows you to input an Internet address directly.

**Inbox:** this menu allows you to check the messages sent by the Internet site.

**Save items:** is used to save a WAP site items.

**Snapshots:** takes a snapshot of the currently displayed page.

**History:** backward and forward navigation of the pages displayed are kept in memory.

**Reload:** refreshes the current page.

**Reset cache:** clears the stored information on previous connections.

## WAP



**Advanced...:** choose one of the following advanced settings

- Settings
- Show URL
- Disconnect
- Circuit prompt (if user wants to confirm each logon)
- Security (is used to access information on making WAP connections secure).
- Delete Cookies
- View Title Region

**About...:** information on the browser.

**Exit:** returns to the phone's home page.

### Configuring WAP parameters

Select the **Advanced...** menu, then the **Settings** menu.

**Profiles** is used to select or modify your access provider's logon parameters or configure the parameters of other access providers.

*The active access service is preceded with a star.*

The **Menu** is used to add a new profile or to display the memory size available.

#### Configuration of GSM and GPRS parameters:

All information to be entered in the parameters are provided by your operator or access provider.

On a profile in the list, press **[Options]**, select **Modify**. The different parameters are: Provider title, Home page, Preferred connections (see next page), GSM parameters and GPRS parameters (see next page).

## WAP



### Preferred connections:

**GSM if not GPRS** (by default): the logon to WAP services uses the GPRS as a priority. However, in the event of unavailability of the GPRS network, the GSM network is used to establish the link.

**GPRS**: the logon to WAP services uses the GPRS network exclusively.

**GSM**: the logon to WAP services uses the GSM network exclusively.

### GSM parameters:

- Login
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- Dial-up number
- Mode (digital, analog or automatic)

*In automatic mode access can be gained to the operator's network by a digital link and an analog link to a different network (in roaming).*

### GPRS parameters:

- Login
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- APN: if no APN has been defined, press **[Options]** then the APN menu. Select or add an APN.

Once all the settings have been entered, you can activate the chosen access provider. Select him from the list. Validate your choice.


**Linger timer** is used to choose the time after which the call is automatically disconnected if you have forgotten to log off from a service.

## WAP



### WAP Logging on

*The connection to a WAP service on the GPRS network is not cut if an incoming call is received. You can answer the call.*

Using the **Welcome** menu, you can log onto your access provider's WAP site by pressing the  key.

If you are logging onto the GSM or GPRS network, the @ symbol flashes, the metering of the cost of the call starts as soon as it stops flashing.

### Downloading objects

Some WAP sites allow you to download ringtones, icons, animated screensavers, games or JAVA™ applications. Once downloaded, they are stored in your phone's memory. You can then save them in your phone (same operation as used for downloading using messages).

### WAP Logging off

To log off, press the  key. The logoff happens automatically after a few seconds of inactivity if you forget to log off. This period is defined by the linger time setting.

### GPRS

A flashing icon indicates that the phone is logging onto a GPRS network. A non-flashing icon indicates that the GPRS network is available; if the icon is dark, it indicates that the phone is logged onto the GPRS network: see page 43 for the attachment options.

This icon is not displayed if the GPRS network is not available or if the SIM card inserted in your phone does not include the GPRS service. It may also disappear when accessing WAP services if the connection uses the GSM network instead of the GPRS network.



## Games



*The games being designed by Java™, many compatible games can be downloaded in your phone.*



The **More games** function allows you to download games connecting on a remote server.

Depending on the operator, the connection URL may not be present. To add a new URL, go to **Settings/Connection/Menu/Add**.

**Delete all menu:** deletes all the games you have downloaded.

**gameloft**

## Applications



The Java™ function allows you to download applications and utilities in your phone.

Downloading is done through the WAP function.


Please go to the **Applications** menu to use the applications already installed or install others.

### Services

This item may not be present on your phone's menu, as it depends on your SIM.

### ToDo

#### ToDo menu

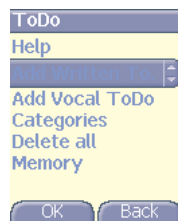

This menu allows you to add ToDo's, access category-based Todo management and delete all the ToDo's.

On the **Applications** menu, please select **ToDo** then the **ToDo** menu and press **[Options]**.


Select one of the actions in the list with the ▼ ▲ keys and validate.

- **Add Written/Vocal ToDo**: allows you to add ToDo of the text or voice type. Fill in the different items. Save the ToDo.
- **Memory**: allows you to view the memory used by the different functions of your ToDo.
- **Categories**: allows you to see the different ToDo categories, assign a specific ring tone to each individual ToDo, know the number of ToDo's in each category and see them.
- **Delete all**: allows you to delete all the ToDo's from your ToDo.

## Applications



### ToDo actions menu

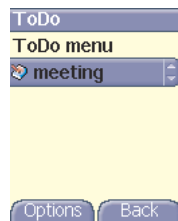

*This menu allows you to do all the actions possible on any ToDo.*

On the **Applications** menu, please select **ToDo**.

To display a ToDo, select it in the list and press the **OK** key.

To display the different options, press [**Options**].

- **Delete**: allows you to delete the ToDo.
- **Modify ToDo**: allows you to modify the ToDo properties.
- **Send by IrDA**: allows you to send the Vcalendar corresponding to the task by IrDA.
- **Add written ToDo/Add vocal ToDo**: allows you to create a new ToDo.
- **Memory**: allows you to view the memory used by the different functions of your ToDo.
- **Categories**: allows you to see the different ToDo categories, assign a specific ring tone to each individual ToDo, know the number of ToDo's in each category and see them.

## Applications



### Sending a vCal

*You can send a vCal from each Todo task. Yet, this function is available only on certain models of phone.*

You can send vCals to another phone using MMS or IrDA depending on your phone and the recipient's phone.

On the task list (Todo main menu), please select **a task** and in the Todo task actions menu list select **Send**.

Then choose between MMS or IrDA for the type of sending and confirm.

When sending MMS, please select your contact information (phone number or Email address) before confirming.

If you receive a call while you are sending a vCal, the call will have precedence.

### Receiving a vCal

The vCal receipt mode differs with the type of delivery:

- By MMS, you receive a message you have to open to extract the vCal. You cannot add the event to your diary until you have saved it.
- By IrDA or serial link, you receive a message and when the download is completed, a message appears on your phone display, asking you what you want to do with the vCal (save it, delete it...).

You can assign a different beep to each Todo task.

You can also assign a different ring tone to each Todo task category.

## Applications



### Exchange of data with a PC

Working from a PC, you can save/edit contacts, events and tasks stored in your phone.

To do this, you will need:

- either to connect your phone to the PC by means of a suitable data cable (serial or USB),
- or to use the infrared function on your phone (please refer to the **Connectivity** paragraph in the **Settings** Chapter).

Next, you will have to install the Wellphone software supplied with your phone or available from <http://www.wellphone.com>. This software will also enable you to save your contacts, events and tasks by means of copy/paste.

Working from a PC, you can save/edit photos and ring tones not copyrighted stored in your phone.

To do this, you will need:

- either to connect your phone to the PC by means of a suitable data cable (serial or USB),
- or to use the infrared function on your phone (please refer to the **Connectivity** paragraph in the **Settings** Chapter).

Next, you will have to install the "My Pictures and Sounds" software (available from [www.planetsagem.com](http://www.planetsagem.com) site).


**Remark:** If a call comes in during an exchange of data with your PC, the link will be interrupted and will have to be manually re-started.

## Applications



### Calculator

*This menu allows you to use your phone as a calculator.*

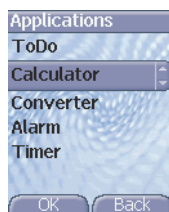

On the **Applications** menu, please select the **Calculator** menu and **[OK]**.

You can use the calculator thanks to the following keys:

- ▲ **Up key:** Add
- ▼ **Down key:** Subtract
- ▶ **Right key:** Multiply
- ◀ **Left key:** Divide
- ↵ **Left programmable key:** Equals or convert
- ⌫ **Right programmable key:** Delete
- \*  $\frac{\square}{\square}$  #  $\frac{\square}{\square}$  \* **key or #:** Decimal point.


*If no calculations are being run, pressing **[Convert]** allows you to use the value in the **converter** directly.*

## Applications



### Converter

*This menu allows you to convert one currency to another.*

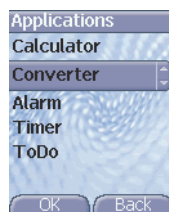

On the **Applications** menu, please select the **Converter** menu and **[OK]**.

Enter a value and press the **▲** key to convert from one currency to another, **or** the **▼** key to convert back.

Pressing **[Options]** allows you to use the following options:

#### **Rapid exchange**

If the Rapid exchange is activated, the converter will work in the initial screen by entering the desired numbers and pressing the **▲ ▼** keys to convert.

#### **Exchange rate**

Enter the exchange rate corresponding to the chosen currency.

#### **Currency**

Enter the two types of currency to be converted.

#### **Go to calculator**

This option allows you to use immediately the value converted in the **calculator**.


## Applications



*The alarm works even when the phone is switched off.*

### Alarm

*This menu allows you to set and activate the alarm.*

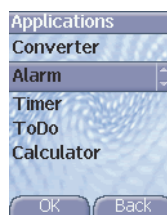

On the **Applications** menu, please select the **Alarm** menu and **[OK]**.


**Activate** or **Deactivate** the alarm and validate.

Set the wake-up time by entering the numbers directly or using the ▼ ▲ keys and validate.

 *The alarm icon appears on the initial screen.*

### Timer

*This menu is used to set and activate the timer.*

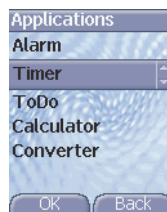

On the **Applications** menu, please select the **Timer** menu and **[OK]**.

**Activate** or **Deactivate** the alarm and validate.

Set the duration (hours/minutes) by entering the numbers directly or using the ▼ ▲ keys and validate.

 *The alarm icon appears on the initial screen.*



## Organizer



*This menu gives you access to your diary and get to a day, week, month or specific date. It lets you add events, access the global actions for all the events and manage them by event category.*

### Calendar menu

*This menu lets you add events, manage events by category, see the available memory and delete all the events.*



From the **Organizer** menu, select the **Calendar** menu.

- **Categories:** allows you to see the different event categories, assign a specific ring tone to each individual category, know the number of events in each category and see them.
- **Add written event/Add vocal event:** allows you to add events of the text or voice type. Fill in the different items. Save the event.
- **Clean-up:** allows you to schedule the deletion of events that took place more than one day, week or month ago.
- **Memory:** allows you to view the memory capacity used by the different functions of your diary.
- **Delete all:** allows you to delete all the events from your diary.

The other menus are:

- **See date:** allows you to access events at a specific date.
- **See today:** allows you to access the events for the current day and the actions possible on any event (see, modify, delete and send).
- **See week:** allows you to access events on a week-by-week basis.
- **See month:** allows you to access events on a month-by-month basis.

## Organizer



### Sending a vCal

*You can send a vCal from each diary event. Yet, this function is available only on certain models of phone.*

You can send vCals to another phone using MMS or IrDA depending on your phone and the recipient's phone.

On the See today list, please select an event and in the Todo event actions menu list, select Send.

Then choose between MMS, IrDA or serial link for the type of sending and confirm.

For MMS deliveries, you should in addition select your contact information (phone number or Email address) before confirming.

If you receive a call while you are sending a vCal, the call will have precedence.

### Receiving a vCal

The vCal receipt mode differs with the type of delivery:

- By MMS, you receive a message you have to open to extract the vCal. You cannot add the event to your diary until you have saved it.
- By IrDA or serial link, you receive a message and when the download is completed, a message appears on your phone display, asking you what you want to do with the vCal (save it, delete it...).

You can assign a different beep to each diary event.

You can also assign a different ring tone to each diary event category.

## Settings



*This menu allows you to set your phone.*

### Sounds

*This menu allows you to customize the ring tones on your phone and to activate beep and vibrate modes.*

#### Volume and ring tone

*This menu allows you to allocate a ring tone to each type of event.*



On the **Sounds** menu, please select the **Ring tones** menu and [**Select**].  
Select one of the events given: Alarm, Calls, Messages, Local Infos and Fax and validate.

Select the **ring tone** from the proposed list and validate.

Adjust the **volume** using the ▼ ▲ keys and validate.

You can deactivate the sound by pressing the # \* P key.

#### Vibrate

*This menu allows you to activate the vibrate mode for calls.*




On the **Sounds** menu, please select the **Vibrate** menu and [**Select**].

Select the vibrate mode from the proposed choices and validate.

## Settings




### Silent mode

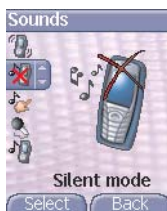


*This menu allows you to switch to Silent mode.*

On the **Sounds** menu, please select **Silent mode** and **[Select]**.

**Activate** or **deactivate** Silent mode and validate.

Silent mode can also be accessed via the initial screen by holding down the  key.

 *When the phone is in silent mode, the relevant icon appears on the initial screen.*

*In this mode, the ring tone will not function, except for the alarm clock.*

**Note:** if you have activated the silent mode, it does not remain after switching off your phone.

### Beeps



*This menu allows you to activate a beep for each type of event.*

On the **Sounds** menu, please select the **Beeps** menu and **[Select]**.

Select the type of beep you want to allocate from the proposed choices (Key beep, Network beep or Battery beep) and validate. Activate or deactivate the beep and validate.

If you select key beeps, different options are given.

## Settings



### Recorder



*This menu allows you to record your own melody.*

On the **Sounds** menu, please select the **Recorder** menu and **[Select]**. Pressing **[Start]** record your melody or your voice by means of the microphone then save it.

Give it a name and validate. The new tone is saved in the list of ringtones and in **Multimedia/My Sounds**.

If you select the recorder by means of a programmable key, the sound is saved in the **Applications/ToDo** menu.

### Display

*This menu allows you to customize your screen by choosing a different presentation.*

### Skins



*This menu allows you to choose the skin of your phone, i.e. define its look (text font, colors, default animation, background image...).*

On the **Display** menu, please select **Skins**.


Select the desired skin and validate.

Skins are not downloadable but you can download screensavers and boot mode animations without changing those included by default with the skin.

## Settings



### Wallpaper

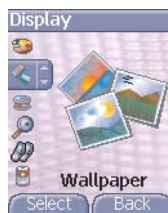

*This menu allows you to display the background picture you want on your phone.*

On the **Display** menu, please select the **Wallpaper** menu and **[Select]**. Select the wallpaper and **[Visualise]**. The picture appears in the background of the screen.

Press **[OK]** to validate this choice, or **[Back]** to go back to choice.

Note: the **Diaporama** option allows you to display a wallpaper scrolling different pictures in a random way.

### Screensaver



*This menu allows you to display an animation when the phone is in standby mode.*

On the **Display** menu, please select the **Screensaver** menu and **[Select]**.

Select one of the screensavers given and **[Visualise]**.

The chosen screensaver appears on the screen, validate it.

## Settings



### Operator logo

*This menu allows you to display your operator's logo on the initial screen.*



On the **Display** menu, please select the **Operator logo** menu and **[Select]**.

Select **Activate** or **Deactivate** and press **OK**.

### Contrast

*This menu is used to adjust screen contrast.*



On the **Display** menu, please select the **Contrast** menu and **[Select]**.

Adjust the contrast using the Up ▲ or Down ▼ keys.

## Settings



### Energy saving



*This function is used to deactivate the screen and the keypad backlight and consequently increase the battery life of your phone.*

On the **Display** menu, please select the **Energy saving** menu and **[Select]**.

For Backlight two options are available: screen only and Full backlight.

The screen goes out (standby mode).

To quit this mode, press the key.

### Camera

*This menu allows you to set the camera features of your phone.*



On the **Settings** menu, please select the **Camera** menu and **[Select]**.

**Timer:** this menu enables you to take a photo with a 5, 10 or 15 second time delay. During preview of the photo, activate the delayed exposure by pressing on the button . (NB: if you want to take the photo immediately, then press on the Photo button).

**Click sound:** This menu allows you to select the sound you will hear when taking a photo.

**Photo format:** This menu allows you to choose the format in which your photo will be saved. There are several options:

- either you systematically set the photo format to one of the following: **High resolution** or **Mobile format**,
- or you can choose the photo format on a case-by-case basis.




## Settings



### Languages

*This menu allows you to choose your phone's display language.*

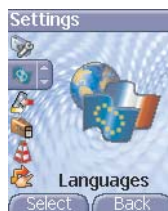

On the **Settings** menu, please select the **Languages** menu and **[Select]**.

Select your language and validate.

If you select **Automatic**, the language used will be the one relative to your SIM card.

### Calls

*The **Calls** menu allows you to manage all the calls functions (call forward, displaying numbers, call waiting, voicemail number, etc.).*

#### Call forward



*Depending on your subscription, this service allows you to forward incoming calls to a different number or to the voice mailbox.*

On the **Calls** menu, please select the **Call forward** menu and **[Select]**.

Choose the type of forwarding you want from the options available.

## Settings



### View last calls



*This menu allows you to access the list of last numbers used.*


On the **Calls** menu, please select the **View last calls** menu and **[Select]**.

*For every phone call are displayed on the screen:*

- its characteristics (shown with an icon),
- the time (or date),
- its duration.

Select a call from the list and validate.

Select one of the options given: Call, Store in your phonebook, Send a message, Delete, Delete all.

*You can also make the call by pressing the  key.*

*Fast access to the list of calls from the initial screen: press the  key.*

### Counters



*This menu allows you to consult the duration of the up calls.*

*It can also be used to check the volume of data exchanged in GPRS.*

On the **Calls** menu, please select the **Counters** menu and **[Select]**.

Select one of the options given.

## Settings



### Display number



*This menu allows you to modify the status of the display number function.*

On the **Calls** menu, please select the **Display number** menu and **[Select]**.

Select one of the options given: Anonymous mode, My number, Callers' number.

#### **Anonymous mode**

You have the facility to mask your number on the phone of the person you are calling.

**Preset:** network default mode.

**No:** you choose not to activate anonymous mode and then to display your number.

**Yes:** you choose to activate anonymous mode and then not to display your number.

### Call waiting



*During a call, you may be informed that a caller is trying to reach you: you hear a special tone. The caller's identity is displayed on the screen (name or number). (Operator-dependent service)*

On the **Calls** menu, please select the **Call waiting** menu and **[Select]**.

You can **activate**, **deactivate**, or **consult the status** of the call waiting service in order to check if it is active or not.

During a call, if a second caller tries to contact you, the screen displays the call warning.

## Settings



### Automatic redial



*This menu allows you to call back a caller you have not managed to reach.*

On the **Calls** menu, please select the **Auto redial** menu and **[Select]**.

You can set the redial function to inactive, on request or systematic.

If you choose **On demand**, your phone will offer to redial your caller automatically if his number is busy.

### Blacklist



*The blacklist is used to limit failures on automatic calls (calls generated by the automatic redial function or by applications: data, fax for example).*

On the **Calls** menu, please select the **Blacklist** menu and **[Select]**.


When several automatic calls failed with a number (number busy or unknown), this number is put in the blacklist and no automatic call will be done with this number any more until you delete it from the blacklist.

**Note:** this function does not apply to the calls performed manually.

## Settings



### Voicemail

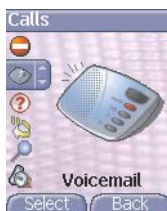

*This function is used to record your answer phone number. This number will be used during a call to the voice mailbox using the programmable keys.*  
On the **Calls** menu, please select the **Voicemail** menu and **[Select]**.  
Enter your answer phone number and validate.

### ALS


The ALS (Alternate Line Service) function allows you, depending on your subscription, to have two phone lines.  
The number of the line selected (1 or 2) for the calls appears on the initial screen.

## Security

*This menu allows you to configure your phone's security settings.*

### Keypad locking



*This menu allows you to lock the keypad to avoid unwanted key presses.*  
On the **Security** menu, please select the **Keypad locking** menu and **[Select]**.  
Select **Activate** or **deactivate** and validate.  
 The lock icon appears on the initial screen.  
*This function is also available in the initial screen pressing the \* $\theta$  and OK keys.*

## Settings



### PIN number



*This menu allows you to activate and modify your phone's PIN.*

On the **Security** menu, please select the **PIN number** menu and **[Select]**.

To modify the PIN, select **Modify** and **[Select]**.

Enter old PIN and validate.

Enter new PIN twice and validate.

To activate or deactivate the PIN, select the **Check PIN** menu and **[Select]**.

Enter PIN and validate.

Select **Activate** or **Deactivate** and validate.

### PIN2 number



*You have a second PIN number to allow you to access certain functions\*.*

*\* These functions may or may not be available depending on your SIM card.*

Proceed as above in order to activate, deactivate or modify PIN2 number of your phone.

## Settings



### Phone code



*The Phone code menu allows you to activate the phone code so that it is requested and checked whenever the phone is switched on if a different SIM card is used. This code is automatically linked to the SIM card installed when the phone is activated, for example to protect the phone if stolen.*

To activate or deactivate the phone code, select the **Phone code** menu and validate.

Enter 0000 (the factory code, by default) and validate.  
Select **Activate** or **Deactivate** and validate.

To modify the phone code, select **Modify** and validate.

Enter old phone code and validate.  
Enter new phone code and validate.  
Enter phone code again to confirm it and validate.

### Confidentiality



*The Confidentiality function is used to delete numbers stored in View last calls and the SMS stored in the memory when a new SIM card is inserted into the phone.*

*This menu allows the activation of automatic deletion, after power off/on, for messages and/or calls stored in the phone.*

On the **Security** menu, please select the **Confidentiality** menu and **[Select]**.

Select **Activate** or **Deactivate** and validate.

## Settings



### Operator



*This menu allows you to modify the call barring.*

On the **Security** menu, please select the **Operator** menu and **[Select]**.

*Access to this service depends on your type of subscription.*

### Call barring



*Call barring can be applied to ALL calls (incoming and outgoing), to all incoming calls when you are away from your home country (if roaming available).*

*This menu allows you to block the sending or reception of certain calls. Before you can use this service, a password will be provided by your operator when you take out your subscription.*

On the **Security** menu, please select the **Call barring** menu and **[Select]**.

Select **Activate** or **Deactivate** and validate.

*Access to this service depends on your subscription type.*



## Settings



### Fixed dialling



*This menu allows you to restrict the outgoing calls.  
The availability of this menu depends on your SIM.*


On the **Security** menu, please select the **Fixed dialling** menu and **[Select]**.

Enter PIN2 number and validate.  
Select **Activate** or **Deactivate** and validate.  
Proceed as for any other phonebook.

When activating this function, only the numbers stored in the phonebook can be called.

*This phonebook is linked to the SIM card, and its size depends on the card's capacity.*

### Cost

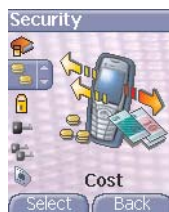

*This menu allows you to control the cost of your calls (\*).*

On the **Security** menu, please select the **Cost** menu and validate.

The **Cost** menu (\*) lets you check the cost of the last call you made and of all the calls you made since you last deleted them.

The **Delete costs** menu (\*) lets you delete the cost of your last call and reset the cost counter after entering your PIN 2 code.

**(\*) WARNING**


*Depending on how the networks and associated subscription cards are configured, some functions may be unavailable (these are marked out with \*).*

## Settings



### Networks

*This menu allows you to configure network preferences.*

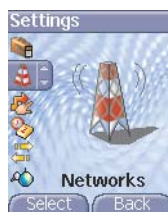

On the **Settings** menu, please select the **Networks** menu and [**Select**].  
Choose **Preferred** to view all the pre-registered networks.

Choose **Selection** to activate (automatically or manually) one of the networks accessible in the area in which you are located.

Choose **Network type** to select your network: GSM-DCS or PCS (depending on model).


Choose **GPRS** to select the way you want to be attached on the GPRS network: always, or only when needed (when launching a data connection).

### Short cuts

*This menu allows you to allocate functions to the programmable keys.*

*(Function available depending on model)*

*This menu allows you to customize the settings of your phone to make it as convenient as possible for you to use.*

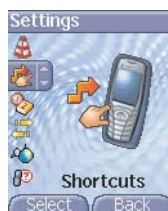

On the **Settings** menu, please select the **Short cuts** menu and [**Select**].

Select the key that you wish to modify and validate.

Choose the function that you want to allocate to this key and validate.

## Settings



### Date / Time

#### Set Date/Time



*This menu allows you to set the date and time of your phone.*

On the **Date / Time** menu, please select **Set Date/Time** and **[Select]**.

**Date:** set the date by entering it directly in digital form or by using the ▼ ▲ keys.

Use the ► (or ◀) key to access the next (or previous) entry field.

Once the date is correct, validate it.

**Time:** same procedure as for setting the date.

#### Automatic update



*This menu allows you to choose manual or automatic updating of date and time (after switch off of your phone or when going abroad for instance) (service depending on the operator).*

From the **Date / Time** menu, please select **Automatic upd.** and **[Select]**.

Please select Automatic, Manual or On demand and press **OK**.

## Settings



### Display




*This menu allows you to select the date and time display type.*  
On the **Date / Time** menu, please select **Display** and [**Select**].  
In the list that appears, select the desired display type between:

- Analog,
- Digital,
- None,

by using the ▼ ▲ keys and validate.

### Time zone

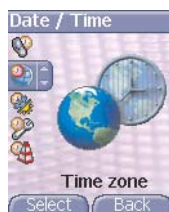

*This menu allows you to change time in relation to the GMT time.*  
On the **Date / Time** menu, please select **Time zone** and [**Select**].  
Choose the time of the country desired by calculating the time from the GMT time.

## Settings



### Summer time

*This menu allows you to set your phone to the summer/winter time.*




On the **Date / Time** menu, please select **Daylight savings** and [**Select**]. Select 1 h, 2 h **Summer time** or **Winter time** depending on the season, and validate.

### Connectivity

*You can also connect it to your computer in order to receive data or fax through GSM or GPRS network (depending on subscription): configure the connection parameters of your computer using the Wellphone CD supplied as an accessory.*

### IrDA

*This menu is used to configure the data exchange with another device (Personal Digital Assistant, PC, etc.).*

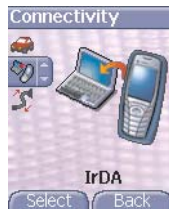

On the **Connectivity** menu, please select the **IrDA** parameters menu and validate.


You may then:

- send or receive images, sounds etc either using a different compatible phone or from a PC installed with "My Pictures and Sounds" (available from [www.planetsagem.com](http://www.planetsagem.com)), or
- exchange contacts, events and tasks with your PC by means of the Wellphone software (page 53).

## Settings




### Serial Speed

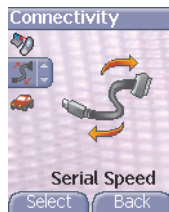

On the **Connectivity** menu, please select the **Serial Speed** parameters menu and validate.

The **Speed** menu enables you to select the speed to be used for data exchanges via your phone's serial port. Except for specific requirements, it is advisable to stick to the default setting: **Automatic**.

### Car kit

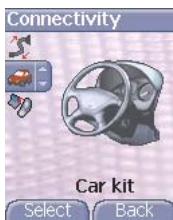

*This menu allows you to configure your phone with a car kit.*

On the **Connectivity** menu, please select the **Car kit** menu and **[Select]**.


Choose one of the options given: Automatic response, Switch off, Kit volume.

## Settings



### WAP settings


*This menu allows you to set various parameters needed for WAP connection.*

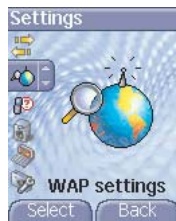

On the **Settings** menu, please select **WAP settings** and **[Select]**.  
You can add or modify URL addresses.

### Help

*This menu allows you to activate or deactivate the display of the help in the phone.*

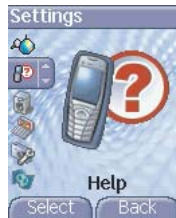

## Care and safety information

### Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited.

Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures from -10°C to +55°C.

The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

#### Electrical safety

Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

#### Aircraft safety

When travelling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs.

Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.

Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

#### Explosive materials

Please comply with warning signs at petrol station asking you to switch your phone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

#### Electronic equipment

To avoid the risk of demagnetisation, do not let electronic devices close to your phone for a long time.

#### Electronic medical equipment

Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

#### Hospitals

Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

#### Road safety

Do not use your phone when driving. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.



## Care and safety information

### SAR - FCC CERTIFICATION

**THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg (\*). Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (i.e., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR values for this model phone as reported to the FCC when tested for use at the ear and when worn on the body are given in the following table:

Highest SAR values	GSM 850 Mhz	PCS 1900 Mhz
Head	0.794 W/kg	0.369 W/kg
Body	0.752 W/kg	0.608 W/kg

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID M9H95MYX52A.

(\* ) In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 Watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.



## Care and safety information



### Advice for limiting exposure to radiofrequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

**Precautionary measures:** Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.



## Warranty

You must always use your phone for the purpose for which it was designed, under normal operating conditions. SAGEM SA declines all responsibility for any use outside of the scope of its designed purpose and for any consequences of this use. The software program developed by SAGEM remains the exclusive property of SAGEM SA. It is therefore highly prohibited to modify, translate, de-compile or disassemble this software program or any part thereof.

### Usage precautions

Your phone allows you to download ring tones, icons and animated screensavers. Some of these items may contain data that may cause malfunctions of your phone or data losses (virus for example).

For this reason, SAGEM SA rejects all responsibility concerning (1) the reception of downloaded data or losses of the said data, (2) the impact on the operation of the phone and (3) damages resulting from receiving the said downloaded data or loss of said data. In addition, SAGEM SA states that a failure caused by receiving downloaded data that do not comply with the specifications set by SAGEM SA is excluded from the warranty. Consequently, the diagnosis and repair of a phone infected by the said downloaded data will be at the expense of the customer.

Any content that you download to your phone may be protected by copyright belonging to third parties and consequently you may not have the right to use this content or its use may be restricted. Consequently it is up to you to ensure that you have permission, such as under the terms of a license agreement, to use any content that you download. Furthermore, SAGEM SA does not guarantee the accuracy nor the quality of any content that you download. You alone are responsible for the content that you download to your mobile phone and how you use it. SAGEM SA cannot be held responsible for this content nor for its use.

It is your responsibility to ensure compliance, at your own expense, with the laws and regulations applicable in the country where you use your phone.

### Warranty conditions

Whenever you wish to make use of the warranty, please contact your vendor and present him with the purchasing paperwork that he gave you.

If a fault occurs, he will advise you.

#### 1.

The new phone (excluding consumables), including new accessories bundled with the phone, are guaranteed by SAGEM SA, parts and labour (apart from travel) against any manufacturing fault for a period of twelve (12) months with effect from the sale of the phone to the customer, on presentation of the paperwork stating the purchase date of the phone.

Phones that have been repaired or replaced as standard during the warranty period stated above are guaranteed (parts and labour) until the later of these two dates:

Expiry of the guarantee period of twelve (12) months stated above or three (3) months with effect from the date of support provided by SAGEM SA.

Your legal rights under the terms of applicable national law as well as your rights in relation to your retailer, as set out in the sales contract, remain applicable and are not in any way affected by this guarantee.

In any disputes, the phone is covered by the legal warranty against the consequences of faults or hidden defects in compliance with articles 1641 and subsequent of the French civil code.

## Warranty

### 2.

All faulty phones under warranty will be replaced or repaired free of charge at SAGEM SA's option (with the exclusion of repair of any other damage), once it has been specified that the work required for the application of the warranty will be done in a workshop and that the return costs (transport and insurance) of the phone to the address to be indicated to it by the SAGEM SA after-sales service, whose phone number will appear on the delivery note, will be charged to the customer.

Subject to essential legal provisions, SAGEM SA does not accept any warranty, explicit or implicit, other than the warranty provided expressly in this chapter, nor shall SAGEM SA accept responsibility for any immaterial and/or indirect damages (such as loss of orders, loss of profit or any other financial or commercial damage) under the warranty or not.

### 3.

The acceptance of a phone under warranty demands that a purchase document that is legible and without modification, stating vendor's name and address, date and place of purchase, type of phone and IMEI, are attached to the warranty, and that the information on the phone identification label is legible and that this label or any other seal has not been tampered with.

The warranty applies in normal conditions of use.

Prior to sending the phone for repair, it is the customer's responsibility to backup at his expense the customized data stored in the phone (phonebook, settings, wallpapers). A list of backup facilities can be provided by SAGEM SA on request. The responsibility of SAGEM SA cannot be invoked if damage occurs to customer files, programs or data. The information or operating elements and the contents of files will not be re-installed in any case in the event of loss.

SAGEM SA may decide, at its option, to repair the phone with new or reconditioned parts, replace the phone with a new phone or, in any dispute, a phone in good working condition. During its work SAGEM SA reserves the facility to make, where necessary, any technical modifications to the phone where these modifications do not adversely affect its initial purpose.

Faulty parts to be replaced during a repair under warranty will become the property of SAGEM SA.

The phone repair and standstill time during the warranty period may not lead to an extension of the warranty period as stated in article 1 above, provided no other vital provisions have been agreed.

The application of the warranty is subject to the full payment of the sums due for the phone when the request for support is made.

### 4.

The following are excluded from the warranty:

Breakdowns or malfunctions due to non-compliance with the installation and use instructions, to an external cause of the phone (shock, lightning, fire, vandalism, malice, water damage of any type, contact with various liquids or any harmful agent, unsuitable electric current...), to modifications of the phone made without the written consent of SAGEM SA, to a servicing fault, as described in the documentation supplied with the phone, to lack of supervision or care, to poor environmental conditions of the phone (especially temperature and hygrometry, effects of variations in electric voltage, interference from the mains network or earth) or even due to a repair, a call-out (opening or trying to open the phone) or to servicing done by personnel not approved by SAGEM SA.

Damage resulting from inadequate packaging and/or poor packing of the phone sent back to SAGEM SA.

Normal wear and tear of the phone and accessories.

## Warranty

Communication problems linked with a poor environment, especially:

Problems accessing and/or logging onto the Internet, such as breakdowns of the access network, the failure of the subscriber's or his correspondent's line, transmission fault (poor geographic coverage by radio transmitters, interference, disturbance, failure or poor quality of phone lines...), a fault inherent to the local network (cabling, file server, user phone) and/or transmission network fault (interference, disturbance, failure or poor quality of the network...).

Change of parameters of the cellular network made after the phone was sold.

Supply of new software versions.

Current servicing work: delivery of consumables, installation or replacement of these consumables...

Call-outs for phone or software modified or added without the written consent of SAGEM SA.

Faults or disruptions resulting from the use of products or accessories not compatible with the phone.

Phones returned to SAGEM SA without having complied with the return procedure specific to the phone covered by this warranty.

The opening or closing of a SIM operator key and call-outs resulting in the non-operation of the phone resulting from the opening or closing of SIM operator key done without the agreement of the original operator.

5.

In the cases of warranty exclusion and of expiry of the warranty period, SAGEM SA shall draw up an estimate to be given to the customer for acceptance before any call-out. The repair and carriage costs (there and back) given in the accepted estimate will be charged to the customer.

These provisions are valid unless a special written agreement has been made with the customer. If one of the provisions turns out to infringe a legally essential rule that consumers could have the benefit of under the national legislation, this provision will not be applied, but all other provisions will remain valid.

## End User Licence Agreement (EULA), for the software

### CONTEXT AND ACCEPTATION OF THE AGREEMENT

You have acquired a Mobile Phone device ("DEVICE"), manufactured by SAGEM SA (SAGEM), that includes software either developed by SAGEM itself or licensed third party Software suppliers ("SOFTWARE COMPANIES") to SAGEM with the rights to sub-license it to the purchaser of the device. Those installed software products whatever their company of origin, and wherever the name of the company of origin is indicated of not in the DEVICE documentation, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

**IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT SAGEM FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).**

SOFTWARE includes software already installed on the DEVICE ("DEVICE Software") and Software contained on the CD-ROM disk ("Companion CD"), if any is supplied with the product.

### GRANT OF SOFTWARE LICENCE

This EULA grants you the following licence:

**DEVICE Software.** You may use the DEVICE Software as installed on the DEVICE. All or certain portions of the DEVICE Software may be inoperable if you do not have and maintain a service account with an appropriate Mobile Operator, or if the Mobile Operator's network facilities are not operating or configured to operate with the DEVICE software.

**COMPANION CD.** If any is supplied, additional software for your personal computer is included with your DEVICE. You may install and use the software component(s) contained in the Companion CD only in accordance with the terms of the printed or online end user license agreement(s) provided with such component(s). In the absence of an end user license agreement for particular component(s) of the Companion CD, you may install and use only one (1) copy of such component(s) on the DEVICE or a single computer with which you use the DEVICE..

**Security Updates.** The SOFTWARE may include digital rights management technology. If SOFTWARE does contain digital rights management technology, content providers are using the digital rights management technology ("DRM") contained in the SOFTWARE to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. Owners of such Secure Content ("Secure Content Owners") may, from time to time, request manufacturers or SOFTWARE SUPPLIERS to provide security related updates to the DRM components of the SOFTWARE ("Security Updates") that may affect your ability to copy, display and/or play Secure Content through the SOFTWARE or third party applications that utilise the DRM. You therefore agree that, if you elect to download a licence from the Internet which enables your use of Secure Content, Suppliers may, in conjunction with such licence, also download onto your DEVICE such Security Updates that a Secure Content Owner has requested that SOFTWARE SUPPLIERS distribute. SAGEM and SOFTWARE SUPPLIERS will not retrieve any personally identifiable information, or any other information, from your DEVICE by downloading such Security Updates.

## End User Licence Agreement (EULA), for the software

### DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS

**COPYRIGHT.** All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and "applets," incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by SAGEM or the SOFTWARE SUPPLIERS. You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by SAGEM and the SOFTWARE SUPPLIERS.

**Limitations on Reverse Engineering, Decompilation and Disassembly.** You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

**Single DEVICE.** The DEVICE Software is licensed with the DEVICE as a single integrated product. The DEVICE Software installed in the memory of the DEVICE may only be used as part of the DEVICE.

**Single EULA.** The package for the DEVICE may contain multiple versions of this EULA, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple versions of the EULA, you are licensed to use only one (1) copy of the DEVICE Software.

**Software Transfer.** You may not permanently transfer any of your rights under this EULA with regard to the DEVICE Software or Companion CD, except as permitted by the applicable Mobile Operator. In the event that the Mobile Operator permits such transfer, you may permanently transfer all of your rights under this EULA only as part of a sale or transfer of the DEVICE, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades, this EULA and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the SOFTWARE is an upgrade, any transfer must include all prior versions of the SOFTWARE.

**Software Rental.** You may not rent or lease the SOFTWARE.

**Speech/Handwriting Recognition.** If the SOFTWARE includes speech and/or handwriting recognition component(s), you should understand that speech and handwriting recognition are inherently statistical processes; that recognition errors are inherent in the processes; and that errors can occur in the component's recognition of your handwriting or speech, and the final conversion into text. Neither SAGEM nor its suppliers shall be liable for any damages arising out of errors in the speech and handwriting recognition processes.

**NOTICE REGARDING THE MPEG-4 VISUAL STANDARD.** The SOFTWARE may include MPEG-4 visual decoding technology. MPEG LA, L.L.C. requires the following notice:

USE OF THIS SOFTWARE IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (B) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.

If you have questions regarding this Notice, please contact MPEG LA, L.L.C., 250 Steele Street, Suite 300, Denver, Colorado 80206; Telephone 303 331.1880; FAX 303 331.1879

## End User Licence Agreement (EULA), for the software

**Termination.** Without prejudice to any other rights, SAGEM may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

**Consent to Use of Data.** You agree that SOFTWARE SUPPLIERS may collect and use technical information gathered in any manner as part of product support services related to the SOFTWARE. SOFTWARE SUPPLIERS may use this information solely to improve their products or to provide customised services or technologies to you. SOFTWARE SUPPLIERS may disclose this information to others, but not in a form that personally identifies you.

**Internet Gaming/Update Features.** If the SOFTWARE provides, and you choose to utilise, the Internet gaming or update features within the SOFTWARE, it is necessary to use certain computer system, hardware, and software information to implement the features. By using these features, you explicitly authorise SOFTWARE SUPPLIERS to use this information solely to improve their products or to provide customised services or technologies to you. SOFTWARE SUPPLIERS may disclose this information to others, but not in a form that personally identifies you.

**Internet-Based Services Components.** The SOFTWARE may contain components that enable and facilitate the use of certain Internet-based services. You acknowledge and agree that SOFTWARE SUPPLIERS may automatically check the version of the SOFTWARE and/or its components that you are utilising and may provide upgrades or supplements to the SOFTWARE that may be automatically downloaded to your Device.

**Links to Third Party Sites.** The SOFTWARE may provide you with the ability to link to third party sites through the use of the SOFTWARE. The third party sites are not under the control of SAGEM. Neither SAGEM nor its affiliates are responsible for (i) the contents of any third party sites, any links contained in third party sites, or any changes or updates to third party sites, or (ii) webcasting or any other form of transmission received from any third party sites. If the SOFTWARE provides links to third party sites, those links are provided to you only as a convenience, and the inclusion of any link does not imply an endorsement of the third party site by SAGEM or its affiliates.

**Additional Software/Services.** The SOFTWARE may permit SAGEM to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").

If SAGEM provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.

SAGEM reserves the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

**EXPORT RESTRICTIONS.** You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments.

### UPGRADES AND RECOVERY MEDIA

- **DEVICE Software.** If the DEVICE Software is provided by SAGEM separate from the DEVICE on media such as a ROM chip, CD ROM disk(s) or via web download or other means, and is labelled "For Upgrade Purposes Only", you may install one copy of such DEVICE Software onto the DEVICE as a replacement copy for the existing DEVICE Software and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade DEVICE Software.



## End User Licence Agreement (EULA), for the software

- **COMPANION CD.** If any Companion CD component(s) is provided by SAGEM separate from the DEVICE on CD ROM disk(s) or via web download or other means, and labelled "For Upgrade Purposes Only", you may (i) install and use one copy of such component(s) on the computer(s) you use to exchange data with the DEVICE as a replacement copy for the existing Companion CD component(s).

### RESPONSIBILITIES

**SUPPORT AND INFORMATION** Should you have any questions concerning this EULA, or if you desire to contact SAGEM for any other reason, please refer to the address provided in the documentation for the DEVICE.

**NO LIABILITY FOR CERTAIN DAMAGES.** EXCEPT AS PROHIBITED BY LAW, SAGEM SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

FOR APPLICABLE LIMITED WARRANTIES AND SPECIAL PROVISIONS PERTAINING TO YOUR PARTICULAR JURISDICTION, PLEASE REFER TO YOUR WARRANTY BOOKLET INCLUDED WITH THIS PACKAGE OR PROVIDED WITH THE SOFTWARE PRINTED MATERIALS.

## Java™

You are the owner of a SAGEM mobile phone which gives you the ability to download applications and games to be executed on your phone thanks to the built-in Java™ engine.

However, receiving applications from everywhere implies some basic knowledge of the possible effects of such download.

Thank you for spending a few minutes reading these pages: this will prevent you from performing action without measuring the consequences.

**WARNING:** When running a Java™ application, you may be prompted to grant access to protected features. These features are protected because using them could incur you cost, or involve your personal data. Read the security popup message carefully, to understand what feature is requested, and decide whether it is legitimate for the application to perform it. In case of doubt, don't hesitate to refuse access by selecting the "No" button!

**The security configuration menu is an expert feature!** You must know exactly what you are doing before attempting to change security parameters of a MIDlet. Misunderstanding changes may render MIDlet non functional and/or lead to higher risks for your private data or impact your airtime consumption. Any changes in the security configuration are done under your responsibility. In no case shall SAGEM SA and/or your network provider be liable for any damages deriving from or arising out of such changes in the security configuration.

You must be aware that applications downloaded to your phone could cause the phone to perform actions for which you will be billed, like making calls and sending SMS. Depending on your operator's billing policy, you may also be charged to download the application because of airtime consumption.

### Security considerations

Java™ MIDP technology is an efficient way to provide powerful applications in mobile phones. It allows use, by "over the air" downloaded applications or games, of the great features built-in in a mobile phone (SMS sending and receiving, multimedia playback and recording, network access...).

All these MIDP 2.0 features cannot be simply exposed to any MIDlet installed in the handset: a careful access control system is implemented in the device to protect your private data and airtime consumption.

Access controls are gathered in 9 security groups:

- Network access (GPRS/GSM data airtime consumption, HTTP/web connections...)
- Auto invocation (MIDlet can wake up at a given time or when receiving a SMS)
- Phone call (ability to initiate a phone call)
- Local connectivity (IrDA or serial interfaces use by the MIDlet)
- Messaging receive (SMS, SMS-CB interception by a MIDlet)
- Messaging sending (SMS sending by a MIDlet)
- Read User data (Subscriber identity, Phonebook, Agenda read access from a MIDlet)
- Write User data (New phonebook or agenda entry)
- Multimedia recording (ability to control camera or microphone from a MIDlet)

## Java™

---

According to the security status of an installed MIDlet (see below), each of these security groups has one among 5 possible authorizations levels (listed from the more restrictive to the more permissive):

- Never  
The security group completely prevents access to the protected features.
- Per use  
Each time MIDlet tries to use protected feature, user is prompted to grant access.
- Per session  
First time a MIDlet uses a protected function, user is prompted to grant access like in "Per use" authorization but access is granted until the MIDlet terminates.
- Single confirmation  
The first time in the whole MIDlet life a MIDlet uses a protected feature, user is prompted to grant access. It remains valid until the MIDlet is removed from the handset.
- Always  
The security group unconditionally grants access to protected features.

A MIDlet has a security status which is either "uncertified", or else "certified".

An "uncertified" status means that the source of the MIDlet could not be verified by the mobile phone at installation time. As far as the phone knows, the MIDlet could have been written by anyone.

A "certified" status means that the MIDlet was digitally signed by a known party, whose name is displayed by the mobile phone. This means that the mobile phone successfully authenticated the named party as the source of the MIDlet.

Security permissions are different for "uncertified" or "certified" MIDlets, and may be different for different sorts of named parties. Usually "uncertified" security permissions are more restrictive than "certified" ones.

### Security configuration menu

When a MIDlet is installed in the mobile phone, default security authorizations are applied.

This default security configuration may be altered through the "Settings/Security" menu of an installed MIDlet.

Once in the "Security" menu, the security status of the MIDlet is displayed (see "Security considerations" paragraph above).

If you do not want to enter the security menu, simply select "Back" button.

You can proceed by selecting "Ok" button.

The menu displayed allows you to increase or decrease permissions currently applied to the current MIDlet for each of the security groups.

**When you set a more permissive authorization to a security group than the current value, mobile phone asks you to confirm your increased risk exposure.**

The maximum risk exposure increase is limited by the security status. Depending of the manufacturing configuration, it means, for example, that "Net Access" security group authorization cannot be set to a permissive value higher than "Session" for an "uncertified" MIDlet ("Single confirmation" and "Always" are unavailable in the security configuration menu) but an operator "certified" MIDlet may have all permission values available without any limitations.

## Java™



**Java**  
POWERED

### What is Java™?

Java™ is a new technology enabling use of powerful applications in the mobile phone area. Business applications and games are easily downloadable by the end-user on a Java™ featured handset.

Your mobile phone is a MIDP 2.0 compliant Java™ platform which implements WMA (SMS support) and MMAPI (Multimedia support) options, providing an exciting environment to run highly graphical, networked and intuitive MIDP applications.

Such applications may be, for example, a wide range of games and appealing applications like action and logic games, agenda, e-Mail reader, Web browser...

### What is a MIDlet?

A Java™ application or a game designed to run in a mobile phone is named a MIDlet (MIDP applet).

A MIDlet is usually made of 2 files:

- The JAD file

JAD file stands for Java™ **A**pplication **D**escriptor. It is a small file describing the content of a JAR file (version, vendor name, size...) and displayed by the mobile phone. **JAD file size is usually less than 2 kilo-bytes large.**

JAR file stands for Java™ **A**rchive. It refers to the application data themselves (program, images, sound). **A JAR file may be up to 200 kilo-bytes large.**

**NOTE:** In rare circumstances, MIDlet vendors may provide no JAD file and the MIDlet is the JAR file alone. In such a case it is your only responsibility to evaluate the risk to download the JAR file without possibility of consulting the JAD file.

### Downloading a MIDlet (Java™ game or application)

MIDlets are easily downloaded in the mobile phone through the Games or Applications menus or through the WAP browser.

In almost all cases, you will first receive a JAD file which will be displayed on the screen.

Much care must be given in examining the content of the file as explained further.

When you select a JAD file, your mobile phone downloads it, displays data contained and prompts you to acknowledge the JAR file download.

The popup displays information below:

- Name of the MIDlet
- Version
- Size (JAR file size)
- Vendor name
- Security status (**IMPORTANT:** see "Security considerations" paragraph below)
- JAR file URL.

## Java™

---

If you do not want to download the main data (JAR file), you shall refuse to acknowledge further airtime consumption by selecting "Cancel" (JAR file is not downloaded).

If you agree on the MIDlet installation, just select "Ok". The MIDlet is installed with security levels set to default values associated with its security status.

Before downloading an application, such a message may appear: "Your handset cannot identify the application, please be sure of the source of the application before installing the application".

**You shall read carefully the next two paragraphs to fully understand Java™ MIDP security concerns.**

### Trademarks

Java™ and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

### Disclaimer

As explained hereabove, some downloaded items may contain data or may induce actions which may cause malfunctioning of your mobile phone or loss or corruption of data or abnormal increase of your airtime consumption.

YOU EXPRESSLY ACKNOWLEDGE THAT THE DOWNLOAD OF ANY APPLICATIONS INCLUDING JAVA APPLICATIONS OR GAMES IS DONE UNDER YOUR EXCLUSIVE RESPONSIBILITY. IN NO EVENT SHALL SAGEM SA, YOUR NETWORK SERVICE PROVIDER OR THEIR AFFILIATES BE LIABLE FOR ANY LOST PROFITS OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, LOSS OF PROFITS, INTERRUPTION OF BUSINESS, LOSS OF DATA OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, ECONOMIC, OR CONSEQUENTIAL DAMAGES ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY RELATING TO THE DOWNLOAD OF ANY APPLICATION BY ANY MEANS, INCLUDING JAVA APPLICATIONS OR GAMES IN SAGEM DEVICES. YOU EXPRESSLY ACKNOWLEDGE THAT ANY APPLICATIONS INCLUDING JAVA APPLICATIONS OR GAMES ARE PROVIDED STRICTLY "AS IS". SAGEM SA AND/OR YOUR NETWORK SERVICE PROVIDER EXTEND NO WARRANTY WHATSOEVER THERETO. SAGEM SA AND/OR YOUR NETWORK SERVICE PROVIDER DISCLAIM ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY OF MERCHANTABILITY, FITNESS OF ANY APPLICATIONS INCLUDING JAVA APPLICATIONS OR GAMES FOR A SPECIFIC PURPOSE, SATISFACTORY QUALITY, SECURITY OR OTHERWISE.

 





## Troubleshooting

PROBLEM - SITUATION	ACTIONS
<b>It is impossible to switch the phone on</b>	<p>Remove and replace the battery. If you still cannot switch the phone on, charge the battery:</p> <ul style="list-style-type: none"><li>- Put it on charge for at least 15 minutes before switching it back on again.</li><li>- Check if the battery icon is scrolling up and down.</li><li>- If so, the phone is charging.</li><li>- If not, please take the charger out and put it back on again. Please check that the charging icon is scrolling up and down.</li><li>- If you still cannot switch the phone on, please disconnect the charger, put it back on again and please repeat that manipulation several times.</li><li>- If the charging icon is still not scrolling up and down, please contact your after-sales services.</li><li>- When the charging icon has stopped scrolling up and down, the battery is charged.</li></ul>
<b>Battery status unknown</b>	<p>The phone does not recognize the battery. Please check the position of the battery.</p>
<b>LOW BATTERY</b>	<p>This message is displayed when the battery becomes too weak. The phone switches itself off automatically. Put the phone on charge.</p>
<b>SIM not present</b>	<p>Check if the SIM card is present and properly positioned / inserted. Check the condition of the SIM card. If damaged, please go back to the operator's shop for advice. Contact your after-sales service if the message persists.</p>
<b>Incorrect PIN code</b>	<p>An incorrect PIN code has been entered. Be careful! Three incorrect PIN codes will block the SIM Card.</p>
<b>SIM BLOCKED</b>	<p>You have entered three incorrect PIN codes. Enter your PUK code to unblock your SIM Card. You must enter: **05*PUK*PIN*PIN# You must enter the PUK code (Personal Unblocking Key) given by your network provider. 10 errors will permanently block your SIM Card. You must then contact your network provider to get a new one.</p>

## Troubleshooting

PROBLEM - SITUATION	ACTIONS
<b>SIM LOCKED</b>	On network providers' request, the handset can only be used with some types of SIM cards. This message means that the SIM card you are using does not fit with the phone. Take the SIM card out, and switch it back on. If the message <b>SIM not present</b> appears on the screen, you will need to check its compatibility next to the place where you bought it. If not, please contact your after-sales service.
<b>No call connection</b>	Check that the number you have dialled is correct. If the letter R is displayed on the top right corner of the screen, without any network name displayed, only emergency services can be called. Check the status of your credit. Check that the SIM Card you are using offers the service you are requesting ; check if its validity has not expired. Check and deactivate the outgoing calls restriction when necessary. The network could be saturated. Try later. If the problem persists, please contact your Technical Helpdesk.
<b>No receiving calls</b>	Try to make a call in order to check that the phone and the networks are operational. Check and deactivate the permanent call forwarding (permanent call forwarding icon displayed on the screen). Check and deactivate the incoming calls restriction when necessary. If the problem persists, please contact your Technical Helpdesk.
<b>Quality reception when calling</b>	Avoid placing your fingers on the top of the phone, where the aerial is integrated: the phone will have to use full strength to establish a quality transmission.
<b>Impossible to send message</b>	Check that the message centre number is correctly entered. To do so, please select the menu <b>Messages</b> , select <b>Options</b> , select <b>MSG centre n°</b> and check the number entered. Please contact your network provider to get this number.

## Troubleshooting

PROBLEM - SITUATION	ACTIONS
<b>No answer phonebox</b>	<p>Check that the SIM card does offer this service.</p> <p>Program the call to be forwarded to answer phoneusing the information provided by the operator.</p> <p>Check that the SIM card used offers this service. Try to make a call to check that phone and network are operational.</p> <p>Check if the answer phone number is properly configured. To do so, go to the <b>Calls</b> menu, select <b>Voice mail</b> and check the number. Otherwise, enter your operator's answer phone centre number.</p>
<b>If answer phone icon flashing</b>	<p>Call the answer phone and listen to the new messages to make it disappear.</p>
<b>In WAP context: SERVER NOT ANSWERING message</b>	<p>Switch off and then switch phone back on.</p>
<b>Login to home page impossible</b>	<p>In the <b>WAP</b> menu, <b>Clear the cache</b>.</p>
<b>Operator name does not appear on screen</b>	<p>Go into the <b>Settings</b> menu, select <b>Networks</b>, then <b>Selection</b>. Wait until the operator appears, select it and validate.</p> <p>If the Operator logo is present (depending on model), activate the display (<b>Settings/Display/Operator logo</b>).</p>
<b>How do I (un)lock the keypad?</b>	<p>Press the * key, then the <b>OK</b> key.</p>
<b>How do I switch to silent mode?</b>	<p>Hold the  key down unless ring tone sounds, when a short touch is enough.</p>
<b>How do I activate zoom?</b>	<p>Can be activated only in SMS, MMS and WAP screens; hold down the  key.</p>
<b>How do I delete the envelop that appears on the screen? </b>	<p>If you have received a voice mail, please call your voice mailbox and follow the instructions given.</p>
<b>How do I delete the answer phone that appears on the screen? </b>	<p>This answer phone means that you have received a voice mail: please call your voice mailbox and listen to it. Please follow the instructions given.</p>
<b>How do I remove the written message at the bottom of the home page (1 call)</b>	<p>Press the  key to go back to the initial page without messages.</p>



## Troubleshooting

### PROBLEM - SITUATION

### ACTIONS

**How do I download ring tones?**

Logon to one of the following site via your computer: [www.planetsagem.com](http://www.planetsagem.com). These site offer to send ring tones to your phone in the form of an SMS. You can also logon to your operator's site. Once the SMS has been received, all you have to do is save it: validate the option « Save messages », the tune will then be added to your list. In addition, you can logon to some sites by phone.

**How do I free up memory to download my objects (sounds, images)**

Go into the **Multimedia** menu, select **My Pictures** or **My Sounds** then delete some objects.

**How do I free up memory to receive new messages?**

Manage your **Outbox** carefully. It is recommended not saving them automatically: too many messages saved will quickly fill up the available memory and no further messages will be received. To delete them, please go into the **Messages** menu, select **Outbox** then delete some messages. Manage your **Inbox** carefully also.

**How do I free up memory to store new contacts in my Phonebook?**

It is highly recommended to manage your Phonebook carefully. If you have received pictures enclosed to a Vcard, please save or delete them.

**How can I increase the efficiency of my phone?**

The most efficient actions are as follows:  
Please keep your phone safely in order to avoid pressing the keys unnecessarily: every time a key is pressed the screen lights up.  
You can deactivate the screensaver or select the activation time to be more than every 300 s (the screensaver uses processing power).  
Make sure that you don't obstruct the antenna with your fingers when using the phone (see page 19).



## Index

### M

Memory p35, p41  
 Menus p7  
 Messages  
   Compose MMS p29  
   Compose SMS p26  
   Drafts p33  
   Inbox p32  
   Outbox p32  
   Receiving messages p31  
   Sending options p34

### N

Navigation principles p15  
 Necklace p14  
 Networks p71

### O

Operator p69  
 Operator logo p60

### P

Phone code p68  
 Phonebook  
   Contacts menu p23  
   Memory p24  
   New contact p22  
   Using the phonebook p21  
 Photo p37, p40, p61  
 Picture p37, p39  
 PIN number p67  
 PIN2 number p67  
 Programmable keys p13

### R

Recorder p58  
 Ring tones p56

### S

Safety information p77  
 Screensaver p59  
 Security p66  
 Sending options p34  
 Sentbox p33  
 Serial Speed p75  
 Short cut keys p13, p71  
 Silent mode p57  
 SIM card p17, p18  
 Skins p58  
 SMS p26  
 Sounds p41, p56

### T

T9 p27  
 Timer p53  
 ToDo p47  
 Troubleshooting p91, p92, p93, p94

### V

vCal p49, p55  
 vCard p25  
 Vibrate p56  
 Voicemail p66  
 Volume p56

### W

Wallpaper p59  
 WAP p42, p43, p44, p45  
   Configuring WAP parameters p43, p44  
   Downloading objects p45  
   Services menu p42, p43  
   WAP logging off p45  
   WAP logging on p45  
   WAP settings p76  
 Warranty p80

### Y

Your phone package p12