

## CE Conformance Document

SAGEM SA declare under its sole responsibility that the product Dual Band GSM 850/PCS Type B2003 conforms to the requirements of the following EEC directives:

EEC Directive	1999/5/CE
Safety	EN 60950
EMC	EN 301 489-1 EN 301 489-7

This phone is marked CE in accordance with RTTE directive with CEM EN301489-7 norme implementation, suited to the 850/1900 work frequencies. It is not intended to be used in Europe.

Low voltage directive	73/23/CEE
Network	3GPP TS 51.010-1 v 5.4.0 Requirements GT01 v 4.7.0 TBR 19 Edition 5 TBR 20 Edition 3 TBR 31 Edition 2 TBR 32 Edition 2 EN 301 419-1 EN 301511

## FCC Conformance Document

FCC Part 24	NAPRD03.ver 2.8.0
Network	Draft IEEE Std 1528-200x
Health	



P. KLEIN  
Development Director, Mobile Phones Division

## Safety Information for Wireless handled phones

Use of your phone is subject to safety rules designed to protect the user and his or her environment.

### Exposure to Radio Frequency Signals

- Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out frequency (RF) signals.
- In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:
  - ANSI C95.1 (1992)<sup>(\*)</sup>
  - NCPR Report 86 (1986)<sup>(\*)</sup>
  - ICNIRP (1996)<sup>(\*)</sup>
- Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).
- The design of your phone complies with the FCC guidelines (and those standards).
- For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

### Phone Operation

- Normal position: hold the phone as you would any other phone with the upper zone (back of the LCD display) pointed up and over your shoulder.
- Tips on efficient operation: for your phone to operate most efficiently: do not touch cover unnecessarily the top part of the phone with your hand. This would cover the integrated antenna and affect call quality and may cause the phone to operate at a higher power level than otherwise needed.

<sup>(\*)</sup> American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission and Non-Ionizing Radiation Protection.

## Safety Information for Wireless handled phones

### Driving

- Check the laws and regulations on the use of wireless phones in the areas where you drive. Always obey them. Also, if using your phone while driving while driving please:
  - Give full attention of driving, driving safely is your first responsibility
  - Use hands-free operation, if available
  - Pull off the road and park before making or answering a call if driving conditions so require.

### Electronic Devices

- Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.
- Some phone accessories allow to reduce the radiation interferences of the phone. Please contact your distributor.

### Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON
- Should not carry the phone in the breast pocket
- Should use the ear opposite to the pacemaker to minimize the potential for interference
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

### Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

## Safety Information for Wireless handled phones

### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so.

Hospitals or health care facilities may be using equipment that could be sensitive to sensitive external RF energy.

### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

### Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

### Blasting Areas

To avoid any interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

## Safety Information for Wireless handled phones

### Potentially Explosive Atmospheres

- Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.
- Areas with a potentially explosive atmosphere are often but not always clearly marked. They include fueling areas such as gasoline stations; below deck on boats, fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

### For Vehicles equipped with Air Bag

An air bag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

### Electrical Safety

- Only use the appropriate chargers recommended in the manufacturer's catalog. Using another charger may prove dangerous and could invalidate the warranty of your phone.
- The main power socket should be easily accessible.
- Make sure that the main voltage corresponds to the level marked on the charger identification plate.

### General Precautions

- Do not try to open your phone and repair it yourself. The manufacturer cannot be held liable for any resulting damage.
- Any work done by an unqualified and unauthorized person will invalidate your warranty.
- Do not use your phone in humid places (bathroom, swimming pool, etc.). Protect it from splashing water and other liquids.
- Do not expose your phone to extreme temperatures.
- Keep your phone out of reach of small children. Do not allow them to play with it, it is not a toy.

## Safety Information for Wireless handled phones

### WARNING

- The manufacturer cannot be held liable for any failure to comply with the above recommendations or for any misuse.
- The software program developed by SAGEM SA remains the exclusive property of SAGEM SA. It is therefore highly prohibited to modify, translate, decompile or disassemble this software program or any part thereof.
- SAGEM SA may not be held responsible for the contents of messages, software or objects downloaded and/or for any direct or indirect consequential damage to the phone itself.



- Only use your phone with original accessories. Failure to comply with these rules will invalidate your warranty.
- Remember to disconnect the charger before removing the battery.
- The physical and chemical processes used in rechargeable batteries mean that temperature limits must be followed during rapid charging. Your phone automatically protects the batteries from extreme temperatures.
- If the phone is disconnected from the battery for an extended period of time, it will lose the time and the recorded voice messages.

### Emergency Calls

#### IMPORTANT

- This phone, like any PCS phone, operates using radio signals, PCS and landline networks, and user-programmed functions. As a consequence a connection in all conditions cannot be guaranteed. Therefore you should never rely solely upon any PCS phone for essential communications (e.g. medical emergencies).
- To make or receive any calls, this phone must be switched on and in service area with adequate PCS signal strength. Emergency calls may not be possible on all PCS networks or when certain network services and/or phone features are in use. Check with local Service Providers.
- When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your PCS phone may be the only means of communication at the scene of an accident - do not terminate the call until given permission to do so.
- If certain features are in use (such as Keyguard), you may first need to turn those features off before you can make an emergency call. Consult this manual and your local PCS Service Provider.

### Emergency Calling

- If the phone is not on, press .
- Key in emergency number for your present location (e.g. 911 or other official emergency number).
- Press .
- If you dial 911 during a call, the phone terminates the current call and attempts to make a call to the emergency number 911.



## Safety Information for Wireless handled phones



### FCC/INDUSTRY CANADA NOTICE

Your phone may cause TV or radio interference (e.g. when using phone in close proximity of receiving equipment). The FCC/INDUSTRY Canada can require you to stop using your phone if such interference cannot be eliminated. If you need assistance, contact your local dealer.

This device complies with parts 15 and 68 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interferences.








## Menus

### **Phonebook**

Phonebook menu





### **Messages**

-  Compose
-  Inbox
-  Drafts
-  Options
-  Memory




### **WAP**

### **Picture puzzle**

### **Sounds**

-  Ring tones
-  Vibrate
-  Silent mode
-  Beeps









### **Background**

-  Colours
-  Wallpapers
-  Screensavers
-  Greeting msg









### **Settings**

-  Date/Time
-  My objects
-  Languages
-  Networks
-  Contrast
-  Energy saving
-  Shortcuts
-  Reset settings

### **Calls**

-  Calls forwarded
-  View last calls
-  Counters
-  Display number
-  Call waiting
-  Auto redial
-  Answer phone number
-  Local info

### **Security**

-  Keypad locking
-  PIN number
-  PIN number 2
-  Phone code
-  Confidentiality
-  Operator
-  Call barring
-  Fixed dialling

### **Accessories**

-  Calculator
-  Converter
-  Alarm
-  Timer
-  Car kit
-  Data

### **Services**



## Contents

---

<b>Page 8</b>	<b>MENUS</b>
<b>Page 13</b>	<b>DESCRIPTION</b>
<b>Page 14</b>	<b>PRINCIPLES OF NAVIGATION</b>
<b>Page 15</b>	<b>HOME PAGE</b>
<b>Page 16</b>	<b>ACTIVATING YOUR PHONE</b> Information on the SIM card Installing the SIM card and installing the battery Changing the cover Charging the battery Do NOT obstruct the antenna with your fingers
<b>Page 21</b>	<b>MY PHONE IN 5 MINUTES</b> Getting started PIN Number Setting time and date Network First call Receiving a call Switching off
<b>Page 25</b>	<b>FIRST SETTING: RING TONE</b> Volume and ring tone
<b>Page 27</b>	<b>PHONEBOOK</b> Using the phonebook Phonebook menu Call groups
<b>Page 32</b>	<b>MESSAGES</b> Composing messages Receiving messages Inbox Drafts Sending options Memory

## Contents

---

<b>Page 38</b>	<b>WAP</b> The WAP Menu Configuring WAP parameters WAP Logging on Downloading objects WAP Logging off
<b>Page 41</b>	<b>GAMES</b> Picture puzzle
<b>Page 42</b>	<b>SOUNDS</b> Volume and ring tone Vibrate Silent mode Beeps
<b>Page 44</b>	<b>BACKGROUND</b> Colours Wallpapers Screensavers Greeting message
<b>Page 46</b>	<b>SETTINGS</b> Date / Time My Objects Languages Networks Contrast Energy saving Short cuts Reset settings
<b>Page 50</b>	<b>CALLS</b> Forward calls View last calls Counters Display number Call waiting

## Contents

 
---

	Automatic redial
	Answer phone number
	Local info
<b>Page 55</b>	<b>SECURITY</b>
	Keypad locking
	PIN number
	PIN number 2
	Phone code
	Confidentiality
	Operator code
	Call barring
	Fixed dialling
<b>Page 59</b>	<b>ACCESSORIES</b>
	Calculator
	Converter
	Alarm
	Timer
	Car kit
	Data
<b>Page 63</b>	<b>SERVICES</b>
<b>Page 64</b>	<b>TECHNICAL FEATURES</b>
<b>Page 66</b>	<b>WARRANTIES</b>
<b>Page 69</b>	<b>TROUBLESHOOTING</b>
<b>Page 72</b>	<b>INDEX</b>

## Your phone package - Accessories

When you open the box, check that all the items are present:

- 1 - Phone
- 2 - Mains charger
- 3 - Battery
- 4 - User manual

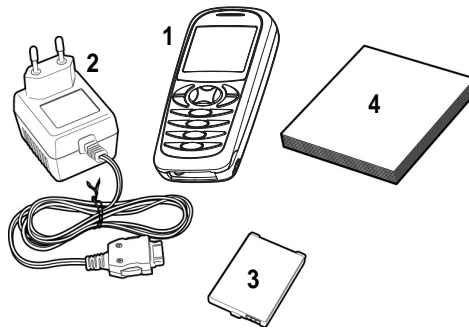

## Accessories

You can also find (as an option) or order the following accessories:

 
- Pedestrian kit (\*)
- Extra battery
- Extra charger (\*)
- Desktop support (\*)
- Cigar lighter adapter (\*)
- Colour cover
- Hands-free kit (\*)
- Strap

For more information: [www.planetsagem.com](http://www.planetsagem.com)

(\*) *These accessories are identical to the ones provided for the myX-3, myX-5 and myX-6 series.*

## Description

### Programmable keys and Shortcut keys

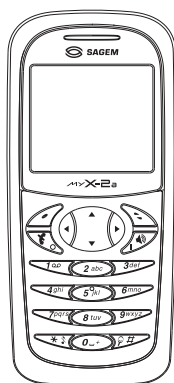

**Stop key:**  
**Hold down:** Stop  
**Press briefly:**  
*In a call context:* Rejects a call - hung up  
*In menus:* Return to home page.



**Start key:** **Press briefly:** Starts phone  
*In call context:* Call - reception of a call - hands-free mode



**Left programmable key:**  
*In home page:* Access to certain functions (shortcuts)  
*In menus:* Cancel (or return) as indicated on screen  
*During call:* Reduces volume



**Right programmable key:**  
*In home page:* Access to certain functions (shortcuts)  
*In menus:* Accept, choose as shown on screen  
*During call:* Increases volume



**Top key:** Previous choice / increase value / top



**Down key:** Down choice / reduce value / down



**Left key:** Up input field / move left



**Right key:** Down input field / move right



**\* Key :**  
**Hold down:** *In home page:* Silent mode  
**Press briefly + OK (right programmable key)** activates or deactivates keypad locking  
*In call reception mode:* Short press stops ring tone  
*In ring tone setting mode:* Activates/deactivates ring tone



**# Key:** Zoom mode (see message and WAP menus)

## Principles of navigation



1st level

*These basic principles bring a great deal of intuitiveness to your phone*  
 All the active areas on a white background (icon selector, programmable keys, menu selector, choice list)

**Accept** by pressing the **right programmable key** .  
**Cancel** by pressing the **left programmable key** .

The tabs on the sides at the bottom of the screen refer to the **Programmable keys** (and not to the left/right keys).

In the menus a title bar indicates the down higher level.



2nd level

The **down / top** navigation keys are used to navigate from one menu to the down within the same menu structure.

 
The **right programmable key** is used to go from a menu to a sub-menu.

The **left programmable key** is used to go from a sub-menu to a menu.

The first menu level can be identified by a large animated icon in the centre of the screen.

The second menu level can be identified by a large static icon in the centre of the screen.

The lowest sub-menus are lists.

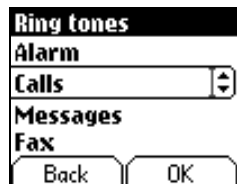

3rd level















The **Stop** key (press briefly) is used to return to the home page (current function is abandoned).

## Home page



The home page contains the following

### 1 - The title bar icons:

-  Battery
-  Calls forwarded
-  Call (establishing the call)
-  Call (hands free)
-  SMS (reception of an SMS)
-  Silent mode
-  Message in answer phonebox
-  WAP (@)
-  Home zone
-  HPLMN / roaming
-  Keypad locking + WTLS (exclusive functions)
-  Protected WAP logon
-  Protected WAP logon icon with certificate
-  Signal strength level (5 bars).

2 - **Date and time**, in digital or analogue mode

3 - **Network provider**

4 - **Tab centred on down line:**

the main "menu" tab shows that the menu can be accessed via the **down / up** ▼ ▲ keys.

 
*The following information may also be displayed:*

*"1 message received"; or "1 call".*

*They can be deleted by pressing **Stop** ⏹ key briefly.*

## Activating your phone

### Information on the SIM card

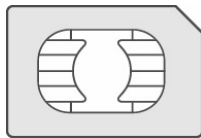

To use your phone, you have a smart card called a SIM card. It contains all the information needed by the network as well as other information unique to you and that you can modify:

Secret codes (PIN(s): Personal Identification Numbers), these codes allow you to restrict access to your SIM card.

Phonebook,

Messages,

How special services work.

Your phone is compatible with the different SIM cards offered by operators.

It is also compatible with the SIM/WIM cards (cards containing the WIM module in addition (WIM = Wireless Identity Module) that is used for secure WAP communications.

#### **WARNING**

This card must be handled and stored with care to avoid damaging it by scraping or bending it. If you should lose your SIM card, contact your operator or your SMC (Services Marketing Company) immediately.

 
 
 
 
Comment: do not leave your SIM card within the reach of young children.



## Activating your phone

### Installing the SIM card and installing the battery


The SIM card is inserted under the phone's battery. Ensure that the phone is switched off and the charger disconnected.

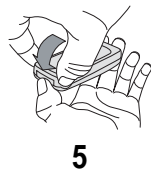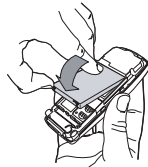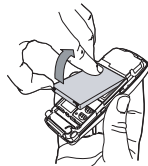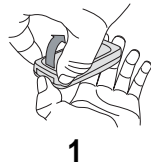

- 1** Turn phone over and remove rear cover by lifting bottom end first.
- 2** Take out battery if already installed.
- 3** Slide card fully under retaining plate with gold-plated contacts facing phone and bevelled corner pointing as shown on drawing of phone.
- 4** Insert battery into position by first positioning top section with connectors.
- 5** Replace cover by engaging top hook first, then push down back of rear cover.

## Activating your phone
 
### Changing the cover

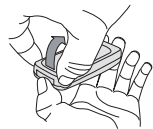


1



2



 3

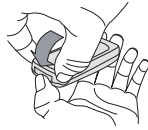

4


- 1 Remove rear cover as above.  
Turn phone over.
- 2 Lift front cover in same way as rear cover. Remove panel (electronic card).
- 3 Position keypad in new cover, ensuring it is free of dust. Insert panel into front cover.
- 4 Do as above to replace rear cover.

## Activating your phone
 
### Charging the battery

Your phone is powered by a rechargeable battery. A new battery must be charged for 4 hours at least before being used for the first time. It reaches its optimum capacity after a few cycles of use.

When your battery has been discharged, the phone displays the state (empty battery icon flashes). In this case recharge your battery for at least 15 minutes before making any more calls so as to avoid being cut off mid-call.

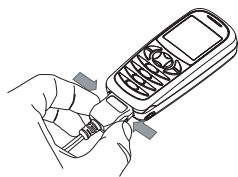

#### To recharge the battery:

Connect the charger to a mains socket. Plug the end of the cable into the connector at the base of the phone.

The phone starts to charge up, the battery charging light flashes to indicate charging. Charging stops by itself. Disconnect the cable.

 
It is possible that the battery may heat up slightly during charging; this phenomenon is normal.

#### WARNING

There is danger of explosion if the battery is replaced incorrectly or if it is exposed to fire.  
Do not short circuit it.  
The battery does not have any part that you can change.  
Do not try to open the battery casing.  
Use only the appropriate chargers and batteries shown in the manufacturer's catalogue.  
Used batteries must be disposed of in the appropriate places.  
It is advisable to remove the battery if your phone is not used for extended periods.

## Activating your phone

### Do NOT obstruct the antenna with your fingers

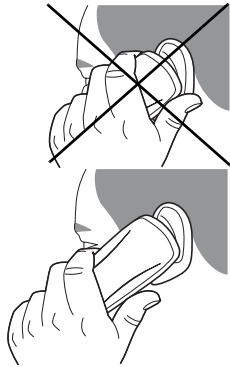

The antenna is integrated in your phone, under the back cover at the top.

Avoid putting your fingers on this area when the phone is switched ON.

If your fingers obstruct the antenna, the phone may have to operate with a higher power level than usual; decreasing its efficiency quickly. It could also affect the quality of your communications.


#### WARNING

The use of a hands-free kit is recommended when using the phone frequently.

## My phone in 5 minutes

 
### Getting started

*You are now ready to use your phone for the first time.*

Switch on the phone by pressing the **Start**  key. A short display appears.

### PIN Number


*This is your SIM's secret code.*

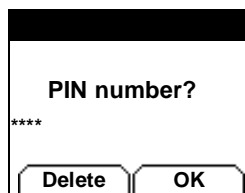

If access to the SIM card is protected, the device prompts you to enter the PIN number:

**Enter the code** between 4 and 8 digits given to you when the SIM card was issued. These digits do not appear on the screen for security reasons.

Press the **right programmable key**  to accept.

If your phone indicates that the SIM is missing, press the **Stop**  key to switch off your phone and check that the SIM card is correctly installed.

#### WARNING

If a wrong PIN number is entered three times in succession, your SIM card is blocked. You must then:

- Enter **\*\*\*05\*\***.
- Enter the PUK (Personal Unblocking Key) code provided by your operator, and accept.
- Enter your PIN number and accept.
- Enter your PIN number again and accept.

 
After 5 or 10 failed attempts (depending on the type of SIM card), the SIM card is definitely locked. You must then contact your operator or your SMC to obtain a new card.

## My phone in 5 minutes



### Setting time and date

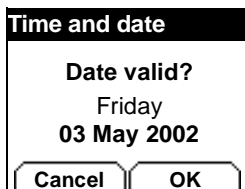

*When you use your phone for the first time, you need to set the date and time.*


*In due course, when the battery is completely discharged, or if it has been removed, you will be prompted systematically to confirm date and time.*



#### Setting the date:

Set the date by entering it directly in numerical form or by using the **down / up**   keys to decrease or increase the default values.

Use the **right key**  (or left key ) to access the **next** (or last) data input field.

Once the date is correct, press the **right programmable key**  to **accept**.

**Setting the time:** Same procedure as for setting the date.

### Network




From now on the phone hunts for a network on which it can make calls. If it finds one, it displays the name of the network on the screen. You are then ready to send or receive a call.

If the network icon appears, calls are possible on your operator's network.  
If the letter R and a network name are displayed, calls are possible on the network of a different operator.  
If the letter R is displayed without any network name, only the emergency services are accessible (ambulance, police, fire brigade).  
If the network icon flashes, the phone is in permanent search mode. There is no network available. The signal strength indicator received allows you to display the quality of reception. If it indicates less than three bars, search for better reception in order to call in good conditions.

## My phone in 5 minutes



### First call



Dial the number of your correspondent.  
Press the **Start**  key.

During the call, the call in progress icon flashes on screen and tones may indicate the establishment of the call.

Once communication has been established, the call icon stops flashing.

You can adjust the sound level (volume) using the **left** and **right programmable**   keys.


At the end of the conversation press the **Stop**  key to hang up.

### International call

Press 0 (hold down) to display "+", then dial the country code without waiting for the dial tone, then the number of the called party.

### Emergency services

Depending on the operators you can obtain the emergency service with or without SIM card or when the keypad is locked. It is enough to be in an area served by a network.



To obtain the international emergency service, dial 112 then press the **Start**  key.

## My phone in 5 minutes

### Receiving a call



When you receive a call, the number of your correspondent is displayed when it is presented by the network.

Press the **Start**  key or the **right programmable key**  to answer, and speak.

To refuse the call, press the **Stop**  key or the **left programmable key** .

To stop the ring tone or the vibrate, without refusing the call, press the **\* ↵ key**.

**WARNING:**

Pressing the Start key a second time launches hands-free mode, in this mode do not bring the phone up to your ear.

*All the numbers corresponding to incoming and outgoing calls are logged in the list of recent calls.*

### Switching off

Press the **Stop**  key for one second.

The end message is displayed. The phone switches off.



## First setting: Ring tone



We want to familiarise you with the interface of your new phone, using a simple setting: choosing a ring tone and adjusting the volume.

### Volume and ring tone


This menu allows you to allocate a ring tone to each type of event.



In the **home page**, press the **down** ▼ key to access the main menus.

The first menu offered is **Phonebook**.

Press the **down** ▼ key four times to access the **Sounds** menu.

**Enter** this menu by pressing the **right programmable key** .

 


You can access the **second level** of the menu that contains four sub-menus: Ring tones, Vibrate, Silent mode, beeps.


The first sub-menu offered is **Ring tones**.

**Enter** by pressing the **right programmable key** .

## First setting: Ring tone

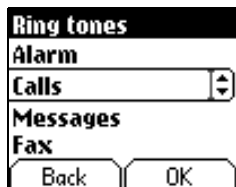

With the help of the **down / up** ▼ ▲ keys select the type of function where you want to change the ring tone from the proposed list (Alarm, Calls, Messages and Fax) and accept.

 
**Enter** by pressing the **right programmable key** .



Using the **down / up** ▼ ▲ keys select the ring tone from the list offered.

**Enter** by pressing the **right programmable key** .

*For every new selection, you will hear the corresponding ring.  
If required, press the **Silent mode key** \* # to cancel the sound.*

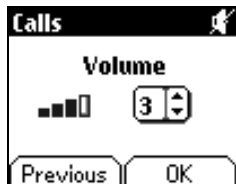

Adjust the volume using the **down / up** ▼ ▲ keys.

The volume is adjusted over a scale of 1 to 4.

The ring tone is played at the chosen level whenever a change is made.

You can select **"+" volume** to choose a ring that starts quietly and rises to a crescendo.

**Accept** by pressing the **right programmable key** .




## Phonebook




*The list of numbers in the phonebook of the SIM card varies in relation to the capacity of the card: the supplier company will tell you what this is.*

*The phonebook allows you to store numbers that you call regularly. These numbers can be stored in the SIM card or in the phone.*

Different icons inform you of the position of the phonebook where the number is stored:

-  Your SIM card phonebook
-  Your phone phonebook
-  Your SIM card's fixed dialing.
 
### Using the phonebook

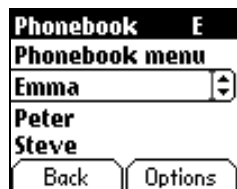

In the home page press the **down** ▼ key to access the main menus. The first menu offered is **phonebook**.

Press the **right programmable key**  corresponding to the accept tab to enter the menu.

The list of your correspondents appears, by default, the cursor is positioned on the first name in alphabetical order.

If you are using your phone and SIM card for the first time, the phonebook list will be empty, only the **Phonebook Menu** function will be available.

Select a contact from the list using the **down / up** ▼ ▲ keys. Then press the **right programmable key** .

## Phonebook



You can also enter a letter to access directly the first contact starting with this letter.  
If you know the memory number of this contact on the SIM card (say 21 for example), you can enter **21#** directly.

Choose from the options offered:



### See contact

The first menu offered is **See contact**. **Enter**.  
The detail of the store appears (location, call group, name, number).

### Modify contact


**Modify contact**. **Enter**. Using the **down** ▼ key.  
Modify name if required, and **Accept**.  
Modify number if required, and **Accept**.  
Modify call group if required, and **Accept**.

### Delete

Select **Delete**. **Enter**.  
Confirm deletion of entry with **Yes**.

 
### Call

Select **Call**. Press the **right programmable key**  to start the call.

You can also select the party to be called from the phonebook, and press the **Start**  key to make the call.

### Send message

Select **Send message**. **Accept**.  
Text editor opens automatically.

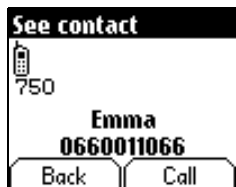



## Phonebook




*The phonebook menu allows you to create new contacts, to create call groups and to check the memory available to store new contacts.*
 
### Phonebook menu

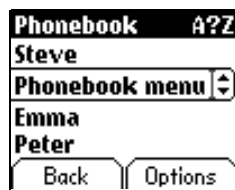

 
In the **Phonebook** menu, press the **right programmable key**  to enter the menu.



Press the **up**  key to position the cursor on the **Phonebook menu** and **accept**.

Choose from the options offered (add contact, call group, memory, my numbers).



#### Add contact

Select **Add contact** and accept and press the **right programmable key**  to enter the menu.

Choose the place where you wish to enter the contact (SIM card or phone) using the **down / up**   keys, and **accept**.

Enter name of your correspondent and **accept**.

Enter phone number and **accept**.

Choose a **call group** to which you want to allocate this contact and **accept**. (See page 31: Call groups)

## Phonebook



### Phonebook menu



#### Call groups (See page 31)

#### Memory

Select **memory** and **accept**.

The screen displays the number of free locations on SIM card and in phone itself.

#### My numbers

You can create the entries corresponding to your own numbers in order to consult them when necessary.

Select **My numbers** and **accept**.

Enter the different details and **accept**.

 
## Phonebook



You have the facility to group your contacts into call groups. It is possible to allocate characteristics to each group (icon, ring tone, vibrate).

### Call groups

6 default call groups have already been created. You can create others.

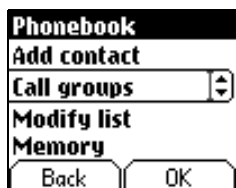

#### Creating new groups:

Do same as above to obtain the **phonebook** menu and **accept**.

Press **down** ▼ key to position the cursor on **Call groups** and **enter**.

By default, the cursor is placed on **Call groups** menu, **accept**.

Choose one of the options offered (Create group or memory available).

#### Creating a group

By default, the cursor is placed on **Create group**, **enter**.

Enter group name and **accept**.

Choose the **icon**, **ring tone** and **vibrate** mode that you want to allocate to this group (**accept** after each step).

#### Memory

Select **memory** and **OK**.

The screen displays the number of locations available for new groups.



## Messages



The message menu brings together the following two types of messages: SMS and EMS (an EMS is an extended message, longer than an SMS with images and sounds added). It is possible to exchange different types of contents: text, call group icons, screen backgrounds, tunes, WAP bookmarks..

### Composing messages

This menu allows you to compose your messages.



From the **Messages** menu select the **Compose** menu and **enter**.

By default, the language used is the language activated in the phone's menu display (or English if a language not supported by Easy Message T9™ has been chosen for the menus).

When the text has been entered, the **right programmable key (choice)** can also be used to access the functions offered:

**Send** is used to send the message by entering the correspondent's number.

**T9 options** (see next page)

**ABC mode** (see page 34)

**123 mode** (see page 34)

**Cancel** is used to delete all text entered

**Activate/deactivate zoom** is used to modify size of characters

**Store** is used to save a draft in **memory**

**Formatting** is used to enrich a text

**Insert** to insert an image or sound into your message (see page 34).

This menu has been compiled in collaboration with

**magic4#**



## Messages

*The Easy Message T9™ helps you to conveniently enter your short messages.*




 
### Using T9 Mode



Press once the key corresponding to the letter chosen and make the word by continuing to press the keys corresponding to the various letters without paying attention to the display, until you have finished inputting the word: it then appears in inverse video.

If the word offered is what you wanted to enter, press the **0** key to accept it, create a space and move to the next word.



However, it is possible that several words exist in the corresponding dictionary for the same sequence of keys pressed. If the word that appears is not the word you expected, press the **right programmable key**  indicating  to scroll through the words held in the dictionary corresponding to this key sequence.

When you find the chosen word, press the **0** key to accept it, create a space and move on to the down word.


 
 
 
Press the **right key** to simply accept the characters entered without creating a space and moving on to another **T9** word.

If the word you are expecting is not proposed, please go on adding characters until you get the message "Add a word?". Select "Yes", correct the word when necessary and press "OK".

## Messages



In the input screen, the **right programmable key**  is used to access other input options.

- When composing a message:  
The navigation keys assume the following functions:
- **Left key** ◀ :  
Last word
  - **Right key** ▶ :  
Next word
  - **Up key** ▲ :  
Previous line
  - **Down key** ▼ :  
Next line
  - **Left programmable key**  :  
Deletes last letter
  - **Right programmable key**  :  
Message options
  - **Hold down**  **# key**:  
Zoom mode (changes size of characters)
  - **Short press of**  **# key**:  
Access to symbol table

 
### Input modes


The **ABC mode** is used to enter words that do not exist in the dictionary. To obtain a letter, press the corresponding key several times, the letters and the number scroll past.

**Mode 123** is used to insert numbers.


**Insert mode** is used to insert symbols, animations, call group icons and tunes: the SMS then becomes an EMS. Images and sounds can be two types: pre-defined or customised. Pre-defined images and sounds are smaller in size, especially suited to exchanging messages.

### Upper case:

 A quick touch of the \*  **key** will display the next letter in upper case.

Two short presses on the \*  **key** allow you to switch to upper case editing mode for the whole message.

### Punctuation characters

Punctuation characters are obtained with the help of key **1** (except in **123** mode), or with the help of **Insert** mode (fast access via the  **# key**).

### Accented characters

Accented characters are generated automatically in T9™ mode.

In ABC mode accented characters are available by pressing the key supporting the non-accented character in succession.

## Messages

*The number of messages stored in the SIM card varies depending on the card's capacity.*



### Receiving messages





When you receive a message, an audio signal sounds (the one selected in the **Sounds** menu) and the message icon appears on your phone screen.

If you do not read the messages, this icon remains displayed on the screen. When it flashes, the memory is full.

Receiving icons, backgrounds or tunes can take several seconds. Messages inform you of the progress of the download.

You have the facility to do the following at any time:

- To mask this progress screen by pressing the **left programmable key**  to make a call or access other phone information.
- Or stop the download in progress by pressing the **right programmable key** .

Consult your network operator on the downloading of icons, backgrounds or tunes.

## Messages

*Received messages are stored in the SIM card or in the phone until you choose to delete them.*



### Inbox



From the **Messages** menu choose the **Inbox** menu and **Select**. Each message contains information on type of message (in the form of an icon) and time (or date) of reception. Unread messages are entered in bold and arranged by arrival time and date.

Select a message and press the **right programmable key**. Choose from the options offered (Read, Forward, Delete read, reply, reply with original message, call, send, delete, delete all).

If your message contains objects (images or sounds), you can save them in order to use them later (stored in your phone's memory); when reading text, place the cursor on the object and choose the Save option from the options on the **right programmable key**.

When they have been stored in memory, the space required in the phone is then indicated.

You can consult them in the corresponding menus (WAP bookmarks in **WAP**, tune in **Sounds**, backgrounds in **Background**, and icons in **Call groups**).

### Drafts

*When you store a composed message, it is stored among the drafts.*



From the **Messages** menu choose the **Drafts** menu and **Select**.

Select a message and press the **right programmable key**. If you do not delete this message, it will remain as a draft and can be re-used even if you have already sent it.

Choose from the options offered (Read, Send, Delete, Delete all, Modify).

## Messages

---



### Sending options

*Several sending options are offered.*



From the **Messages** menu choose the **Options** menu and **Select**.  
From the send options offered (acknowledgement, reply offered, period of validity - *life cycle of message on network before being routed* -, message format, message centre).

### Memory

*You may want to know the memory available for saving messages.*



From the **Messages** menu select the **Memory** menu and **Select**.  
The screen shows you the memory available on the SIM card and in the phone.

## WAP



*WAP (Wireless Application Protocol): protocol that translates the Internet language into WML language that can be read by a phone. The WAP function allows you to log onto certain Internet sites. You can log onto sites that allow you to download tunes, icons or animated screensavers to your phone.*

### The WAP Menus

The WAP navigator is under licence:




RSA Data Security

The WAP navigator is the exclusive property of Openwave. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of the software that makes up the navigator.

You can activate the magnifying glass to increase the size of the characters by holding down the **# key**.

The **Services menu**, a dropdown menu, can be accessed at all times when navigating through WAP pages.

 Select the top left icon using the **▲ up key**.

Consult the menu using the **right programmable key**.

The **Services menu** contains all the following sub-menus:

**Welcome:** logs onto the home page.

(carries the name of your access provider)

**Bookmarks:** is used to save in a phonebook the names and addresses of Internet sites to facilitate easy access.

You can receive bookmarks from SMS and add them to this list (see chapter on SMS).

You can also send messages by SMS: select a bookmark, press the **right programmable key (Choice)**, then select **Send by SMS**.

**Go to URL:** this menu allows you to input an Internet address directly.

**Inbox:** this menu allows you to consult messages sent by the Internet site.

**Save image:** is used to save a WAP site image (option).

**Reload:** refreshes the current page.

**Clear the cache:** clears the stored information on previous logons.

## WAP



**Advanced...**: offers the following advanced settings

- Configuring parameters
- Show URL
- Logoff
- Circuit message (if user can confirm each logon)
- Security (is used to access information on making WAP connections secure).

**About...**: information on the browser.

**Exit**: returns to the phone's home page.

### Configuring WAP parameters

Select the **Advanced...** menu, then the **configuration** menu.

Choose from the sub-menus offered:

**Logon parameters** is used to select or modify your access provider's logon parameters or configure the parameters of other access providers.

*The active access service is preceded with a start.*

**Configuration of WAP parameters:**

All information to be entered in the parameters are provided by your operator or access provider.

- Choose desired access service, then press **Choice**.
- Enter title of service and accept.
- Enter Internet address of home page and accept.

The **GSM parameters** to be entered are:

- User name
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- Call number
- Access mode (digital, analogue or automatic)

*In automatic mode access can be gained to the operator's network by a digital link and by an analogue link to a different network (in roaming).*


## WAP



Once all the settings have been entered, you can activate the chosen access provider. Select him from the list. Confirm your choice with **OK**.

**Inactivity time** is used to choose the time after which the call is automatically disconnected if you have forgotten to log off from a service.

### WAP Logging on


Using the **Welcome** menu, you can log onto your access provider's WAP site by pressing the **right programmable key** .

If you are logging onto the GSM network, the @ symbol flashes, the metering of the cost of the call starts as soon as it stops flashing.

### Downloading objects

Some WAP sites allow you to download ring tones, icons or animated screensavers. Once downloaded, they are stored in your phone's memory. You can then save them in your phone (same operation as used for downloading using SMS).

### WAP Logging off

To log off press **Stop**  key.

The logoff happens automatically after a few seconds of inactivity if you forget to log off.

This period is defined by the inactivity time setting.



 
## Games

---



### Picture puzzle

*Your phone is supplied with the game: Picture puzzle.*

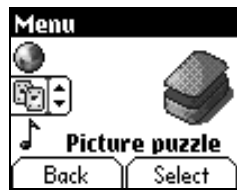

From the **Picture puzzle** menu press **Select**.  
On line help is supplied to use the game.

## Sounds

*This menu allows you to customise the ring tones on your phone and to activate beep and vibrate modes.*



### Volume and ring tone

*This menu allows you to allocate a ring tone to each type of event.*



From the **Sounds** menu choose **Ring tone** menu and **Select**.

Select the type of event from the list offered (Alarm, Calls, Messages and Fax) and **accept**.

Select the **ring tone** from the list offered and **accept**.

Adjust the **volume** using the **down** / **up** keys and **accept**.

You can deactivate the sound by pressing the \* **key**.

### Vibrate

*This menu allows you to activate the vibrate mode for calls.*



From the **Sounds** menu choose the **Vibrate** menu and **Select**.

Select the vibrate mode from the choices offered (ring tone and vibrate, vibrate only, vibrate inactive or vibrate plus ring tone) and **accept**.

 
## Sounds



**WARNING:** vibrate mode is not a priority in relation to the choice of ring tones in the call groups. To make vibrate mode apply in general, switch to Silent mode.

### Silent mode

This menu allows you to switch to Silent mode.

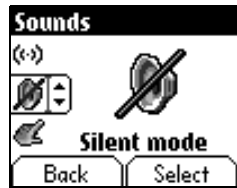

From the **Sounds** menu select **Silent mode** and **Select**.


**Activate or deactivate** Silent mode and **accept**.

Silent mode can also be accessed via the home page by holding down the \* 7 key.

✦ When the device is in silent mode, the relevant icon appears on the home page.  
In this mode the ring tone will not function, except for the alarm clock..

### Beeps

 This menu allows you to activate a beep for each type of event.

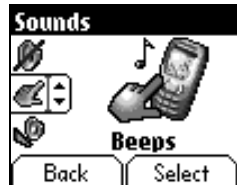

From the Sounds menu choose the **Beeps** menu and **Select**.

Select the type of beep you want to allocate from the choices offered (Key beep, Network beep or Battery beep) and **accept**.  
Activate or deactivate the beep and **accept**.

In the case of key beeps, you can also choose from the two types of beeps offered: key beeps or Dtmf tone (different beep depending on the key pressed).

## Background



*This menu allows you to customise your screen by choosing the colour, background image, animation or greeting message.*

### Colours

*This menu allows you to display the colours you want on your phone.*



From the **Background** menu select the **Colours** menu and **Select**.


Select the colour you want to see during navigation from the menus and **accept**.

### Wallpapers

*This menu allows you to display the background image you want on your phone.*



From the **Background** menu select the **Wallpapers** menu and **Select**.

Select the Wallpaper and **Select (right programmable key)** . The image appears in the background of the home page.

Press the **right programmable key**  to select this choice, or the **left programmable key**  to return to choice.

## Background



### Screensavers

*This menu allows you to display an animation when the phone is in standby mode.*



From the **Background** menu select the **Screensavers** menu and **Select**.  
Select a screensaver from the options offered and accept.  
The chosen screensaver appears on the screen, **accept** it.

Adjust the screensaver display time (greater than 60 seconds) and **accept**. The screensaver appears at the end of each period of inactivity.

Warning: the animated screensaver uses processing power. For a better efficiency you can deactivate the screen saver or select the activation time to be more than every 300s.

### Greeting message

*This menu allows you to customise your greeting message.*



From the **Background** menu select the **Greeting msg** menu and **Select**.

Enter the text that you want to see appear in the greeting message (when you switch on) and **accept**.

## Settings



*This menu allows you to customise the settings of your phone to make it as convenient as possible for you to use.*

### Date / Time

*This menu allows you to set the date and time of your phone.*



From the **Settings** menu select the **Date / Time** menu and **Select**.

**Date:** set the date by entering it directly in digital form or by using the **down / up** ▼ ▲ keys. Use the **right key** ► (or left ◀) to access the next (or last) input field. Once the date is correct, **accept** it.

**Time:** same procedure as for setting the date.

### My Objects

*This menu allows you to find out how much memory is available for objects.*



From the **Settings** menu select the **My objects** menu and **Select**.

The amount of memory available is displayed. This memory is divided between your downloaded ring tones, wallpapers and screensavers.

You can delete your objects to increase the memory available for new downloads.

## Settings

---



### Languages

*This menu allows you to choose your phone's display language.*



 
From the **Settings** menu select the **Languages** menu and **Select**.

Select the language of your choice and **accept**.

If you select **Automatic**, the display language will be the language of your SIM card.

### Networks

*This menu allows you to configure network preferences.*

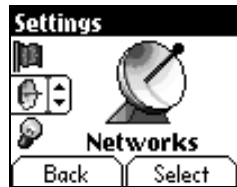

From the **Settings** menu select the **Networks** menu and **Select**.

Choose **Preferred** to view all the pre-registered networks.


Choose **Selection** to activate (automatically or manually) one of the networks accessible in the area in which you are located.

## Settings


 
### Contrast

*This menu is used to adjust screen contrast.*

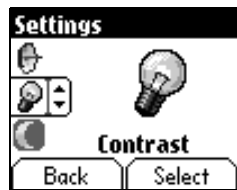

From the **Settings** menu select the **Contrast** menu and **Select**.

A test screen allows you to adjust the contrast by means of the **down / up** ▼ ▲ keys and **enter**.

### Energy saving

*This function is used to deactivate the screen backlight.*



From the **Settings** menu select the **Energy saving** menu and **Select**.

**Activate** or **deactivate** the backlight and **accept**.

*By deactivating the screen backlight you increase the battery life of your phone.*

**WARNING:** *display legibility is reduced.*



## Settings

---



### Short cuts

*This menu allows you to allocate functions to the programmable keys.*



From the **Settings** menu select the **Short cuts** menu and **Select**.

Select the key that you wish to modify and **accept**.

Choose the function that you want to allocate to this key and **accept**.

### Reset settings

*This menu allows you to reset all your phone's settings.*



From the **Settings** menu select the **Reset settings** menu (**RES**) and **Select**.

**WARNING: you are about to lose all the downloaded objects and all the settings made on your phone since you bought it.**



A validation screen allows you to confirm this choice.

The phone switches off and resets automatically when powered up to take account of the change of settings.

## Calls



The **Calls** menu allows you to manage and consult all your phone's incoming and outgoing calls that are marked as follows:

-  Incoming call
-  Outgoing call

### Forward calls

This menu allows you to transfer calls addressed to you.




Depending on your subscription, this service allows you to re-direct incoming calls to a different number or answer phonebox.

From the **Calls** menu select the **Calls Forwarded** menu and **Select**.

Choose the type of forwarding you want from the options available.

## Calls



Fast access to the list of calls from the home page: press the **Start**  key.

### View last calls


This menu allows you to access the list of last numbers used.



From the **Calls** menu select the **View last calls** menu and **Select**. Each call contains information on type of call (in the form of an icon), time (or date) and duration.

 
Select a call from the list and **accept**.

Choose from the options offered (Call, store in your phonebook, send a message, delete, delete all).

You can also make the call by pressing the **Start**  key.

### Counters

This menu allows you to consult the duration of the outgoing calls.

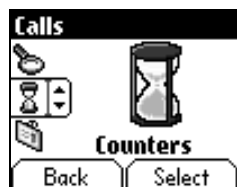

From the **Calls** menu select the **Counters** menu and **Select**.

Choose the type of counter you want from the options offered.


## Calls

 ---



### Display number

*This menu allows you to modify the status of the display number function.*

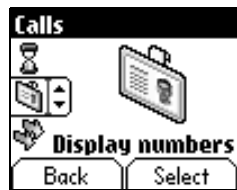

From the **Calls** menu select the **Display number** menu and **Select**.

Choose from the options offered (Anonymous mode, My number, Caller's number).

#### **Anonymous mode**

You have the facility to mask your number on the phone from the person you are calling.

Initial: network default mode.

No: you choose not to activate anonymous mode and so to display your number.

Yes: you choose to active anonymous mode and so not to display your number.

## Calls



During a call you may be informed that a caller is trying to reach you: you hear a special tone. The caller's number is displayed on the screen (or the caller's name if it has been stored).

### Call waiting

*(Operator-dependent service)*



From the **Calls** menu select the **Call waiting** menu and **Select**.

You can **activate, deactivate, or consult the status** of the call waiting service in order to check if it is active or not.

During a call, if a second caller tries to contact you, the screen displays the call warning.

### Automatic redial

*This menu allows you to call back a person you tried to reach.*



From the **Calls** menu select the **Automatic redial** menu and **Select**.

You can set the redial function to inactive, on demand or systematic.

If you choose **On demand**, your phone will offer to redial your caller automatically if the number is busy.

## Calls



### Answer phone number

*This function is used to set your answer phone number.*



*This number will be used when you make a call from the answer phonebox using the programmable keys.*

From the **Calls** menu select the **Answer phone number** menu and **Select**.

Enter your answer phone **number** and **accept**.

### Local info

*This menu is used to activate reception of local information broadcast by the network.*



*You can choose whether or not to receive information (ask the company with which you took out your subscription).*

From the **Calls** menu select the **Local info** menu and **Select**.

## Security

*This menu allows you to configure your phone's security settings.*



### Keypad locking

*This menu allows you to lock the keypad.*



From the **Security** menu select the **Lock keypad** menu and **Select**.

Select **Activate** or **deactivate** and **accept**.

■ The lock icon appears on the home page.

*This function is also available in the home page via a combination of the \* 8 and **Select keys (right programmable key)**.*

### PIN number

*This menu allows you to activate and modify your phone's PIN.*



From the **Security** menu select the **PIN number** menu and **Select**.

To modify the PIN, select **Modify** and **Select**.

Enter old PIN and **accept**.

Enter new PIN twice and **accept**.

To activate or deactivate the PIN, select the **Check PIN** menu and **Select**.

Enter PIN and **accept**.

Select **Activate** or **Deactivate** and **accept**.

## Security



The **Phone code** menu allows you to activate the phone code so that it is requested and checked whenever the phone is switched on if a different SIM card is used. This code is automatically linked to the SIM card installed when the phone is activated.

### PIN number 2

You have a second PIN number to allow you to access certain functions\*.

\* This function may or may not be available depending on your SIM card.

Proceed as above in order to activate, deactivate or modify PIN number 2 of your phone.



### Phone code

The phone code is a secret code intended to protect the phone if stolen.

To activate or deactivate the phone code, select the **Phone code** menu and **accept**.  
Enter 0000 and **accept**.  
Select **Activate** or **Deactivate** and **accept**.

To modify the phone code, select **Modify** and **accept**.  
Enter old phone code and **accept**.  
Enter new phone code and **accept**.  
Enter phone code again to verify it and **accept**.





## Security



The **Confidentiality** function is used to delete numbers stored in View last calls and the SMS stored in the memory when a new SIM card is inserted into the phone.

### Confidentiality



From the **Security** menu, select the **Confidentiality** menu and **Select**.  
Select **Activate** or **Deactivate** and accept.

### Operator code

*This menu allows you to modify the call barring.*



From the **Security** menu, select the **Operator code** menu and **Select**.

*Access to this service depends on your type of subscription.*

## Security



Call barring can be applied to ALL calls (incoming and outgoing), to all incoming calls when you are away from your home country (if roaming available).

### Call barring

This menu allows you to block the sending or reception of certain calls.



Before you can use this service, a password will be provided by your operator when you take out your subscription.

From the **Security** menu, select the **Call barring** menu and **Select**.

Select **Activate** or **Deactivate** and **accept**.

Access to this service depends on your subscription type.

### Fixed dialling

This menu allows you to restrict the sending of calls.



From the **Security** menu, select the **Fixed dialling** menu and **Select**. Enter PIN number 2 and **accept**.

Select **Activate** or **Deactivate** and **accept**. Proceed as for any other phonebook.

By activating this function, you can send calls only to the numbers stored in this phonebook.

This phonebook is linked to the SIM card, and its size depends on the card's capacity.

 
## Accessories



*This menu allows you to access the various accessories offered by your phone: calculator, converter, alarm, timer, car kit, data parameters.*

### Calculator

*This menu allows you to use your phone as a calculator.*

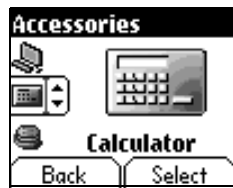

From the **Accessories** menu, select the **Calculator** menu and **Select**.

You can use the calculator with the help of the following keys:

- ▲ **Up key:** Add
- ▼ **Down key:** Subtract
- ▶ **Right key:** Multiply
- ◀ **Left key:** Divide
- ☞ **Right programmable key:** Equals
- ☜ **Left programmable key:** Delete
- \* ☎ #\* **key or #:** Decimal point.

*If no calculations are being run, the **Right programmable key** ☞ allows you to use the value in the **converter** directly.*

## Accessories



### Converter

*This menu allows you to convert one currency to another.*



From the **Accessories** menu, select the **Converter** menu and **Select**.

Enter a value and press the **Up key** ▲ to convert from one currency to another, or the **Down key** ▼ to convert back.

The **right programmable key**  allows you to use the following options:

#### Rapid exchange

If you check the Rapid exchange box, the converter will work in the home page by entering the desired numbers and pressing the **up / down** ▲ ▼ keys to make the conversion.

#### Exchange rate

Enter the rate of exchange corresponding to the chosen currencies.

#### Currencies

Enter the two types of currencies to be converted.

#### Go to calculator

This option allows you to immediately use the value converted in the **calculator**.

## Accessories

*The alarm works even when the phone is switched off.*



### Alarm

*This menu allows you to set and activate the alarm.*

From the **Accessories** menu, select the **Alarm** menu and **Select**.



**Activate** or **Deactivate** the alarm and **accept**.

 
Set the waking time by entering the numbers directly or using the **down / up** ▼ ▲ keys and **accept**.

 *The alarm icon appears on the home page.*

### Timer

*This menu is used to set and activate the timer.*

From the **Accessories** menu, select the **Timer** menu and **Select**.

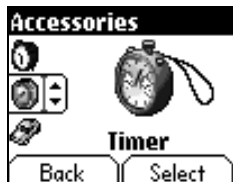

**Activate** or **Deactivate** the alarm and **accept**.

Set the duration by entering the numbers directly or using the **down / up** ▼ ▲ keys and **accept**.

 *The alarm icon appears on the home page.*

## Accessories

---



### Car kit

*This menu allows you to configure your phone with a car kit.*

From the **Accessories** menu, select the **Car kit** menu and **Select**.

Choose from the options offered (Automatic response, Switch off, Alarm timing, Hands-free volume control).



### Data

*This menu is used to configure the data exchange with a Personal Computer.*

From the **Accessories** menu, select the **Data** parameters menu and **Enter**.

Choose the correct speed depending on the Personal computer you would like to connect to the handset.



## Services



*This menu allows you to access numerous services offered by your operator. The list of these services will appear in the menu depending on your subscription.*

### Services

*This menu allows you to access your operator's basic services.*

From the **Services** menu, choose from the list offered.

## Technical features

---

Use of your phone is subject to safety measures designed to protect users and their environment.

**Electrical safety:**

Only use those chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be the same as that indicated on the charger's serial plate.

**Aircraft safety:**

You must switch off your phone on aeroplanes when so instructed either by cabin crew or by signs. Mobile phone use may be dangerous to the operation of the aircraft and may disrupt the phone network.

**Explosive materials:**

Please comply with signs at petrol stations telling you to switch off your phone. You must also observe radio equipment usage restrictions in chemical plants, fuel depots and at any location where blasting operations are under way.

**Electronic medical equipment:**

Your phone is a radio transmitter which may interfere with electronic medical equipment such as hearing aids, pacemakers, etc. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area. Always make sure that your phone is switched off in hospitals when so instructed by signs or by medical staff.

**Road safety:**

Except in emergencies, do not use your phone when driving unless you have a hands-free kit enabling you to manoeuvre freely. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

This mobile phone complies with European requirements governing exposure to radio waves.

Your phone is a transmitter/receiver. It has been designed and manufactured to comply with radiofrequency energy exposure limits recommended by the Council of the European Union and the ICNIRP for the entire population. These limits were established by independent scientific agencies on the basis of in-depth and regular evaluations of scientific studies. The limits include a large safety margin that is intended to guarantee the safety of all, irrespective of age or state of health.

The exposure standard for mobile phones uses a unit of measure called the SAR, or Specific Absorption Ratio. The SAR limit recommended by the Council of the European Union and the ICNIRP is 2 W/kg\*. Tests were conducted on a standardised usage position basis, with the phone transmitting at its maximum level certified in all its frequency bands. Although the standardised measurement is done at maximum power, the real SAR of the phone in use is generally very far below the maximum value. The phone was designed to operate at the power level strictly necessary to ensure communication with the network. In general, the closer you are to a base station, the lower the power at which the phone will transmit.

Validation of conformity with European directive 1999/5 (directive R&TTE) is a pre-requisite for introducing any model of phone onto the market. Protection of health and the safety of the public and the user are a vital requirement of this directive.

This model's maximum SAR value measured in the conformity test is 0.64 W/kg.

Although differences may exist from one phone to the other and depending on position, all comply with European regulations.

In the countries that have adopted the SAR limit recommended by FCC (USA, Taiwan...), the limit is 1.6 watt/kilogram (W/kg) averaged over one gram of tissue.

The highest SAR value for this model phone when tested for compliance against the standard was 1.2 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the requirements for RF exposure.



## Technical features

Advice for limiting exposure to radiofrequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Individuals: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.

\*The SAR limit for phones used by the general public is 2 watts/kilogram (2 W/kg) on average for 10 g of tissue. This value includes a large safety margin to increase protection and to take account of the variations in measurements. The SAR information may vary in different parts of the world, depending on declared national requirements and the frequency bands used by the network.

## Warranties

---

### Usage precautions

Your mobile phone allows you to download ring tones, icons and animated screensavers. Some of these items may contain data that may cause malfunctions of your mobile phone or data losses (virus for example). For this reason, Sagem rejects all responsibility concerning (1) the reception of downloaded data or losses of the said data, (2) the impact on the operation of the mobile phone and (3) damages resulting from receiving the said downloaded data or loss of said data. In addition, Sagem states that a failure caused by receiving downloaded data that do not comply with the specifications set by Sagem is excluded from the warranty. Consequently, the diagnosis and repair of a phone infected by the said downloaded data will be at the expense of the customer.

### Warranty conditions

Whenever you wish to make use of the warranty, please contact your vendor and present him with the purchasing paperwork that he gave you.

If a fault occurs, he will advise you.

If you bought your phone directly from SAGEM SA, the following rules will apply:

1. The new equipment (excluding consumables), including new accessories bundled with the phone, are guaranteed by SAGEM SA, parts and labour (apart from travel) against any manufacturing fault for a period of twelve (12) months with effect from the sale of the equipment by SAGEM SA to the customer, on presentation of the paperwork stating the purchase date of the equipment.  
Equipment that has been repaired or replaced as standard during the warranty period stated above is guaranteed (parts and labour) until the later of these two dates:  
Expiry of the guarantee period of twelve (12) months stated above or three (3) months with effect from the support provided by SAGEM SA.  
In any disputes, the equipment is covered by the legal warranty against the consequences of faults or hidden defects in compliance with articles 1641 and subsequent of the French civil code.
2. All faulty equipment under warranty will be replaced or repaired free of charge at SAGEM SA's option (with the exclusion of repair of any other damage), once it has been specified that the work required for the application of the warranty will be done in a workshop and that the return costs (transport and insurance) of the equipment to the address to be indicated to it by the SAGEM SA after-sales service, whose phone number will appear on the delivery note, will be charged to the customer.  
Subject to essential legal provisions, SAGEM SA does not accept any warranty, explicit or implicit, other than the warranty provided expressly in this chapter, nor shall SAGEM SA accept responsibility for any immaterial and/or indirect damages (such as loss of orders, loss of profit or any other financial or commercial damage) under the warranty or not.

3. The acceptance of an item of equipment under warranty demands that a purchase document that is legible and without modification, stating vendor's name and address, date and place of purchase, type of equipment and IMEI, are attached to the warranty, and that the information on the equipment identification label is legible and that this label or any other seal has not been tampered with.

The warranty applies in normal conditions of use.

## Warranties

Prior to sending the equipment for repair, it is the customer's responsibility to backup at his expense the customised data stored in the equipment (phonebook, settings, wallpapers). A list of backup facilities can be provided by SAGEM SA on request. The responsibility of SAGEM SA cannot be invoked if damage occurs to customer files, programs or data. The information or operating elements and the contents of files will not be re-installed in any case in the event of loss.

SAGEM SA may decide, at its option, to repair the equipment with new or reconditioned parts, replace the equipment with new equipment or, in any dispute, equipment in good working condition. During its work SAGEM SA reserves the facility to make, where necessary, any technical modifications to the equipment where these modifications do not adversely affect its initial purpose.

Faulty parts to be replaced during a repair under warranty will become the property of SAGEM SA.

The equipment repair and standstill time during the warranty period may not lead to an extension of the warranty period as stated in article 1 above, provided no other vital provisions have been agreed.

The application of the warranty is subject to the full payment of the sums due for the equipment when the request for support is made.

### 4.

The following are excluded from the warranty:

Breakdowns or malfunctions due to non-compliance with the installation and use instructions, to an external cause of the equipment (shock, lightning, fire, vandalism, malice, water damage of any type, contact with various liquids or any harmful agent, unsuitable electric current...), to modifications of the equipment made without the written consent of SAGEM SA, to a servicing fault, as described in the documentation supplied with the equipment, to lack of supervision or care, to poor environmental conditions of the equipment (especially temperature and hygrometry, effects of variations in electric voltage, interference from the mains network or earth) or even due to a repair, a call-out (opening or trying to open the equipment) or to servicing done by personnel not approved by SAGEM SA.

Damage resulting from inadequate packaging and/or poor packing of the equipment sent back to SAGEM SA.

Normal wear and tear of equipment and accessories.

Communication problems linked with a poor environment, especially:

Problems accessing and/or logging onto the Internet, such as breakdowns of the access network, the failure of the subscriber's or his correspondent's line, transmission fault (poor geographic coverage by radio transmitters, interference, disturbance, failure or poor quality of phone lines...), a fault inherent to the local network (cabling, file server, user phone) and/or transmission network fault (interference, disturbance, failure or poor quality of the network...).

Change of parameters of the cellular network made after the equipment was sold.

Supply of new software versions.

Current servicing work: delivery of consumables, installation or replacement of these consumables...

Call-outs for equipment or software modified or added without the written consent of SAGEM SA.

Faults or disruptions resulting from the use of products or accessories not compatible with the equipment.

Items of equipment returned to SAGEM SA without having complied with the return procedure specific to the equipment covered by this warranty.

The opening or closing of a SIM operator key and call-outs resulting in the non-operation of the equipment resulting from the opening or closing of SIM operator key done without the agreement of the original operator.



## Warranties

---




### 5.

In the cases of warranty exclusion and of expiry of the warranty period, SAGEM SA shall draw up an estimate to be given to the customer for acceptance before any call-out. The repair and carriage costs (there and back) given in the accepted estimate will be charged to the customer.


These provisions are valid unless a special written agreement has been made with the customer, and shall apply in mainland France. If one of the provisions turns out to infringe a legally essential rule that consumers could have the benefit of under the national legislation, this provision will not be applied, but all other provisions will remain valid.



## Troubleshooting

PROBLEM - SITUATION	ACTIONS
<b>Impossible to start phone</b>	Hold down the <b>Start</b> key  (3s). Charge the phone up for 15 minutes before starting it again. Check the battery charge icon scrolls. Yes: charge correct. No: disconnect the charger, then reconnect it, check that the battery icon scrolls. Press the right programmable key "Start". If the icon continues not to scroll, repeat the disconnect and connect operation several times. If the battery still does not charge, contact the after-sales service. When the charge battery icon has stopped flashing, the battery is charged.
<b>BATTERY STATE UNKNOWN message</b>	The battery has not been recognised by the phone. Check that the battery is correctly installed in the phone.
<b>LOW BATTERY message</b>	This message is displayed when the battery becomes too weak. The phone switches itself off automatically. Put the phone on charge.
<b>SIM MISSING message</b>	Check SIM card is present and properly installed.
<b>PIN INCORRECT Message</b>	Visually check the SIM card. If the card is damaged, contact the operator's point of sale to check. If the message continues, contact the after-sales service.
<b>SIM BLOCKED</b>	PIN keying error. Caution: after three attempts, the SIM card is locked. You have entered three incorrect PIN codes. You will need to enter your PUK code to unblock your SIM Card. You must enter: **05*PUK*PIN*PIN# You must enter the PUK code (Personal Unblocking Key) given by your network provider. 10 errors will permanently block your SIM Card. You must then contact your network provider to get a new one.
<b>SIM LOCKED</b>	On network providers' request, the handset can only be used with some types of SIM cards. This message means that the SIM card you are using does not fit with the phone. Take the SIM card out, and switch the phone back on. If the message "SIM not present" appears on the screen, you will need to check its compatibility next to the place where you bought it. If not, please contact your Customer Services.






## Troubleshooting

PROBLEM - SITUATION	ACTIONS
No call connection	<p>Check the called number. Check that at least one signal strength bar is present. If the R icon appears without any operator name being displayed, only emergency calls are possible.</p> <p>Check that your call credit with your operator has not been used up.</p> <p>Check that the SIM card used offers the service that you are requesting and that its validity has not expired.</p> <p>Check and deactivate the restriction on outgoing calls if necessary.</p> <p>The network is overloaded. Call again later.</p> <p>If the poor call connection persists, contact the hotline.</p>
No call reception	<p>Try to make a call to check that the phone and the network are operational. Check and deactivate the permanent calls forwarded (permanent calls forwarded icon displayed). Check and deactivate the restriction on incoming calls if necessary. If the poor reception persists, contact the hotline.</p>
Network reception less good during a call	<p>Avoid holding the phone with your fingers at the top of the rear cover; this creates an obstacle for the antenna located at this spot.</p>
Impossible to send message	<p>Check that the SIM card used offers this service. Try to make a call to check that phone and network are operational.</p> <p>Check the answer phone number is properly configured. To do this, go to the "Calls" menu, select "Answer phone number" and check the number. Otherwise, enter your operator's answer phone centre number.</p>
No answer phonebox	<p>Check that the SIM card does offer this service.</p> <p>Programme the call to be forwarded to answer phoneusing the information provided by the operator.</p>
Answer phone icon flashing	<p>Call the answer phone to make it disappear.</p>
Backlight does not work	<p>Go into the <b>Settings</b> menu, select the <b>Energy saving</b> menu and activate backlight</p>
In WAP context: SERVER NOT ANSWERING message	<p>Switch off and then switch phone back on.</p>
Logon to home page impossible	<p>In the WAP menu, <b>Clear the cache</b>.</p>
Operator name does not appear on screen	<p>Go into the <b>Settings</b> menu, select <b>Networks</b>, then <b>Selection</b>. Wait until the operator appears, select it and accept.</p>
How do I (un)lock the keypad?	<p>Hit <b>* 8 *</b> key, then the <b>right programmable key</b>  <b>(OK)</b>.</p>

## Troubleshooting

### PROBLEM - SITUATION

### ACTIONS

- How do I switch to silent mode?** Hold \*  key down unless ring tone sounds, when a short touch is enough.
- How do I activate zoom?** Can be activated only in SMS and WAP screens; hold down \*  key.
- How do I remove the envelop that appears on the screen? ** This envelop means that you have written or answer phone.  
To remove it, all you need to do is enter the "Messages" menu to read your messages. The envelop is then deleted.  
In the case of a voice message, contact your answer phonebox and let it guide you.
- How do I lift the receiver that appears on the screen? ** This receiver means that you have received answer phone in your message box. To remove it, call your answer phone.
- How do I remove the written message at the down of the home page (1 call)** Press the **Stop**  key to return to the home page without messages.  
Go into the **Messages** menu, select **Compose** and enter your message using the T9 script (predictive input method), which is the default entry mode.
- How do I download ring tones?** Logon to one of the following site via your computer: [www.planetsagem.com](http://www.planetsagem.com). This site offers to send ring tones to your phone in the form of an SMS. You can also logon to your operator's site. Once the SMS has been received, all you have to do is save it: accept the option "Save messages", the tune will then be added to your list. In addition, you can logon to some sites by phone.
- How do I free up memory to download my objects (sounds, images)** Go into the **Settings** menu, select **My objects** then delete some objects (too many).
- How can I increase the efficiency of my phone?** The most efficient actions are as follows:  
You can deactivate the backlight (in the menu **Settings/Energy saving**) or be carefully where you keep your phone to make sure that the keys can't be pressed accidentally because any key press will activate the backlight.  
You can deactivate the screensaver or select the activation time to be more than every 300s (the screensaver uses processing power).  
Make sure that you don't obstruct the antenna with your fingers when using the phone (see page 20).

## Index

<b>A</b>			
<b>Accessories</b>			p48
<b>Accessories (menu)</b>		p12	p60
Activating your phone		p59	p60
Adapter		p16	
Alarm		p12	
Anonymous mode		p61	
<b>Answer phone number</b>		p52	
		p54	
<b>B</b>			
<b>Background</b>		p44, p45	
<b>Battery</b>			
Charging the battery		p19, p20	
Installing the battery		p17	
<b>Beeps</b>		p43	
<b>C</b>			
<b>Calculator</b>		p59	
<b>Call barring</b>		p58	
<b>Call groups</b>		p36	
<b>Calls</b>			
Emergency services		p23	
First call		p23	
Receiving a call		p24	
<b>CALLS (menu)</b>		p50	
Automatic redial		p53	
Call waiting		p53	
Calls forwarded		p50	
Counters		p51	
Display numbers		p52	
View last calls		p51	
<b>Car kit</b>		p62	
<b>Changing cover</b>		p18	
<b>Charger</b>		p12	
<b>Colours</b>		p44	
<b>Confidentiality</b>		p57	
<b>Contact</b>			
Add contact		p29	
Delete contact		p28	
Modify contact		p28	
See contact		p28	
<b>Contrast</b>			p48
<b>Converter</b>			p60
Currencies			p60
<b>D</b>			
<b>Data</b>			p62
<b>Date and time</b>			p22, p46
<b>Description</b>			p13
<b>E</b>			
Emergency services			p23
EMS			p34
Energy saving			p48
<b>F</b>			
<b>Fixed dialling</b>			p58
<b>G</b>			
<b>Games</b>			p41
<b>Greeting message</b>			p45
<b>H</b>			
Hands-free mode			p24
<b>Home page</b>			p15
<b>I</b>			
Icon			p14, p15
<b>Input modes</b>			p34
International			p23
IP address			p39
<b>K</b>			
<b>Keypad locking</b>			p13, p55
<b>L</b>			
<b>Languages</b>			p47
<b>Local info</b>			p54
<b>Lock keypad</b>			p55



## Index

- |                          |               |                            |          |
|--------------------------|---------------|----------------------------|----------|
| <b>M</b>                 |               | <b>S</b>                   |          |
| Memory                   | p29, p37      | Screensavers               | p45      |
| Menus                    | p8            | Security                   | p58      |
| Messages                 | p32           | Sending options            | p37      |
| Compose                  | p32           | Services                   | p63      |
| Drafts                   | p33, p36      | Settings                   | p46      |
| Inbox                    | p36           | Short cuts keys            | p49      |
| Sending options          | p37           | Shortcut keys              | p13      |
| <b>N</b>                 |               | Silent mode                | p26, p43 |
| Networks                 | p22, p47      | SIM card                   | p16, p17 |
| <b>O</b>                 |               | SMS                        | p34      |
| Objects                  | p46           | Sounds                     | p42      |
| Operator code            | p57           | Switching off              | p24      |
| <b>P</b>                 |               | <b>T</b>                   |          |
| Phone code               | p56           | T9                         | p33      |
| Phonebook                | p27           | Technical features         | p64      |
| Phonebook menu           | p29           | Text                       | p32, p34 |
| Using the phonebook      | p27           | Timer                      | p61      |
| Picture puzzle           | p41           | Troubleshooting            | p69      |
| PIN number               | p16, p21, p55 | <b>V</b>                   |          |
| PIN number 2             | p56, p58      | Vibrate                    | p42      |
| Principles of navigation | p14           | Volume                     | p25, p42 |
| Programmable keys        | p13           | <b>W</b>                   |          |
| PUK code                 | p21           | Wallpapers                 | p44      |
| <b>R</b>                 |               | WAP                        | p38, p40 |
| Receiving messages       | p35           | Configuring WAP parameters | p39      |
| Reset settings           | p49           | Downloading objects        | p40      |
| Ring tones               | p25, p42      | Services menu              | p38      |
|                          |               | WAP logging off            | p40      |
|                          |               | WAP logging on             | p40      |
|                          |               | Warranties                 | p66      |
|                          |               | <b>Y</b>                   |          |
|                          |               | Your phone package         | p12      |