


# **Instruction Manual**



# Features

- Parental Controls
- Front & Rear Cameras
- 1.2 GHz Duad-Core Processor
- 1GB of RAM
- Wi-Fi
- Bluetooth
- HDMI
- Supports Multiple Users
- 8GB of Flash Storage (expandable by Micro SD)
- High Resolution (1024x600) 7 Inch Display
- Extra Long Life Battery
- GPS

# Getting to Know Your XO Tablet

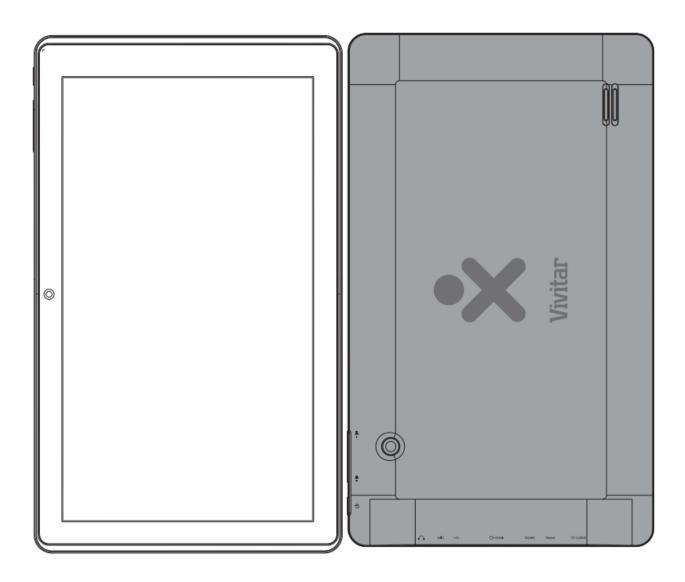


# Initial Setup

The first time you power on your tablet you will be taken through the initial setup. *Note*: It is recommended to fully charge your tablet before first use. For best results, give your tablet an extended overnight charge before using it for the first time.

#### **STEP 1: SELECT LANGUAGE**

The first time you power on your tablet you will be taken through the 'Select Language' screen. Touch the language icon on the left side of the circle to switch between English and Spanish. The language icon shown on the right side of the circle will be the selected language. Touch the **OK / Aceptar** button to confirm the selected language and continue.

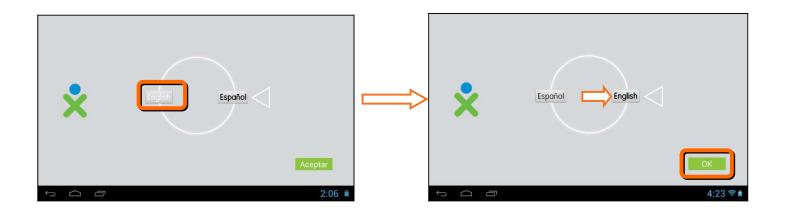


#### STEP 2: XO TABLET VIDEO TUTORIAL

Once you have selected the language, the XO Tablet Video Tutorial automatically begins. The video introduces you to the unique features of your XO Tablet.

#### **STEP 3: LICENSE AGREEMENT**

You may choose to read the End User License Agreement.


To continue, scroll down to the end of the License Agreement and touch I Agree.

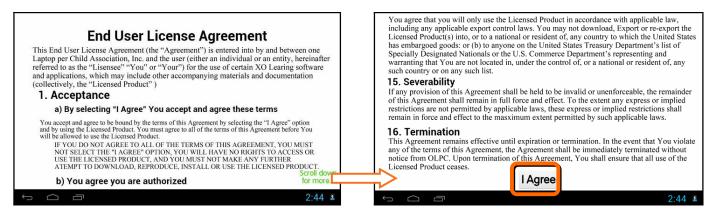

## Welcome to Your XO Tablet

#### STEP 1: INTRODUCTION

Welcome to your XO Tablet! You will now be prompted to continue the XO Setup. This includes selecting your password and setting up your child's profile. Touch **OK** to continue this process.

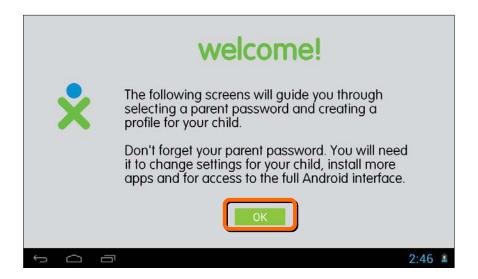


#### STEP 2: CHOOSE A PARENT PASSWORD

Enter your password (must be 6 characters) and touch **Next** from the onscreen keyboard. Then re-enter to confirm the password and touch **Done** from the onscreen keyboard.




#### STEP 3: ENTER YOUR CHILD'S NAME

Enter your child's First name and then touch **Next** from the onscreen keyboard. Enter your child's Last name and then touch **Done** from the onscreen keyboard. Touch **OK** to continue.

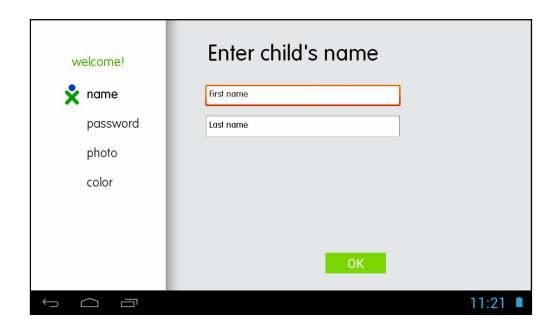

#### STEP 4: CHOOSE YOUR CHILD'S PASSWORD


Enter a password for your child to use (must be 6 characters) and touch **Next** from the onscreen keyboard. Then re-enter to confirm the password and touch **Done** from the onscreen keyboard. The child's password is enabled by default. If you would like to disable the child's need to enter a password, touch the box to uncheck the enable password feature. After you have entered the child's password details, touch **OK** to continue.

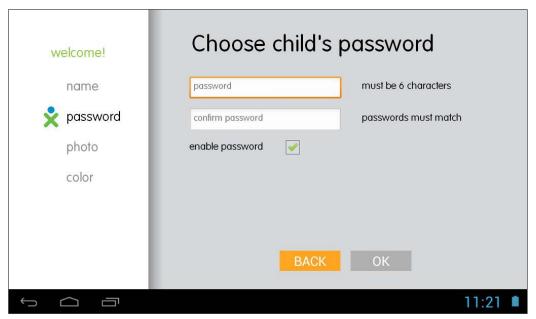

#### **STEP 5: TAKE YOUR CHILD'S PHOTO**


To personalize your child's XO experience, take a photo by touching the **Take Photo** camera icon. Touch the **Take Photo** camera icon to first preview the photo, and then touch the icon again to capture the photo.

Touch the **Switch Camera** icon to switch between the Front and the Rear Camera. Once you have taken the photo touch **OK**.

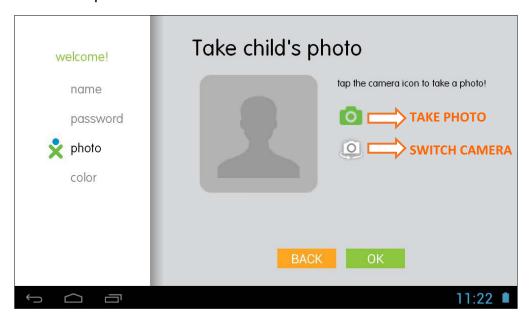

#### **STEP 6: CHOOSE COLOR COMBINATION**


Touch a color combination to select the XO user icon colors for your child and then touch **DONE** to complete the XO setup.

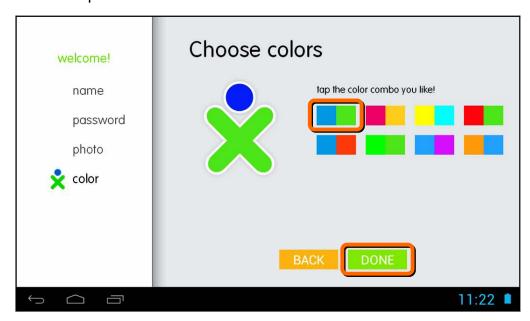

#### **SETUP COMPLETE: WELCOME TO YOUR XO TABLET!**

Once you have finished defining your child's settings, the Initial Setup is complete and you will enter the Dreams Home Screen.

Congratulations! You now have a tablet that is the ultimate in flexibility, accessibility, and control as you guide your child through the journey of exploring their dreams and changing the world.

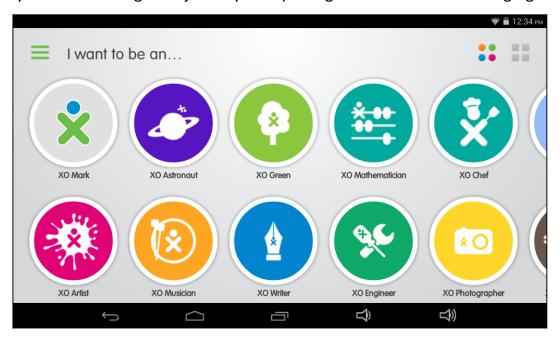

# WiFi Connection


To see available networks and to turn WiFi ON or OFF follow these steps:

#### **STEP 1: ACCESS TABLET SETTINGS**

- 1. Slide down the Window Shade from the top right.
- 2. The Android options appear. Touch the **Settings** option icon.
- 3. You will be prompted to enter your Parent Password in order to continue to the Settings screen.

#### **STEP 2: SELECT WIFI NETWORK**

To activate WiFi if it has been turned off, touch the OFF button to switch the WiFi option to ON.
 *Note*: When WiFi is already ON and you would like to disable it, then touch the ON button to switch the WiFi option to OFF.

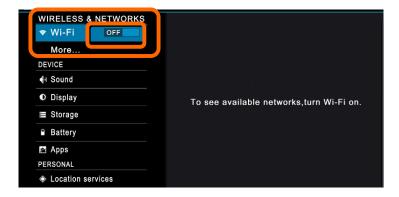


2. Once Wifi is selected as ON, the available networks are listed on the right. Touch one of the networks listed to connect.

*Note*: If the network is protected, you will be prompted to enter a password to the network. If so, enter the password and touch **Connect**.



3. Once connected, the WiFi connected icon appears in the top status bar and indicates the strength of the WiFi.

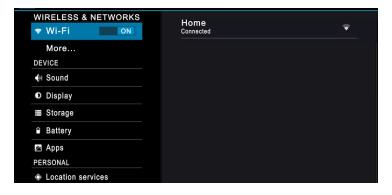

# Bluetooth

Set the Bluetooth status, search for Bluetooth devices, as well as modify Bluetooth name.


# Home Screen

Once you have completed the Initial Setup the Dreams Home Screen appears. The orientation of the display screen rotates with the tablet as you turn it.






**Landscape Orientation** 

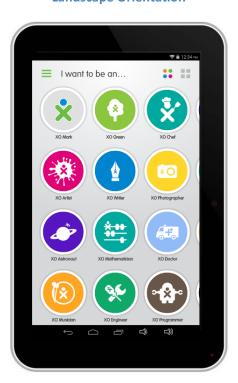

#### **INTERFACE**

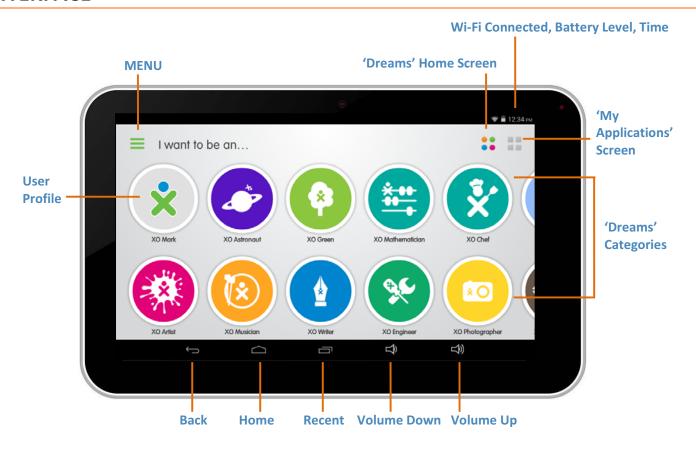

## **Dreams**

Children dream about their future and what they would like to be when they grow up. The Dreams Categories are based on these dreams.

The Dream Categories include:

XO DOCTOR, XO WRITER, XO MATHEMATICIAN, XO SCIENTIST, XO ATHLETE, XO ARTIST, XO MUSICIAN, XO ENGINEER, XO ASTRONAUT, XO GREEN, XO PROGRAMMER, XO PHOTOGRAPHER, XO CHEF, XO TRAVELER, AND XO TEACHER

*Note*: To view the Dreams on the next Dreams Home screen, touch the screen and slide your finger to the right/left.

#### **SELECT A DREAM**

Touch a Dream Category to view the Dream elements.

For example, from the Home Screen touch the **XO Artist** dream icon to open the 'Artist Dream'.



Each Dream Category includes the following information: APPS, HERO, BOOKS

#### **APPS:**


A selection of apps appears divided by 'Beginner', 'Intermediate' and 'Advanced' levels to give the child maximum freedom to discover and explore in a safe environment with no limitation. Touch an app to select and launch it.

#### **HERO:**

Under each dream you will find a Hero - the person that best represents that category.

#### Hero's Biography:

Touch the **Hero's photo** to read his/her bio.

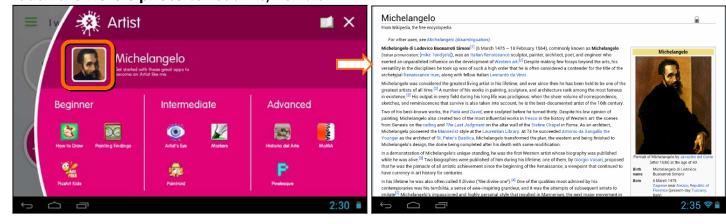

#### **Personalizing Your Hero:**

A hero can be changed by opening a Dream, and touching the Dream's current **Hero's name**. A series of fields for the Hero's first name, last name, and a web page URL describing the hero are then shown in place of the default information. Touch the generic picture icon to take a picture of your Hero using the rear-facing tablet camera, and touch it again to save the photo.

Touch the reset button if you'd like to restore the original, default Hero or touch the checkmark icon to save your new Hero information.



#### **BOOKS:**

Touch the **Book** icon to view a selection of books that are relevant to the chosen Dream. Touch a book to open and begin reading.


*Note*: To exit the selected Dream Category at any time and return to the Dream Home Screen, press the **X** button on the top right.

# Menu Options

Touch the **Menu Bar** icon on the top left of the Dreams Home screen to view the following menu options:

CURRENT USER PROFILE; ACCESS TO YOUR BOOKS, MUSIC, VIDEOS, INTERNET and WIFI; LANGUAGE SELECTION; PARENTAL CONTROLS

Note: To exit the Menu Bar, touch Close.

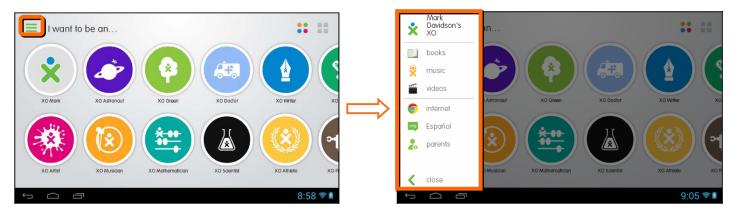

## LANGUAGE SELECTION - ENGLISH/SPANISH


Your XO tablet comes with full content in both English and Spanish. All of the Dreams offer their apps, books, games, videos and other content in both languages with just a touch of an icon.

#### **SWITCH FROM ENGLISH TO SPANISH:**

Touch the **Menu Bar** icon ≡ to open the Menu options, and then touch the **Español** icon español. All XO tablet screens automatically switch to Spanish.

#### **SWITCH FROM SPANISH TO ENGLISH:**


When you are viewing the XO Tablet in Spanish and would like to switch back to English: Touch the **Menu Bar** icon to open the Menu options, then touch the **English** icon english. All XO tablet screens automatically switch to English.

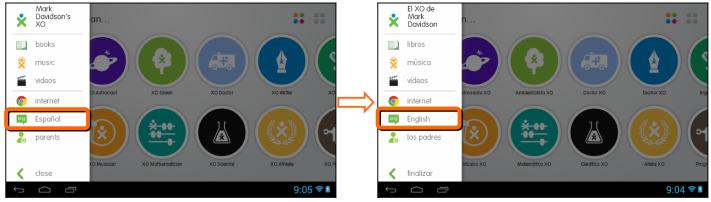

#### PARENTAL CONTROLS

The XO Tablet allows you to set up password protected user privileges for multiple users and to limit access to the Internet, app store purchases and talk and chat features. As your child matures, these privileges can be changed.

Tablets are always a family device shared by children, parents and even grandparents. The XO Tablet is the perfect solution—a full-fledged Android tablet with Google Play™ for older users and the educational tablet with its own app store for children. Press one icon and the tablet changes to match the user. You can set controls to limit child access to the Android version.

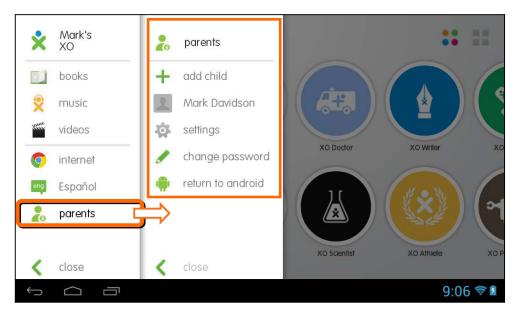

To access the Parental Controls:

- 1. Touch the **Menu Bar** icon.
- 2. Touch the **a** parents icon.
- 3. Enter your Parent Password.

The following menu options appear:

ADD CHILD, CHILD PROFILE {Child's Name}, SETTINGS, CHANGE PARENT PASSWORD, RETURN TO ANDROID

## + ADD CHILD:

Touch the **Menu Bar** icon  $\equiv$  to open the Menu options, then touch the **parents** icon  $\stackrel{2}{\sim}$  to open the Parental Control menu options.

Remember: You will need to enter the Parent Password to continue.


Touch + add child to add another child to the list of users. Follow the steps as prompted to add the child's name, password, photo, XO icon color.

*Note*: The names of each child appear in the Menu > Parents list.

## CHILD PROFILE (S) – PROTECTION CONTROL:

Set up password protected user privileges for each child.

From the Parents menu, touch one of the child profiles that you have created in order to control the child's access to Tablet apps, Internet, Google Play™ and Google Talk. The child's profile can also be edited or removed.

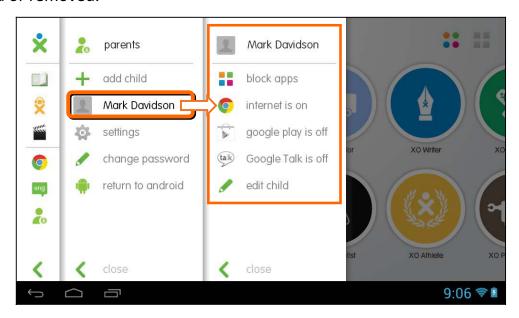

### SETTINGS:


From the Parents menu, touch the **Settings** icon to view the General XO Home settings, Software Updater and About.

## **CHANGE PARENT PASSWORD:**

Select the *✓* **Change Parent Password** option to change your password (up to 6 characters).

## RETURN TO ANDROID:


Touch • Return to Android to automatically exit the XO Tablet Mode and enter the Android Mode.

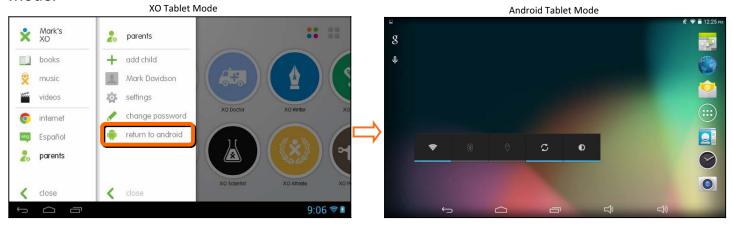

#### Viewing Your Apps and Creating App Shortcuts in the Android Mode:

#### 1. View Your Apps:

Touch the Android **Apps** icon to view the Apps screen that includes all the tablet's available apps.

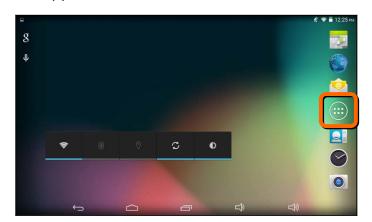



#### 2. <u>Create an App Shortcut:</u>

To add an app from your Apps screen to your Home screen as an app shortcut, touch and hold the selected app from the apps screen until it appears on the Home screen. This allows you to easily and quickly access your favorite apps.

To move the app shortcut to a different Home screen, touch and hold the shortcut while you drag it to another screen.





#### 3. Delete and App Shortcut:


To delete an app shortcut from a Home screen, touch and hold the app shortcut until and 'X' text appears on the top of the screen. Then drag the shortcut to the 'X' and the shortcut will be removed from the Home screen.

*Note*: To return from Android Mode to your XO Tablet Mode:

- Touch the Home icon.
- Alternatively, open the apps screen and locate and then touch the XO Home app icon.

#### **CURRENT USER PROFILE**

At the top of the Menu Bar the current User's Name and XO Icon are displayed. This allows you quick access to editing the User Profile details.

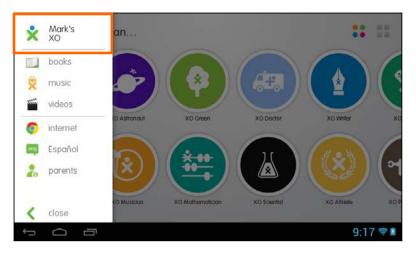

#### **CURRENT USER'S NAME:**

Touch the User's Name to edit the child's name, password, photo, or XO icon color combination.

#### **CURRENT USER'S XO ICON:**

Touch the User's **XO Icon** to change the user interface colors. Each time you tap the icon, the background colors change.

## ACCESS TO YOUR BOOKS, MUSIC, VIDEOS, AND INTERNET


Touch the Books, Music, and Videos icons from the Menu Bar to access the respective media libraries on your tablet.

Touch the **Internet** icon from the Menu Bar to access the Internet. Please note: WiFi connection is required to access the Internet.



# Customized Dream: User's Profile

The current User appears as the first Dream icon on the top left within the Dreams Home screen.

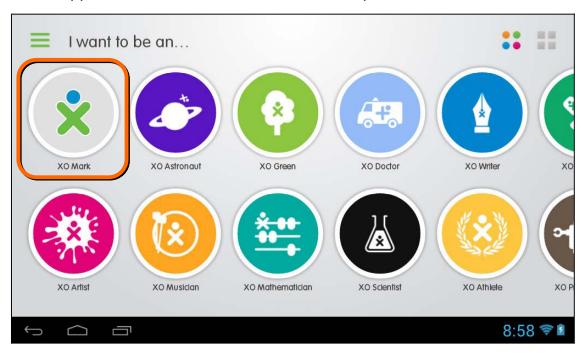

Touch this customized User Profile icon to view the following options: XO Usage, Intelligences Assessment, My Files, Books, Digital Passport, About Tablet




*Note*: Touch the **X** icon, located on the top right, to exit the Customized Dream User Profile.

#### **XO USAGE**

To improve child learning is to help you to more actively participate and guide your child's tablet usage. The XO Tablet comes with three dashboards to help you better understand you children's intellectual development. One dashboard captures usage in terms of the famous Gardner Learning Styles, another shows which dreams are the most popular and the third shows usage by type of content—apps, games, and books. How your child learns comes alive in the dashboards.


Touch **XO Usage** to open the display for all Dreams and the number of times per day applications in each category are launched.

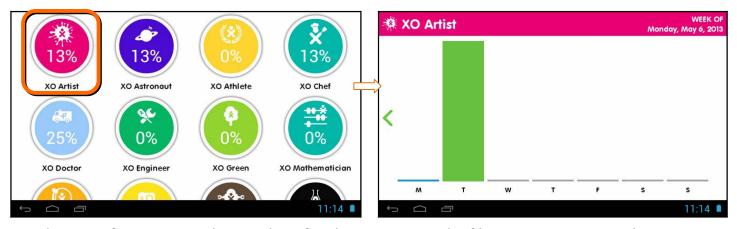

Touch a specific Dream to show a chart for the current week of how many times applications in that Dream have been launched per day. You can select prior weeks as well.

#### MULTIPLE INTELLIGENCES ASSESSMENT

Touch the **User's picture** in the XO {Child's Name} Dream offers a multiple intelligences assessment for your child.

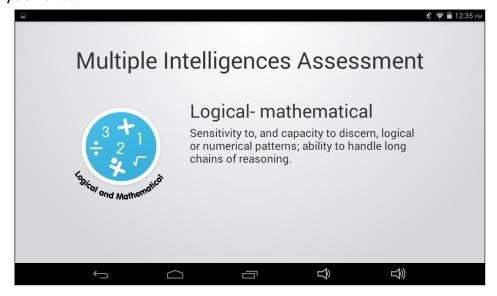


#### **MY FILES**

Touch **My Files** to display a directory of all files stored on your Tablet.
This includes music, videos, photos as well as various types of document files.



### **BOOKS**

Touch **Books** to view your entire library. Touch a book cover or book title to select and open the book.

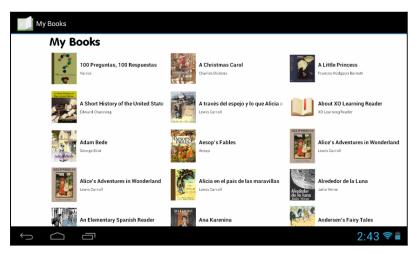

Free Nook Account: To view books, you must first sign in or open a new account to the Nook Books application.

To access the Nook application: Enter the Android Mode. Enter the Apps screen and select the **NOOK** application. Follow the prompts to 'Sign In' to your existing account or 'Get Started' with a new account.

#### **DIGITAL PASSPORT CE:**

Digital Passport is an application which teaches proper online Internet safety and similar topics. Touch the **Digital Passport** icon to launch the app.




## **ABOUT TABLET**

The About Tablet options displays the XO Tablet's information such as Serial Number, Version Numbers, and Legal Information.

## Unlock: XO Tablet Mode and Android Mode

Your XO Tablet includes a Sleep Mode that locks your Tablet. The Tablet automatically enters Sleep Mode (the screen turns black) after it has been inactive for a period of time or if you short press the Power button you then manually place your Tablet into Sleep Mode.

Once your Tablet is activated from Sleep Mode by pressing the Power button, the Tablet Lock Screen appears. In order to unlock and continue using your XO Tablet you will need to unlock it. There are two options that appear on the Lock Screen: (1) Enter the XO Tablet Mode Dream Home Screen according to the selected User or (2) Enter the Android Mode.

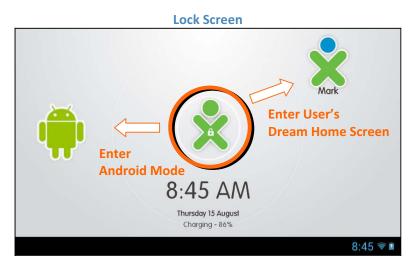


#### **ENTER XO TABLET MODE – USER'S DREAMS HOME SCREEN**

Touch and drag the **Locked XO Icon** in the middle of the screen towards the **User's XO Icon** you wish to use. Enter the User's password (if needed) to unlock and enter the Dreams Home screen. All settings appear as per what was defined for that specific User.

#### **MULTIPLE USER UNLOCK**

The XO Tablet offers multiple profiles so that each of your children can enjoy their own customized settings and apps.

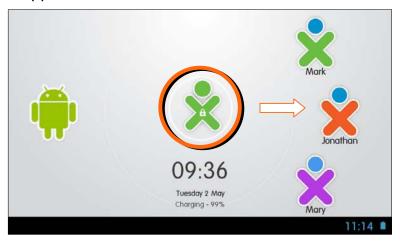


To unlock the XO Tablet when there are multiple users, the Unlock Screen appears with the icon and name of each User.

Touch and drag the **Locked XO Icon** in the middle of the screen towards the **User's XO Icon** you wish to use. Enter the User's password (if needed) to unlock and enter the Dreams Home screen. All settings remain as per what was defined for that specific User.

To see the additional children when the tablet has four or more child users, scroll up or down within the arc of the visible three users until the user's icon you need is shown, then touch and drag the locked XO icon toward to it.

#### ANDROID MODE UNLOCK

The XO Tablet offers you quick access to the Android Mode when in the Lock Screen.

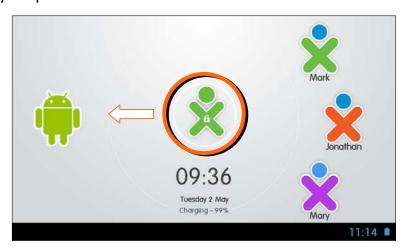

If an adult wants to use the tablet, touch and drag the **Locked XO Icon** in the middle of the screen towards the **Android** logo on the left to enter the Android Mode.

You will be prompted each time to enter the Parent Password to unlock the standard Android Mode of the tablet.

Remember: You can also access the Android Mode while you are within a child's user profile.

Touch the  $\equiv$  Menu Bar > then touch the  $\stackrel{?}{\sim}$  Parents icon (enter the Parent Password when prompted) > and then touch the  $\stackrel{?}{\sim}$  Return to Android icon.

This automatically exits the XO Tablet Mode and enters the Android Mode.

If you require further assistance, please visit <a href="www.xotablet.com">www.xotablet.com</a>. For phone support in the US please call toll free 877-238-1563.

# Vivitar<sup>®</sup>

© 2014 Sakar International, Inc. All rights reserved. 195 Carter Drive Edison, NJ 08817

## Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

#### WHAT IS NOT COVERED BY WARRANTY

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

#### TO OBTAIN WARRANTY SERVICE AND TROUBLESHOOTING INFORMATION:

Call 877-238-1563 in the U.S. or 0-800-917-4831 in the UK or Visit our website at www.xotablet.com .

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- --Reorient or relocate the receiving antenna.
- --Increase the separation between the equipment and receiver.
- --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- --Consult the dealer or an experienced radio/TV technician for help.

#### **FCC Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### CANADIAN COMPLIANCE STATEMENT

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

#### **EU COMPLIANCE STATEMENT**

Sakar International Inc. hereby declares that this wireless device is in compliance with the essential requirements and other relevant provisions of the R&TTE and EMF Directive.

## **FAQ**

#### Q: Why isn't my tablet turning on?

A: Before using your tablet, it is necessary to charge its internal battery using the included charger. For best results, give your tablet an extended overnight charge before using it for the first time.

#### Q: I am having difficulties connecting to the internet. What should I do?

A: In order to access the Internet using your tablet, you will need to connect to the nearest Wi-Fi network. Note that some networks require you to enter a password. Talk to the network administrator of that Wi-Fi network for password information. Consult the full User's Manual of your device for precise information on connecting to Wi-Fi. Unfortunately, if your device is out of the range of any nearby networks you will not be able to access any online features.

#### Q: I am having issues with an app which I have downloaded. What should I do?

A: For support on any third party apps, software or accessories, you will need to contact the company, the software developer or manufacturer for support.

#### Q: Where can I find more information about my device?

A: For more information about your XO Tablet please go to the following website: <a href="http://xotablet.com/">http://xotablet.com/</a>

#### NOTE:

Specifications and designs are based on the latest information available at the time of printing and subject to change without notice.

Please refer to the online Help/Instruction Manual for the most current information.

©2014 Sakar International, Inc. All rights reserved.