

# USER MANUAL

BLD-7412BT

FCC ID: 2AHR7- BLD-7412BT



FM  
RADIO  
TUNER

USB

SD



BT

## Remote control that

 


1. POWER: Power on/off switch.
2. MODE: Press this button to select between USB, SD, FM, Bluetooth mode.
3. MUTE: Mute the volume.
4. EQ: Equalizer switch.
5. CH+: Press this button to next channel.
6. V-: Press this button to reduce the volume.
7. ↶: Press this button to back.
8. ⏸: Play/Pause switch.
9. V+: Press this button to increase the volume.
10. CH-: Press this button to a channel.
11. 0-100+: Number 0-100+ , and to Select any channel.

## Remote control us precautions

1. Under normal circumstances, the remote control should be received in the remote window of about 6 meters, 30 range.
2. Operate the remote control, remote control receiver window of the remote control at the amplifier, remote control and the amplifier should not be an obstacle
3. If the remote receiver is in the position of the remote control directly receive strong light may not be valid. In this case, place the subwoofer away in order.
4. Avoid mixing old and new batteries use, regularly check whether the battery need be changed


# DVD REMOTE CONTROL

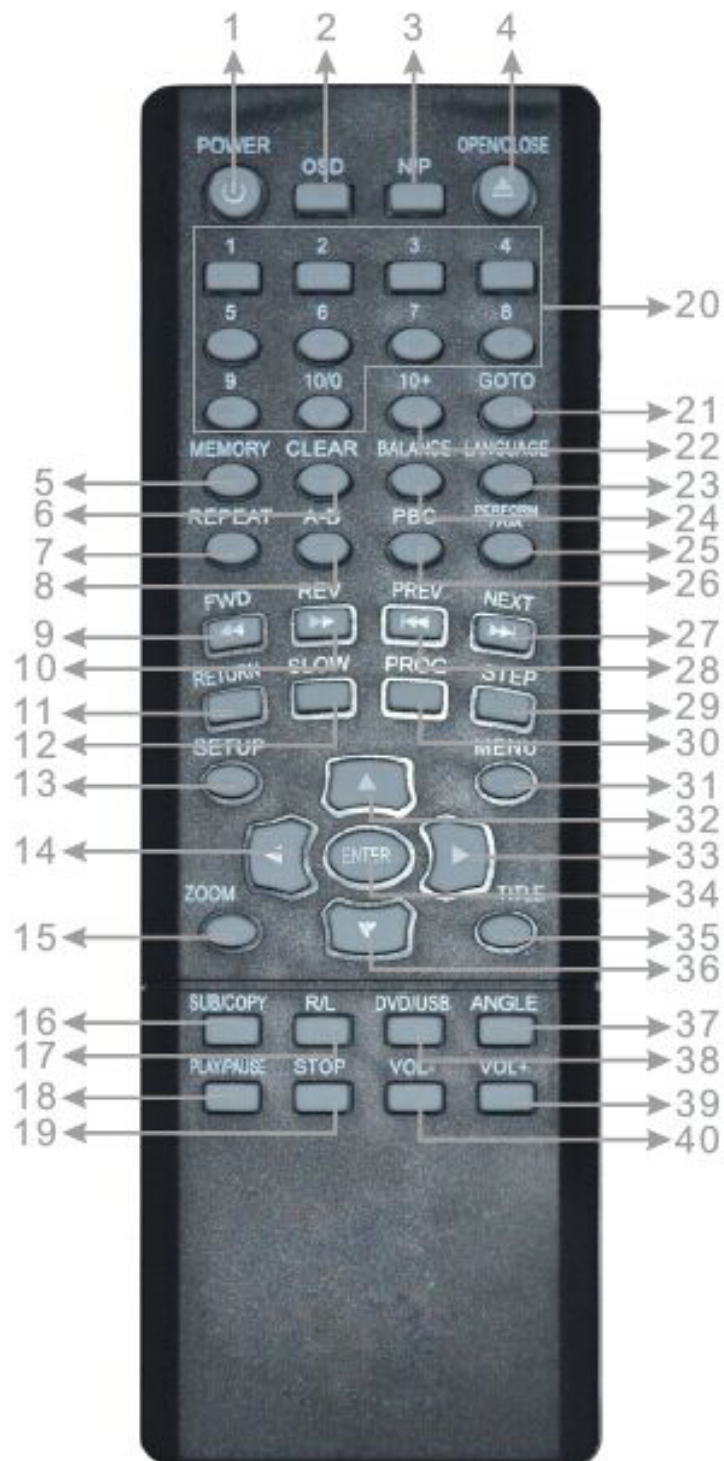

## DVD REMOTE CONTROL


1. POWER: Power on/off switch.
2. OSD: Display the disc play back information.
- 3.N/P: To switch the standard between ntsc pal and audio.
- 4.OPEN/CLOSE: To open or close the DVD.
- 5.MEMORY: To memory what you choose.
- 6.CLEAR: To delete the memory.
- 7.REPEAT: Repeat the current broadcast.
- 8.A-B: To repeat the playing track of A to B.
- 9.FWD: To fast forward.
- 10.REV: To fast backward.
- 11.RETURN: Back to menu.
- 12.SLOW: To slow the current screen.
- 13.SETUP: To enter DVD main menu setting.
14. ◀ : Left direction key.
- 15.ZOOM: Enlarge or lessen the picture.
- 16.SUB/COPY: To show the subtitles.
- 17.R/L: To enter adjust angle.
- 18.PLAY/PAUSE: Press to pause and play.
- 19.STOP: Stop the playing video or back to the menu.
- 20.1-10: Number 1-10, and to select 1-10 channel.
- 21.GOTO: Select the time.
- 22.10+: Number 10+ ,and to select any channel.
- 23.LANGUAGE: Select the language.
- 24.BALANCE: EQ function.
- 25.PERFORM/VGA: VGA output.
- 26.PBC: To play back control.
- 27.NEXT: To select the next track.
- 28.PREV: To select the previous track.
- 29.STEP: To single-frame playback of the current screen.
- 30.PROG: Programming.
- 31.MENU: To open or close DVD menu.
32. ▲ : Up direction key.
33. ▶ : Right direction key.
- 34.ENTER: To scan ,choose and confirm on menu.
- 35.TITLE: To enter title play.
36. ▼ : Down direction key.
- 37.ANGLE: Adjust display Angle.
- 38.DVD/USB: To switch the mode between DVD and USB.
- 39.VOL+: To increase the volume.
- 40.VOL-: To reduce the volume.
 
## Back Panel

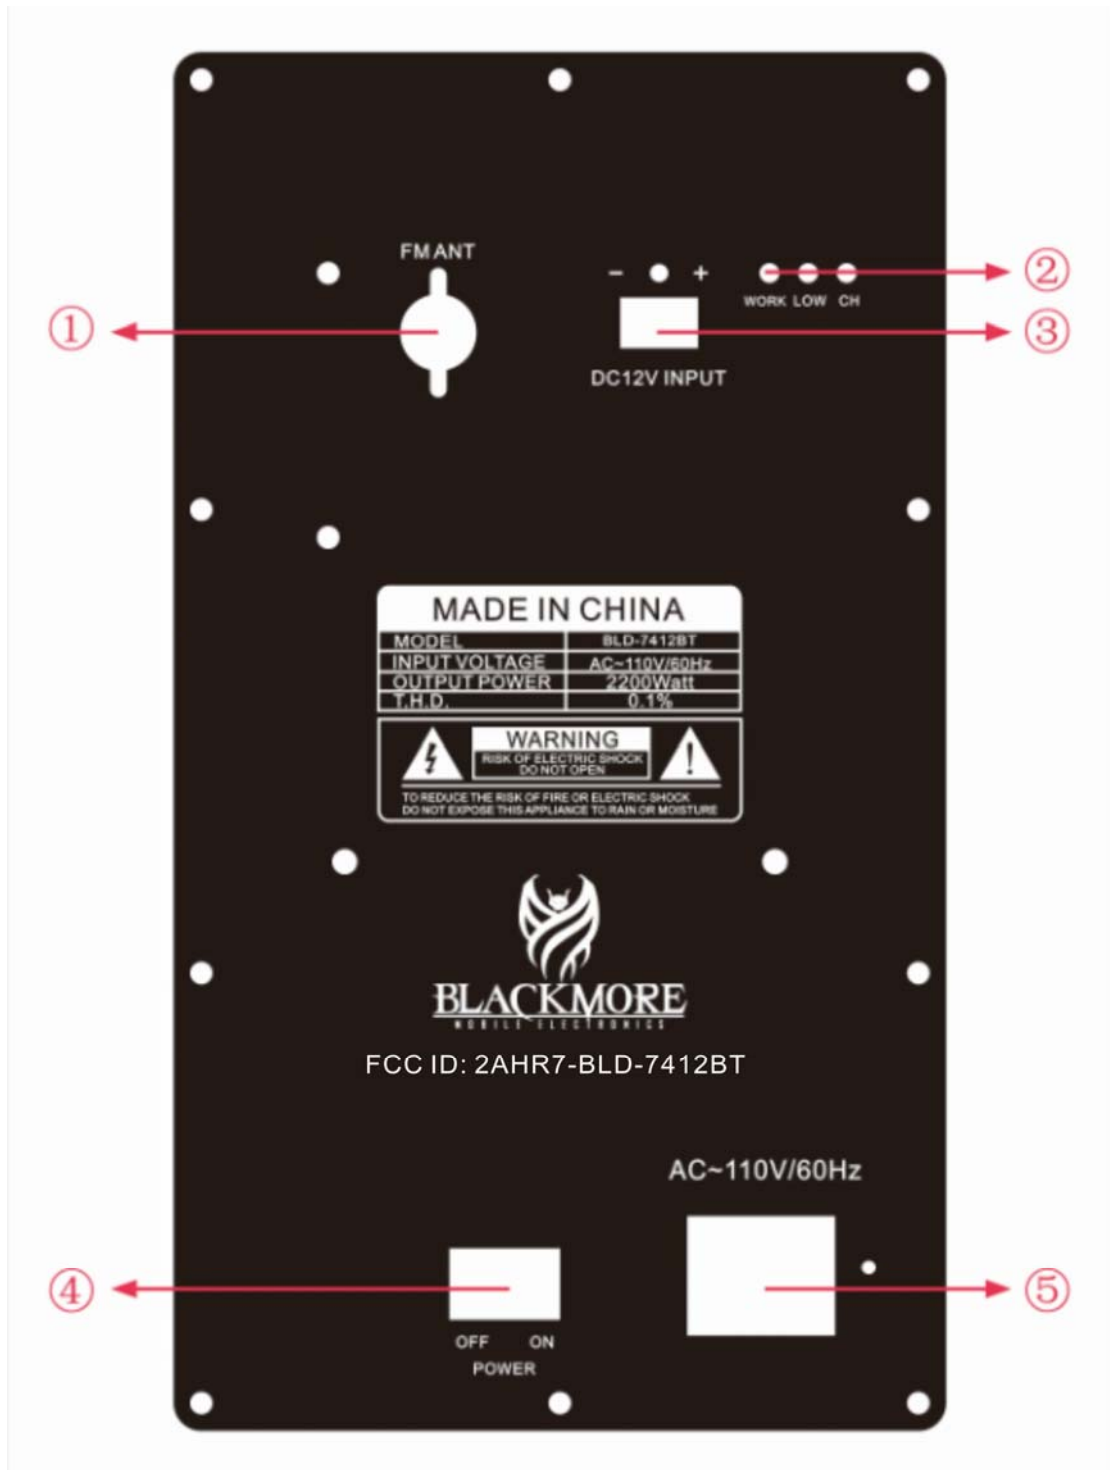


- 1.FM antenna
- 2.Power indicator light
- 3.Connect to DC power, please be sure connect
- 4.Switch ON/OFF
- 5.Connect to AC power, please be sure connect

## DVD Panel

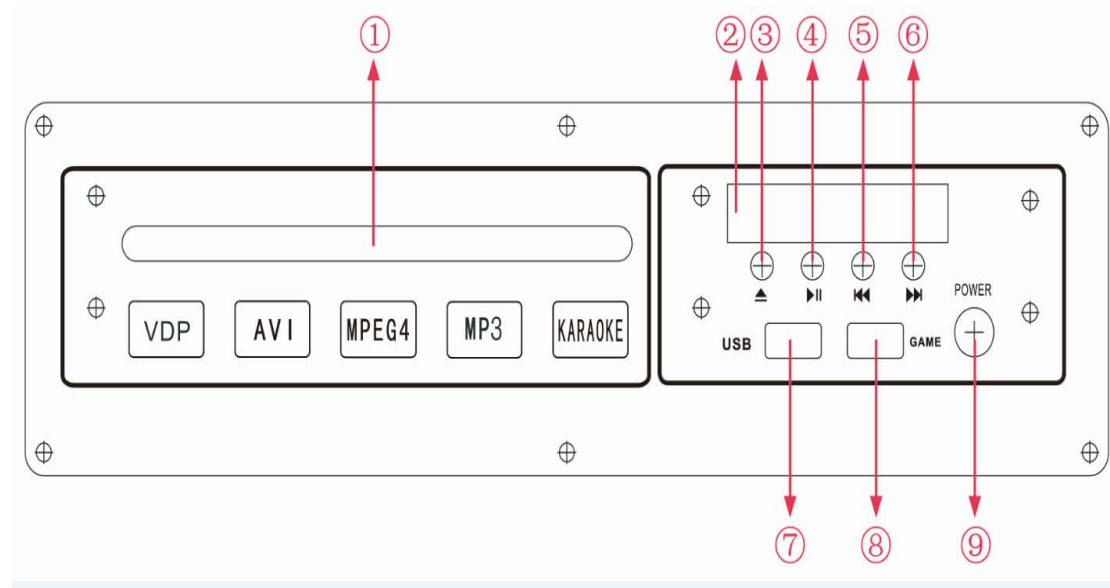 

- (1) **DVD: DVD slot**
- (2) **Screen**
- (3) **Press this button to enter DVD open, press again to enter DVD close**
- (4) **Press this button to enter pause , press again to enter play**
- (5) **Press this button to select the previous channel**
- (6) **Press this button to select the next channel**
- (7) **USB: Put USB into the slot**
- (8) **GAME: Put game into the slot**
- (9) **POWER: Power on/off switch**

## Front Panel

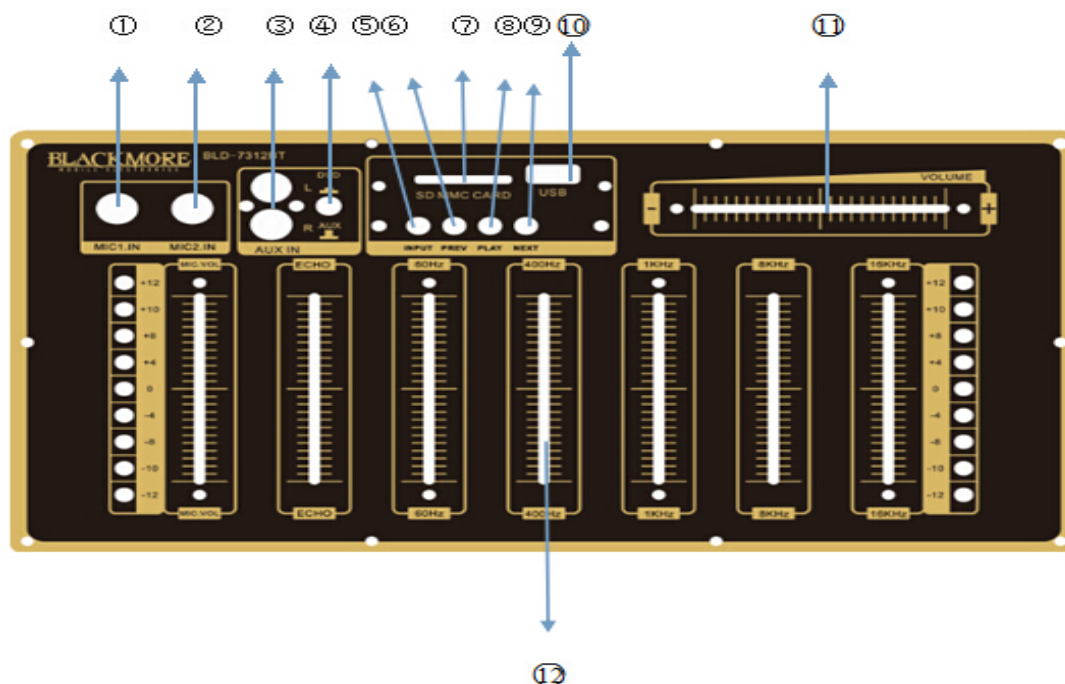 

- 1.Connect with wire microphone
- 2.Connect with wire microphone
- 3.AUX input
- 4.VDP/AUX switch
- 5.Input: Press this button to enter BT mode, press again to enter other modes
- 6.PREV: Press this button to select the previous channel
- 7.SD/MMC CARD: Put SD card into the slot( Max up to 16GB)
- 8.PLAY
- 9.NEXT: Press this button to select the next channel
- 10.USB: is the mode of USB flash
- 11.Adjust the volume of the whole unit
- 12.EQ

NOTE: this unit only plays MP3 and WMA files from SD/MMC/USB. Do not connect your computer to this USB port

## HOW TO USE BT

1. Press mode key and choose BT mode, BT indicator on front panel will flashing and speaker sound occurs short bleeping
2. Open the BT of your phone or pad, after searching then connect with matched model BLD-7412BT

 


## How TO USE WIRELESS MICROPHONE

1. When using included wireless Microphone, switch on microphone, make sure unit power is on.
2. Microphone is designed to be used together with this unit only.
3. Wireless microphone uses AA ” \*2 batteries (not included), make sure batteries are charged.
4. Wireless MIC Antenna to be used for better reception of wireless microphone while using karaoke.
5. The wireless microphone operating range is 210.3MHz, and the MAX transmitted power is 10mW.

## IMPORTANT SAFETY INSTRUCTION

Please read this user manual carefully before you use the product. Please reserve it properly for the reference in the future.

Please do not expose the unit in the raining or moist environment to avoid fire hazard or electric shock

	Caution: Pleaser do not open the unit to avoid fire hazard or electric shock. The corresponding repairs should be done by professional person.
	This mark warns the user that there is the High Voltage, please prevent from electronic shock.
	This mark warns the user that there are some important instructions for the Operation and the Maintaining attached to the unit.

Caution: Please do not expose the unit in the raining or moist environment to avoid fire hazard or electric shock. The corresponding repairs should be done by professional person

This mark warns the user that there is the high voltage, please prevent from electronic shock

This mark warns the user that there are some important instructions for the operation and the maintaining attached to the unit .

## PROTECTION OF POWER CORD

- 1.Hold the plug well when you plug the power cord in or out
- 2.Please do not put the AC power cord near any heat source equipment
- 3.Please do not place any heavy objects on the AC power cord
- 4.Please do not overhaul the AC power cord

## PLACEMENT AND MANITAIN FOR THE UNIT

1. Please do not put the unit in a sealed place or the cover something onto the unit, to



- avoid the unit damaged by its inside temperature's abrupt rising
2. Please do not expose the unit under the sunshine directly or place it near the heat source equipment's
  3. Please do not place any container with water or fine liquid. If there is any liquid in ,please plug out the power cord and contact with the professional repair
  4. Please do not open the unit to contact the inside components, otherwise it may cause electric shock or unit damage. If need any repairs or adjustment, please provide this unit to the professional person
  5. Please put the unit on the horizontal surface, please do not put any heavy object on the unit
  6. Do not put our fingers or other objects into the unit
  7. Please do not repair the speaker system by yourself
  8. Because of the machine with a built-in battery to supply power , when the machine don't work ( Screen is bright , but without voice ; or small voice , distortion , or low pressure indication light is work ) , it means the battery power is not enough and it need to rechargeable at once .

## **MAIN CHARACTERISTICS**

With USB 2.0 Slot& SD card Slot. The unit can read information from USB,SD, quickly

With FM function, FM antenna

With EQ and Remote Control

With Bluetooth and wireless MIC

With AUX input and Display

With high watts power , P.M.P.O

With rechargeable Battery

PMPO WATT: 2200W

Impedance:4 Ω

Separation:≥48dB

Signal to Noise ratio:≥72dB

Frequency Response:20Hz-20kHz

Inputs:

Microphone

AUX-in

Power Source:AC~110V/60Hz DC 12V

Installed Handle Wheel Easy For Carry

The instruction are only for reference, the company will reserve the right to modify the specifications in this document without any prior notification

## **USEFUL TIPS**

In order to extend the local machine life, the switch time between machines turn on and off must be more than 30 seconds

Turn off the power after using

The use of power should correspond with the mark Voltage Values , otherwise it will not play

If appear contingent dead halt, please restart the machine

### **FCC STATEMENT :**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B

digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body