

B) Unpacking your DSR2800 C/I Receiver

Contents of package:

- * DSR2800 C/I Receiver
- * DSR2800 C/I Installation and operating manual
- * Remote control
- * Batteries for your remote control
- * Connection cables

If any of these parts is missing or damaged, do not start installing the Receiver. In this case, contact your dealer, who will replace the defective or missing parts.

C) Connecting the DSR2800 C/I to your TV system

Ensure that the Dish and coaxial cable are properly connected before you connect the Receiver.

i) Position of Receiver

- * The position of your Receiver should be chosen so that the coaxial cable to your antenna can be kept as short as possible.
- * The Receiver must be well ventilated at the rear. It must therefore not be in a closed cabinet, because this may cause heat damage!
- * Similarly, no other electronic equipment must stand on your Receiver - it may cause overheating!
- * The Receiver should be put in a safe place (think about your pets if any), where protection from direct sunshine and humidity is ensured

(ii) Connecting the coaxial cable

When you connect the coaxial cable (to IN FROM DISH), ensure that the Receiver is not connected to the mains!

Then screw the coaxial cable - coming from your satellite system - to the IN FROM DISH terminal on the rear of the Receiver. Note that the connection must only be hand-tight (do not use a screwdriver!) and the cable must not be under tension.

(iii) Connecting the DSR2800 C/I to your TV

The Receiver must now be connected to the TV by RCA cable. Connect one end of the cable to the TV OUT socket on the rear of your Receiver, and the other end to the corresponding socket on your TV. This is probably marked with R L V (TV / VCR). It is advisable to read the operating instructions of your TV. By plugging one end into the TV socket on the rear of the Receiver and the other end into the corresponding socket on your TV.

(iv) Connecting the Receiver to a hi-fi system

If you want to connect your hi-fi stereo system to the Receiver, to obtain a better sound quality, proceed as follows:

Plug one end of the RCA stereo cable into the AUDIO R and AUDIO L sockets on the rear of your Receiver, and the other two ends into the corresponding terminals on the rear of your hi-fi system.

(v) Connecting your Digital Receiver to an analogue receiver

With another coaxial cable, connect the LOOP socket on the rear of your DSR2800 C/I to the IF IN socket on the rear of your analog receiver.

PART 2 Using the OSD menu

D) Main menu

Switch your Receiver on using the red 'Power ON' button.

MENU ⇨ Main menu appears

Main Menu
Channel List
Program Guide
User Setup
System Setup
Channel Installation
Common Interface

D1) Channel List

MENU ⇨ Main menu appears

Channel List ⇨ Channel List menu appears

Channel List
TV List
Radio List
Channel Organize
Delete Channel
Move Channel

D1-1) TV List / Radio List

TV CHANNEL menu appears 'F' stands for FREE CHANNEL, 'S' stands for SCRAMBLED CHANNEL).

		TV List
001DWtv	F	
002MCM	F	
003 RAI	F	
004TVE	F	

D1-2) Channel Organize

D1-2-1) Delete Channel

To Delete channel, Select 'Delete Channel' menu And put the PIN code .(default 0000)

Please Enter PIN Code

To delete channel which you want to, use ▲ ▼ key and press 'SELECT' button, and then the message "Do you want to delete the selected channel?" will appear. If you really want to, select 'Yes' menu.

To select TV or Radio section, use 'ALT' button

TV Total:4		Radio Total:17	
		001 DW1	F
002MCM	F	002 DW2	F
003 RAI	F	003 YLE	F
004TVE	F	004WRN	F

D1-2-2) Move Channel

This menu will be needed to change the number of selected channel. This menu needs PIN code.

After Putting PIN code, select a channel and Press 'SELECT' button. Then The message "Press 0-9KEY to move the Channel" will show up. And put the number you want.(EX. 003).

TV Total:4		Radio Total:17	
		001 DW1	F
002MCM	F	002 DW2	F
003 RAI	F	003 YLE	F
004TVE	F	004WRN	F

D2) Program Guide

MENU ⇨ Main menu appears

Program Guide ⇨ Program Guide menu appears.

Program Guide			
Mon	Jan	01	1990 12:18 A.M
Mon	Jan	01	12:00 A.M 12:30 A.M
TV 004	No Information		
RAI Internat			

D3) User Setup

MENU ⇨ Main menu appears.

User Setup ⇨ After PIN code Check,
User Setup menu appears.

Please Enter PIN
Code

User Setup
Channel Lock
Change PIN
Favorite Channel
Power-up Channel

D3-1) Channel Lock

This option makes it possible to protect certain channels from unauthorised access by entering a four-digit PIN code. Only the master PIN user has unrestricted access to all programming and

TV Total:4		Radio Total:17	
		001 DW1	F
002MCM	F	002 DW2	F
003 RAI	F	003 YLE	F
004TVE	F	004WRN	F

control functions of the Receiver.

To lock the selected channel, Press 'SELECT' button,

To unlock the Channel, Press again 'SELECT' button.

Locked channel shows '✓' left side of the list.

D3-2) Change PIN

The preset master PIN code is '0000'. If you change it, be sure to memorise the new number or – even better - note it down and keep it safely. If problems nevertheless occur, contact your nearest specialist dealer.

To Change PIN code, Put the old PIN code,
and Put the new PIN code, And confirm new code.

Change PIN	
Use Key :0~9	
Old :	
New	
Confirm	

D3-3) Favorite Channel

Making a favourite list

The DSR2800 C/I software system can easily be programed to meet your TV and music needs. Favourite lists are one way of doing this. They give you the ability to find channels which are particularly interesting to you or your children quickly and easily, and avoid continually jumping over the other channels.

Advantages of making favourite lists:

*simpler, selective channel guidance means that you can find your preferred channels more easily and faster.

*by pressing the FAV button, you can switch directly between your favourite channels, without having to jump over other channels.

Using the cursor (▲ and ▼) and 'SELECT', make a favorite channel list which you want to create.

To remove a channel from the list to be stored. use the cursor and 'SELECT' button again.

You can then page through the list using the arrow keys (cursor).

Favorite Channel			
✓ 001DWtv	F	001 DW1	F
✓ 002 MCM	F	002 DW2	F
003 RAI	F	003 YLE	F
004 TVE	F	004 WRN	F
Channel Total :24			