


1 POWER ON/OFF

Press POWER Button to turn ON and Press POWER Button for 2-3 seconds to turn OFF.

2 TS(Trusurround)

When pressing this button, there are three modes available;Choose one of three.
NORMAL → SRS 3D Surround → TS(TRUSRROUND)

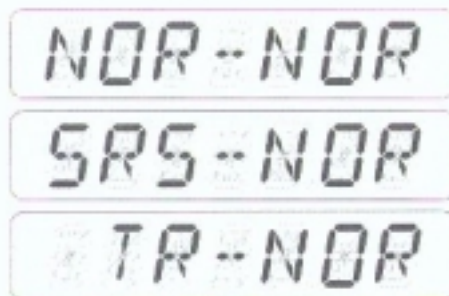

3EQ(Equalizer)

When pressing this button, there are four modes available, Choose one of four.

NORMAL (FLAT) → ROCK → POP → CLASSIC

SYSTEM Status on default (TS - EQ)



4AUTO SCAN

Auto Scan Function

When pressing Auto Scan button, it will provide automatic search and save up to 30 different FM station bands. Every each save station band will hear for 3 seconds and remains at last save station.

NOTE

When Auto Scan function is finished, all other functions are not able to work properly except the seek function. By using seek button to stop automatic scan function, it will be erase all the save stations.

5STEREO/MONO


Stereo/Mono

While listening from FM radio, user is able to change mode to Stereo or Mono.

6MEMORY/LOADING

A. Loading the saved Tuner Frequency

B. When using the SAVE function, use the M+ key to select which address to save.

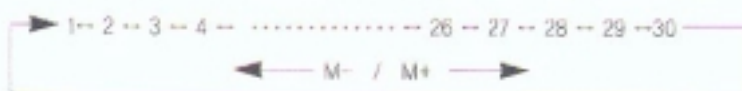

⑦ SOURCE BUTTON

By selecting the SOURCE key there will be three options as listed below. Choose one of the three depending on what you're listening to. EXAMPLE: When using a tape recorder, make sure the display is on AUX (External Sound) mode.

Line In (PC Sound) → FM (Radio) → AUX (External Sound)

PC SOUND

FM

AUX

⑧ DSP

When pressing DSP button, the display will be change to each different features as follow

▶ HALL → SF → LIVE → CLUB → STADIUM

HALL - NOR

SF - - NOR

LIVE - NOR

CLU - NOR

STA - NOR

9 VOLUME

VOLUME UP/DOWN

Press VOLUME key (VOL) to control volume

MIN → 1 → 2 → 3 → 4 → . . . → 46 → 47 → 48 → 49 → 50 → MAX

← VOL- / VOL+ →

10 DISPLAY

Select one of six displays by pressing the DISPLAY(DISP)key

▶ Bar - Reverse bar - Force out
- Balance - Wave - Pileup-bricks

11 SEL BUTTON

- When pressing SEL button, there are four selections available as followings.
- Use the VOL+/- key to adjust the four selections available.

▶ BASS → TREBLE → BALANCE → FADER
BALANCE/FADER Control (Default Status)

■ BASS

BAS + 10 BAS - 10

■ TREBLE

TRE + 10 TRE - 10

■ BALANCE

BRL L07 BRL R07

■ FADER

FRd F07 FRd R07

NOTE

Within six seconds of inactivity, New PLATINUM will revert to the original settings of the current selection you have selected.

12 **SEEK (STEP)****SEEK >> / <<**

When pressing the SEEK button, the frequency is going up/down by each step.
For AUTO SEEK function, hold SEEK button for 2-3 seconds. This will activate the AUTO-SEEK function (on tuner mode).

13 **MUTE****MUTE**

Press the MUTE (MU) key to activate mute function and to de-activate mute function



The following status below signifies the mute function is on

14 **SAVE / CLEAR****SAVE**

The SAVE key will save up to 30 stations on memory

Select specific radio station by using SEEK function.

When you are receiving a station that you wish to commit to, PRESS "SAVE" key to activate SAVE function. Panel will blink on memory settings; PRESS M+ key to set memory number desired (1-30 memory settings), and then PRESS the SAVE key. Your selection will be saved on memory.

A. If you have a specific station that you have already selected on memory, unit will automatically address to the next available memory setting. EXAMPLE: If memory settings 1-10 are occupied, the next setting will automatically address to No. 11 on memory function.

NOTE: You can over-ride the auto memory function by pressing the SAVE key, then control memory number (1-30 memory settings) desired by using M+ Key. PRESS the SAVE key to lock in the memory number desired.

NOTE: If no selection is made within six seconds of activating the SAVE function, unit will not lock in the station desired.

NOTE: NewQ PLATINUM can only save up to 30 at memory. Any frequency saved after 30 will take on the NO.1 position on memory function.

A. To clear saved Tuner Frequency, press the SAVE key for 2-3 seconds. The VFD panel will blink "CLEAR" for approximately 3 seconds, then push the SAVE key.