

**SAMSUNG
ELECTRONICS**



Bluetooth Keyboard



SAMSUNG

English	1
---------------	---

Contents

Getting started

Your keyboard overview	4
Charging the keyboard	5

Using your keyboard

Turning the keyboard on or off	8
Pairing and connecting the keyboard	8
Key functions	11

Appendix

Specifications	14
Correct disposal of this product.....	15
Correct disposal of batteries in this product	16

Please read all Safety precautions before using your device to ensure safe and proper use.



Safety precautions



- Do not touch your device with wet hands.
- Avoid exposing your device to very cold or very hot temperatures. Extreme temperatures can cause the deformation of the device and reduce the life of your device.
- Keep your device dry. Humidity and all types of liquids may damage device parts or electronic circuits. When wet, dry your device with a towel and take it to a service centre.
- Do not use or store your device in dusty, dirty areas. Dust can cause your device to malfunction.
- Do not drop or cause an impact to your device. If bent or deformed, your device may be damaged or parts may malfunction.
- Do not disassemble, modify, or repair your device. Any changes or modifications to your device can void your manufacturer's warranty. For service, take your device to a Samsung Service Centre.
- Do not paint or put stickers on your device. Paint and stickers can clog moving parts and prevent proper operation. If you are allergic to paint or metal parts of the product, you may experience itching, eczema, or swelling of the skin. When this happens, stop using the product and consult your physician.
- When cleaning your device : Wipe your device with a towel or an eraser.
- Do not use chemicals or detergents.

- Do not use the device for anything other than its intended use.
- Do not allow children to use it as they could hurt themselves and others, damage the device.

Copyright

Copyright © 2011 Samsung Electronics

This manual is protected under international copyright laws. No part of this manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

Trademarks

- SAMSUNG, and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. More information about Bluetooth is available at www.bluetooth.com
- All other trademarks and copyrights are the property of their respective owners.

Instructional icons



 
Warning & Caution



Note

Getting started

Your keyboard overview

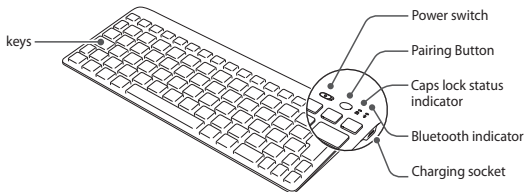

Make sure you have the following items: Bluetooth keyboard, travel adapter and user manual. The supplied items may vary.

 
Charging the keyboard

This keyboard has a rechargeable internal battery which is non-removable. Make sure the keyboard is fully charged before using it for the first time.



Use only Samsung-approved chargers. Unauthorised or Non-Samsung chargers could cause damage to the device or in extreme circumstances an explosion, it could also invalidate any warranty on the product.

1. Connect the travel adapter to the charging socket on the keyboard.
2. Plug the travel adapter in to the wall outlet. During charging, the Power indicator will turn red. If charging does not begin, unplug the travel adapter and plug it in again.
3. When the keyboard is fully charged, the power indicator light changes to blue. Unplug the charger from the wall outlet and the keyboard.

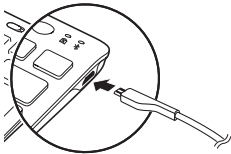



- Repeatedly charging and discharging of the keyboard, over time will cause the battery performance to diminish. This is normal for all rechargeable batteries.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug it from the outlet when not in use to avoid wasting power. The travel adapter should remain close to the socket when in use.

Checking the battery level

To check the battery level, press and hold the [Ctrl] key (located on the left corner) for 3 seconds. Depending on the battery level, the indicator flashes 5 times in one of the following colours:

Battery level	Power indicator colour
Above 80%	Blue
80 ~20%	Violet
Below 20%	Red

Using your keyboard

This section explains how to turn the keyboard on or off, pair and connect the keyboard to the other bluetooth devices, and use various functions.



- Some devices, especially those that are not tested or approved by the Bluetooth Special Interest Group (SIG), may be incompatible with your keyboard.
- Keep the distance between your keyboard and device as small as possible and avoid placing your body or other objects in the signals path.

Turning the keyboard on or off

To turn the keyboard on

Slide the Power switch on (red background covered), the blue indicator flashes 4 times.



- Turning the keyboard on for the first time, it will automatically enter pairing mode for approximately 3 minutes.
- If the keyboard enters Sleep mode when the Power switch turned on, press and hold the Pairing button for 1 second to awake it.

To turn the keyboard off

Slide the Power switch off (red background uncovered).

Pairing and connecting the keyboard

Pairing means a unique and encrypted wireless connection between two Bluetooth devices when they agree to communicate with each other.

In Pairing mode, two devices should be placed close enough.

Pairing and connecting the keyboard with a phone or tablet

1. Enter Pairing mode. (The blue indicator stays lit and stays for 3 minutes.)
 - With the keyboard turned on, press and hold the Pairing button for 3 seconds.
2. Activate the Bluetooth feature on your phone or tablet and search for the keyboard in order to pair with each other (see your phone or tablet's user manual).
3. Select the keyboard (Samsung Bluetooth Keyboard BKB-A) from the list of devices found by your phone or tablet.
4. Type in the PIN at your keyboard (*it will not show on your screen) and then press [Enter].
5. If they are connected successfully, the LED light will flash in every six seconds of interval after rapidly flashing three times. You can also check pairing states in Bluetooth settings of your phone or tablet. Once pairing is completed, the keyboard will attempt to reconnect to the last device for 10 seconds each time you turn it on.



- The power indicator will go into sleep mode after one minute of no disturbance. However, it will resume flashing once a key is pressed.
- Without charger connected, the keyboard will be turned off when bluetooth connection is not made for 3 minutes to save energy.

Reconnecting the keyboard

If the connection is lost while in use:

 
- Use the Bluetooth settings on your phone or tablet.
- Press any key on the keyboard or turn the power off and on again.

Disconnecting the keyboard






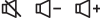


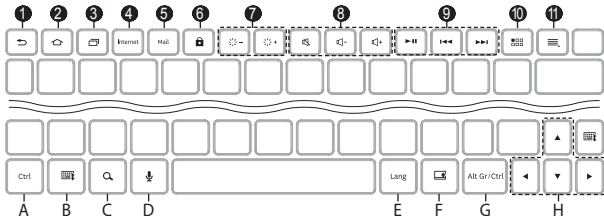

Turn off the keyboard or use the Bluetooth settings on your phone or tablet .






Key functions

Before using the keyboard, you should set the language to be used. For details how to set a language, refer to your phone or tablet's user manual.



- The functionality of some keys will depend on the software version installed on your phone or tablet. To upgrade the software on your device, please refer to its manual.
- [Alt Gr/Ctrl] key may differ depending on the regions.

①		Return to the previous screen.
②		Return to the idle screen.
③		Open the list of recent applications.
④	Internet	Launch the Web browser.
⑤	Mail	Launch the Mail account.
⑥		Turn the screen on or off.
⑦		Set the brightness of the display.
⑧		Adjust the device's volume.
⑨		While playing media files,
		Pause or resume a video, music files, or slideshows.
		Move to the previous/next file.
⑩		Display android applications.
⑪		Show android menu.

B		Hide/show the keypad on the screen.
C		Launch the Google Search; Open the search input window from any applications.
D		Launch the Voice Search.
E	Lang	Select a display language. This feature is available only when you have selected more than two languages in your devices language settings.
F		Hide/show Time, Date and Application indicator.
A / G	Ctrl / Alt Gr	Enter the character entities imprinted on the keyboard. (The characters shown may differ depending on the regions.) It can be used with shift key.
H		Move cursor or system caret; [AltGr / Ctrl] + [▲] = Page Up [AltGr / Ctrl] + [▼] = Page Down [AltGr / Ctrl] + [◀] = Home [AltGr / Ctrl] + [▶] = End ❖[Alt Gr/Ctrl] key may differ depending on the regions.

Appendix

Specifications

Item	Specifications and description
Bluetooth version	3.0
Support profile	Human Interface Device profile, Device Identification profile
Operating range	Up to 10 metres
Standby time	About 2 weeks*
Operating time	Up to 70 hours*
Charging time	Approximately 2 hours*

* Depending on the device type and usage, the actual time may vary.

Correct disposal of this product



(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)



This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

The marking on the battery, manual or packaging indicates that the battery in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66.

The battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider. Do not attempt to remove the battery or dispose it in a fire. Do not disassemble, crush, or puncture the battery. If you intend to discard the product, the waste collection site will take the appropriate measures for the recycling and treatment of the product, including the battery.

FCC ID: A3LBKB-A

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

RF Exposure Statement (2.1091)

FCC RF Radiation Exposure Statement: This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

RF du FCC d'exposition aux radiations: Cet équipement est conforme à l'exposition de la FCC rayonnements RF limites établies pour un environnement non contrôlé. Cet appareil et son antenne ne doivent pas être co-localisés ou fonctionnant en conjonction avec une autre antenne ou transmetteur. Cet équipement doit être installé et utilisé avec une distance minimale de 20 centimètres entre le radiateur et votre corps.

Part 15.105 (B)

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user authority to operate the equipment under FCC rules.

IC: 649E-BKBA

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.