

**SAMSUNG
ELECTRONICS**



Bluetooth® **Keyboard Case**



Draft
2011-05-16



SAMSUNG

Contents

English	3
Your Keyboard Dock Overview	5
Keys	6
Removing and attaching the guide on the Keyboard Dock...	9
Charging your Mobile Tablet with the Keyboard Dock	10
PC Connections	12
Listening to Music through External Powered Speakers	13
FCC	14

Español	15
Información general sobre el Soporte de teclado.....	17
Teclas	18
Quitar y colocar la guía en el Soporte de teclado.....	21
Cómo cargar la Tableta móvil con el Soporte de teclado.....	22
Conexiones de PC	24
Cómo escuchar música a través de altavoces externos.....	25
FCC.....	26

*Please read this manual before operating your device, and keep it for future reference.
Graphics used in this manual are for illustration purposes. The actual products may vary.*

Copyright

Copyright © 2011 Samsung Electronics

This manual is protected under international copyright laws. No part of this manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

Trademarks

- SAMSUNG, and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. More information about Bluetooth is available at www.bluetooth.com.
- All other trademarks and copyrights are the property of their respective owners.

Please read all Safety precautions before using your device to ensure safe and proper use.



Safety precautions

Please read all Safety precautions before using your device to ensure safe and proper use.

- Do not touch your device with wet hands.
- Avoid exposing your device to very cold or very hot temperatures. Extreme temperatures can cause the deformation of the device and reduce the life of your device.
- Keep your device dry. Humidity and all types of liquids may damage device parts or electronic circuits. When wet, dry your device with a towel and take it to a service center.
- Do not use or store your device in dusty, dirty areas. Dust can cause your device to malfunction.
- Do not drop or cause an impact to your device. If bent or deformed, your device may be damaged or parts may malfunction.
- Do not disassemble, modify, or repair your device. Any changes or modifications to your device can void your manufacturer's warranty. For service, take your device to a Samsung Service Center.
- Do not paint or put stickers on your device. Paint and stickers can clog moving parts and prevent proper operation. If you are allergic to paint or metal parts of the product,

you may experience itching, eczema, or swelling of the skin. When this happens, stop using the product and consult your physician.

- When cleaning your device : Wipe your device with a towel or an eraser.
- Do not use chemicals or detergents.
- Do not use the device for anything other than its intended use.
- Do not allow children to use it as they could hurt themselves and others, damage the device.
- Do not use the device during a thunderstorm. Thunderstorms can cause the device to malfunction and increase the risk of electric shock.

Instructional icons




Warning & Caution



Note

Getting started

■ Your Bluetooth Keyboard Case overview

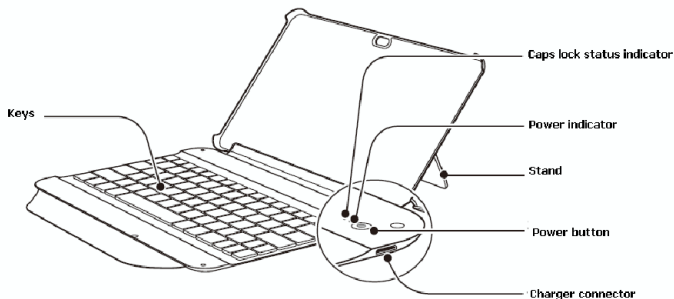

Make sure you have the following items: Bluetooth Keyboard Case, Travel adapter and User manual.

Charging the keyboard

This keyboard has a rechargeable internal battery which is non-removable. Make sure the keyboard is fully charged before using it for the first time.

1. Connect the charger to the charger jack.
2. Plug the charger in to the wall outlet. During charging, the Power indicator will turn red. If charging does not begin, unplug the charger and plug it in again.
3. When the keyboard is fully charged, the power indicator changes to blue. Unplug the charger from the wall outlet and the keyboard.



- Use only Samsung-approved chargers. Unauthorized or Non-Samsung chargers could cause damage to the headset or in extreme circumstances an explosion, it could also invalidate any warranty on the product.
- Repeatedly charging and discharging of the keyboard, over time will cause the battery performance to diminish. This is normal for all rechargeable batteries.

Checking the battery level

To check the battery level, press and hold the [Ctrl] key for 3 seconds. Depending on the battery level, the Power indicator flashes 5 times in one of the following colors:

Battery level	Power indicator color
Above 80%	Blue
80 ~20%	Violet
Below 20%	Red

Using your Bluetooth keyboard

This section explains how to turn the keyboard on, pair and connect to your tablet, and use various functions.

Turning the keyboard on or off

To turn the keyboard on

Press and hold the power button. The blue power indicator flashes 4 times.

To turn the keyboard off

Press and hold the power button for 3 seconds. The power indicator flashes blue and red then turns off.



Connecting the keyboard

Pairing means unique and encrypted wireless connection between two Bluetooth devices when they agree to communicate with each other.


Connecting the keyboard with your tablet

1. Enter Pairing mode.
 - With the keyboard turned off, press and hold the Power button for 3 seconds. The blue power indicator stays lit.
 - If the keyboard is turned on for the first time, it will go into Pairing mode immediately and the Pairing mode stays for 3 minutes.
2. Activate the Bluetooth feature on your tablet and search for the keyboard (see your tablet's user manual).
3. Select the keyboard (BKC-1B1) from the list of devices found by your tablet.
4. Enter the Bluetooth PIN () to pair and connect the keyboard to your tablet.

Disconnecting the keyboard

Turn off the keyboard or use the Bluetooth menu on your tablet to remove the keyboard from your pairing list.

Using Key functions

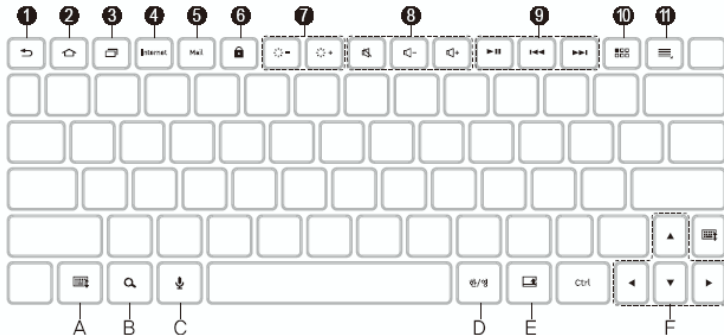

The functionality of some keys will depend on the software version installed on your tablet. To upgrade the software on your tablet, please refer to its user guide.

①	Return to the previous screen.
②	Return to the idle screen.
③	Open the list of recent applications.
④	Launch the Web browser.
⑤	Launch the Mail account.
⑥	Turn the screen on or off.
⑦	Set the brightness of the display.
⑧	Adjust the device's volume.
⑨	While playing media files, ▶ : Pause or resume a video, music files, or slideshows. ◀◀ : Move to the previous file; Scan backwards in a file (press and hold). ▶▶ : Move to the next file; Scan forwards in a file (press and hold).
⑩	Display android applications.
⑪	Show android menu.

A	Hide/show the keypad on the screen.
B	Launch the Google Search; Open the search input window from any applications.
C	Launch the Voice Search.
D	Select a display language. This feature is available only when you have selected more than two languages in your devices language settings.
E	Hide/show Time, Date and Application indicator.
F	Enter the character entities imprinted on the keyboard. (The characters shown may differ depending on the regions.)  It can be used with shift key.
G	Move cursor or system caret; [Ctrl] + [▲] = Page Up [Ctrl] + [▼] = Page Down [Ctrl] + [◀] = Home [Ctrl] + [▶] = End

Resetting the keyboard

When the keyboard is paired with a device, it automatically saves connection and feature settings, such as the Bluetooth address or device type.

If you want to reset the connection settings in the keyboard;

- Charger connected while pressing [ESCAPE] or [DOWN ARROW] ?? The keyboard will turned on automatically.



When you reset the keyboard, all connection settings in the keyboard will be deleted and the connection with your tablet will be lost. In order to use the keyboard, you will have to pair it again.

FCC RF Radiation Exposure Statement: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Users are not permitted to make changes or modify the device in any way.

Changes or modifications not expressly approved by Samsung will void the user's authority to operate the equipment.

IC: 649E-BKC1C9

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.