



Digital Photo Frame



BT08PS

Frame manager

Click **Frame Manager icon** to run the install file. You can find the installed Frame Manager in **C:\Program Files\Samsung\Frame Manager**. To run Frame Manager, click Start and point to Programs, and then click **Samsung > Frame Manager > Frame Manager**.



Safety Instructions

- Safety Symbols
- Power
- Installation
- Using and Cleaning

Overview

- Features
- Components
- Front
- Back
- Side

Connecting

- Power
- USB
- Memory Card

Using

- Buttons
- Photos, Web Photos
- Music
- Video
- Settings

Applications

- Initial Settings
- User Recommendations
- Settings and Examples
- Related Programs

Specifications

- Specifications
- Supported Files

Troubleshooting


- Troubleshooting
- Terminology
- Service Centers



Using, copying or reproducing the whole or part of this manual without written permission from Samsung Electronics is prohibited. The content of this manual is subject to change without prior notice. ©2007 All rights reserved. Samsung Electronics.

Digital Photo Frame



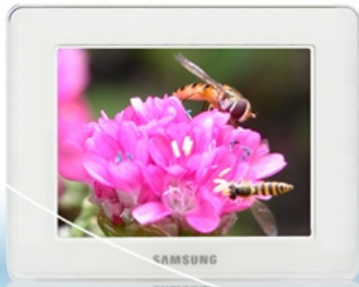



☰ Safety Instructions

▣ Safety Symbols

※ Make sure to follow the directions below to prevent accidents and damage to the product.

 **Warning** Failure to follow the accompanying directions may lead to serious injury or death.

 **Attention** Failure to follow the accompanying directions may lead to minor personal injury or property damage.

▣ Power


※ The images here are for reference only, and are not applicable in all cases (or countries).

 **Warning**




▶ **Insert the power plug correctly until it is firmly in place.**

- Failing to do so, may cause fire.

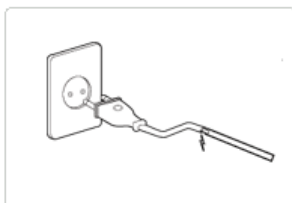

▶ **Do not use a damaged power plug, cord or outlet, as this may cause electric shock or fire.**

▶ **Do not touch the power plug with wet hands, as this may cause electric shock.**

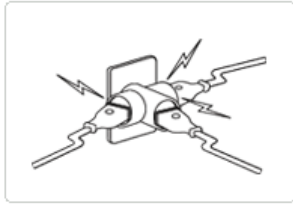

▶ **Do not connect more than one appliance to a single outlet, as an overheated outlet may cause fire.**



▶ **Do not use force to pull the power cord.**

- Don't place anything heavy on the power cord, as this may cause electric shock or fire.



▶ **Make sure to turn the power off and disconnect the power plug from the outlet before moving the product. Make sure to disconnect the connection cables from other devices as well.**

- Moving the product without disconnecting the power cord may damage it while moving, and may cause electric shock or fire.

Attention



▶ **Hold and pull out the plug by its body when disconnecting it from the outlet, as pulling the plug out by the cord may cause it to be damaged.**

- Failing to do so, may cause fire, or the product may not turn on normally.



▶ **Ensure that the power plug is disconnected before cleaning the product.**

- Failing to do so, may cause electric shock or fire.



▶ **Do not let water come into contact with or enter the power adapter, as this may cause electric shock or fire.**

- Do not use the product outdoors in snowy or rainy weather, or near any water.
- When cleaning the floor with water, avoid any water contact with the power adapter.



▶ **Do not place the power adapter near a heater, as this may cause fire.**


Installation**Warning**

▶ **When installing the product on a cabinet or shelf, do not let the front end of the product project beyond its front edge.**

- Failing to do so, may cause the product to fall, resulting in a product malfunction or personal injury.



▶ **Do not place the power cord near a heater, as the power cord may melt, causing electric shock or fire.**

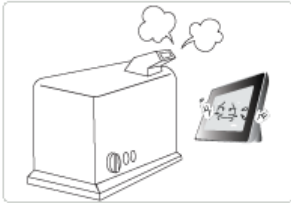

▶ **Do not install the product in a car or a location exposed to oil, smoke, moisture, water, or rainwater.**

- Any contact of these materials with the product may cause electric shock or fire.



▶ **Disconnect the power plug when there is thunder or lightning.**

- Failing to do so, may cause electric shock or fire.

Attention

▶ **Place the product down gently when installing it.**

- Failing to do so may cause product damage or personal injury.



▶ **Avoid dropping the product when moving, as this may cause product damage or personal injury.**



▶ **Do not install the product in a location easily reached by children.**

- As the product may fall and cause personal injury.

Using and Cleaning

Warning



▶ **Do not insert any metal objects such as forks, wire, or gimlets, or flammable items such as paper or matches into the ports at the back of the product, as this may cause electric shock or fire.**

- If water or any foreign substance enters the product, make sure to turn the product off disconnect the power plug from the outlet, and contact a **service center**.



▶ **Never disassemble, repair, or modify the product yourself.**


- If you need to repair your product, contact a **service center**. An attempt at repairing this product may cause electric shock or fire.

Attention



▶ **If you hear a strange sound, smell anything burning, or see smoke, disconnect the power plug immediately and contact a service center.**

- Failing to disconnect the power plug may cause electric shock or fire.

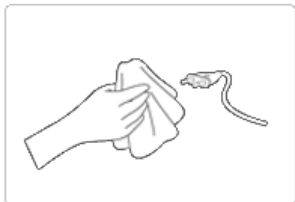

▶ **Always remove dust and water from the pins and connections of the power plug.**

- Failing to do so may cause electric shock or fire.



▶ **When cleaning the product, first disconnect the power plug and clean it with a soft, dry cloth.**

- Do not use any chemicals such as benzene, alcohol, thinners, mosquito repellent, aromatic, lubricant, detergent or wax.



▶ **When not using the product for a long time, make sure to disconnect the power plug.**

- Heavy accumulated dust may cause electric shock or fire.



▶ **If the product needs to be installed in a location that doesn't satisfy general conditions, make sure to contact one of our service engineers about the installation as the product may encounter serious quality problems due to its environment.**

- This refers to locations exposed to conditions such as heavy fine dust, chemicals, high or low temperature, moisture, or when the product needs to be used continually without a break over a long time.

▶ **If the product has been dropped or the product casing is damaged, turn it off and**



disconnect the power plug.

- Using the product without verifying that it has not been damaged may cause electric shock or fire. Please contact a **service center**.

**Correct Disposal of This Product
(Waste Electrical & Electronic Equipment) - Europe only**



(Applicable in the European Union and other European countries with separate collection systems)

 
This marking shown on the product or its literature, indicates that it should not be disposed with other household waste at the end of its working life. To prevent possible harm to the environment or damage to health from uncontrolled waste disposal, please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources.


Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Using, copying or reproducing the whole or part of this manual without written permission from Samsung Electronics is prohibited. The content of this manual is subject to change without prior notice. ©2007 All rights reserved. Samsung Electronics.

Digital Photo Frame



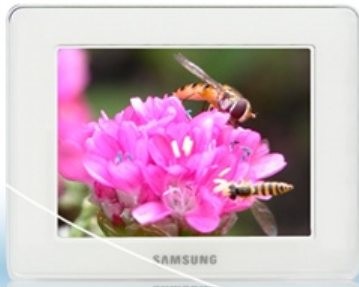

Overview

| [Features](#) | [Components](#) | [Front](#) | [Back](#) | [Side](#) |

Features

- 01 Expand the memory capacity with a memory card. Enjoy stored images immediately.**
 - ◆ By connecting a CF or SD/MMC/MS/XD memory card of your digital camera to your digital photo frame, you can enjoy the images on your digital photo frame quickly and easily. This also provides a way to expand the memory capacity of your digital photo frame.

- 02 Stylish design**
 - ◆ With its sleek and clean, high class design, your digital photo frame doubles as an ornament for your desk or table.
 - ◆ A rotating stand allows both horizontal and vertical installations.

| [Features](#) | [Components](#) | [Front](#) | [Back](#) | [Side](#) |

Please check that all components are contained in the delivered package.
If anything is omitted, contact the local distributor where the product was purchased. For optional items, contact a [service center](#).
Never use a power adapter other than the adapter provided with the product.

Components



Digital Photo Frame
(Colors may differ for each product.)



Quick Start



Warranty
(Not available in all locations)



User Manual

+ Cables



Power cord



USB cable
(A-mini B type)



Power Adapter

+ Sold separately

CF/SD/MMC/MS/XD card

| [Features](#)

| [Components](#)

| [Front](#)

| [Back](#)

| [Side](#)

▣ Front



| [Features](#)


| [Components](#)





| [Front](#)

| [Back](#)
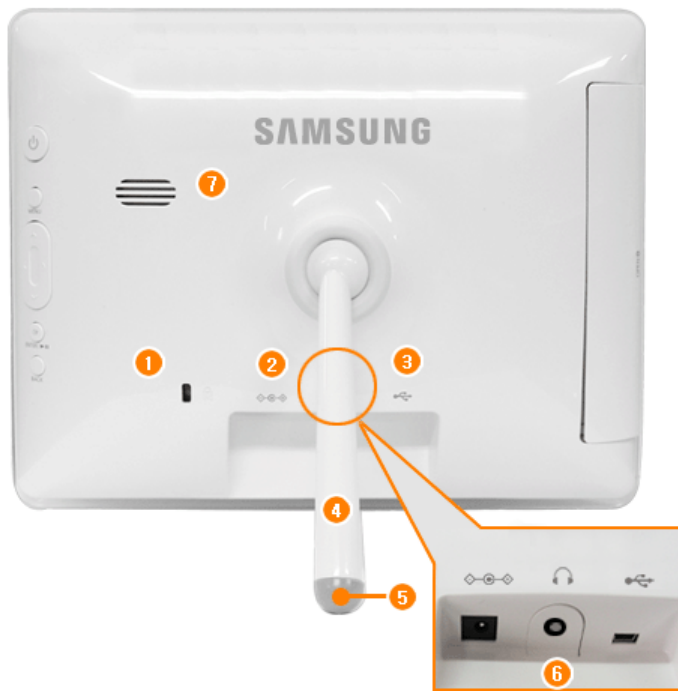
| [Side](#)

▣ Back



- 1**  **Kensington lock** The Kensington lock is a device used to physically fix the system when using it in a public place. (The locking device has to be purchased separately.)
For using a locking device, contact where you purchase it.
- 2**  **Power terminal** Connect the power adapter to this jack.
 Connect the power cord to the power terminal of the power adapter.
- 3**  **USB connection terminal** Connect a PC or an external device using a USB cable.
Up stream terminal Connect your digital photo frame to a PC's USB terminal with a USB cable. (Compatible to USB 1.1(host))
✗ Make sure to use the USB cable (A-mini B type) provided with the product when connecting your digital photo frame to a PC through the up stream terminal.
- 4** **Stand** A stand allows both horizontal and vertical installations.
 If your digital photo frame is installed vertically, you can rotate your photos using the rotation function to fit to the vertical installation.
- 5** **Sliding Prevention Holder** Supports the product so that it stays firmly in place on slippery surfaces.
- 6**  **Headphone connection jack** Connect your headphones to the Headphone connection jack.
- 7** **Speaker** You can listen to music files and movies.



1 [⏻] Power Button

Power Indicator

Turns the product on or off.

Hold down the power button at the right of the product for about 2 seconds.

Connect the power cord to the power terminal of the power adapter.

Shows the power status. When the product is powered on, the power light turns on.

2 [MENU] Menu Button

Displays the menu at the bottom left corner of the screen.

3 [VOL +] Volume Button

[^] Up Button

Adjusts the sound volume when playing music files or movies.

Moves the selected frame in the menu up.

4 [←] Left Button

Moves the selected frame in the menu to the left.

5 [→] Right Button

Moves the selected frame in the menu to the right.

6 [VOL -] Volume Button

[v] Down Button

Adjusts the sound volume when playing music files or movies.

Moves the selected frame in the menu down.

7 [ENTER(↵)] Enter Button

[▶||] Play / Pause Button

Selects a file to play back, a setting on the menu, or an item.

Play / Pause during playback.

8 [BACK] Back Button

Return to the previous menu.



You can insert a CF, SD/MMC, MS, XD card into this slot to view and use the contents stored on it.




Connect a PC or an external device using a USB cable.

Down stream terminal Connect your digital photo frame to a USB-supporting storage device with a USB cable.

Using, copying or reproducing the whole or part of this manual without written permission from Samsung Electronics is prohibited. The content of this manual is subject to change without prior notice. ©2007 All rights reserved. Samsung Electronics.

Digital Photo Frame



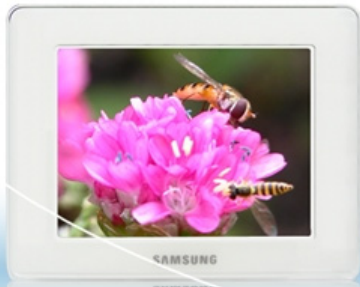


☰ Connecting

▣ Connecting the Power



- 1 Connect the power adapter to the terminal at the back of the product.
- 2 Connect the power cord to the power adapter.
- 3 Plug the power cord for the product into a nearby outlet.
- 4 Press the button at the right of the product to turn the product on.

▣ Connecting via USB

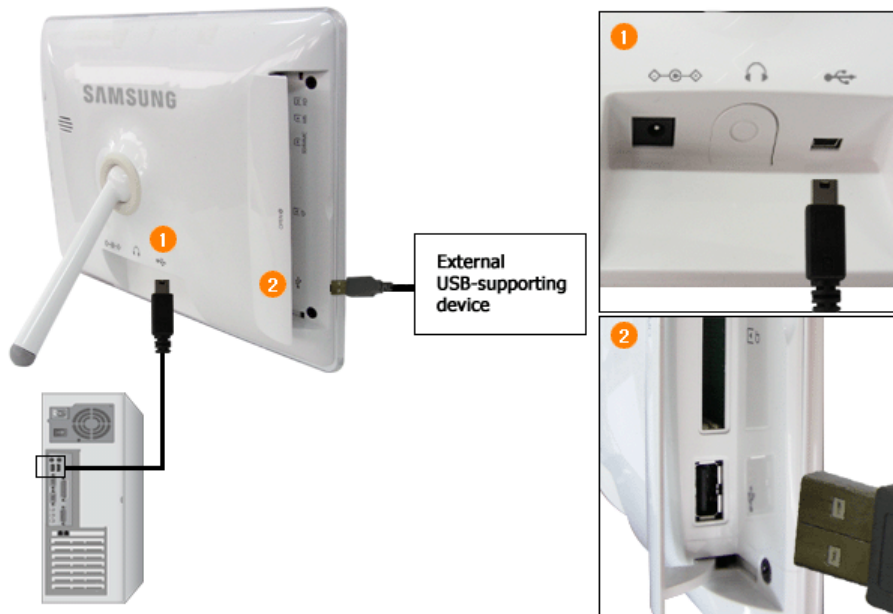

1 Up Stream Terminal

Used to connect your digital photo frame to a PC.

✘ When connecting your digital photo frame to a PC through the up stream terminal, make sure to use the USB cable provided with the product.

2 Down Stream Terminal

Used to connect an external USB-supporting device to your digital photo frame.

✘ Some USB devices may not support Mini-Monitor.

✘ This product does not support USB card readers. Only USB storage is supported.


✘ The external devices connected to your Digital Photo Frame are not recognized by your PC.

✘ When connecting an external device to the down stream terminal, use the USB cable provided with the external device. (For more information on external devices and their cables, contact a relevant service center.)

✘ Samsung carries no liability for external device malfunctions caused by using any cable except the standard cables specified for each device.

✘ Some external products provide a cable that does not meet USB standards. Hence, they may cause a malfunction.

✘ If an external storage device does not work normally when connected to your digital photo frame, try to connect it to your PC. If it still does not work normally when connected to your PC, contact a service center for that external device or your PC.

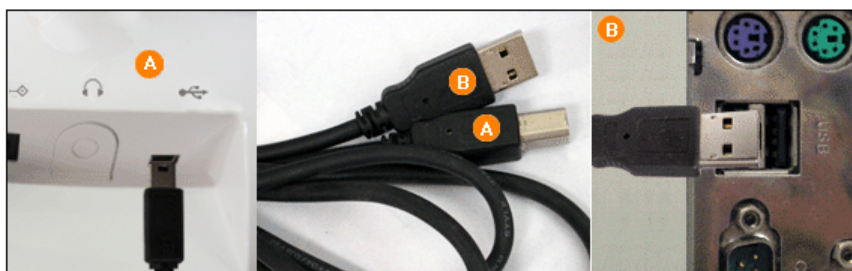

A Connect to the upstream jack of your digital photo frame.


B Connect the USB terminal of your PC.

Folder Structure

When connecting this product to your PC, it is displayed as a removable disk (E:), as shown in the figure below.

You can save and play all music and movie files in the following folders.

You can also add and delete folders as required. (However, if you delete the following default folders, they are automatically created when your product is turned on again.)

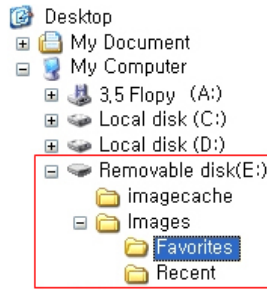

(The full path displayed in the Digital Photo Frame: Photos / frame memory / images)

- 02 **Favorites** Mainly stores photos.
- 03 **Recent** Temporarily stores the last displayed photo.
- 04 **imagecache** Stores as many Web Photos (photos from the Windows Live or RSS) to the cache as were used in the images folder. If you copy your photos from your PC to the imagecache, they are invisible and cannot be viewed with your Digital Photo Frame.

- ✗ The capacity of this product is 64 MB.
- ✗ If the capacity is exceeded, no further files can be stored.
- ✗ Do not turn off the product while saving, playing, or deleting a file.
- ✗ The volume name of the removable disk (for example, E:, F:, G:) may differ depending on your computer environment.


| **Power** | **USB** | **Memory Card** |


Connecting a Memory Card



1 CF/SD/MMC/MS/XD CARD Slide the card in the direction marked on the top of the card.

 - ✗ Removing the memory card while playing MP3s, movies, or photos, may cause the product to operate abnormally. In this case, turn the product off and on.



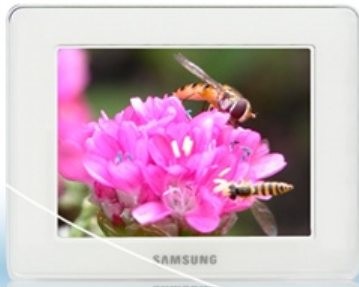

Digital Photo Frame ○○○○○○○○○

- Safety Instructions
- Overview
- Connecting
- Using
- Applications
- Specifications
- Troubleshooting

Using

- Buttons
- Photos, Web Photos
- Music
- Video
- Settings

Buttons

Control Buttons

Button	Description
	Turns the product on or off. Hold down the power button on the side of the product for about 2 seconds.
MENU	Opens the on-screen menu and exits from the menu.
VOL +, VOL -	Push the button to adjust volume.
^, V, <, >	These buttons allow you to adjust items in the menu.
ENTER	Activates a highlighted menu item.
BACK	Use this button to step one step back in the menu.

- Buttons
- Photos, Web Photos
- Music
- Video
- Settings

Photos / Web photos

List Menu (Only Photos)



※ When pressing the MENU button, the on-screen menu is displayed on the screen.

Upper OSD	Sub OSD	Description
Show Pictures From	◆ Memory Card, CF Card, USB, Frame Memory:(default value)	Select a connected storage media. You can only select an external device which is currently connected.

➤ **Thumbnail List Menu**



✘ When pressing the MENU button, the on-screen menu is displayed on the screen.


Upper OSD	Sub OSD	Description
Start Slide Show	Start Slide Show	
Copy	<ul style="list-style-type: none"> ◆ Copy File, Copy All Files 	You can copy the selected file to other connected storage devices.
Delete	<ul style="list-style-type: none"> ◆ Yes, No 	Delete the file. (This is enabled when Photos is selected.)
Show Related Photos		Allows you to view a list of other photos which have a relationship to the selected image, for example, other photos with a similar date to it. - You can only use images shared by Windows Media Player on your PC while your digital photo frame is connected to it.
Set as Background		Sets the currently selected image as the Home Background for the main screen. At this time, the Home Background in the Settings menu is automatically set to Custom . ◆ On, Off, Setting
Background Music		Set the Background Music to On by pressing the Menu button. Then set the Background Music to Setting by pressing the Menu button again and selecting the music you want from among the music files saved on the Frame Memory or the connected external memory.

➤ **Slideshow Menu**

Upper OSD	Sub OSD	Detail OSD	Description
Pause Slide Show/ Resume Slide Show	Pause Slide Show/Resume Slide Show		
	Transition	<ul style="list-style-type: none"> ◆ Fade, Wipe, Slide, Blind, Checker, Random, None 	Select an effect for your slide show when transitioning between images.
	Interval	<ul style="list-style-type: none"> ◆ 5 Seconds, 10 Seconds, 20 Seconds 	
Slide Show Settings			Controls the time intervals between image files for a slide show.
	Repeat	<ul style="list-style-type: none"> ◆ On, Off 	Select the Repeat for displaying images.
	Shuffle	<ul style="list-style-type: none"> ◆ On, Off 	Select whether to playback the files sequentially or in shuffle mode.
Show Related Photos			Allows you to view a list of other photos which have a relationship to the selected image, for example, other photos with a similar date to it. - You can only use images shared by Windows Media Player on your PC while your digital photo frame is connected to it.
Brightness	<ul style="list-style-type: none"> ◆ 0~100 		Adjust the brightness from 0 to 100.
Rotate	<ul style="list-style-type: none"> ◆ Original, 90°, 180°, 270° 		You can rotate an image 90°, 180°, or 270°. You can also keep the image as is by selecting Original.

Rate Photos	While a slide show is in progress, stars (★) are displayed according to the grade set by Windows Media Player. -. You can only use images shared by Windows Media Player on your PC while your digital photo frame is connected to it.
Photo Aspect	<ul style="list-style-type: none"> ◆ Original, Auto Fit, Fit To Width, Fit To Screen Select an aspect ratio for images to display.
Set as Background	Sets the image being displayed in the slide show as the Home Background for the main screen. <ul style="list-style-type: none"> ◆ On, Off, Setting
Background Music	You can specify the background music for your slide shows. Select On and move to Settings . Then select the music you want to play. You can adjust the volume using the $\wedge \vee$ buttons to the right of your digital photo frame.

➔ **Direct Functions (Slide Show)**

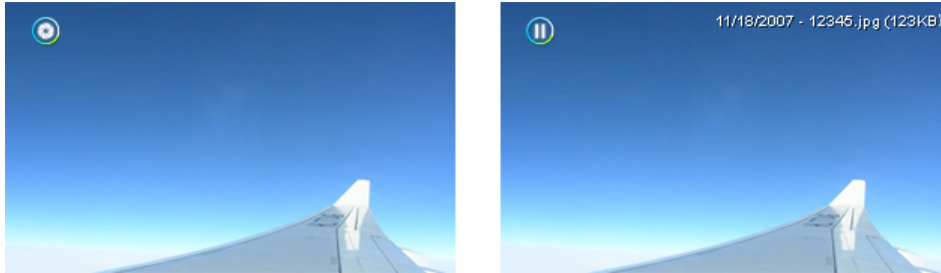


Button	Description
>	Play the next file in the list.
<	Play the previous file in the list.
▶	Pressing the ▶ button alternately plays and pauses the file.
MENU	Opens the on-screen menu and exits from the menu.

- | [Buttons](#) | [Photos, Web Photos](#) | [Music](#) | [Video](#) | [Settings](#) |

🔊 **Music**

➔ **List Menu**

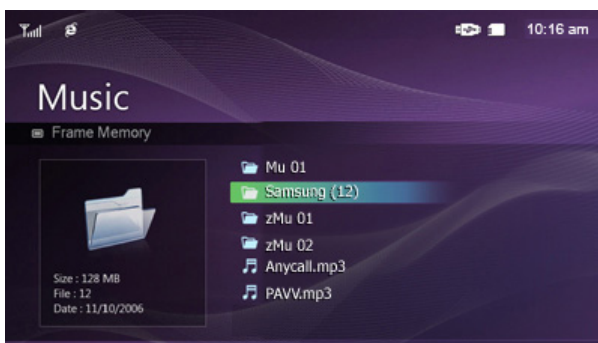

✘ When pressing the MENU button, the on-screen menu is displayed on the screen.


Upper OSD	Sub OSD Description
Music Source	<ul style="list-style-type: none"> ◆ Memory Card, CF Card, USB, Frame Memory(:default value) Select a connected media storage device. You can only select an external device which is currently connected.
Playback Mode	<ul style="list-style-type: none"> ◆ Once, Repeat, Repeat Once, Shuffle Select to playback music files either Once, repeatedly or randomly.
Copy	<ul style="list-style-type: none"> ◆ Copy File

You can copy the selected file to other connected storage devices.

Delete

Delete the file.

➤ Play Menu

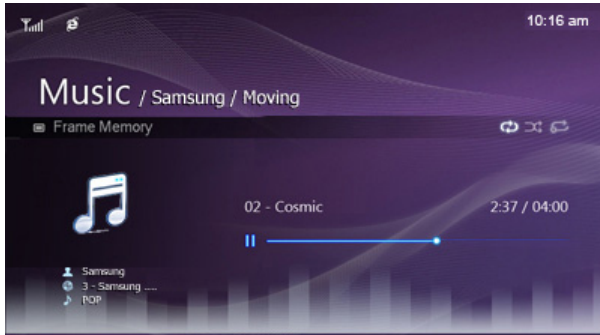

✘ When pressing the MENU button, the on-screen menu is displayed on the screen.

Upper OSD

Sub OSD

Description

Playback Mode

♦ Once, Repeat, Repeat Once, Shuffle

Select to playback music files either Once, repeatedly or randomly.

Brightness

♦ 0~100

Adjust the brightness from 0 to 100.

➤ Direct Functions

- > Plays the next file.
- < Plays the previous.
- ^, v Adjusts the volume.
- ▶ || Plays and Pauses a file.
- MENU Displays the menu.
Exits the menu.

| **Buttons** |

Photos, Web Photos |


Music |

Video |

Settings |

▶ Video

➤ List Menu

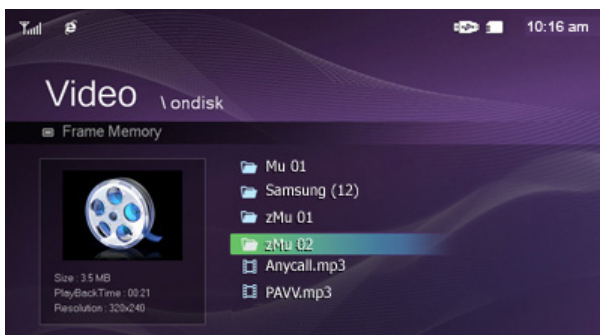

✘ When pressing the MENU button, the on-screen menu is displayed on the screen.

Upper OSD

Sub OSD

Description

Video Source


♦ Memory Card, CF Card, USB, Frame Memory(:default value)

Select a connected media storage device. You can only select an external device which is currently

connected.

Playback Mode	◆ Once, Continuous You can playback movie files either Once or Continuously.
Copy	You can copy the selected file to other connected storage devices.
Delete	Delete the file.

➤ Play Menu

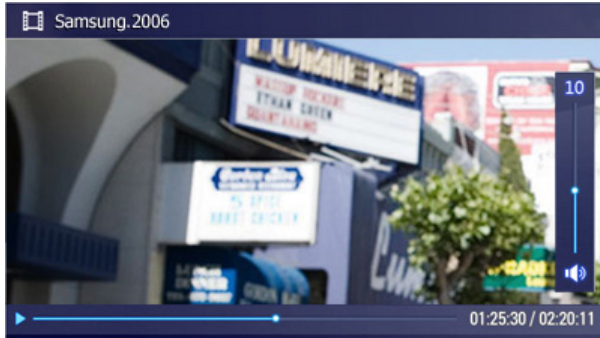

✘ When pressing the MENU button, the on-screen menu is displayed on the screen.

Upper OSD

Playback Mode	◆ Once, Continuous Select a mode among Once, Continuous.
Brightness	◆ 0~100 Adjust the brightness from 0 to 100.

Sub OSD

Description

➤ Direct Functions

>	Play the next file.
<	Play the previous.
^, v	Adjust volume.
▶	Plays and Pauses a file.
MENU	Displays the menu. Exits the menu.

| [Buttons](#) | [Photos, Web Photos](#) | [Music](#) | [Video](#) | [Settings](#) |

▶ Settings

➤ Set the Settings




Sub OSD

Upper OSD	Description
Default Computer	By using the wireless LAN connection search function, you can reset the current connection and re-select the computer from which you are receiving photos.
Language	<ul style="list-style-type: none"> ♦ English, Deutsch, Español, Français, Italiano, Русский, Português Select a language to use for your product.
Time Zone	You can select the Time Zone that you are in. Select a Time Zone.
	<ul style="list-style-type: none"> ♦ On, Off
Daylight Saving Time	Selects whether to apply DST (Daylight Saving Time) depending on the Time Zone and Summer Time.
Date and Time	<ul style="list-style-type: none"> ♦ Month, Day, Year, Hour, Minute, am/pm Enter and set the Month, Day, Year, Hour, Minute, am or pm.
Alarm	You can set alarms. <ul style="list-style-type: none"> ♦ Activation, Hour, Minute, am/pm, Repeat, Sound, Volume
	<ul style="list-style-type: none"> ♦ Activation, Hour, Minute, am/pm The screen turns off and all operations stop at the Off Time.
Auto Picture On/Off	The screen turns on and all operations return to their previous states at the On Time. <p>If the screen was turned off at the Off Time, it turns on again when a key other than the Power key is pressed.</p> <ul style="list-style-type: none"> ✗ When your Photo Frame is connected to your PC as a Mass Storage device using a Mini-Monitor or USB cable, the screen will not be turned off even at the Off Time.
OSD Color Theme	<ul style="list-style-type: none"> ♦ Violet Style, Blue Style, Green Style, Orange Style You can select a color theme for the OSD background.
Home Background	<ul style="list-style-type: none"> ♦ Default, Custom You can reset the Home Background of the main menu to the default image.
	<ul style="list-style-type: none"> ♦ 12 hours, 24 hours
Time Format	You can select whether to display the time in the 12 or 24 hour mode. <p>In 24 hours, am and pm will not be displayed.</p>
Starting Mode	<ul style="list-style-type: none"> ♦ Home Menu, Last Mode You can select the menu which is displayed when your Digital Photo Frame starts.
	<ul style="list-style-type: none"> ♦ Auto, Manual, Update Time Now
Internet Time Update	Select whether to set the time information which is received through the Internet as the system time for your Digital Photo Frame.
	<ul style="list-style-type: none"> ♦ 1 Minute, 3 Minutes, 5 Minutes
Timeout	Select the time for the screensaver to start. <p>However, if no button is operated for one minute, the screensaver starts, regardless of the Timeout settings on the Main menu.</p>
Button Sound	<ul style="list-style-type: none"> ♦ On, Off You can turn the sound of the operation buttons on or off.
Brightness	<ul style="list-style-type: none"> ♦ 0~100 Adjust the brightness from 0 to 100.
Wireless Network (SSID)	Displays a list of available SSIDs when an access point exists in your vicinity.
Wireless Network Code	Displays the password required if the access point has a security setting.
Managment Web Address	Displays the webpage address to connect to Samsung Photo Frame Web Configuration.
Proxy Required	<ul style="list-style-type: none"> ♦ Yes, No You can specify whether to use a proxy server.(On/Off)
Firmware Update	Update the product using external memory(CF/SD/MMC/MS/XD,USB). <p>Please visit www.samsung.com for the latest firmware update.</p>
Reset Settings	<ul style="list-style-type: none"> ♦ Yes, No Reverts the product settings to factory defaults.
Product Information	<ul style="list-style-type: none"> ♦ Model, Firmware Version, Copyright

View the product information.

➔ Management Web

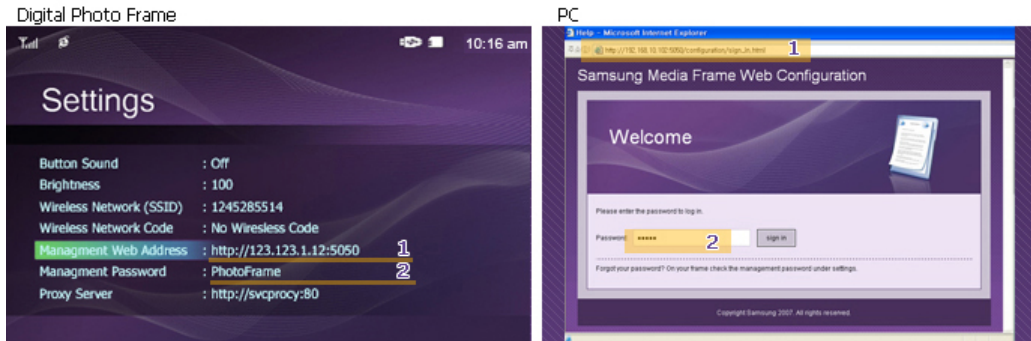

01 Go to [Settings]-[Management Web Address] in your Photo Frame and then open this URL using Internet Explorer on your PC.

02 When connected, the Welcome page will be displayed. Enter the Password which you can see in the [Settings]-[Management Password] of your Photo Frame in the [Password] box on the Welcome page, and click the [sign in] button.

Upper Menu	Sub Menu	Description
	◆ Password	
Welcome		Enter the password displayed in Management Password . Enables case-sensitive mode.
	◆ Now Playing	
Photo Frame		You can monitor the photos which are being displayed in the slide show at the same time.
	◆ Photo Feeds, Photos Windows Live Spaces	
Web Photos		You can add or remove a website address from which you can receive photos.
	◆ Photo Feeds, Photos Windows Live Spaces	
Storage		You can check the size of the photos in the addresses listed in Web Photos.
	◆ Basic, Administrator Password, Date and Time, Network Settings	
Settings		You can enter and change the product name, administrator password, time, and network proxy server, etc.
Help		Displays the help section for using Samsung Photo Frame Web Configuration.

Using, copying or reproducing the whole or part of this manual without written permission from Samsung Electronics is prohibited. The content of this manual is subject to change without prior notice. ©2007 All rights reserved. Samsung Electronics.

Digital Photo Frame

