

SyncMaster 510b SyncMaster 710s

Color Monitor



Owner's Instructions

Safety Instructions

- Before connecting the AC power cord to an outlet, make sure the voltage designation on your monitor corresponds to the local electrical supply.
- 2 Never insert anything metallic into the monitor openings. Doing so may create the danger of electric shock.
- To avoid electric shock, never touch the inside of the monitor.
 Only a qualified technician should open the monitor's case.
- A Never use your monitor if the power cord has been damaged. Do not allow anything to rest on the power cord, and keep the cord away from areas where people can trip over it.
- Be sure to hold the plug, not the cord, when disconnecting the monitor from an electric socket.
- Openings in the monitor cabinet are provided for ventilation. To prevent overheating, these openings should not be blocked or covered. Also, avoid using the monitor on a bed, sofa, rug, or other soft surface. Doing so may block the ventilation openings in the bottom of the cabinet. If you put the monitor in a bookcase or some other enclosed space, be sure to provide adequate ventilation.
- Put your monitor in a location with low humidity and a minimum of dust.

- Do not expose the monitor to rain or use it near water (in kitchens, near swimming pools, etc.). If the monitor accidentally gets wet, unplug it and contact an authorized dealer immediately. You can clean the monitor with a damp cloth when necessary, but be sure to unplug the monitor first.
- Place the monitor on a solid surface and treat it carefully. The screen is made of glass and can be damaged if dropped, hit or scratched.
- 10 Locate your monitor near an easily accessible AC outlet.
- If your monitor does not operate normally in particular, if there are any unusual sounds or smells coming from it unplug it immediately and contact an authorized dealer or service center.
- 12 High temperatures can cause problems. Don't use your monitor in direct sunlight, and keep it away from heaters, stoves, fireplaces, and other sources of heat.
- 13 Unplug the monitor when it is going to be left unused for an extended period of time.
- 14 Unplug your monitor from the AC outlet before any service.



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Table of Contents

Safety Instructions	i
Your New Monitor	2
Connecting Your Monitor	2
Front Panel	
Direct Access Buttons	3
Operation	4
On-screen Menu System	4
Monitor Function Control	5
Brightness	5
Contrast	5
Horizontal Position	5
Vertical Position	5
Horizontal Size	5
Vertical Size	5
Pincushion	5
Display Timing	5
Advanced Features	6
Color Temperature	6
Language	
Half tone	6
Moire	
Degauss	
Recall	6
Geometry	6
Pinbalance	
Parallelogram	
Rotation	
V-linearity	
Trapezoid	
Troubleshooting	
PowerSaver	
Specifications	
Display Modes	
Index	
Regulation Information	iii

Your New Monitor

Please make sure the following items are included with your monitor. If any items are missing, contact your dealer.







Driver installation diskette






Monitor & stand Power cord

Warranty card (not available in all locations)

Connecting Your Monitor

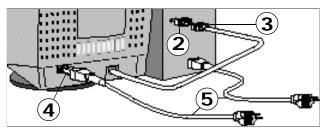


- Turn off your computer and unplug the power cord.
- Video port Connect the signal cable (with an adapter if necessary) to the video port on the back of your computer, video board, video card, or graphics card.
- 3 Signal cable
 Connect the end of the signal cable to your computer's video port. If you are using a Macintosh computer, connect the cable to a Macintosh adapter, and set the pins on your adapter (adapter not included). An IBM-compatible computer does not need an adapter.
- A Power port
 - Connect the power cord for your monitor to the power port on the back of the monitor.
- Power cords
 - Plug the power cord for the monitor and the power cord for your computer into a nearby outlet.
- Turn on your computer and monitor. If your monitor displays an image, installation is complete.

To install the monitor driver on your PC:

- 1. Insert the provided diskette into the A drive.
- 2. Double click the "install.exe" file.

Your New Monitor

Front Panel

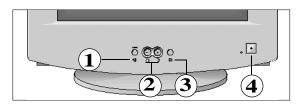

- Menu button
 Opens and closes the on-screemenu.
 Also used to move between menus
 when using the on-screen menu system.
- The -/+ buttons
 These buttons allow you to select and adjust items using the on-screemenu. When adjusting an item using the on-screen menu, the (-) button lowers the value of the selected function.
 The (+) button raises the value of the selected function. These buttons are also direct access buttons for the Contrast and Brightness feature controls. (See the section on Direct Access Buttons).
- The button
 This button is used with the on-screen menu system to select a highlighted function for adjustment. Also used to move between menus when using the
- 4 Power button
 Turns the monitor on and off.
 The power indicator light glows green during normal operation.

on-screen menu system.

Direct Access Buttons



Most of the adjustments you make to your monitor will be accessed through the on-screen menu described in the next section. The Contrast and Brightness features can also be accessed with the touch of a button on the front of your monitor.

- With the menu off, press the \circlearrowleft or \bigcirc button on the front of your monitor. The \bigcirc button accesses the Brightness feature. The \bigcirc button accesses the Contrast feature.
- **9** Push the \bigoplus button to increase or the \bigoplus button to decrease the value of a selection.
- **?** Press the menu button → twice to exit the on-screen menu.


Operation

On-screen Menu System


Your monitor has an on-screen menu system, accessed by the buttons on the front of your monitor, that allows you to adjust characteristics of the screen image. Display changes are indicated by on-screen adjustment icons. Some functions have sub-menus.

- Push the menu button → to display the main menu. Function icons are arranged across the top of the on-screen menu.
- Push the ⊕ or button to move through the icons.


 The name of the active function will appear below the rows of function icons.
- To select a function or open a sub-menu, push the button. The screen will display the options for adjustment. If there is a sub-menu use the button to highlight the feature you want to adjust, then push the button to select it.
- Use the ⊕ and ⊖ buttons to make adjustments. The ⊕ increases values, the decreases values. On-screen calibration numbers show the effect of your adjustment. If you are in a sub-menu, use the menu button → to return to the previous menu.
- Push the menu button → to exit and save your changes.

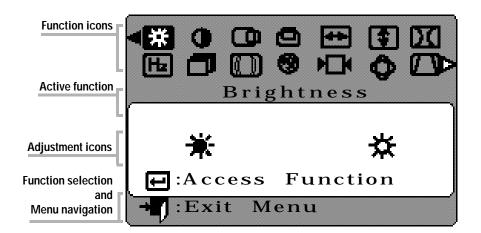

Operation

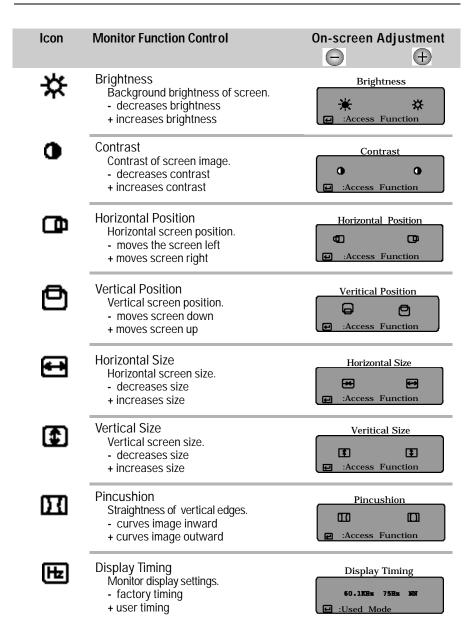

Operation

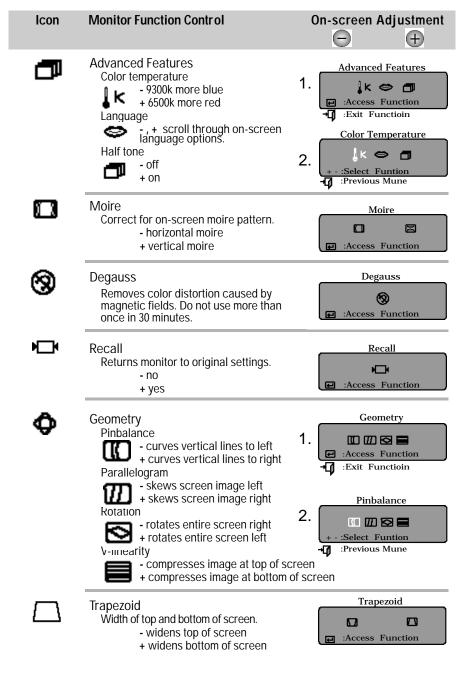

Troubleshooting

Before calling for service, check the information in this section to see if you can solve the problem yourself. If you do need assistance, please call the phone number on the warranty card, the phone number on the back cover of this manual, or contact your dealer.

There is no screen image.

- Check to see that both the monitor and the computer are plugged in and turned on.
- "Check Signal Cable" appears.
- Check the signal cable connection between the computer and the monitor.

The screen image is too light or too dark.

· Adjust the brightness or contrast settings.

The screen image is too large or too small.

Adjust the size settings.

The colors are distorted with dark or shadowed areas.

- · Activate the degauss feature.
- Adjust the color temperature.

The power indicator light is blinking green.

The monitor is using its power management system.

You need the monitor driver software.

 You can download the driver from the internet at http://www.samsungelectronics.com.

PowerSaver

This monitor has a built-in power management system called PowerSaver. This system saves energy by switching your monitor into a low-power mode when it has not been used for a certain amount of time. The monitor automatically returns to normal operation when you move the computer's mouse or press a key on the keyboard. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods. The PowerSaver system operates with a VESA DPMS compliant video card installed in your computer. Use a software utility installed on your computer to set up this feature.

		Power Saving function mode EPA/NUTEK		
State	Normal	Standby mode	Suspend mode	Power-off Mode
Operation			Position A1	Position A2
Power Indicator	Green	Green Blinking (0.5 sec interval)	Green Blinking (0.5 sec interval)	Green Blinking (1 sec interval)
Power Consumption	510b: 80W (maximum) 70W (nominal)	50W (nominal)	Less than 15W	Less than 5W
	710s: 90W (maximum) 80W (nominal)			

NOTE: This monitor is EPA ENERGY STAR[®] compliant and NUTEK compliant when used with a computer equipped with VESA DPMS functionality.

Specifications

Specifications	Models: Sync Mas	ster 510b & 710s	
Picture Tube	 •510b: 15" (38 cm) Full square type (35 cm viewable) •710s: 17" (43 cm) Full square type (40 cm viewable) •90° deflection •0.28mm dot pitch •Silica Coated with anti-electrostatic properties (TCO: Multi Layer coating) • Medium-short persistence phosphor 		
Synchronization	Horizontal:Vertical:	30kHz to 70 kHz 50 Hz to 160 Hz	
Display Color	 Unlimited 		
Maximum Resolution	• 1280 dots	• 1024 lines	
Active Display	Horizontal:Vertical:	510b : 267 ± 4mm 510b : 200 ± 4mm	
Input Signal, Terminated	Analog:Separate Sync:	.7Vpp positive at 75 o	
Maximum Pixel Clock	• 110 MHz		
Power Supply	• AC 100-240 Volt ± 10%, 60 Hz/50 Hz ± 3 Hz		
Power Consumption	•510b: 80 watt maximum 710s: 90 watt maximum		att maximum
Dimensions/Weight (WxDxH)	 Unit: 510b: 362 x 390 x 377mm/12.7 kg 710s: 420 x 425 x 421 mm /16.5 k Carton: 510b: 454 x 497 x 445mm/14.5 kg 710s: 534 x 552 x 541 mm /19.0 kg 		•
Environmental Considerations	Operating temperaHumidity:Storage temperature	10% to 80	4°F (0°C to 40°C) % 3°F (-20°C to 45°C)

Design and specifications are subject to change without notice.

Display Modes

Display Mode	Horizontal	Vertical	Pixel	Sync
	Frequency	Frequency	Clock	Polarity
	(kHz)	(Hz)	(MHz)	(H/V)
IBM, VGA2, 720 x 400 IBM, VGA3, 640 x 480 VESA, 640 x 480 VESA, 640 x 480 VESA, 800 x 600 VESA, 800 x 600 VESA, 1024 x 768 VESA, 1024 x 768	31.469 31.469 37.500 43.269 46.875 53.674 60.023 68.677	70.087 59.940 75.000 85.008 75.000 85.061 75.029 84.997	28.322 25.175 31.500 36.000 49.500 56.250 78.750 94.500	-/+ -/- -/- -/- +/+ +/+ +/+

Index

A	Notice de conformité IC
Adapter2	0
Advanced features6	Operation
В	On-screen menu system
Brightness 5	P
Button, —	•
Buttons, + /3	Parallelogram6
С	Pinbalance
Color temperature6	Pincushion
Connecting your monitor2	Power button
Contrast	Power cords
D	Power indicator
Degauss6	Power port
Direct access buttons3	PowerSaver
Display modes8	R
Display timing5	
Driver diskette	Recall
Driver installation	Rotation
F	Regulation informationii
FCC information	S
Front panel3	Safety instructionsi
G	Signal cable
Geometry6	Specifications
H Half tane	Sub-menus
Half tone	
Horizontal size	Т
1	Table of contents
IC compliance notice iii	Trapezoid
Installation	Troubleshooting
L	V
Language6	Vertical position
M	Vertical size
Macintosh2	Video port
Manual	•
Menu button	V-linearity
Moire	W
Monitor function control5, 6	Warranty card
MPR II compliance iii	Υ
N	Your new monitor

Regulation Information

FCC Information

User Instructions

The Federal Communications Commission Radio Frequency Interference Statement includes the following warning:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television receptions, which can be determined by turning the

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

User Information

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If necessary, consult your dealer or an experienced radio/television technician for additional suggestions. You may find the booklet called How to Identify and Resolve Radio/TV Interference Problems helpful. This booklet was prepared by the Federal Communications Commission. It is available from the U.S. Government Printing Office, Washington, DC 20402, Stock Number 004-000-00345-4.

Warning

User must use shielded signal interface cables to maintain FCC compliance for the product.

Declaration of conformity for products Marked with FCC Logo

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The party responsible for product compliance:

SAMSUNG ELECTRONICS CO., LTD QA Lab of Samsung America

85 West Tasman Drive San Jose, CA 95134 USA Tel) 408-544-5124 Fax) 408-544-5191

Provided with this monitor is a detachable power supply cord with IEC320 style terminations. It may be suitable for connection to any UL Listed personal computer with similar configuration. Before making the connection, make sure the voltage rating of the computer convenience outlet is the same as the monitor and that the ampere rating of the computer convenience outlet is equal to or exceeds the monitor voltage rating.

For 120 Volt applications, use only UL Listed detachable power cord with NEMA configuration 5-15P type (parallel blades) plug cap. For 240 Volt applications use only UL Listed Detachable power supply cord with NEMA configuration 6015P type (tandem blades) plug cap.

IC Compliance Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations of ICES-003.

Cet appareil numérique de classe B respecte toutes les exigences du Règlement ICES-003 sur les équipements produisant des interférences au Canada.

MPR II Compliance

This monitor complies with SWEDAC (MPR II) recommendations for reduced electric and magnetic fields.

European Notice

Products with the CE Marking comply with both the EMC Directive (89/336/EEC), (92/31/EEC), (93/68/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms:

- EN55022 (CISPR 22) Radio Frequency Interference
- EN50082-1: 1992 Electromagnetic Immunity
- EN60555-2 (IEC555-2) Power Line Harmonics
- EN60555-3 (IEC555-3) Voltage Fluctuations
- · EN60950 (IEC950) Product Safety.

U.S.A.:

Samsung Electronics America (SEA) One Samsung Place Ledgewood, NJ 07852

Tel.: 1-800-SAMSUNG (1-800-726-7864) Fax-on-Demand for product information: 1-800-229-2239

CANADA:

Samsung Electronics Canada Inc. 7037 Financial Drive Mississauga, Ontario L5N 6R3

Tel.: 1-800-SAMSUNG (1-800-726-7864)

Fax.: (905) 542-1199

GERMANY:

Samsung Electronics GmbH Samsung-Haus Am Kronberger Hang 6/65824 Schwalbach/Ts.

Tel.: 06196-66-1134 Fax.: 06196-66-1133

AUSTRALIA:

Samsung Electronics Australia Pty Ltd. Unit G, 10-16 South Street, Rydalmere, N.S.W. 2116 P.O. BOX 368

Tel.: (02) 638 5200

ITALIA:

Samsung Electronics Italia SpA Via C. Donat Cattin,

5-20063 Cernusco sul Naviglio (Mi)

Tel.: 167-010740

PANAMA:

Servicios Samsung (Zona Libre), S.A. 50 and 61 Streets Sta, Cecilia Bdl. Don Camilo, Panama City Tel.: (507) 264-0195 or 269-5571

Fax: (507) 269-5568

MEXICO:

Samsung Electronics Mexico, S.A. DE C. V. Mina No. 200, Esq. Gavilan Col. Guadalupe Del Moral Iztapalapa, Mexico, D.F. C.P. 09300

Tel.: (525) 686-0800 Fax: (525) 686-5094 ESPAÑA:

Samsung Electrónics Comercial Ibérica, S.A. Ciencies, 55-65 (Polígono Pedrosa) 08908 Hospitalet de Llobregat (Barcelona)

Tel.: (93) 261 67 00 Fax.: (93) 261 67 50

IJК

Samsung Electronics (UK) Ltd. Samsung House, 225 Hook Rise South Surbiton, Surrey KT6 7LD

Tel.: (0181) 391 0168 Fax.: (0181) 397 9949

<European Service Center & National Service> Stafford Park 12 Telford, Shropshire, TF3 3BJ

Tel.: (01952) 292 262 Fax.: (01952) 292 033

THAILAND:

Samsung Service Center 729-729/1 JSP Tower Rachadapisek RD., Bangpongpang, Yannawa, Bangkok 10120

Tel : (662) 2954508-14 Fax : (662) 2954267

SOUTH AFRICA:

Samsung Electronics South Africa Somerset Office Park 5 Libertas Road

Bryanston, South Africa Tel: (27)-11-463-5678 Fax: (27)-11-463-5215

BRASII

Samsung Eletrônica da Amazonia Ltda. R. Prof. Manoelito de Ornellas, 303-2' Andar Chácara Sto. Antônio • cep: 04719-040

São Paulo • SP Tel. : (011) 541-8500

Fax: (011) 523-3995, 522-0726

energy S

"As an ENERBY STAR® Partner, SAMSUNG has determined that this product meets the ENERBY STAR® guidelines for energy efficiency."

Printed on recyclable paper

CODE NO.: BH68-61102A (Rev. 0.2)