

User's Guide

CLX-419xN/CLX-419xFN Series

CLX-419xFW Series

CLX-626xND/CLX-626xFD/CLX-626xFR Series

CLX-626xFW Series

BASIC

This guide provides information concerning installation, basic operation and troubleshooting on windows.

ADVANCED

This guide provides information about installation, advanced configuration, operation and troubleshooting on various OS environments.

Some features may not be available depending on models or countries.

BASIC



1. Introduction

Key benefits	5
Features by models	7
Useful to know	14
About this user's guide	15
Safety information	16
Machine overview	21
Control panel overview	26
Turning on the machine	31
Installing the driver locally	32
Reinstalling the driver	33



2. Menu Overview and Basic Setup

Menu overview	36
Machine's basic settings	45
Media and tray	47
Basic printing	63
Basic copying	70
Basic scanning	74
Basic faxing	75

Using USB memory device	79
-------------------------	----



3. Maintenance

Ordering supplies and accessories	86
Available consumables	87
Available accessories	89
Available maintenance parts	90
Storing the toner cartridge	91
Redistributing toner	93
Replacing the toner cartridge	95
Replacing the waste toner container	98
Installing accessories	99
Monitoring the supplies life	103
Setting the toner low alert	104
Cleaning the machine	105
Tips for moving & storing your machine	111



4. Troubleshooting

Tips for avoiding paper jams	113
Clearing original document jams	114
Clearing paper jams	119

BASIC

Understanding the status LED	131
Understanding display messages	133



5. Appendix

Specifications	141
Regulatory information	157
Copyright	169



1. Introduction

This chapter provides information you need to know before using the machine.

- **Key benefits** 5
- **Features by models** 7
- **Useful to know** 14
- **About this user's guide** 15
- **Safety information** 16
- **Machine overview** 21
- **Control panel overview** 26
- **Turning on the machine** 31
- **Installing the driver locally** 32
- **Reinstalling the driver** 33



Key benefits

Environmentally friendly



- To save toner and paper, this machine supports Eco feature (see "Eco printing" on page 68).
- To save paper, you can print multiple pages on one single sheet of paper (see "Using advanced print features" on page 275).
- To save paper, you can print on both sides of the paper (double-sided printing) (see "Using advanced print features" on page 275).
- To save electricity, this machine automatically conserves electricity by substantially reducing power consumption when not in use.

Fast high resolution printing



- You can print with a resolution of up to 9,600 x 600 dpi effective output (600 x 600 x 4 bit).
- Fast, on-demand printing.
 - CLX-419xN/CLX-419xFN/CLX-419xFW Series
 - For single-side printing, 18 ppm (A4) or 19 ppm (Letter).

- CLX-626xND/CLX-626xFD/CLX-626xFR/CLX-626xFW Series
 - For single-side printing, 24 ppm (A4) or 25 ppm (Letter).
 - For duplex printing, 12 ppm (A4) or 12 ppm (Letter).

Convenience



- Easy Capture Manager allows you to easily edit and print whatever you captured using the Print Screen key on the keyboard (see "Easy Capture Manager" on page 315).
- Samsung Easy Printer Manager and Printing Status is a program that monitors and informs you of the machine's status and allows you to customize the machine's settings (see "Using Samsung Printer Status" on page 330 or "Using Samsung Easy Printer Manager" on page 327).
- Samsung Easy Document Creator is an application to help users scan, compile, and save documents in multiple formats, including .epub format. These documents can be shared via social networking sites or fax (see "Using Samsung Easy Document Creator" on page 322).
- AnyWeb Print helps you screen-capture, preview, scrap, and print the screen of Windows Internet Explorer more easily, than when you use the ordinary program (see "Samsung AnyWeb Print" on page 317).
- Smart Update allows you to check for the latest software and install the latest version during the printer driver installation process. This is available only for Windows.

Key benefits

- If you have Internet access, you can get help, support application, machine drivers, manuals, and order information from the Samsung website, www.samsung.com > find your product > Support or Downloads.

Wide range of functionality and application support



- Supports various paper sizes (see "Print media specifications" on page 143).
- Print watermark: You can customize your documents with words, such as "**Confidential**" (see "Using advanced print features" on page 275).
- You can print in various operating systems (see "System requirements" on page 147).
- Your machine is equipped with a USB interface and/or a network interface.

Supports various wireless network setting method



- Using the WPS (Wi-Fi Protected Setup™) button
 - You can easily connect to a wireless network using the WPS button on the machine and the access point (a wireless router).

- Using the USB cable or a network cable
 - You can connect and set various wireless network settings using a USB cable or a network cable.
- Using the Wi-Fi Direct
 - You can conveniently print from your mobile device using the Wi-Fi or Wi-Fi Direct feature.



See "Introducing wireless set up methods" on page 196.

Features by models

Some features and optional goods may not be available depending on model or country.

Operating System

Operating System	CLX-419xN Series CLX-419xFN Series	CLX-419xFW Series	CLX-626xND Series CLX-626xFD Series CLX-626xFR Series	CLX-626xFW Series
Windows	•	•	•	•
Macintosh	•	•	•	•
Linux	•	•	•	•
Unix	•	•	•	•

(•: Included, Blank: Not available)

Software

Software	CLX-419xN Series CLX-419xFN Series	CLX-419xFW Series	CLX-626xND Series CLX-626xFD Series CLX-626xFR Series	CLX-626xFW Series
SPL printer driver	•	•	•	•
PCL printer driver	•	•	•	•
PS printer driver ^a	•	•	•	•
XPS printer driver ^a	•	•	•	•

Features by models

Software		CLX-419xN Series CLX-419xFN Series	CLX-419xFW Series	CLX-626xND Series CLX-626xFD Series CLX-626xFR Series	CLX-626xFW Series
Direct Printing Utility					•
Samsung Easy Printer Manager	Scan to PC settings	•	•	•	•
	Fax to PC settings	• (CLX-419xFN Series only)	•	• (CLX-626xFD/CLX-626xFR Series only)	•
	Device Settings	•	•	•	•
Samsung Printer Status		•	•	•	•
AnyWeb Print		•	•	•	•
Samsung Easy Document Creator		•	•	•	•
Easy Capture Manager		•	•	•	•
Samgung Easy Color Manager		•	•	•	•
SyncThru™ Web Service		•	•	•	•
SyncThru Admin Web Service		•	•	•	•
Easy Eco Driver		•	•	•	•
Fax	Samsung Network PC Fax	• (CLX-419xFN Series only)	•	• (CLX-626xFD/CLX-626xFR Series only)	•

Features by models

Software		CLX-419xN Series CLX-419xFN Series	CLX-419xFW Series	CLX-626xND Series CLX-626xFD Series CLX-626xFR Series	CLX-626xFW Series
Scan	Twain scan driver	●	●	●	●
	WIA scan driver	●	●	●	●
	Samsung Scan Assistant	●	●	●	●

a. For XPS/PS driver, You can install the XPS/PS printer driver in the **Custom Installation** window (Refer to Software CD that was provided with your machine).

(●: Included, Blank: Not available)

Features by models

Variety feature

Features	CLX-419xN Series CLX-419xFN Series	CLX-419xFW Series	CLX-626xND Series CLX-626xFD Series CLX-626xFR Series	CLX-626xFW Series
Hi-Speed USB 2.0	●	●	●	●
Network Interface Ethernet 10/100/1000 Base TX wired LAN	●	●	●	●
IEEE 1284 parallel connector ^a			○	○
Network Interface 802.11b/g/n wireless LAN ^b		●		●
Eco printing	●	●	●	●
Duplex (2-sided) printing	● ^c	● ^c	●	●
USB memory interface	●	●	●	●
Memory module	○	○	○	○
Optional tray (Tray2)			○	○
Mass Storage Device				● ^d
Duplex Automatic Document Feeder (DADF)			● (CLX-626xFR Series only)	●

Features by models

Features		CLX-419xN Series CLX-419xFN Series	CLX-419xFW Series	CLX-626xND Series CLX-626xFD Series CLX-626xFR Series	CLX-626xFW Series
Automatic Document Feeder (ADF)		•	•	• (CLX-626xND/ CLX-626xFD Series only)	
Handset					
Fax	Multi-send	• (CLX-419xFN Series only)	•	• (CLX-626xFD/CLX-626xFR Series only)	•
	Delay send	• (CLX-419xFN Series only)	•	• (CLX-626xFD/CLX-626xFR Series only)	•
	Priority send				
	Duplex send			• (CLX-626xFR Series only)	•
	Secure receive	• (CLX-419xFN Series only)	•	• (CLX-626xFD/CLX-626xFR Series only)	•
	Duplex print			• (CLX-626xFR Series only)	•
	Send/ Receive forward - fax	• (CLX-419xFN Series only)	•	• (CLX-626xFD/CLX-626xFR Series only)	•
	Send/ Receive forward - email			• (CLX-626xFD/CLX-626xFR Series only)	•

Features by models

Features		CLX-419xN Series CLX-419xFN Series	CLX-419xFW Series	CLX-626xND Series CLX-626xFD Series CLX-626xFR Series	CLX-626xFW Series
	Send/ Receive forward - server			• (CLX-626xFD/CLX-626xFR Series only)	•
Scan	Scanning to email	•	•	•	•
	Scanning to SMB server	•	•	•	•
	Scanning to FTP server	•	•	•	•
	Duplex scan			• (CLX-626xFR Series only)	•
	Scan to PC	•	•	•	•
Copy	ID card copying	•	•	•	•
	Reduced or enlarged copying	•	•	•	•
	Collation		•		•
	Poster				
	Clone				
	Book			•	•
	2-up/4-up	•	•	•	•
	Adjust background	•	•	•	•
	Margin shift				

Features by models

Features		CLX-419xN Series CLX-419xFN Series	CLX-419xFW Series	CLX-626xND Series CLX-626xFD Series CLX-626xFR Series	CLX-626xFW Series
	Edge erase			●	●
	Gray enhance				
	Duplex copy			●	●

- a. If you use the parallel port, you cannot use the USB cable.
- b. Depending on your country, wireless LAN card may not be available. For some counties, only 802.11 b/g can be applied. Contact your local Samsung dealer or the retailer where you bought your machine.
- c. Available for Windows OS **Duplex (2-sided) printing (Manual)** only.
- d. The machine is equipped with 4GB of SD (secure digital) card.

(●: Included, ○: Optional, Blank: Not available)

Useful to know



The machine does not print.

- Open the print queue list and remove the document from the list (see "Canceling a print job" on page 65).
- Remove the driver and install it again (see "Installing the driver locally" on page 32).
- Select your machine as your default machine in your Windows (see "Setting your machine as a default machine" on page 274).



Where can I purchase accessories or supplies?

- Inquire at a Samsung distributor or your retailer.
- Visit www.samsung.com/supplies. Select your country/region to view product service information.



The status LED flashes or remains constantly on.

- Turn the product off and on again.
- Check the meanings of LED indications in this manual and troubleshoot accordingly (see "Understanding the status LED" on page 131).



A paper jam has occurred.

- Open and close the door (see "Front view" on page 22).
- Check the instructions on removing jammed paper in this manual and troubleshoot accordingly (see "Clearing paper jams" on page 119).



Printouts are blurry.

- The toner level might be low or uneven. Shake the toner cartridge (see "Redistributing toner" on page 93).
- Try a different print resolution setting (see "Opening printing preferences" on page 66).
- Replace the toner cartridge (see "Replacing the toner cartridge" on page 95).



Where can I download the machine's driver?

- You can get help, support application, machine drivers, manuals, and order information from the Samsung website, www.samsung.com > find your product > Support or Downloads.

About this user's guide

This user's guide provides information for your basic understanding of the machine as well as detailed steps to explain machine usage.



- Read the safety information before using the machine.
- If you have a problem using the machine, refer to the troubleshooting chapter.
- Terms used in this user's guide are explained in the glossary chapter.
- All illustrations in this user's guide may differ from your machine depending on its options or model you purchased.
- The screenshots in this administrator's guide may differ from your machine depending on the machine's firmware/driver version.
- The procedures in this user's guide are mainly based on Windows 7.

Conventions

Some terms in this guide are used interchangeably, as below:

- Document is synonymous with original.
- Paper is synonymous with media, or print media.
- Machine refers to printer or MFP.

General icons




Icon	Text	Description
	Caution	Gives users information to protect the machine from possible mechanical damage or malfunction.
	Note	Provides additional information or detailed specification of the machine function and feature.

Safety information

These warnings and precautions are included to prevent injury to you and others, and to prevent any potential damage to your machine. Be sure to read and understand all of these instructions before using the machine. After reading this section, keep it in a safe place for future reference.



 
 

Important safety symbols

Explanation of all icons and signs used in this chapter

	Warning	Hazards or unsafe practices that may result in severe personal injury or death.
	Caution	Hazards or unsafe practices that may result in minor personal injury or property damage.
	Do not attempt.	







Operating environment

Warning

	<p>Do not use if the power cord is damaged or if the electrical outlet is not grounded.</p> <p>This could result in electric shock or fire.</p>
	<p>Do not place anything on top of the machine (water, small metal or heavy objects, candles, lit cigarettes, etc.).</p> <p>This could result in electric shock or fire.</p>
	<ul style="list-style-type: none"> If the machine gets overheated, it releases smoke, makes strange noises, or generates an odd odor, immediately turn off the power switch and unplug the machine. The user should be able to access the power outlet in case of emergencies that might require the user to pull the plug out. <p>This could result in electric shock or fire.</p>
	<p>Do not bend, or place heavy objects on the power cord.</p> <p>Stepping on or allowing the power cord to be crushed by a heavy object could result in electric shock or fire.</p>
	<p>Do not remove the plug by pulling on the cord; do not handle the plug with wet hands.</p> <p>This could result in electric shock or fire.</p>

 





Safety information

Caution




	<p>During an electrical storm or for a period of non-operation, remove the power plug from the electrical outlet.</p> <p>This could result in electric shock or fire.</p>
	<p>Be careful, the paper output area is hot.</p> <p>Burns could occur.</p>
	<p>If the machine has been dropped, or if the cabinet appears damaged, unplug the machine from all interface connections and request assistance from qualified service personnel.</p> <p>Otherwise, this could result in electric shock or fire.</p>
	<p>If the machine does not operate properly after these instructions have been followed, unplug the machine from all interface connections and request assistance from qualified service personnel.</p> <p>Otherwise, this could result in electric shock or fire.</p>
	<p>If the plug does not easily enter the electrical outlet, do not attempt to force it in.</p> <p>Call an electrician to change the electrical outlet, or this could result in electric shock.</p>
	<p>Do not allow pets to chew on the AC power, telephone or PC interface cords.</p> <p>This could result in electric shock or fire and/or injury to your pet.</p>

Operating method

Caution


	<p>Do not forcefully pull the paper out during printing.</p> <p>It can cause damage to the machine.</p>
	<p>Be careful not to put your hand between the machine and paper tray.</p> <p>You may get injured.</p>
	<p>Be care when replacing paper or removing jammed paper.</p> <p>New paper has sharp edges and can cause painful cuts.</p>
	<p>When printing large quantities, the bottom part of the paper output area may get hot. Do not allow children to touch.</p> <p>Burns can occur.</p>
	<p>When removing jammed paper, do not use tweezers or sharp metal objects.</p> <p>It can damage the machine.</p>
	<p>Do not allow too many papers to stack up in the paper output tray.</p> <p>It can damage the machine.</p>

Safety information





	Do not block or push objects into the ventilation opening. This could result in elevated component temperatures which can cause damage or fire.
	Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
	This machine's power reception device is the power cord. To switch off the power supply, remove the power cord from the electrical outlet.

Installation / Moving

Warning

	Do not place the machine in an area with dust, humidity, or water leaks. This could result in electric shock or fire.
--	--

Caution

	Before moving the machine, turn the power off and disconnect all cords. The information below are only suggestions based on the units weight. If you have a medical condition that prevents you from lifting, do not lift the machine. Ask for help, and always use the appropriate amount of people to lift the device safety. Then lift the machine: <ul style="list-style-type: none">• If the machine weighs under 20 kg (44.09 lbs), lift with 1 person.• If the machine weighs 20 kg (44.09 lbs) - 40kg (88.18 lbs), lift with 2 people.• If the machine weighs more than 40 kg (88.18 lbs), lift with 4 or more people. The machine could fall, causing injury or machine damage.
	Do not place the machine on an unstable surface. The machine could fall, causing injury or machine damage.
	Use only No.26 AWG ^a or larger, telephone line cord, if necessary. Otherwise, it can cause damage to the machine.
	Make sure you plug the power cord into a grounded electrical outlet. Otherwise, this could result in electric shock or fire.

Safety information

	<p>Use the power cord supplied with your machine for safe operation. If you are using a cord which is longer than 2 meters (6 feet) with a 110V machine, then the gauge should be 16 AWG or larger.</p> <p>Otherwise, it can cause damage to the machine, and could result in electric shock or fire.</p>
	<p>Do not put a cover over the machine or place it in an airtight location, such as a closet.</p> <p>If the machine is not well-ventilated, this could result in fire.</p>
	<p>Do not overload wall outlets and extension cords.</p> <p>This can diminish performance, and could result in electric shock or fire.</p>
	<p>The machine should be connected to the power level which is specified on the label.</p> <p>If you are unsure and want to check the power level you are using, contact the electrical utility company.</p>



a. AWG: American Wire Gauge

Maintenance / Checking

Caution



	<p>Unplug this product from the wall outlet before cleaning the inside of the machine. Do not clean the machine with benzene, paint thinner or alcohol; do not spray water directly into the machine.</p> <p>This could result in electric shock or fire.</p>
	<p>When you are working inside the machine replacing supplies or cleaning the inside, do not operate the machine.</p> <p>You could get injured.</p>
	<p>Keep cleaning supplies away from children.</p> <p>Children could get hurt.</p>
	<p>Do not disassemble, repair or rebuild the machine by yourself.</p> <p>It can damage the machine. Call a certified technician when the machine needs repairing.</p>
	<p>To clean and operate the machine, strictly follow the user's guide provided with the machine.</p> <p>Otherwise, you could damage the machine.</p>





Safety information

	<p>Keep the power cable and the contact surface of the plug clean from dust or water.</p> <p>Otherwise, this could result in electric shock or fire.</p>
	<ul style="list-style-type: none">• Do not remove any covers or guards that are fastened with screws.• Fuser units should only be repaired by a certified service technician. Repair by non-certified technicians could result in fire or electric shock.• The machine should only be repaired by a Samsung service technician.

Supply usage

Caution

	<p>Do not disassemble the toner cartridge.</p> <p>Toner dust can be dangerous if inhaled or ingested.</p>
	<p>Do not burn any of the supplies such as toner cartridge or fuser unit.</p> <p>This could cause an explosion or uncontrollable fire.</p>

	<p>When storing supplies such as toner cartridges, keep them away from children.</p> <p>Toner dust can be dangerous if inhaled or ingested.</p>
	<p>Using recycled supplies, such as toner, can cause damage to the machine.</p> <p>In case of damage due to the use of recycled supplies, a service fee will be charged.</p>
	<p>When toner gets on your clothing, do not use hot water to wash it.</p> <p>Hot water sets toner into fabric. Use cold water.</p>
	<p>When changing the toner cartridge or removing jammed paper, be careful not to let toner dust touch your body or clothes.</p> <p>Toner dust can be dangerous if inhaled or ingested.</p>

Machine overview

 
Accessories




Power cord



Quick installation guide



Software CD^a

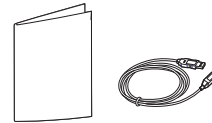

Misc. accessories^b

a. The software CD contains the print drivers, user's guide, and software applications.

b. Miscellaneous accessories included with your machine may vary by country of purchase and specific model.


Machine overview

Front view



- This illustration may differ from your machine depending on your model. There are various types of machine.
- Some features and optional goods may not be available depending on model or country (see "Features by models" on page 7).


CLX-419xN/ CLX-419xFN/ CLX-419xFW/ CLX-626xND/ CLX-626xFD Series

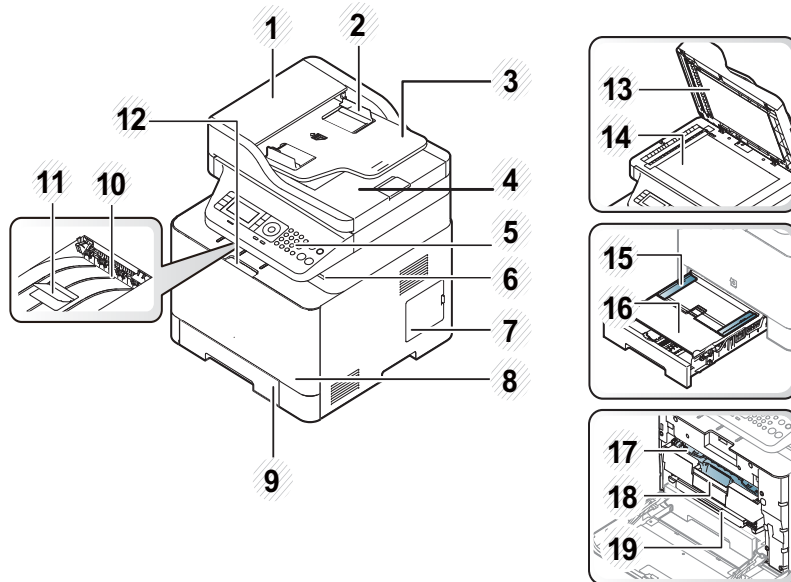

1	Document feeder cover	11	Document feeder output support
2	Document feeder width guide	12	Front cover handle
3	Document feeder input tray	13	Scanner lid
4	Document feeder output tray	14	Scanner glass
5	Control panel	15	Paper width guides on a manual feeder
6	USB memory port	16	Manual feeder
7	Control board cover	17	Toner cartridge
8	Front cover	18	Toner cartridge handle
9	Tray 1	19	Intermediate Transfer Belt (ITB)
10	Output tray		

Machine overview

CLX-626xFR/CLX-626xFW Series

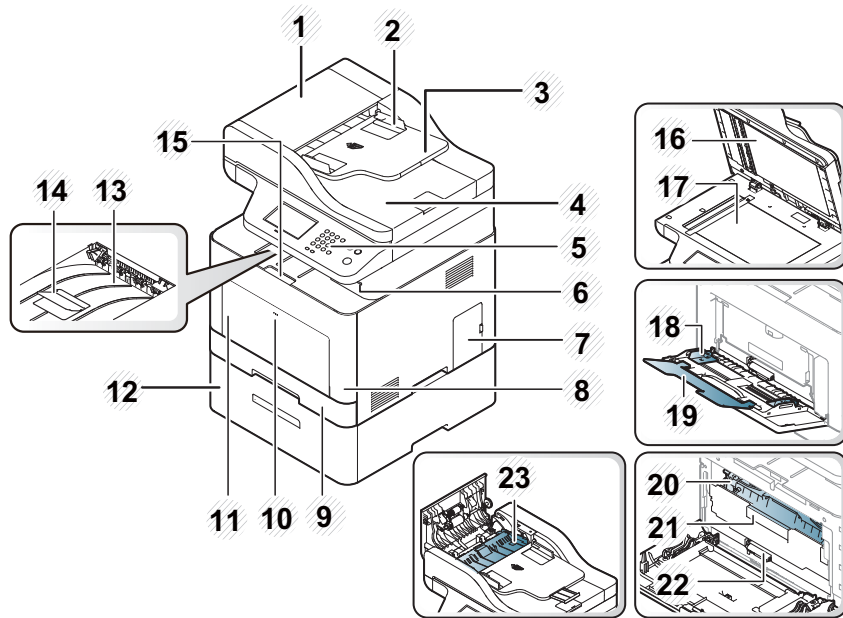

4	Dual Automatic Document Feeder(DADF) output tray	16	Scanner lid
5	Control panel	17	Scanner glass
6	USB memory port	18	Paper width guides on a multi-purpose tray
7	Control board cover	19	Multi-purpose support tray
8	Front cover	20	Toner cartridge
9	Tray 1	21	Toner cartridge handle
10	Push-release of Multi-purpose tray	22	Intermediate Transfer Belt (ITB)
11	Multi-purpose tray	23	Duplex jam cover
12	Optional tray ^a		

a. This is an optional feature. CLX-626xND/CLX-626xFD/CLX-626xFR/CLX-626xFW Series only.

1	Dual Automatic Document Feeder(DADF) cover	13	Output tray
2	Dual Automatic Document Feeder(DADF) width guide	14	Document feeder output support
3	Dual Automatic Document Feeder(DADF) input tray	15	Front cover handle


Machine overview

Rear view




- This illustration may differ from your machine depending on your model. There are various types of machine.
- Some features and optional goods may not be available depending on model or country (see "Features by models" on page 7).

CLX-419xN/ CLX-419xFN/ CLX-419xFW Series

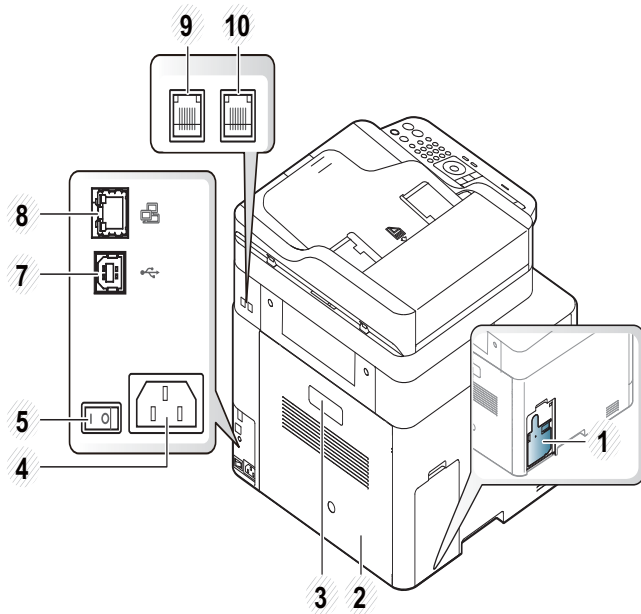

CLX-626xND/CLX-626xFD/CLX-626xFR/CLX-626xFW Series

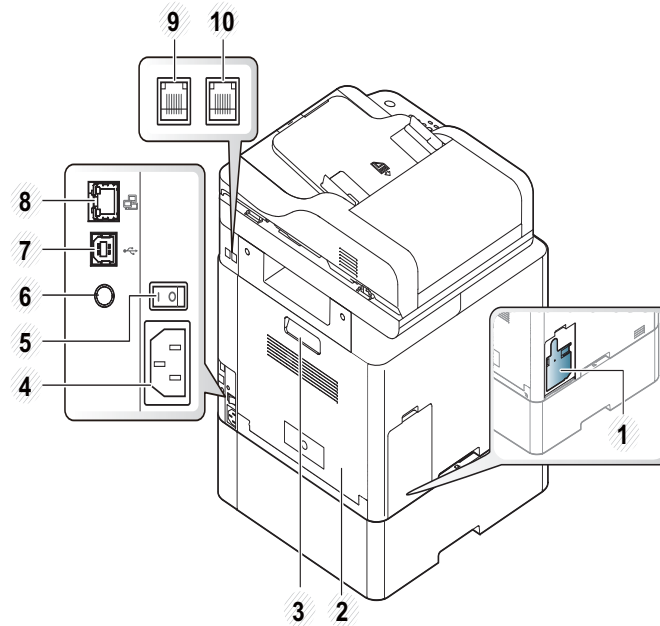

Machine overview

1	Waster toner container	4	Power receptacle	7	USB port ^b	10	Extension telephone socket (EXT.) ^c
2	Rear cover	5	Power-switch	8	Network port		
3	Rear cover handle	6	5V output port for IEEE 1284 parallel connector ^{ab}	9	Telephone line socket (LINE) ^c		

a. This is an optional feature. CLX-626xND/CLX-626xFD/CLX-626xFR/CLX-626xFW Series only.

b. The optional IEEE 1284 parallel connector can be used by plugging in both the USB port and the 5V output port.


c. CLX-419xFN/CLX-419xFW/CLX-626xFD/CLX-626xFR/CLX-626xFW Series only.

Control panel overview







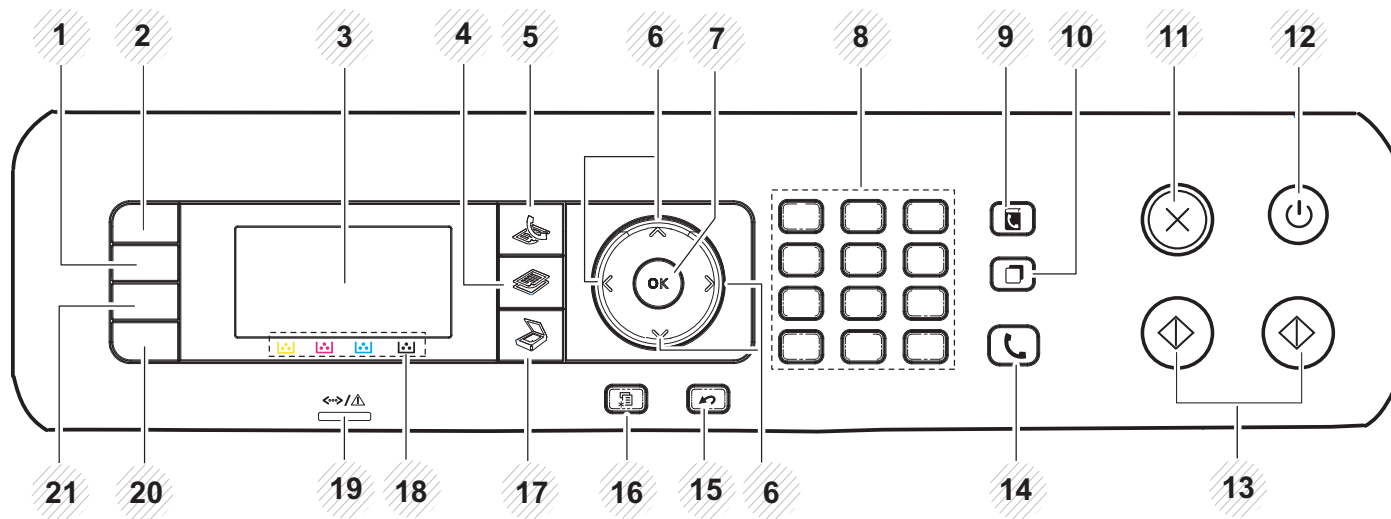



- This control panel may differ from your machine depending on its model. There are various types of control panels.
- Some features and optional goods may not be available depending on model or country (see "Features by models" on page 7).
- Some buttons may not work depending on the mode (copy, fax, or scan).

Type A (CLX-419xN/ CLX-419xFN/ CLX-626xND/ CLX-626xFD/ CLX-626xFR Series)







1	Darkness	Adjusts the brightness level to make a copy for easier reading, when the original contains faint markings and dark images.
2	ID Copy^a	Allows you to copy both sides of an ID card like a driver's license on a single side of paper (see "ID card copying" on page 73).
	Scan to^b	Sends scanned data.

Control panel overview

3	Display screen		Shows the current status and prompts during an operation.	
4	Fax^a		Switches to Fax mode.	
5	Copy^a		Switches to Copy mode.	
6	Arrows		Scroll through the options available in the selected menu, and increase or decrease values.	
7	OK		Confirms the selection on the screen.	
8	Numeric keypad		Dials a number or enters alphanumeric characters (see "Keypad letters and numbers" on page 269).	
9	Address Book		Allows you to store frequently used fax numbers or search for stored fax numbers (see "Storing email address" on page 267 or "Setting up the fax address book" on page 270).	
10	Redial/Pause^a		Redials the recently sent fax number or received caller ID in ready mode, or inserts a pause(-) into a fax number in edit mode (see "Redialing the fax number" on page 300).	
11	Stop/Clear		Stops current operation.	
12	Power		Turns the power on or off, or wakes up the machine from the power save mode. If you need to turn the machine off, press this button for more than three seconds.	
13	Start	Color		Begins a printing job in color mode.
		Black		Begins a printing job in black and white mode.
14	On Hook Dial^a			When you press this button, you can hear a dial tone. Then enter a fax number. It is similar to making a call using speaker phone (see "Receiving manually in Tel mode" on page 306).

Control panel overview


15	Back		Sends you back to the upper menu level.
16	Menu		Enters Menu mode and scrolls through the available menus (see "Menu overview" on page 36).
17	Scan^a		Switches to Scan mode.
18	Toner colors		Show the status of each toner cartridge. If the toner cartridge is low or needs to be replaced, the Status LED turns red and the display shows the message. However, the arrow mark shows which color toner is of concern or may be installed with a new cartridge (see "Toner-related messages" on page 134).
19	Status LED		Indicates the status of your machine (see "Understanding the status LED" on page 131).
20	Eco		Turn into eco mode to reduce toner consumption and paper usage when pc-printing and copying only (see "Eco printing" on page 68).
21	Direct USB		Allows you to directly print files stored on a USB memory device when it is inserted into the USB port on the front of your machine.

a. CLX-419xFN/ CLX-626xFD/ CLX-626xFR Series only.

b. CLX-419xN/ CLX-626xND Series only.



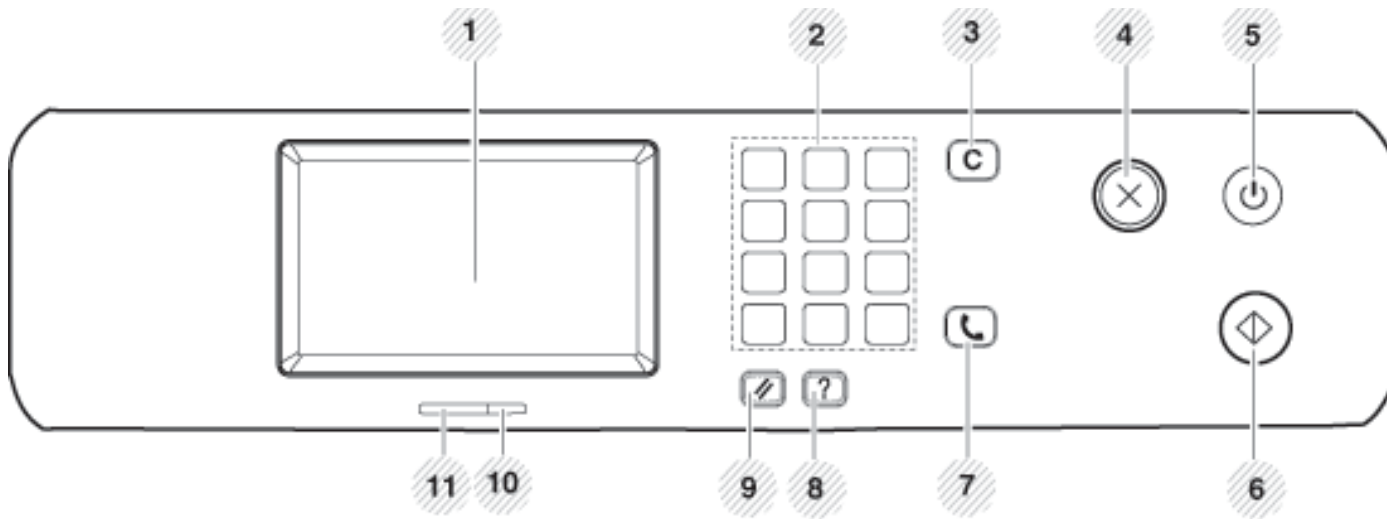

Control panel overview

Type B (CLX-419xFW/ CLX-626xFW Series)



1	Display screen	Shows the current status and displays prompts during an operation.
2	Numeric keypad	Dials a number or enters alphanumeric characters (see "Keypad letters and numbers" on page 269).
3	Clear	Deletes characters in the edit area.
4	Stop/Clear	Stops an operations at any time.
5	Power	Turns the power on or off, or wakes up the machine from the power save mode. If you need to turn the machine off, press this button for more than three seconds.

Control panel overview


6	Start		Starts a job in black or color mode.
7	On Hook Dial		When you press this button, you can hear a dial tone. Then enter a fax number. It is similar to making a call using speaker phone (see "Receiving manually in Tel mode" on page 306).
8	Help		Gives detailed information about this machine's menus or status.
9	Reset		Resets the current machine's setup.
10	Wireless LED		Shows the current status of the wireless network connection (see "Understanding the status LED" on page 131).
11	Status LED		Indicates the status of your machine (see "Understanding the status LED" on page 131).

Turning on the machine



Illustrations on this user's guide may differ from your machine depending on its options or models. Check your machine type (see "Front view" on page 22).

- 1 Connect the machine to the electricity supply first.
- 2 Turn the power switch on.

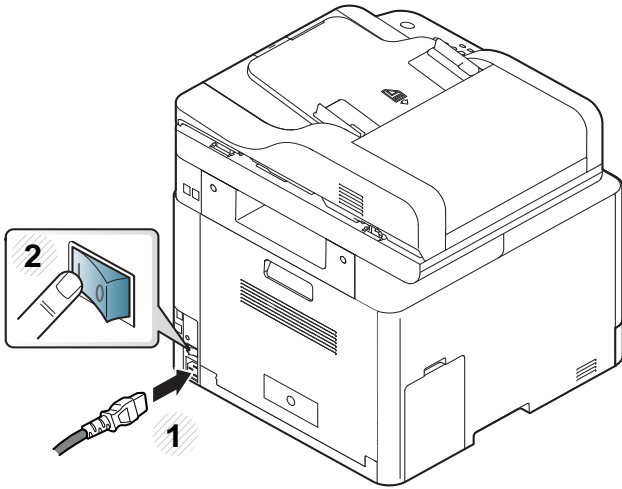

Installing the driver locally

A locally connected machine is a machine directly attached to your computer using the cable. If your machine is attached to a network, skip the following steps below and go on to installing a network connected machine's driver (see "Installing driver over the network" on page 183).



- If you are a Macintosh, Linux or UNIX operating systems user, refer to the "Installation for Macintosh" on page 174 or "Installation for Linux" on page 176 or "Installing the UNIX printer driver package" on page 189.
- The installation window in this User's Guide may differ depending on the machine and interface in use.
- Selecting **Custom Installation** allows you to choose which programs to install. When the installation window appears, select **Custom Installation**. You can select the XPS/PS printer driver or other software applications in the **Select Software** window.
- Only use a USB cable no longer than 3 meters (118 inches).

Windows

- 1 Make sure that the machine is connected to your computer and powered on.




If the "**Found New Hardware Wizard**" appears during the installation procedure, click **Cancel** to close the window.

- 2 Insert the supplied software CD into your CD-ROM drive.

If the installation window does not appear, click **Start > All programs > Accessories > Run**.

X:**Setup.exe** replacing "X" with the letter, which represents your CD-ROM drive and click **OK**.

- 3 Select **Install Now**.

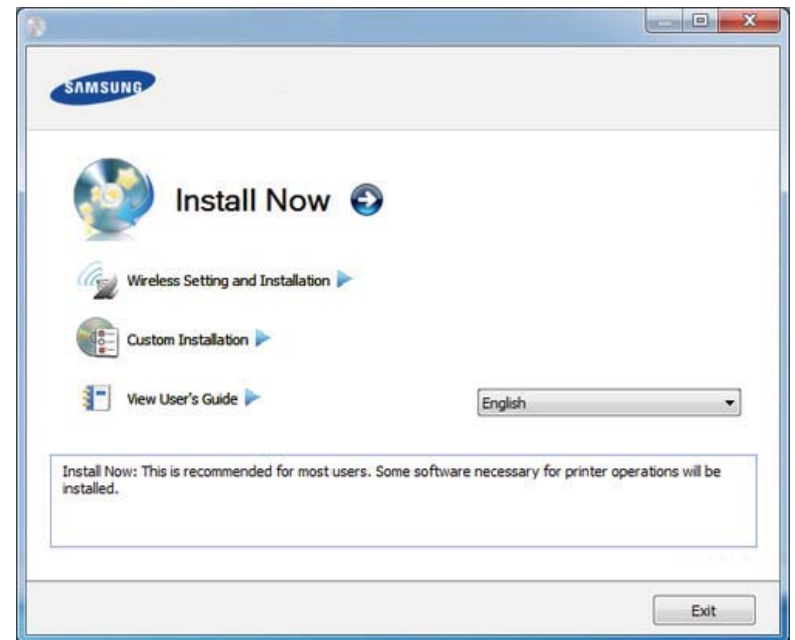

- 4 Read the **License Agreement**, and select **I accept the terms of the License Agreement**. Then, click **Next**.

- 5 Follow the instructions in the installation window.

Reinstalling the driver

If the printer driver does not work properly, follow the steps below to reinstall the driver.

Windows

- 1 Make sure that the machine is connected to your computer and powered on.
- 2 From the **Start** menu, select **Programs** or **All Programs** > **Samsung Printers** > **your printer driver name** > **Uninstall**.
- 3 Follow the instructions in the installation window.
- 4 Insert the software CD into your CD-ROM drive and install the driver again (see "Installing the driver locally" on page 32).


Reinstalling the driver



2. Menu Overview and Basic Setup

This chapter provides information about the overall menu structure and the basic setup options.

- **Menu overview** 36
- **Machine's basic settings** 46
- **Media and tray** 48
- **Basic printing** 64
- **Basic copying** 71
- **Basic scanning** 75
- **Basic faxing** 76
- **Using USB memory device** 80

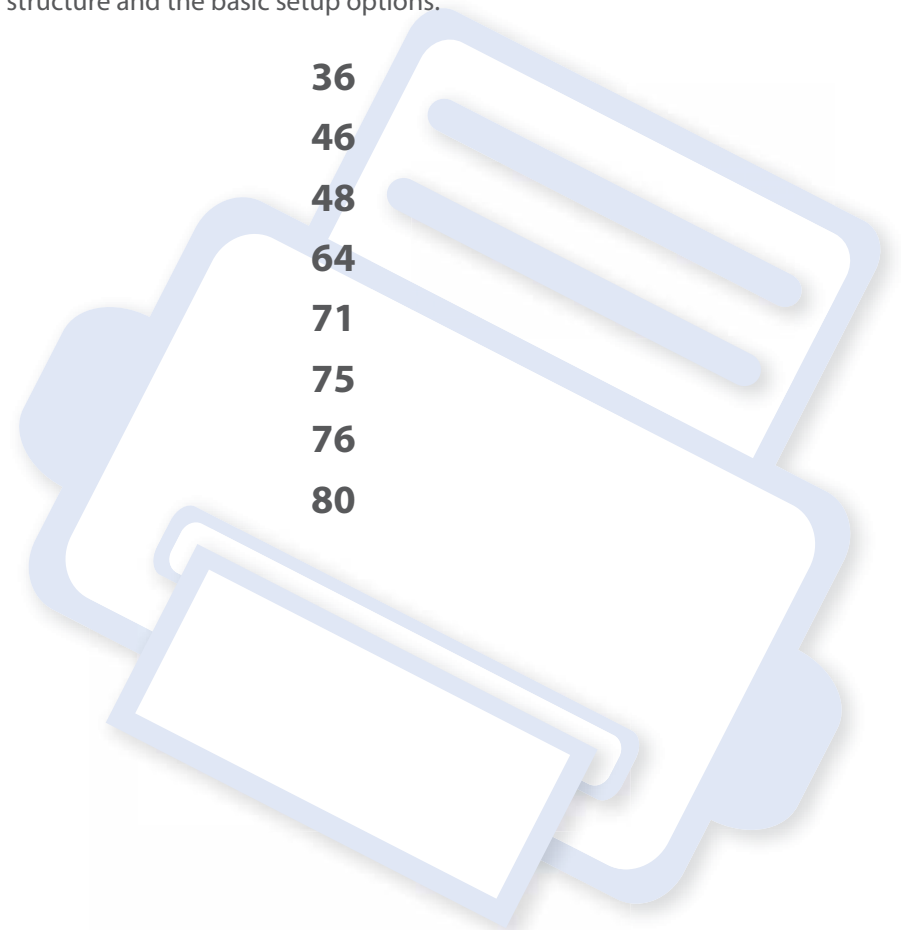

Menu overview



The control panel provides access to various menus to set up the machine or use the machine's functions.



- An checked (✓) appears next to the currently selected menu.
- Some menus may not appear on the display depending on options or models. If so, it is not applicable to your machine.
- Some menu names may differ from your machine depending on its options or the models.
- The menus are described in the Advanced Guide (see "Useful Setting Menus" on page 232).

CLX-419xN/ CLX-419xFN/ CLX-626xND/ CLX-626xFD/ CLX-626xFR Series

Accessing the menu

- 1 Select the Fax, Copy, or Scan button on the control panel depending on the feature to be used.
- 2 Select  (**Menu**) until the menu you want appears on the bottom line of the display and press **OK**.
- 3 Press the arrows until the needed menu item appears and press **OK**.
- 4 If the setting item has sub menus, repeat step 3.
- 5 Press **OK** to save the selection.
- 6 Press  (**Stop/Clear**) to return to the ready mode.

Menu overview

Fax Feature ^a		Fax Setup ^a		Copy Feature		
Darkness	Send Forward	Sending	Discard Size	Original Size	Layout	Stamp^c
Light+5- Light+1	Forward to Fax ^c	Redial Times	DRPD Mode ^{de}	Reduce/Enlarge	Normal	Item
Normal	Forward to Email ^c	Redial Term	Duplex Print ^b	Duplex ^b	2-Up	Opacity
Dark+1- Dark+5	Forward to Server ^c	Prefix Dial	Change Default	1 Sided	4-Up	Position
Original Type	Receive Forward	ECM Mode	Resolution	1->2Sided	ID Copy	WaterMark^c
Text	Forward to Fax ^c	Fax Confirmation	Darkness	1->2Sided Rotated	BookCopy ^c	Message
Text/Photo	Forward to PC	Image TCR	Original Type	2->1Sided	Adjust Bkgd	Pages
Photo	Forward to Email ^c	Dial Mode ^d	Original Size	2->2Sided	Off	Color
Resolution	Forward to Server ^c	Toll Save		2->1Sided Rotated	Auto	Size
Standard	Forward & Print	Receiving		Auto Color	Enhance Lev.1	Position
Fine	Secure Receive	Receive Mode		Darkness	Enhance Lev.2	Darkness
Super Fine	Off	Ring to Answer		Light+5- Light+1	Erase Lev.1- Erase Lev.4	
Original Size	On	Stamp RCV Name		Normal		
Duplex ^b	Print	Rcv Start Code		Dark+1- Dark+5	Edge Erase^c	
1 Sided	Cancel Job	Auto Reduction		Original Type	Off	
2 Sided				Text/Photo	Small Original	
2 Sided Rotated				Text	Hole Punch	
Multi Send				Photo	Book Center	
Delay Send				Magazine	Border Erase	

a. CLX-419xFN/ CLX-626xFD/ CLX-626xFR Series only.

b. CLX-626xFR Series only.

c. CLX-626xFD/ CLX-626xFR Series only.

d. This option may not be available depending on your country.

Menu overview

e. CLX-419xFN Series only.

Copy Setup		Scan Feature		Scan Setup	Print Setup	
Change Default	Text/ Photo	USB Feature	FTP Feature^b	Change Default	Orientation	Trapping
Original Size	Text	Original Size	Original Size	USB Default	Portrait	Normal
Copies	Photo	Original Type	Original Type	Email Default	Landscape	Off
Copy Collation	Magazine	Resolution	Resolution	FTP/SMB Default^b	Copies	Minimum
Reduce/Enlarge		Color Mode	Color Mode	Server Confirmation	Resolution	Maximum
Duplex^a		File Format	File Format	On-Error	Draft	Screen
1 Sided		Duplex^a	Duplex	On	Normal	Normal
1->2Sided		Darkness	Darkness	Off	Best	Enhanced
1->2Sided Rotated		Email Feature	SMB Feature^b		Clear Text	Detailed
2->1Sided		Original Size	Original Size		Normal	Emulation
2->2Sided		Original Type	Original Type		Off	Emulation Type
2->1Sided Rotated		Resolution	Resolution		Minimum	Setup
Auto Color		Color Mode	Color Mode		Maximum	
Darkness		File Format	File Format		Edge Enhance	
Light+5- Light+1		Duplex^a	Duplex		Normal	
Normal		Darkness	Darkness		Off	
Dark+1- Dark+5					Maximum	
Original Type						

a. CLX-626xFR Series only.

b. CLX-626xND/ CLX-626xFD/ CLX-626xFR Series only.

Menu overview

System Setup				Network	
Machine Setup	Stamp^b	Supplies Info.	Auto Tone Adj.	TCP/IP (IPv4)	Network Configuration
Machine ID	Import Setting	Demo Page	Manual Tone Adj.	DHCP	Net. Activate
Fax Number ^a	Export Setting	Address Book	Standard tone	BOOTP	Http Activate
Date & Time	Eco Settings	Fax Send Confirmation ^a	Cal. ID Sensor	Static	WINS
Clock Mode	Paper Setup	Fax Sent ^a	TonerLow Alert	TCP/IP (IPv6)	SNMP V1/V2
Language	Paper Size	Fax Options ^a	Serial Number	IPv6 Activate	SNTP
Default Mode	Paper Type	E-mail Sent	Clear Setting	DHCPv6 Config	UPNP
Power Save	Tray 1	Fax Received ^a	All Settings	Ethernet Speed	MDNS
Wakeup Event	Tray 2 ^d	Fax Schedule Jobs ^a	Fax Setup ^a	Automatic	SetIP
System Timeout	MP Tray ^b	Network Configuration	Copy Setup	10Mbps Half	SLP
Job Timeout	Manual Feeder ^e	PCL Font	Scan Setup	10Mbps Full	
Altitude Adjustment	Change Default	PS Font	System Setup	100Mbps Half	
Auto Continue	Paper Source	Usage Counter	Network Setup	100Mbps Full	
Auto CR	Margin	Account	Address Book	1Gbps Full	
Auto Tray Switch ^b	Tray Confirm	Maintenance	Fax Sent ^a	802.1x	
Paper Substitution ^c	Sound	CLR Empty Msg. ^f	E-mail Sent	Clear Settings	
Tray Protection ^b	Key Sound	Supplies Life	Fax Received ^a		
Skip Blank Pages	Alarm Sound	Image Mgr.	Job Manage.^b		
PDF Type ^b	Fax Sound ^a	Custom Color	Active Job		
	Report	Default	Secured Job		
	Configuration		Stored Job		

Menu overview

- a. CLX-419xFN/ CLX-626xFD/ CLX-626xFR Series only.
- b. CLX-626xND/ CLX-626xFD/ CLX-626xFR Series only.
- c. This option only appears if "Auto Continue > 0 sec" is enabled.
- d. This is an optional feature. CLX-626xND/ CLX-626xFD/ CLX-626xFR Series only.
- e. CLX-419xN/ CLX-419xFN Series only.
- f. This option only appears when small amount of toner is left in the cartridge.

CLX-419xFW/ CLX-626xFW Series




You can set menus easily using the touch screen.











- The **Main** screen is shown on the touch screen on the control panel.
- Some menus are grayed out depending on your options or models.
- Some menu names may differ from your machine depending on its options or the models.

Introducing the Home Screen



-  **(Copy)**: When you press **Copy** from the display screen, the Copy screen appears which has several tabs and lots of copying options.
-  **(Scan)**: When you press **Scan** from the display screen, the Scan screen appears which has several tabs and lots of Scanning options.
-  **(Fax)**: When you press **Fax** from the display screen, the Fax screen appears which has several tabs and lots of Faxing options.

Menu overview

-  **(Setup)**: You can browse current machine settings or change machine values.
-  **(Job Status)**: Job status shows the jobs currently running, completed job or in queue.
-  **(Eco)**: You can view the eco settings.
-  **(Direct USB)**: Enters the USB menu when USB memory is inserted into the USB memory port on your machine.
-  **(Document Box)**: You can store the printing data, print the secure page or shared folder.
-  : Shows the toner status.
-  : Selects the LCD brightness, language, and diagnostic.
-  : Scroll through available options.

Menu overview

Copy			Fax		
Basic Copy	Layout	Color Mode	Manual Send	Delayed Send	Group Dial Send
Darkness	Adjust Background	Original Size	To	To	To
Original Type	Edge Erase ^a	Original Type	Darkness	Darkness	Darkness
Text	Stamp ^a	N-up Copy	Resolution	Resolution	Resolution
Text/Photo	Watermark ^a	Duplex ^a	Duplex ^a	Duplex ^a	Duplex ^a
Photo	ID Copy	Darkness	Original Type	Original Type	Original Type
Magazine	Darkness	Color Mode	Original Size	Original Size	Original Size
Color Mode	Original Type	Original Size	Color Mode	SpeedDial Send	Color Mode
Auto	Color Mode	Original Type	On Hook Dial	To	Redial
Color	Color	N-Up	To	Darkness	To
Mono	Mono	Book Copy^a	Darkness	Resolution	Darkness
Custom Copy	Auto Fit Copy	Darkness	Resolution	Duplex ^a	Resolution
Duplex ^a	Darkness	Color Mode	Duplex ^a	Original Type	Duplex ^a
Reduce/Enlarge	Original Type	Original Size	Original Type	Original Size	Original Type
Darkness	Color Mode	Original Type	Original Size	Color Mode	Original Size
Color Mode	Collate Copy	Book Copy	Color Mode		Color Mode
Original Size	Duplex ^a				
Original Type	Darkness				
Tray					

a. CLX-626xFW Series only.

Menu overview

Scan					Eco
Scan to Local PC	Scan to Email	Duplex^a	Original Type	Scan to Shared Folder^a	Eco-On
Destination	To	Darkness	Original Size	Original Size	On
Resolution	Original Type	File Name	Resolution	Resolution	Off
Color Mode	Original Size	Scan to FTP^a	Color Mode	Color Mode	On-Forced
File Format	Resolution	Destination	File Format	File Name	Settings
PDF Encryption ^a	Color Mode	Original Type	PDF Encryption ^a	File Format	Default Mode
Duplex ^a	File Format	Original Size	Duplex ^a	PDF Encryption ^a	Feature Configuration
Original Size	PDF Encryption ^a	Resolution	Darkness	Duplex ^a	
Original Type	Duplex ^a	Color Mode	File Name	Darkness	
Darkness	Darkness	File Format	Scan to USB	File Policy	
Scan to Network PC	File Name	PDF Encryption ^a	Original Type	Scan to WSD	
Destination	Scan to SMB^a	Duplex ^a	Original Size		
Resolution	Destination	Darkness	Resolution		
Color Mode	Original Type	File Name	Color Mode		
File Format	Original Size	Scan to Custom Email	File Name		
PDF Encryption ^a	Resolution	To	File Format		
Duplex ^a	Color Mode	Subject	PDF Encryption ^a		
Original Size	File Format	From	Duplex ^a		
Original Type	PDF Encryption ^a	CC	Darkness		
Darkness		BCC	File Policy		

a. CLX-626xFW Series only.

Menu overview

Direct USB	Setup				
Print From	Machine Setup	Print	Fax Setup	SNMP V1/V2	WLAN Defaults
File Navigation	Default Setting	Reset	Send Forward	SNTP	WLAN Signal
Auto Fit	Copy Default	Reports	Receive Forward	UPNP	Clear Settings
Copies	Scan Default	Cofiguration	Toll Save	MDNS	Print Setup
Duplex^a	Fax Default	Supplies Information	Secure Receive	SetIP	Orientation
Select Tray	Paper Setup	Demo Page	Prefix Dial	SLP	Copies
Color Mode	Tray1	Help List	Stmp Rcvd Name	Wireless	Resolution
Scan to USB	Tray2^b	Address Book	ECM Mode	Wi-Fi ON/OFF	Clear Text
Original Type	MP Tray^a	Fax Confirmation	Modem Speed	Wi-Fi Direct	Edge Enhance
Original Size	Manual Feeder^c	Fax Sent	Image TCR	On/ Off	Trapping
Resolution	Margin	Email Sent	Setup Wizard	Device Name	Screen
Color Mode	Tray Behaviour	Fax Received	Network Setup	IP Address	Emulation
File Name	Auto Tray Switch^a	Fax Schedule Jobs	Ethernet Speed	Group Owner	Select Tray
File Format	Paper Substitution	Network Configuration	TCP/IP (IPv4)	Network Key	
Duplex^a	Auto Continue	PCL Font List	TCP/IP (IPv6)	Status	
Darkness	Tray Protection^a	PS Font List	802.1x	WPS Settings	
File Policy	Address Book	Usage Counter	Ethernet Activate	Connect via PBC	
File Manage	PhoneBook	Account	Http Activate	Connect via PIN	
Show Space	Email		WINS	WLAN Settings	

a. CLX-626xFW Series only.

b. This is an optional feature.CLX-626xFW Series only.

c. CLX-419xFW Series only.

Menu overview


Setup			Job Status	Document Box ^a
Initial Setup	Toner Status Alert	Admin Setup	Copy	System Boxes
Machine ID	Skip Blank Pages	User Access Control	Show Job List	Stored Print
Select Country	Job Timeout	Off	Detail Infor	Secured Print
Language	Altitude Adjustment	Network	Job Cancel	Shared Folder
Date&Time	Auto CR	Authentication	Manual Fax Tx	Box list navigation
Clock Mode	Firmware Version	Local Authentication	Memory Fax Tx	Search/Sort
Default Mode	PDF Type	Network Accounting	Fax Reserved Job	Duplex
Sound/Volume	ImageOverwrite	Stamp ^a	Fax Rx	Select Tray
Power Save	Default Paper Size	Item	Scan to Email	Copies
Wakeup Event	CLR Empty Msg	Opacity	Scan to Server	Color Mode
System Timeout	Image Management	Position	Scan to USB	
Import Setting	Restore Options	Chang Admin. Password	PC Print	
Export Setting	Copy Default	Troubleshooting	USB Print	
	Fax Default	Language	Report Print	
	Scan Default		Paper Mismatch	
	Sent Report		Scan Another	
	Rcvd Report		Completed Job	

a. CLX-626xFW Series only.

Machine's basic settings



You can set the machine's settings by using the **Device Settings** in Samsung Easy Printer Manager program.

- For Windows and Macintosh users, see "Device Settings" on page 329.
 - For Windows and Macintosh users, you set from **Samsung Easy Printer Manager** >  **(Switch to advanced mode)** > **Device Settings**, see "Device Settings" on page 329.

After installation is complete, you may want to set the machine's default settings.

To change the machine's default settings, follow these steps:



It may be necessary to press **OK** to navigate to lower-level menus for some models.

1

Select  (**Menu**) button on the control panel.

2

Press **System Setup** > **Machine Setup**.

3

Select the option you want, then press **OK**.

- **Language:** change the language that is displayed on the control panel.
- **Date & Time:** When you set the time and date, they are used in delay fax and delay print. They are printed on reports. If, however, they are not correct, you need to change it for the correct time being.




Enter the correct time and date using arrows or numeric keypad (see "Keypad letters and numbers" on page 269).

- Month = 01 to 12
- Day = 01 to 31
- Year = requires four digits
- Hour = 01 to 12
- Minute = 00 to 59

- **Clock Mode:** You can set your machine to display the current time using either a 12-hour or 24-hour format.
- **Power Save:** When you are not using the machine for a while, use this feature to save power.

Machine's basic settings



- When you press the power button, start printing, or a fax is received, the product will wake up from the power saving mode.
- Press  (**Menu**) > **System Setup** > **Machine Setup** > **Wakeup Event** > **Button Press** > **On** on the control panel. When you press any button except power button, the machine wake up from the power save mode.

- **Altitude Adjust:** Print quality is affected by atmospheric pressure, which atmospheric pressure is determined by the height of the machine above sea level. Before you set the altitude value, determine the altitude where you are (see "Altitude adjustment" on page 266).

4 Select the option you want, then press **OK**.

5 Press **OK** to save the selection.

6 Press  (**Stop/Clear**) to return to ready mode.



Refer to below links to set other settings useful for using the machine.

- See "Entering various characters" on page 269.
- See "Keypad letters and numbers" on page 269.
- See "Setting the paper size and type" on page 58.
- See "Setting up the fax address book" on page 270.

Media and tray

This chapter provides information on how to load print media into your machine.




- Using print media that does not meet these specifications may cause problems or require repairs. Such repairs are not covered by Samsung's warranty or service agreements.
- Make sure not to use the inkjet photo paper with this machine. It could cause damage to the machine.
- Using inflammable print media can cause a fire.
- Use designated print media (see "Print media specifications" on page 143).
- Make sure not to use the inkjet photo paper with this machine. It could cause damage to the machine.



The use of inflammable media or foreign materials left in the printer may lead to overheating of the unit and, in rare cases may cause a fire.

Tray overview

To change the size, you need to adjust the paper guides.

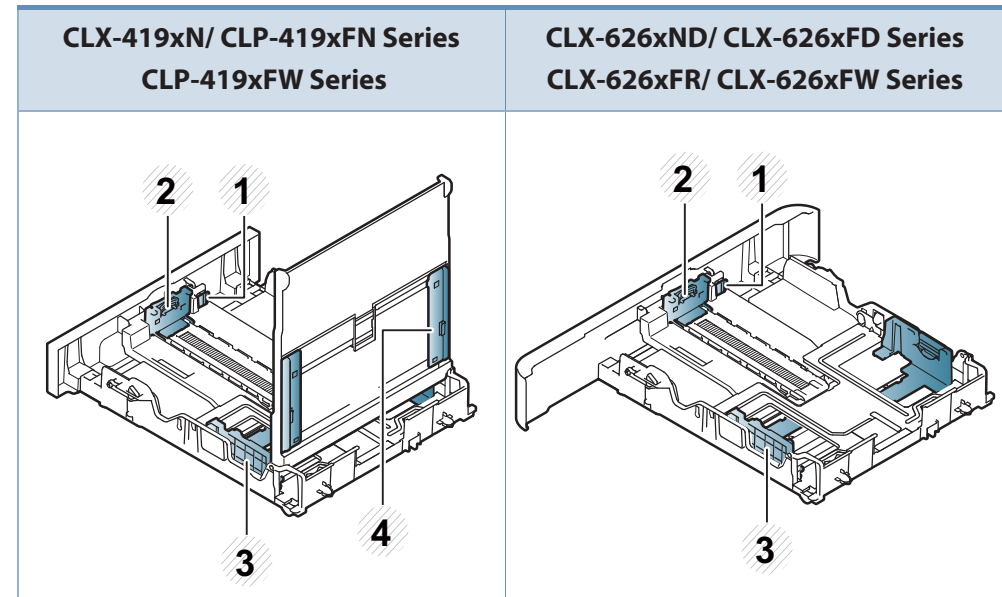


- 1 Tray extend lever
- 2 Paper length guide
- 3 Paper width guide
- 4 Paper width guides on a manual feeder

Media and tray



For Legal-sized paper

Push button as shown and pull out the tray.

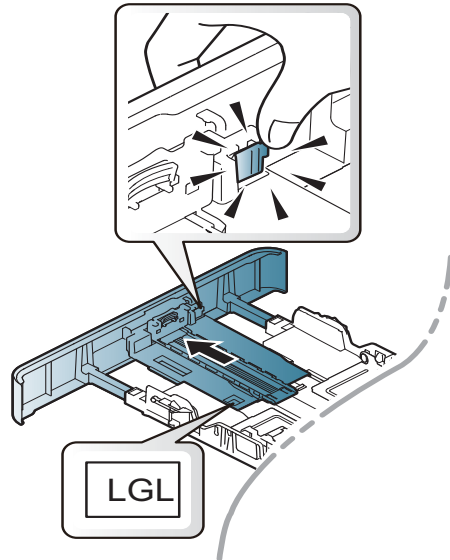

Illustrations on this user's guide may differ from your machine depending on its options or models. Check your machine type (see "Tray overview" on page 48).



If you do not adjust the guide, it may cause paper registration, image skew, or jamming of the paper.


Loading paper in the tray



Illustrations on this user's guide may differ from your machine depending on its options or models. Check your machine type (see "Front view" on page 22).


Tray 1 / optional tray

- 1 Pull out the paper tray.

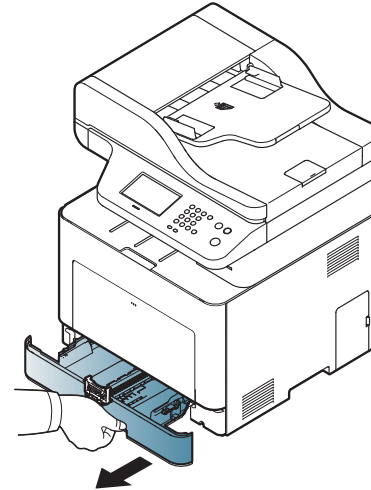


Media and tray

- 2** Hold the tray with one hand, and with the other hand squeeze and slide the paper length guide to locate them in the correct paper size slot marked at the bottom of the tray (see "Tray overview" on page 48).

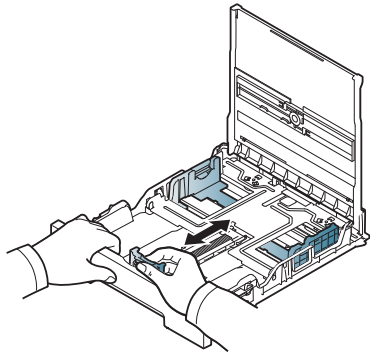


CLX-419xN/ CLX-419xFN Series
CLX-419xFW Series

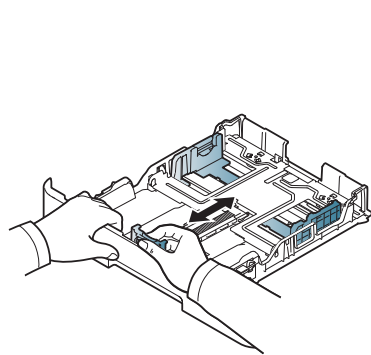


CLX-626xND/ CLX-626xFD Series
CLX-626xFR/ CLX-626xFW Series

- 3** Flex or fan the edge of the paper stack to separate the pages before loading papers.

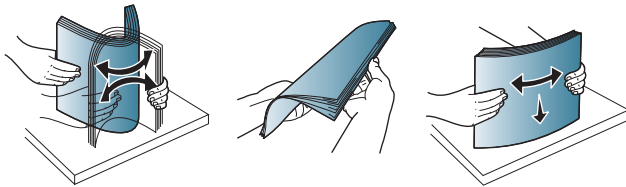


- 4** After inserting paper into the tray, squeeze the paper width guides and paper length guide.

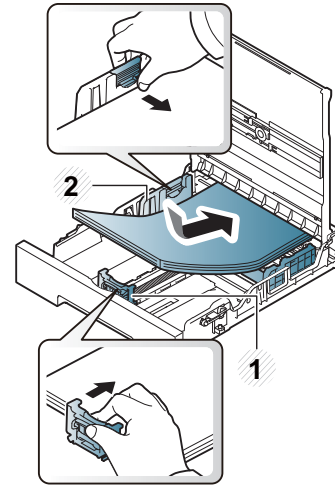

CLX-419xN/ CLX-419xFN Series
CLX-419xFW Series

- 1 Paper length guide
- 2 Paper width guide

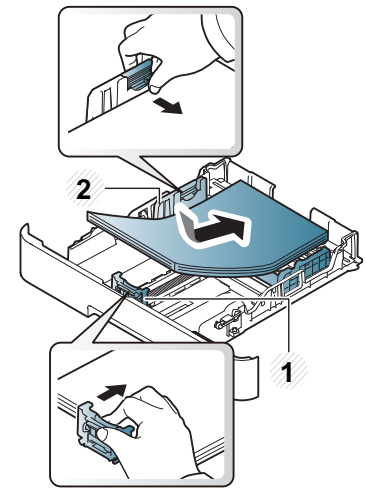


CLX-626xND/ CLX-626xFD Series
CLX-626xFR/ CLX-626xFW Series


Media and tray




- Do not push the paper width guide too far causing the media to warp.
- If you do not adjust the paper width guide, it may cause paper jams.

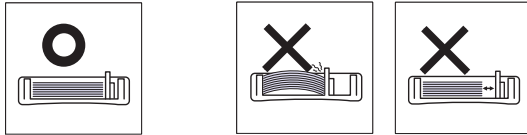

- Do not use a paper with a leading-edge curl, it may cause a paper jam or the paper can be wrinkled.

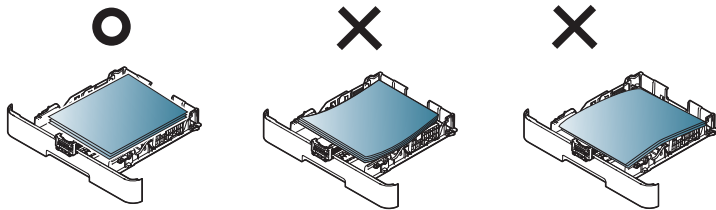

- 5 Insert the tray back into the machine.

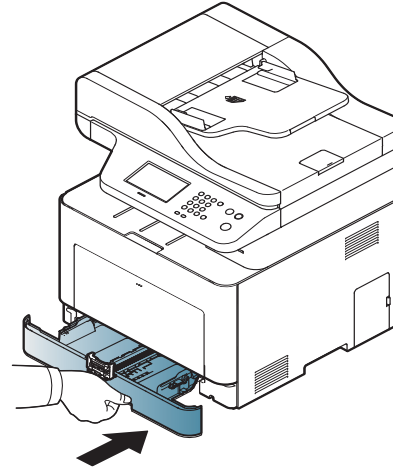

- 6 When you print a document, set the paper type and size for tray (see "Setting the paper size and type" on page 58).



The settings set from the machine driver override the settings on the control panel.

- a To print from an application, open an application and start the print menu.
- b Open **Printing Preferences** (see "Opening printing preferences" on page 66).
- c Press the **Paper** tab in **Printing Preferences**, and select an appropriate paper type.
For example, if you want to use a label, set the paper type to **Label**.
- d Select **Auto Select** in paper source, then press **OK**.
- e Start printing in application.

Media and tray

Multi-purpose (or Manual feeder) tray

The multi-purpose (or manual feeder) tray can hold special sizes and types of print material, such as postcards, note cards, and envelopes (see "Print media specifications" on page 143).



If you want to print from the manual feeder for CLX-419xN/ CLX-419xFN/ CLX-419xFW Series, there should be paper in the tray1.


Tips on using the multi-purpose (or manual feeder) tray

- Load only one type, size and weight of print media at a time in the multi-purpose (or manual feeder) tray.
- To prevent paper jams, do not add paper while printing when there is still paper in the multi-purpose (or manual feeder) tray. This also applies to other types of print media.
- Always load the specified print media only to avoid paper jams and print quality problems (see "Print media specifications" on page 143).
- Flatten any curl on postcards, envelopes, and labels before loading them into the multi-purpose (or manual feeder) tray.


1 Hold the handle of multi-purpose tray and pull it down to open.

OR

Pull out the paper tray for manual feeding.

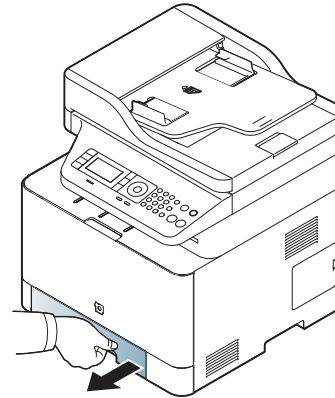


CLX-419xN/ CLX-419xFN Series
CLX-419xFW Series

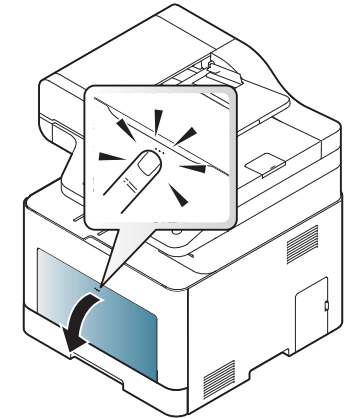


CLX-626xND/ CLX-626xFD Series
CLX-626xFR/ CLX-626xFW Series

Media and tray

2 Load the paper.


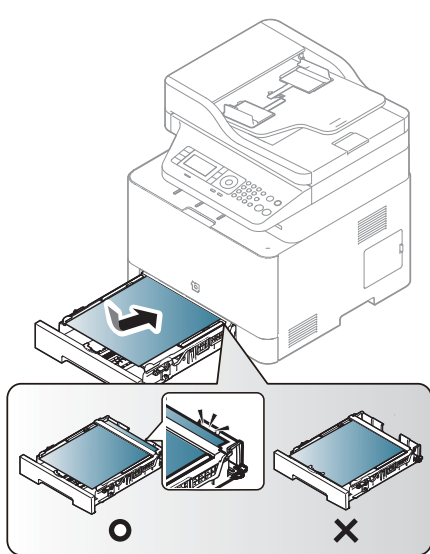


CLX-419xN/ CLX-419xFN Series
CLX-419xFW Series

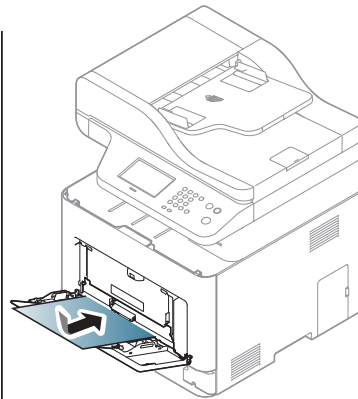


CLX-626xND/ CLX-626xFD Series
CLX-626xFR/ CLX-626xFW Series

3 Squeeze the multi-purpose (or manual feeder) tray paper width guides and adjust them to the width of the paper. Do not force them too much, or the paper will bent resulting in a paper jam or skew.

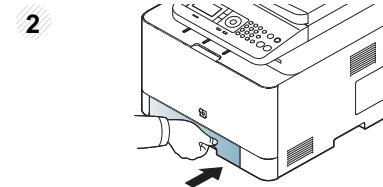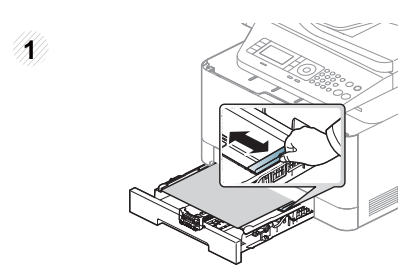

CLX-419xN/ CLX-419xFN Series
CLX-419xFW Series

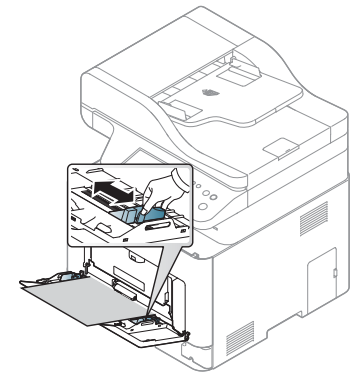

CLX-626xND/ CLX-626xFD Series
CLX-626xFR/ CLX-626xFW Series



- When printing the special media, you must follow the loading guideline (See "Printing on special media" on page 54).
- When papers overlap when printing using Multi-purpose tray, open tray 1 and remove overlapping papers then try printing again.
- When paper does not feed well while printing, push the paper in manually until it starts feeding automatically.

Media and tray

- 4** When you print a document, set the paper type and size for the multi-purpose tray.

For information about setting the paper type and size on the control panel (see "Setting the paper size and type" on page 58).



The settings made from the machine driver override the settings on the control panel.

- a** To print in application, open an application and start the print menu.
- b** Open **Printing Preferences** (See "Opening printing preferences" on page 66).
- c** Press the **Paper** tab in **Printing Preferences**, and select an appropriate paper type.
For example, if you want to use a label, set the paper type to **Label**.
- d** Select **MP Tray** (or **Manual Feeder**) in paper source, then press **OK**.
- e** Start printing in application.

If your machine has multi-purpose tray, press **OK** on the control panel each time you load a sheet of paper.

Printing on special media

The table below shows the special media usable in tray.

The media is also shown in the **Printing Preferences**. To get the highest printing quality, select the proper media type from the **Printing preferences** window > **Paper** tab > **Paper Type** (see "Opening printing preferences" on page 66).

For example, if you want to print on labels, select **Labels** for **Paper Type**.



- When using special media, we recommend you feed one sheet at a time (see "Print media specifications" on page 143).
- Illustrations on this user's guide may differ from your machine depending on its options or models. Check your machine type (see "Front view" on page 22).

To see for paper weights for each sheet, refer to "Print media specifications" on page 143.

Types	Tray 1	Optional tray ^a	Manual feeder/ Multi-purpose tray
Plain	•	•	•
Thick	•	•	•
Thicker	•		•
Thin	•	•	•
Bond	•	•	•
Color	•		•
CardStock	•	•	•
Labels	•		•
Transparency	•		•

Media and tray

Types	Tray 1	Optional tray ^a	Manual feeder/ Multi-purpose tray
Envelope	•		•
Preprinted	•		•
Cotton	•		•
Recycled	•	•	•
Archive	•	•	•
Letterhead	•	•	•
Punched	•	•	•
Glossy Photo	•	•	•


a. CLX-626xND /CLX-626xFD /CLX-626xFR /CLX-626xFW Series only.

(•: Supported, Blank: Not supported)

Envelope

Printing successfully on envelopes depends upon the quality of the envelopes.

To print an envelope, place it as shown in the following figure.

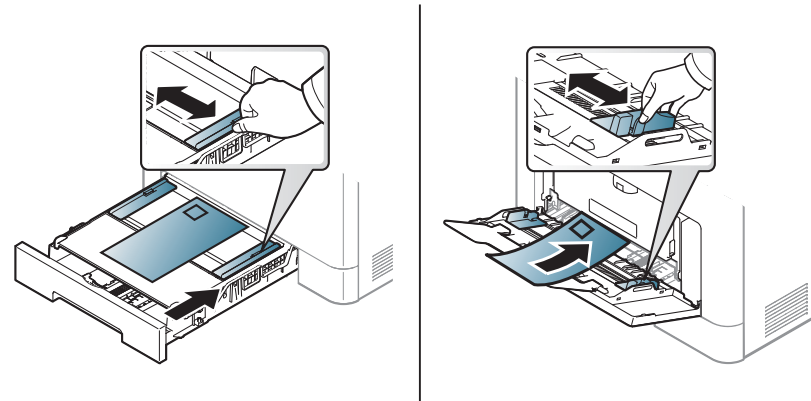

CLX-419xN/ CLX-419xFN Series
CLX-419xFW Series

CLX-626xND/ CLX-626xFD Series
CLX-626xFR/ CLX-626xFW Series

- When selecting envelopes, consider the following factors:
 - **Weight:** should not exceed 90 g/m² otherwise; jams may occur.
 - **Construction:** should lie flat with less than 6 mm curl and should not contain air.
 - **Condition:** should not be wrinkled, nicked, nor damaged.
 - **Temperature:** should resist the heat and pressure of the machine during operation.
- Use only well-constructed envelopes with sharp and well-creased folds.
- Do not use stamped envelopes.
- Do not use envelopes with clasps, snaps, windows, coated lining, self-adhesive seals, or other synthetic materials.
- Do not use damaged or poorly made envelopes.