

 


MICROWAVE OVEN


CM1829A (1800Watts)

CM1529A (1500Watts)

Owner's Instructions

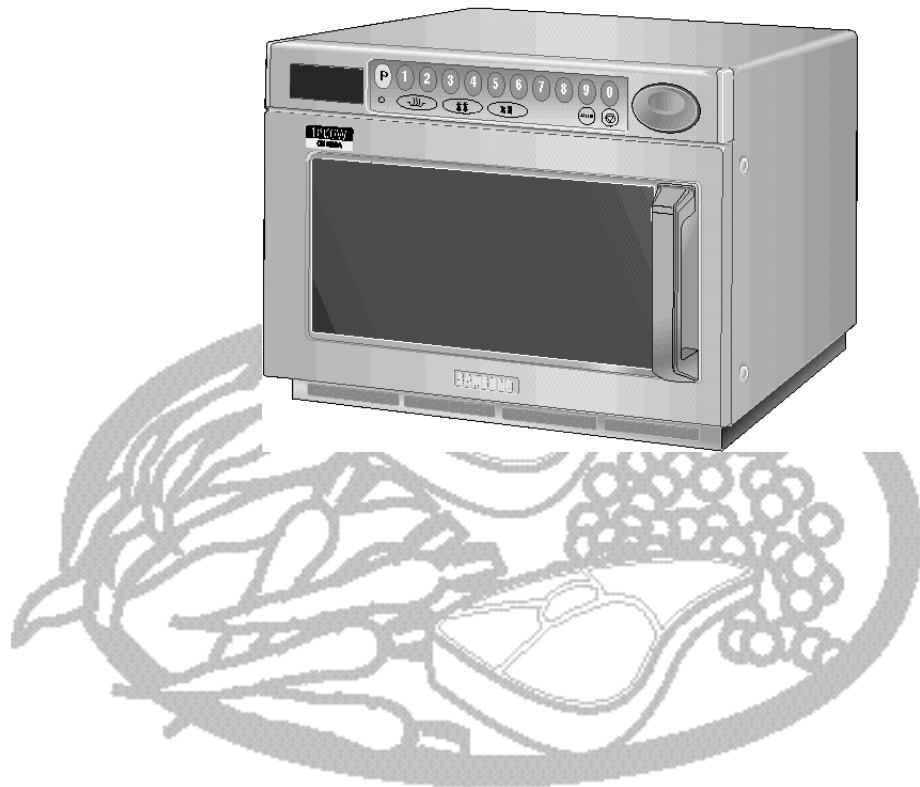

Code No. : DE68-00031A

 

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY:



- (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
 - (1) Door (bent)
 - (2) Hinges and latches (broken or loosened)
 - (3) Door seals and sealing surfaces
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.



WARNING

Always observe Safety Precautions when using your oven.
See "Important Safety Instructions" on the next page.

Never try to repair the oven on your own – dangerous voltage is inside. If the oven needs to be repaired, call 1-800-SAMSUNG for the name of an authorized service center near you.



Please record the model number and serial number from the side of your Samsung microwave oven and the date of purchase in the space provided below. We recommend that you keep your purchase receipt with this manual for easy warranty service.

Model Number _____
Serial Number _____
Date Purchased _____
Dealer _____

The step-by-step procedures use the different symbols below.



 
Press

 


Important



Note





Thank You for Choosing Samsung

Thank you for choosing Samsung! Your new oven represents the very latest in microwave cooking technology. This oven is a full-featured, easy-to-use appliance built to strict quality standards set by Samsung — the highest in the industry. We're proud to offer you a product that will provide convenient, dependable service for years to come.

IMPORTANT SAFETY INSTRUCTIONS When Using Any Electrical Appliance

 
- When using any electrical appliance, basic safety precautions should be followed, including the following:

 


WARNING : To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

- Read all safety instructions before using the appliance.
- Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" inside the front cover of this manual.
- This appliance must be grounded. Connect only to properly grounded outlets. See "Grounding Instructions" on page 3.
- Install or locate this appliance only in accordance with the provided installation instructions.
- Some products, such as whole eggs and sealed containers, may explode and should not be heated in this oven.
- Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for laboratory use.
- As with any appliance, close supervision is necessary when used by children.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- This appliance should be serviced only by qualified service personnel. Contact the nearest authorized service facility for examination, repair, or adjustment.
- Do not cover or block any of the openings on the appliance.
- Do not store this appliance outdoors. Do not use this product near water – for example, near a kitchen sink, in a wet basement, or near a swimming pool, and the like.
- Keep the inside of oven clean. Food particles or spattered oils stuck to the oven walls or floor can cause reduce the efficiency of the oven.

SAVE THESE INSTRUCTIONS






GB

When Using Any Electrical Appliance (cont.)

- Do not immerse cord or plug in water.
- Keep cord away from heated surfaces.
- Do not let cord hang over edge of table or counter.
- When cleaning door and oven surfaces, use only mild, non-abrasive soaps or detergents applied with a sponge or soft cloth.
- To reduce the risk of fire in the oven cavity:
 - a. Do not overcook food. Carefully attend appliance if paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - b. Remove wire twist-ties from plastic cooking bags before placing bags in oven.
 - c. If materials inside the oven ignite, keep the oven door closed, turn the oven off, disconnect the power cord, or shut off the power at the fuse or circuit breaker panel.
 - d. Do not use the oven compartment for storage purposes. Do not leave paper products, cooking utensils, or food in the oven when not in use.
- Do not try to preheat oven or operate while empty.
- Do not cook without the plate tray in place on the oven floor as food will not cook properly.
- Do not cover the rear ventilation slots with cloths or paper.
- Dishes and containers can become hot. Handle with care.
- Carefully remove utensil coverings, directing steam away from hands and face.
- Do not defrost frozen beverages in narrow-necked bottles.
The container may break.
- Remove lids from baby food before heating.
After heating stir well and test temperature before serving to baby.

 SAVE THESE INSTRUCTIONS





GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.



WARNING: Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceperson if the grounding instructions completely understand, or if doubt exist as to whether the appliance is properly grounded.

Use of Extension Cords

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

Longer cord sets or extension cords are available and may be used if care is exercised in their use.

If a long cord or extension cord is used-

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
2. The extension cord must be a grounding-type 3-wire cord and it must be plugged into a 3-slot outlet.
3. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

If you use an extension cord, the interior light may flicker and the blower may vary when the microwave oven is on. Cooking times may be longer, too.



WARNING: Do not cut or remove the third (ground) prong from the power cord under any circumstances.

 
Preferred method of grounding

 
Plug the three-prong power cord into a properly grounded outlet of standard AC 230 voltage, 60 Hz. Your oven should be the only appliance on this circuit.

Using an adapter

Due to potential safety hazards, we strongly recommend against the use of an adapter plug. However, if you still elect to use an adapter, where local codes may permit, a *TEMPORARY CONNECTION* may be made to a properly grounded 2-prong wall receptacle by the use of a UL/CSA-listed adapter, which is available at most hardware stores.


SAVE THESE INSTRUCTIONS







Control Panel (CM1829A, CM1529A)

 
GB

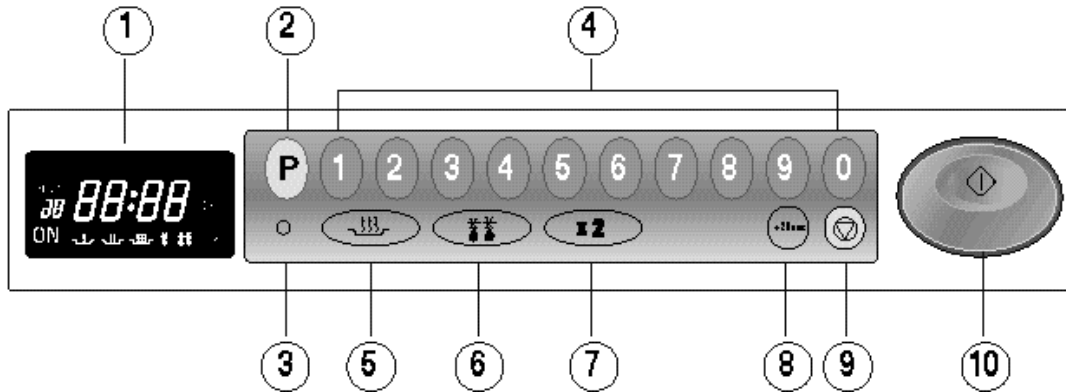

1. DISPLAY
2. PROGRAM PAD
3. PROGRAM LOCK PAD
4. NUMBER PADS(Time, Memory Programming)
5. POWER LEVEL SELECTOR PAD
6. DEFROST SELECTOR PAD
7. DOUBLE QUANTITY PAD
8. +20sec PAD (One Touch Cook Pad)
9. STOP/CANCEL PAD
10. START BUTTON

   DISPLAY

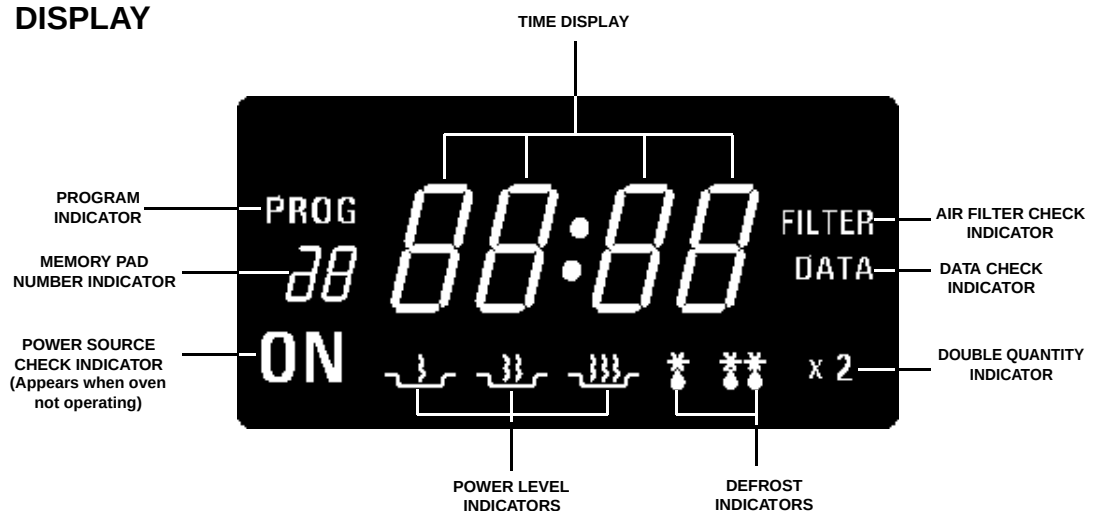








Technical Specifications



SAMSUNG strives continually to improve its products. Both the design specifications and these user instructions are thus subject to change without notice.

Model	CM1829A	CM1529A
Power source	230 VAC , 60 Hz	230 VAC , 60 Hz
Power consumption Microwave	3, 200 W	2, 700 W
Output power	1, 800 W (IEC-705)	1, 500W (IEC-705)
Operating frequency	2, 450 MHz	2, 450 MHz
Dimensions (W x H x D)		
Outside	464 x 368 x 557 mm	464 x 368 x 557 mm
Oven cavity	370 x 190 x 370 mm	370 x 190 x 370 mm
Volume	26 litre	26 litre
Net Weight	32 Kg approx.	32 Kg approx.

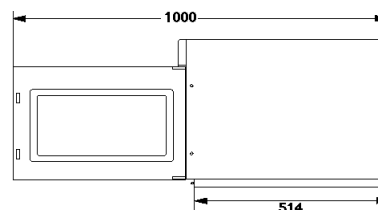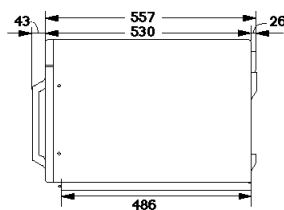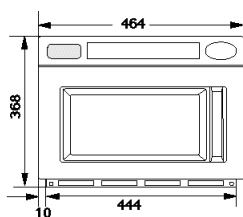    

 

GB

Warranty Information

Limited Warranty to Original Purchaser

This Samsung product is warranted by Samsung Electronics America, Inc. (hereafter referred to as SEA) against manufacturing defects in material or workmanship for the following periods:

Labor	: One year (carry-in)
Parts	: One year
Magnetron	: Eight year

SEA further warrants that if this product fails to operate properly within the specified warranty period and the failure is due to improper workmanship or defective material, SEA will repair or replace the product at its option.

 
All warranty repairs or part replacements must be performed by an SEA Authorized Service Center.

 
Obligation to the Original Owner

The original dated sales receipt must be retained by the customer and is the only acceptable proof of purchase. It must be presented to an SEA Authorized Service Center at the time service is requested before warranty services are rendered.

Exclusions of the Warranty

This warranty does not cover damage due to accident, fire, flood, and/or other Acts of God: misuse, incorrect line voltage, improper installation, improper or unauthorized repairs, commercial use, or damage that occurs during shipping. Customer adjustments which are explained in this owner's manual are not covered under the terms of this warranty. This warranty will automatically be voided for any unit found with a missing or altered serial number. This warranty is valid only on products purchased and used in America.





SAMSUNG ELECTRONICS

NORTH AMERICAN LIMITED WARRANTY STATEMENT

Subject to the requirements, conditions, exclusions and limitations of the Original Limited Warranty supplied with Samsung Electronics (SAMSUNG) products, and the requirements, conditions, exclusions and limitations contained herein, SAMSUNG will additionally provide Warranty Repair Service in the United States on SAMSUNG products purchased in Canada, and in Canada on SAMSUNG products purchased in the United States, for the warranty period originally specified, and to the Original Purchaser only.

The above described warranty repairs must be performed by a SAMSUNG Authorized Service Center. Along with this Statement, the Original Limited Warranty Statement and a dated Bill of Sale as Proof of Purchase must be presented to the Service Center. Transportation to and from the Service Center is the responsibility of the purchaser.

Conditions covered are limited only to manufacturing defects in material or workmanship, and only those encountered in normal use of the product.

Excluded, but not limited to, are any original specified provisions for, in-home or on-site services, minimum or maximum repair times, exchanges or replacements, accessories, options, upgrades, or consumables.

For the locations of a SAMSUNG Authorized Service Center, please call toll-free:

In the United States: 1-800-SAMSUNG (1-800-726-7864)
In Canada: 1-800-SAMSUNG

