 


Auto Cinema™

With Hi-Fi Sound

Owner's Manual
Video Cassette Recorder
SV-C35M

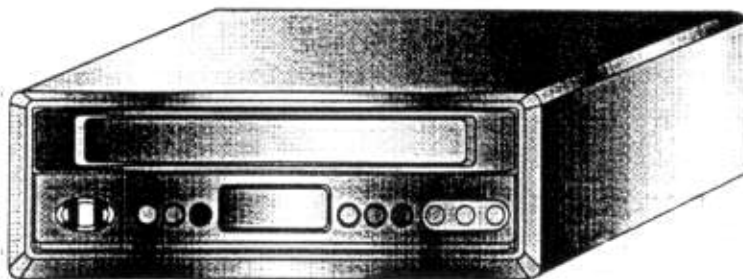

VCR Setup

Using the Menu with the Remote Control

Your VCR has on-screen menus that allow you to access and control the VCR's programmable features. You will use the buttons on the remote control to work with the on-screen programming.

 
Each button works not only PLAY, CH $\blacktriangledown/\blacktriangle$ but also as a shift cursor in the on screen menus.

MENU



: MENU ON or OFF

CH/TRK



: CH $\blacktriangledown/\blacktriangle$ or $\blacktriangledown/\blacktriangle$ cursor

PLAY



: PLAY or \blacktriangleright cursor

..MAIN MENU..

\blacktriangleright RECORD SPEED: [SP]
AUTO REPEAT: [OFF]
AUDIO OUTPUT: [MONO]
ANT/CABLE: [ANTENKNA]
VCR OUTPUT CH: [3CH]
GAMR

$\blacktriangledown/\blacktriangleright$

[MENU]

..MAIN MENU..

\blacktriangleright RECORD SPEED: [SP]
AUTO REPEAT: [OFF]
AUDIO OUTPUT: [MONO]
ANT/CABLE: [ANTENKNA]
VCR OUTPUT CH: [3CH]
GAMR

$\blacktriangledown/\blacktriangleright$

[MENU]

- 1 Press the MENU button on your remote control. The Main Menu will appear on screen.

- 2 Select the item you want to adjust using the \blacktriangleright button followed by the \blacktriangledown button on your remote control.

If the main menu does not appear, make sure the TV is tuned to the same channel as the VCR output CH3/4 on the MAIN MENU of the VCR. If the VCR is in the TV mode, press the TV/VCR button on the remote control to turn it on.

VCR Operation

Setting the MAIN MENU

To make all of the VCR's features available, set the VCR functions before playing or recording a tape.

Record Speed

The VCR can record at two tape speeds. The slower speed (SLP) allows the VCR to record more program material on a tape. Tapes recorded at standard speed (SP) provide a clearer picture. Select the record speed on the MAIN MENU to set the tape speed. You can refer to the following table:

TAPE	SP (Standard Play)	SLP (Super Long Play)
T-120	2 hrs	6 hrs
T-160	2 hrs	40 minutes 8 hrs
T-180	3 hrs	9 hrs

Auto Repeat

Auto repeat set the VCR to play a tape repeatedly unless a tape control is activated (Stop, fast-forward or rewind).

Aud

The VCR can record a program in stereo. It can also be set to record the secondary Audio Program (SAP) of any broadcast with second language audio. The VCR records the same audio on both the Hi-Fi and linear tracks on the tape.

••MAIN MENU••

▶ RECORD SPEED: [SLP]
AUTO REPEAT: [OFF]
AUDIO OUTPUT: [MONO]
ANT/CABLE: [ANTENKNA]
VCR OUTPUT CH: [3CH]
GAMR

▼▲/▶

[MENU]

••MAIN MENU••

RECORD SPEED: [SP]
▶ AUTO REPEAT: [CON]
AUDIO OUTPUT: [MONO]
ANT/CABLE: [ANTENKNA]
VCR OUTPUT CH: [3CH]
GAMR

▼▲/▶

[MENU]

••MAIN MENU••

RECORD SPEED: [SP]
AUTO REPEAT: [OFF]
▶ AUDIO OUTPUT: [HI-FI]
ANT/CABLE: [ANTENKNA]
VCR OUTPUT CH: [3CH]
GAMR

▼▲/▶

[MENU]

VCR Operation

Setting the MAIN MENU

Setting the Source

If you receive the signal via the antenna, set ANT/CABLE to ANTENNA.

••MAIN MENU••

RECORD SPEED: [SP]
AUTO REPEAT: [OFF]
AUDIO OUTPUT: [HI-FI]
▶ANT/CABLE: [ANTENNA]
VCR OUTPUT CH: [3CH]
GAMR

[▼▲/▶]

[MENU]

VCR Output CH

VCR sends the output signals to channel 3 or 4 on your TV. Set the output channel on the menu to 3 CH or 4CH, whichever is vacant in your area.

••MAIN MENU••

RECORD SPEED: [SP]
AUTO REPEAT: [OFF]
AUDIO OUTPUT: [HI-FI]
ANT/CABLE: [ANTENNA]
▶VCR OUTPUT CH: [3CH]
GAMR

[▼▲/▶]

[MENU]

VCR Operation

 
Recording

Recording while you watch

- 1** Insert a video cassette with the record protect safety tab intact. Check the tape speed. If the VCR indicator on the front panel is not lit, press the TV/VCR button.
- 2** Select a channel to record by pressing CH ts or the number buttons.
- 3** Press the REC button on the remote control or the front of the VCR. The REC indicator will light.
- 4** If you want to edit out unwanted material during recording, press the P/STILL button while recording and the VCR will pause. To resume recording, press the P/STILL button again.
- 5** To end recording, press the STOP button.

Record protect tab

Before recording on any video cassette, make sure the record protect safety tab is in place. To prevent accidentally recording over a program, remove the record protect safety tab on the cassette case. To record on a tape with its tab removed, cover the hole with adhesive tape.

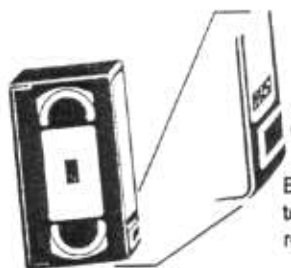

Break off plastic safety tab to prevent accidentally recording over important tapes



Cover the record protect space with cellophane tape to make a new recording

Care and Maintenance

VCR

- • Unplug your VCR from the wall outlet before cleaning.
Use a dry cloth when dusting your VCR.
- • Proper ventilation ensures that overheating will not damage electronic circuits.
Don't block ventilation holes.
- • Take care of your remote control. Keep the remote with your VCR, where it is unlikely to be lost or damaged.
- • Keep liquids away from your VCR, including beverages and cleaning liquids.
Spilling any liquid on the VCR can damage the electronics, resulting in an electric shock or fire.
- • Do not use liquid or aerosol cleaners that can accidentally get into the VCR, causing damage or creating a fire hazard.
- • Do not allow any object to be pushed into the cabinet slots. This includes coins, dusters, cleaning cloths, papers and other objects. Any such objects can connect with a voltage point inside the VCR, causing dangerous shocks, or may short out parts and cause a fire or an electric shock.

Video Head Cleaning

If poor pictures appear on a variety of cassettes, the video heads may need cleaning. This is not a common problem and unless it appears, the heads should not be cleaned. If necessary, purchase a head-cleaning cassette. If the picture quality does not improve after cleaning, call 1-800-SAMSUNG for service.

When cleaning the video heads, read all the instructions provided with the head-cleaning cassette. Incorrect head cleaning can permanently damage the video heads.

Video Cassettes

- • High quality, brand-name cassettes often last longer and provide a better picture.
- • Rewind your cassettes all the way so that the tape is not at a midpoint.
This can extend the life of a cassette tape.
- • Do not touch or splice the tape. This can damage the tape, and playing such a tape can damage your VCR. Do not take apart any cassette you plan to use again.
- • Do not put any object inside a video cassette case a

Specifications

Antenna input/output terminals:	UHF/VHF: 75 Ω F type connector
Signal system:	Standard NTSC
Recording/Playback system:	Recording: VHS format(SP, SLP) Playback: VHS format(SP, LP, SLP)* Video cassette with VHS mark
Record/Play Time:	6 hours with T-120 in SLP mode
Power Source:	12V DC
Dimensions:	265mm(W) X 94mm(H) X 260mm(D) 10.4"(W) X 3.7"(H) X 10.2"(D)
Weight:	2.4kg/5.3lbs

Your VCR can receive 68 broadcast TV channels or up to 125 unscrambled cable channels. Check your local cable company for complete compatibility requirements.

Type	Number	Channel List of Channels
On Air	12	VHF (Channels 2-13)
	56	UHF (Channels 14-69)
CATV	113	Channels 14-22 (A-1) Channels 23-94 (J-W+58)and 100-125(W+59-W+84) Channels 95-97 (A-5,A-4,A-3)* Channels 98-99(A-2,A-1)* Channel 01 (5A)*
Total	181	

*These channels are not available in Canada.

Safety Instructions

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE
RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR
BACK). NO USER SERVICEABLE
PARTS INSIDE. REFER
SERVICING TO QUALIFIED
SERVICE PERSONNEL.



This symbol indicates high voltage is present inside. It is dangerous to make any kind of contact with any inside part of this product.



This symbol alerts you that important literature concerning operation and maintenance has been included with this product.

Note to CATV system installer: This reminder is provided to call CATV system installer's attention to Article 820-40 of the National Electrical Code (Section 54 of Canadian Electrical Code, Part I) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Caution: FCC regulations state that any unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Caution: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Important: One Federal Court has held that unauthorized recording of copyrighted TV programs is an infringement of U.S. copyright laws.

Certain Canadian programs may be copyrighted and any unauthorized recording in whole or in part may be a violation of these rights.

To prevent damage which may result in fire or electric shock hazard,
do not expose this appliance to rain or moisture.

Important Safety Instructions

1. **Read Instructions**-All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions**-The safety and operating instructions should be retained for future reference.
3. **Heed Warnings**-All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions**-All operating and using instructions should be followed.
5. **Cleaning**-Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments**-Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **Water and Moisture**-Do not use this product near water-for example near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. **Accessories**-Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.



Safety Instructions


9. **Cart Usage**-A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. **Ventilation**-Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. **Power Sources**-This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
12. **Power-Cord Protection**-Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
13. **Lightning**-For added protection for this product during a lightning storm or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
14. **Overloading**-Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
15. **Object and Liquid Entry**-Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
16. **Servicing**-Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
17. **Damage Requiring Service**-Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a When the power-supply cord or plug is damaged.
 - b If liquid has been spilled or objects have fallen into the product.
 - c If the product has been exposed to rain or water.
 - d If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e If the product has been dropped or damaged in any way.
 - f When the product exhibits a distinct change in performance-this indicates a need for service.
18. **Replacement Parts**-When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
19. **Safety check**-Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
20. **Heat**-The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Table of Contents

Safety Instructions	
Your New VCR	1
VCR Setup	
Rear Panel	4
Control buttons and Display	5
Remote Control	6
Play a video cassette tape	8
Using the menu with the remote control	9
VCR Operation	
Setting main menu	10
Setting the main menu	11
Recording	12
Specifications	14

VCR Setup

 Rear Panel

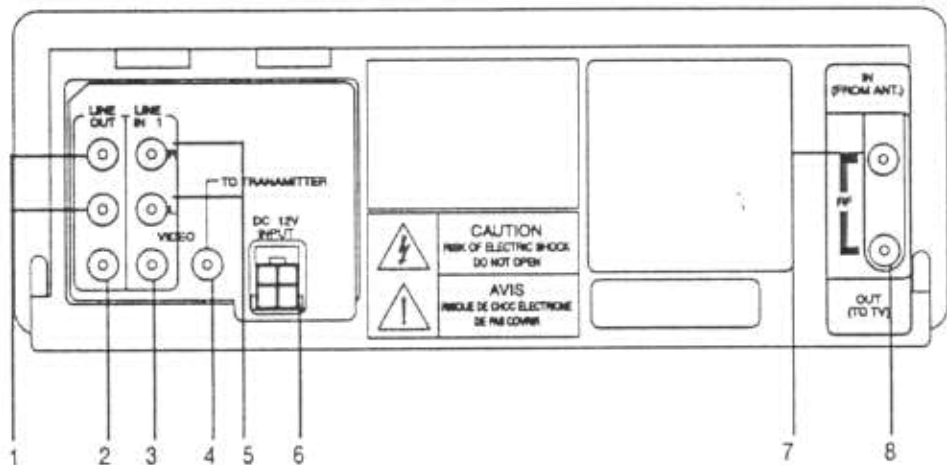

1. AUDIO OUT

Use to output audio signals to connected equipment.

2. VIDEO OUT

Use to output video signal from VCR to connected equipment.

3. VIDEO IN

Use to output video signal from connected equipment.

4. AUDIO IN

Use to output audio signal from connected equipment.

5. TO TRANSMITTER

Use to send audio signal for FM transmitter.

6. AC 12V INPUT JACK

Permits DC 12V power source connection of your unit to a DC battery, car battery, or AC/DC adapter.

 
7. IN FROM ANT

Use to input cable or antenna signal.

8. OUT TO TV

Use to output VCR signal to TV or monitor.

Control buttons and Display

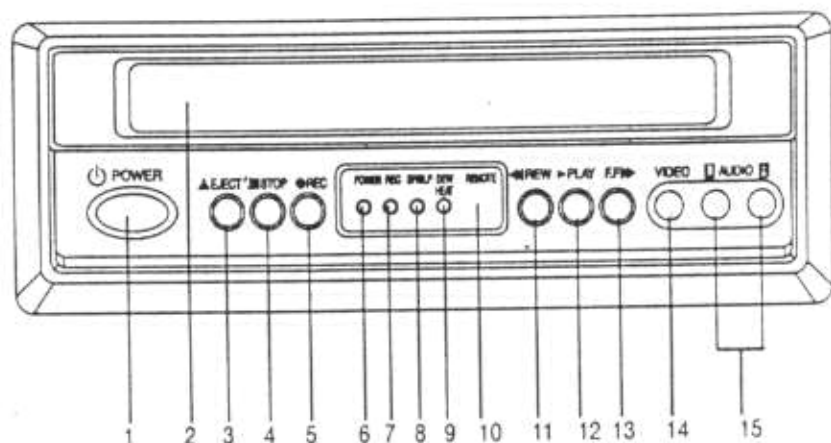

1. POWER BUTTON

Press to turn the VCR power on or off.

2. CASSETTE COMPARTMENT

Insert a video cassette.

3. EJECT BUTTON

Press to eject a tape or press to clear a timer program on the menu screen.

4. STOP BUTTON

Press to stop tape or press to move a cursor to right on the menu screen.

5. REC BUTTON

Press to record or press to move a cursor to left on the menu screen.

6. POWER INDICATOR

Lit when VCR is turned on.

7. REC INDICATOR

Lit when VCR is rewrding on.

8. SP/SLP INDICATOR

Lit when VCR is rewrding in SLP mode

9. DEW/HEAT INDICATOR

When DEW indicator is on, the VCR will not be able to work, which shows the VCR is under a high moist circumstance. Then the VCP will dry itself automatically and turn the light off, whith moist diappear and works normally.

10. REMOTE SENOR

11. REW BUTTON

12. PLAY BUTTON

 
13. F.F BUTTON

14. VIDEO IN JACK

15. AUDIO IN L/R JACKS

VCR Setup

Remote Control

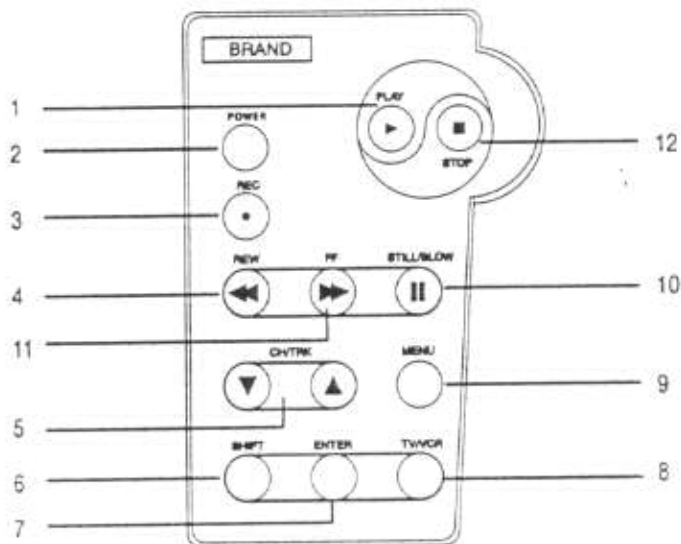

1. PLAY

Press to play a video cassette.

2. POWER BUTTON

Press to turn VCR power ON.

3. REC BUTTON

Press to record a TV program or a external signal.

4. REW BUTTON

Press to rewind in stop mode or reverse search in play mode.

5. CH/TRK BUTTON

Press to chang channels.
Press to adjust cassette tracking.

6. SHIFT BUTTON

Press to move the cursor.

7. ENTER BUTTON

Press to enter the data.

8. TV/VCR BUTTON

Press to switch between TV and VCR source.

9. MENU BUTTON

Press to display menu screen.

10. STILL/SLOW BUTTON

Press to stop the tape on a single still frame in play mode.
Press for slow motion playback in the still mode.

11. F.F BUTTON

Press to fast fower in stop mode or toward search in play mode.

12. STOP BUTTON

 
Press to stop a video cassette.

VCR Setup

Remote Control

Battery Replacement

1. Remove the battery compartment lid.
2. Place the battery in the battery compartment as indicated inside the compartment.
3. Replace the lid.

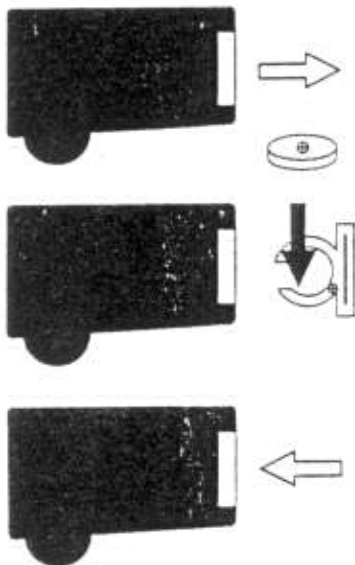

VCR Setup

Playing a Video Cassette Tape

1. Turn TV on and select to video mode.
2. Load a video cassette tape.
Then, VCR power turns on automatically.
3. Press PLAY to start playback.
If the tape doesn't have a safety tab, VCR will playback automatically.
When playback starts, the VCR automatically adjusts the tracking for clear picture and sound.
4. To stop playback, press STOP.

Tracking Control

Important Safety Instructions

For the best picture quality when playing a cassette, the video heads must be aligned with the recorded track. This alignment is called tracking. When playing back a tape, your VCR automatically adjusts the tracking on a video tape, but occasionally a cassette may require some manual adjustment. Keep in mind that picture distortion often occurs at the beginning of a tape.

Automatic Tracking

Turn the TV on and insert a cassette into your VCR.
Press the PLAY button, if necessary.
After a few seconds of auto tracking, you would hear the sound from the video tape.

Manual Tracking

Press the TRK buttons on the remote control up or down until the picture improves.

NOTE : The noise on the screen may not be completely eliminated depending on the tape used, especially when the tape was recorded on another VCR.

