

**SAMSUNG
ELECTRONICS**



SAMSUNG

Mobile Pen

EAD-P010



Contents

English	2
---------------	---



Safety precautions

Keep your device dry

Humidity and all types of liquids may damage device parts or electronic circuits.

Do not use or store your device in dusty, dirty areas

Dust can cause your device to malfunction.

Do not store your device in hot or cold areas

Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car)

Do not store your device near magnetic fields

Your device may malfunction.

Do not drop your device or cause impacts to your device

If bent or deformed, your device may be damaged or parts may malfunction.

Do not open the shirts clip too much

Do not disassemble, modify, or repair your device

Any changes or modifications to your device can void your manufacturer's warranty. For service, take your device to a Samsung Service Centre.

When cleaning your device:

Wipe your device with a towel or a rubber. Do not use chemicals or detergents.

Do not use the device for anything other than its intended use

Do not store the device in a condition where the tip has any pressure applied to it

Do not apply any excessive pressure during operation

Excessive pressure applied to the device will shorten the life of the device.

Do not swallow or stab someone's body with offered products or accessories

Avoid using your device's light close to the eyes of children or animals

Copyright

Copyright © 2012 Samsung Electronics

This user manual is protected under international copyright laws.

 
No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

Trademarks

- SAMSUNG, and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. More information about Bluetooth is available at www.bluetooth.com
- All other trademarks and copyrights are the property of their respective owners.

*Graphics used in this manual are for illustration purposes.
The actual products may vary.*

Your Mobile Pen Overview

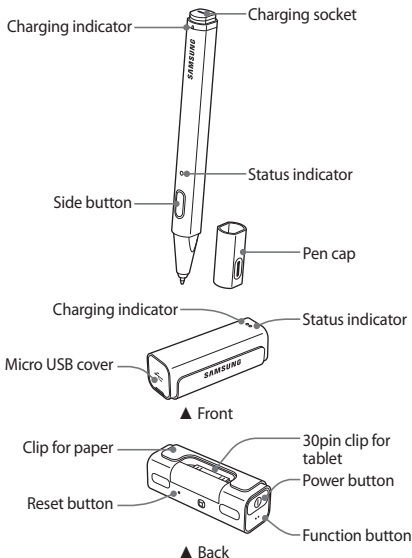



Make sure you have the following items: pen, receiver, nib for paper, travel adapter, carrying case and user manual. The supplied items may vary.

 
Charging the Mobile Pen

The pen and receiver has a rechargeable internal battery which is non-removable. Make sure they are fully charged before using it for the first time.



Use only Samsung-approved chargers.


- 1 Connect the travel adapter to the charging socket on the pen or receiver.

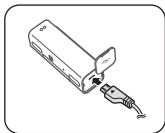

- 2 Plug the travel adapter into the wall outlet. During charging, the charging indicator will turn red. If charging does not begin, unplug the travel adapter and plug it in again.
- 3 When fully charged, the charging indicator is turned off. Unplug the travel adapter from the wall outlet.

Holding the Mobile Pen

 Hold the pen like you would hold a normal pen or pencil. Make sure the pen button is in a convenient location where you can use it with your thumb or forefinger.

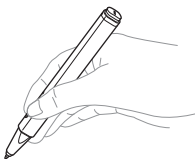

Do not hold the tip of the pen with your fingers. It may interrupt communication between the pen and receiver.

Turning the receiver on or off

- To turn the receiver on, press and hold the power button until the status indicator flashes four times.
- To turn the receiver off, press and hold the power button for 3 seconds. The status indicator flashes blue and red and then turns off.

Pairing and Connecting the Mobile Pen

Download the **Mobile Connector** application from Samsung Apps to pair and calibrate the Mobile Pen and configure it for use with other applications.

Entering Pairing mode

With the receiver turned on, press and hold the function button on your receiver for 3 seconds until the status indicator turns blue to enter Pairing mode.

Pairing and Connecting

- 1 Activate the Bluetooth feature on your tablet and launch the **Mobile Connector** application.
- 2 In Pairing mode, select **Device list** and then select **Devices search** to search for SAMSUNG Mobile Pen in order to pair with your tablet.



In Pairing mode, two devices should be placed close enough.

- 3 Select SAMSUNG Mobile Pen from the list of devices. If they are successfully connected, the status indicator will flash in every 6 seconds of interval after rapidly flashing three times.



You can also check pairing states in the Bluetooth settings on your tablet. Once pairing is completed, the receiver will attempt to reconnect each time you turn it on.

Resetting connectivity settings

If you want to reset the connectivity settings in the Mobile Pen:

In Pairing mode, press the reset button on your receiver. The status indicator flashes blue and red and then turns off.

 
 


When you reset the receiver, all connection settings in the receiver will be deleted and the connection with your tablet will be lost. Pair it again to use the Mobile Pen.

Replacing the pen nib

You are provided with two types of pen nib, a nib for paper and a nib for the screen. Replace the nib depending on usage.

- 1 Insert the nib into the nib extractor hole in the pen cap.
- 2 Slide the pen to the other end and gently pull the pen and the nib away from each other.
- 3 Insert the new nib into the opening of the pen and push it into place.

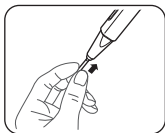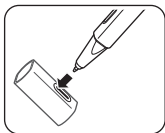

Calibrating the Mobile Pen

Calibrate the Mobile Pen so the tablet detects its position properly.

- 1 Attach the receiver to the tablet or to a piece of paper, depending on usage and then pair and connect the Mobile Pen with your tablet.
- 2 Select **Calibration** on the **Mobile Connector** application.
- 3 Read the on-screen instructions and select **Start** to calibrate the Mobile Pen.
- 4 When the pen is calibrated properly, select **Ok**. If there is an error, select **Recalibration** and repeat the calibration.

 
 


When changing the screen mode, you must recalibrate the pen.


Using on screen

Attaching the receiver to the tablet

- 1 Push the bottom of the 30pin and lift it gently.
- 2 Pivot the 30pin out using the slot on the 30pin until the pin clicks into place.



 - 3 Insert the 30pin into the multifunction jack on your tablet.

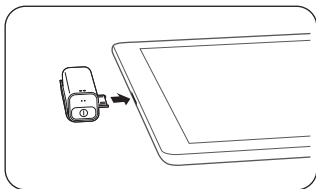

Operating Mobile Pen on screen

Mobile Pen lets you use all the great features of your device in addition to traditional controls, such as tapping or flicking.



 
- Pair and connect the Mobile Pen with your tablet and calibrate it before use.
- Make sure the screen nib is attached. The paper nib may damage the screen.

Press and hold the side button to perform the following actions:

- **Back** : Drag the pen to the left to return to the previous screen.
- **Menu** : Drag the pen up to access a list of options.
- **Quick Launch** : Double-tap to launch applications.




Use **Setting** on the Mobile Connector application to set the application you want.

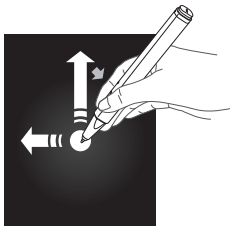

Using on paper



Attaching the clip to the paper

 - 1 Locate the receiver at the top center of the paper.
- 2 Open the clip and insert the piece of paper.



Locate the receiver at the top center of the paper to improve reception.

  Working Area

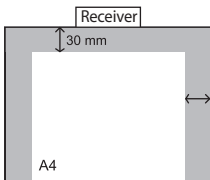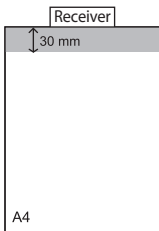




Write on paper in portrait orientation to have more available space.

Operating Mobile Pen on paper

Use the Mobile Pen as you would use a normal pen or pencil to write or draw on the paper. Your tablet automatically stores handwriting memos and displays them on your tablet.



 - Pair and connect the Mobile Pen with your tablet and calibrate before using it.
- Make sure the paper nib is attached to your pen. Using the screen nib on paper may damage the nib.

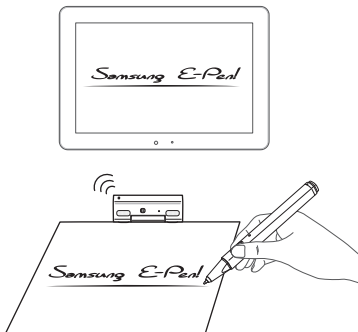

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

 This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

The rechargeable battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider.

Declaration of Conformity (R&TTE)

We, Samsung Electronics

declare under our sole responsibility that the product

Mobile pen : EAD-E010BKG

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY

EMC

RADIO

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

which will be made available upon request.
(Representative in the EU)



Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*



2011.xx.xx

(place and date of issue)

Joong-Hoon Choi / Lab Manager

(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

FCC

Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Part 15.21

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

RF Exposure Statement (2.1091)

FCC RF Radiation Exposure Statement: This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

RF du FCC d'exposition aux radiations: Cet équipement est conforme à l'exposition de la FCC rayonnements RF limites établies pour un environnement non contrôlé. Cet appareil et son antenne ne doivent pas être co-localisés ou fonctionnant en conjonction avec une autre antenne ou transmetteur.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 centimètres entre le radiateur et votre corps.