

QUICK START GUIDE

EB-U1200
Power Bank

SAMSUNG

Printed in China
A00703 Rev.1.0
USA Type 01/2019

Wireless charging

- Place a supported mobile device on the wireless charging surface (a). Charging will begin when the charging coil (e) comes into contact with the wireless charging coil of the mobile device.
 - Check the charging icon displayed on the screen of the mobile device for the charging status.
 - If the charger is not connected, you must press the Battery level / Wireless charging button (f) to charge the mobile device.
- When the mobile device is fully charged, remove the mobile device from the battery pack.
 - Do not place the mobile device on the battery pack when conductive materials, such as metal objects, magnets, credit card, transportation card or a key card are placed between the mobile device and the battery pack. The mobile device may not charge properly or may overheat, or the mobile device or the cards may be damaged.
 - When conductive materials are placed on the battery pack, noise may occur from the battery pack.

English

- Copyright © 2019 Samsung Electronics America, Inc.
- Other marks are the property of their respective owners.
 - Please read this guide before using the device to ensure safe and proper use.
 - Images may differ in appearance from the actual product. Content is subject to change without prior notice. Visit www.samsung.com to view device information, the latest guide, and more.
 - Before using the battery pack, make sure it is compatible with your mobile device.
 - Your consumer rights are governed by the law of the country in which you purchased the product. Please contact your service provider for more information.

Device layout

a	USB charger port	d	Wireless charging surface
b	Charger port (Type-C)	e	Charging coil
c	Indicator light	f	Battery level / Wireless charging button

Safety information

Read all safety information before using the device to ensure safe and proper use. To view the full safety information, refer to the Samsung website.

Use only charging devices that are approved by Samsung. Samsung charging devices are designed for your device to maximize battery life. Using other charging devices may void your warranty and may cause damage.

Do not touch the device with wet hands

Do not drop or cause an impact to the charger or the device

The device can be used in locations with an ambient temperature of 0 °C / 32 °F to 35 °C / 95 °F. You can store the device at an ambient temperature of -20 °C / -4 °F to 50 °C / 122 °F. Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan

Prevent the multipurpose jack and the small end of the charger from coming into contact with conductive materials, such as liquids, dust, metal powders, and pencil leads

Do not allow children or animals to chew or suck the device

Do not disassemble, modify, or repair your device

Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Charging the battery

Before using the battery pack for the first time, you must charge the battery.

Connect the battery pack to a charger.

- Use only Samsung-approved chargers.
 - You can charge the battery pack using the charger (sold separately).
 - Depending on the type of charger you are using, you may need to use the Micro USB connector.
 - The actual capacity (Wh) is measured based on the battery's output current and voltage. It may differ from the capacity (Wh) indicated on the device, depending on the output power condition, the connected device's circuit configuration, and the operation environment.
 - The charger should remain close to the electric socket and easily accessible while charging.
 - When the charger is correctly connected to the battery pack, the indicator light (c) flashes red, green, and yellow, and then turns off.
- It is recommended to use the wireless charging function in a fixed position rather than on the move.

Checking the remaining battery power

Check the remaining battery power by pressing the Battery level / Wireless charging button (f).

The indicator lights (c) alerts you to the remaining battery power.

Remaining battery power	Indicator light status
70–100 %	Four indicator lights on
40–70 %	Three indicator lights on
20–40 %	Two indicator lights on
5–20 %	One indicator light on
0–5 %	One indicator light blinking

Using the battery pack

Cable charging

- Connect one end of the USB cable to the battery pack's USB charger port (a). Then, plug the other end of the USB cable into the mobile device's multipurpose jack.
- After the mobile device is fully charged, disconnect the USB cable from both devices.

Depending on your mobile device's multipurpose jack, you may need to use the Micro USB connector.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. When using the wireless power sharing function, this equipment should be operated with a minimum distance of 20 centimeters between the device and your body.

Recycling Direct

Dispose of your mobile device and batteries in accordance with local regulations. In some areas, the disposal of these items in household or business trash may be prohibited. Help us protect the environment - recycle!

Never dispose of batteries in a fire because they may explode.

To find the nearest recycling location, go to any of the following:
www.samsung.com/recycling
or call, 1-877-278-0799.

Help us protect the environment - recycle!
For battery and cell phone recycling, go to call2recycle.org or call 1-800-822-8837.



Samsung Electronics America, Inc

85 Challenger Road,
Ridgefield Park, New Jersey, 07660
Phone: 1-800-SAMSUNG (726-7864)