 


Gamepad

This manual's images and content may differ from the product.

Overview

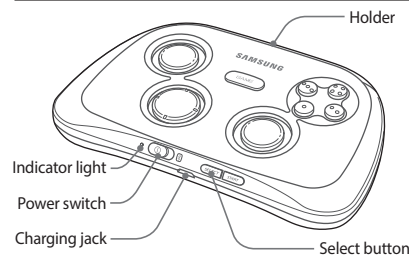

Charging the device

 
Use a charger to charge the battery before using the device for the first time. Connect the device and the charger, and then plug the charger into an electric socket.



The charger and the charging cable are sold separately.

Turning the device on or off

Slide the power switch to turn the device on or off, or enter Pairing mode.

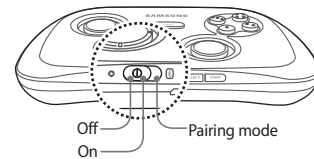

Checking the indicator light

Monitor the device's condition by checking the indicator light.

Device status

Status	Indicator light
Turned off	Turns off.
Turned on	Flashes blue four times.
In Pairing mode	Turns blue for 3 minutes.
Bluetooth Connected	Flashes blue three times.
Bluetooth Disconnected	Flashes blue times.
Battery power is low	Flashes red continuously.
While charging	Turns red.

Battery status

Press and hold the select button when the device is turned on.

Status	Indicator light
Above 80%	Flashes blue five times.
20%-80%	Flashes yellow five times.
Below 20%	Flashes red five times.

Pairing and connecting the device

When using a new smartphone, you need to pair it with the device. Once pairing is complete, the device attempts to reconnect each time you turn it on.

Option 1: Manual Pairing

- Slide the power switch all the way to the right for 3 seconds to enter Pairing mode.
 - The indicator light turns blue for 3 minutes.
- Activate the Bluetooth feature on the smartphone, scan for the device, and then select the device name "Samsung Game Pad EI-GP20" from the list of available devices. For more details, refer to the mobile device's user manual.

Option 2: Pairing via NFC

- Activate the NFC and Bluetooth feature on the smartphone. Make sure to unlock the smartphone before using the NFC feature.
- Turn the device on, and then the device's back, the NFC logo, to the smartphone's NFC antenna until NFC pairing completes.

- Some of NFC-enabled devices may not support this feature.
- To locate the mobile device's NFC antenna and activate NFC, refer to the mobile device's user manual.

Reconnecting and disconnecting

Reconnecting

If the connection is lost while in use, press any button or use the Bluetooth menu on the smartphone.

 
- Make sure the device is turned on, and the smartphone's Bluetooth feature is activated.

Disconnecting

Turn off the device or use the Bluetooth menu on the smartphone.


Attaching a smartphone to the device

- Pull out the holder from the device.

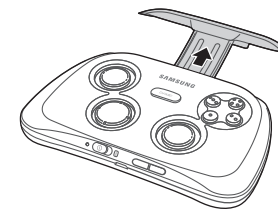

- Do not pull out the holder excessively. Doing so may damage the device.

 - Slide the smartphone into the holder until it is fixed firmly as shown in the image below.

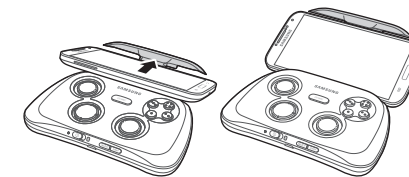


- The device is suitable for 4"-6.3" Samsung smartphones.




Removing the smartphone from the device

 Push the smartphone to upper side of the device, and lift it as show in the image below.

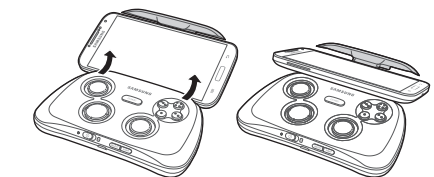

Buttons layout

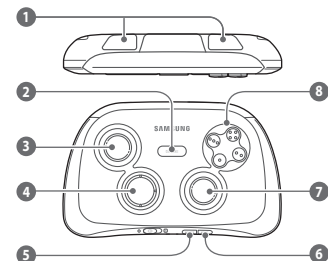 

Buttons	feature
1 Trigger button	Perform the actions defined by the game.
2 G button	Return to the Mobile Console* screen.
3 Analog stick (L)	Perform detailed directional control.
4 D-pad	Perform four-way directional control.
5 Select button	Select in-game menus.
6 Start button	Start or pause the game.
7 Analog stick (R)	Perform aim or gaze control.
8 Action button	Perform the actions defined by the game.

- * Pressing G button opens Samsung Apps application if Mobile Console is not installed on the device.
- The content of this manual is based on Android version 4.3 smartphones. The buttons may work differently depending on the game or Android version.

Rejecting a incoming call while playing games

Press the G button to reject a incoming call while you are playing games.

Specifications

Item	Specifications and description
Bluetooth Version	3.0
Support profiles	Human Interface Device profile, Device Identification profile
Size (mm)	137.78 x 86.47 x 31.80
Weight	190 g
Operating temperatures	5°C-35°C
Transmit power	0.25-2.5 mW
Operating range	Up to 10 metres

Safety information

- To prevent injury to yourself and others or damage to your device, read the safety information about your device before using the device**
- Do not touch the power cord with wet hands or disconnect the charger by pulling the cord**
- Do not drop or cause an impact to the device**
- Do not insert the device or supplied accessories into the eyes, ears, or mouth**
- Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers**
- Do not use your device outdoor during a thunderstorm**
- Do not store your device in very hot or very cold areas. It is recommended to use your device at temperatures from 5 °C to 35 °C**
- Do not store your device near magnetic fields**
- Do not use or store your device in areas with high concentrations of dust or airborne materials**
- Keep your device dry. Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service center**
- Do not use the device for anything other than its intended use**
- Any changes or modifications to your device can void your manufacturer's warranty. If your device needs servicing, take your device to a Samsung Service Center**

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation. Users are not permitted to make changes or modify the device in any way.
Changes or modifications not expressly approved by Samsung will void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement: FCC RF Radiation Exposure Statement: This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with a minimum distance of 50 mm between the radiator and your body.

RF de FCC d'exposition aux radiations: Cet équipement est conforme à l'exposition de la FCC rayonnements RF limites établies pour un environnement non contrôlé. L'antenne pour ce transmetteur ne doit pas être même endroit avec d'autres émetteur sauf conformément à la FCC procédures de produits Multi-émetteur.
Cet équipement doit être installé et utilisé avec une distance minimale de 50 mm entre le radiateur et votre corps.

Part 15.105 (B) :

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void your authority to operate the equipment under FCC rules.



IC Statement:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Recycling Direct

To dispose electronics properly, follow the recycling process regulated in your area or go to Samsung website to find the nearest recycling location:
www.samsung.com/recyclingdirect
Or call, (877) 278 – 0799.

Samsung Telecommunications America, LLC

1301 E. Lookout Drive
Richardson, Texas 75082
Phone: 1-800-SAMSUNG
Phone: 1-888-987-HELP (4357)