SAMSUNG ELECTRONICS





QUICK START GUIDE EO-PN920

SAMSUNG

L E V E L^{on pro}



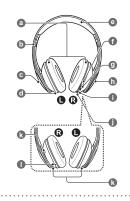

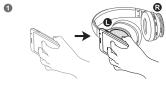

Copyright © 2015 Samsung Electronics Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.

- Please read this guide before using the device to ensure safe and proper use.
- Images may differ in appearance from the actual product.
 Content is subject to change without prior notice. You can access the full user manual for more information. Visit www.samsung.com to view device information, the user manual, and more

Device layout

а	Ear pad	9	Power switch
0	Adjustable slider / Hinge	0	Touchpad
0	NFC antenna	0	Noise-cancelling switch
0	Audio jack	0	Charger jack
0	Headband	(3	Noise-cancelling microphone
0	Notification light	0	Microphone

Charging the battery

Before using the headset for the first time, you must charge the battery.

Connect the headset to a computer or the USB power adaptor via the USB cable. Plug the USB power adapter into an electric socket.



- You can charge the headset using the charger (sold separately).
- The charger should remain close to the electric socket and easily accessible while charging.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

Turning the headset on and off

- [[0]]:ON
- [[0]]: OFF
- [0]: Bluetooth pairing mode

Connecting devices via the NFC feature

- 1. Activate the NFC feature on your other device.
- Turn on the headset and place the other device's NFC antenna near the NFC antenna area (♠) of the headset. ► ♠
 The devices will be connected when the other device accepts the Bluetooth connection request.

Connecting devices via Bluetooth

- Slide the Power switch upwards and hold it for approximately three seconds to enter Bluetooth pairing mode.
 The notification light will flash red, green, and blue.
- On your other device, activate the Bluetooth feature and tap Samsung Level On Pro (0000) from the list of available devices.

Using the touchpad

When devices are connected via Bluetooth, use the touchpad on the right side of the headset to adjust the volume or control the playback. You can also tap and hold the touchpad for more than 1.5 seconds to hear the ambient noise around you and the connected device's audio simultaneously. For more information, refer to the user manual.



- Use only one finger on the touchpad.
- The touchpad cannot be used while the headset is connected to another device via an audio cable.

Safety information

Read all safety information before using the device to ensure safe and proper use. To view the full safety information, refer to the Samsung website.

Use manufacturer-approved batteries, chargers, accessories, and supplies

Do not touch the device with wet hands

Do not drop or cause an impact to the charger or the device

The device can be used in locations with an ambient temperature of 0°C to 35°C. You can store the device at an ambient temperature of -20°C to 50°C. Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan

Do not allow children or animals to chew or suck the device

Do not disassemble, modify, or repair your device

Do not use a headset while driving or riding. Doing so may distract your attention and cause an accident, or may be illegal depending on your region



To prevent possible hearing damage when using a headset, do not listen to sound at high volume for long periods.

Correct disposal



This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

This product is RoHS compliant.



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste.

Removing the battery

- To remove the battery, you <u>must</u> visit an authorised service centre with the provided instructions.
- For your safety, you <u>must not attempt to remove</u> the battery.
 If the battery is not properly removed, it may lead to damage to
 the battery and device, cause personal injury, and/or result in the
 device being unsafe.
- Samsung does not accept liability for any damage or loss (whether in contract or tort, including negligence) which may arise from failure to precisely follow these warnings and instructions, other than death or personal injury caused by Samsung's negligence.
- 1. Remove the headset's left ear pad.
- 2. Loosen and remove the four screws and open the cover.
- 3. Separately cut each wire connected to the battery.



Do not short-circuit the headset by cutting the black and red wires at the same time. Doing so may cause electric shock or fire, or the battery may malfunction or explode.

Remove the battery.

FCC Warning Statement

Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Part 15.105 (B)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void your authority to operate the equipment under FCC rules.

FCC Part 15.21

Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

IC Warning Statement

This device complies with Industry Canada licenceexempt RSS standard(s).

- Operation is subject to the following two conditions:
- (1) this device may not cause interference, and (2) this device must accept any interference, including
- interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

d'en compromettre le fonctionnement.

(1) l'apparen ne doit pas produire de brodinage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible





(YEAR TO

BEGIN AFFIXING CF MARKING 2015)

Declaration of Conformity

Product details For the following Product:

Model(s):

Declaration & Applicable standards

We hereby declare, that the product above is in compliance with the essential requirements of the R&TTE Directive (1999/5/EC) by application of:

and the Directive (2011/65/EU) on the restriction of thouse of cortain hazardous substances in electrical and electronic of the bury application of EN 50581:2012

Representative in the EU Samsung Electronics Euro QA I Blackbushe Business Park

Saxony Way, Yateley, Hampshire GU46 6GG, UK

XX May 2015

Stephen Colclough / EU Representative

(Place and date of issue)
(Name and signature of authorised person)
† This is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.