

**SAMSUNG
ELECTRONICS**



Printed in Korea
GH68-XXXXXA Rev.1.0
E Type. 01/2015

The Samsung logo, consisting of the word "SAMSUNG" in white, bold, sans-serif capital letters, centered within a black, horizontally-oriented oval.

Quick Start Guide

Samsung LEVEL^{link}

You can access the full user manual for more information. Visit www.samsung.com to view device information, the user manual, and more.

www.samsung.com

 


- Please read this manual before using the device to ensure safe and proper use.
- Images may differ in appearance from the actual product. Content is subject to change without prior notice.

Notices for using Bluetooth

- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- When the device is connected to another device via a wireless connection, place your device near to the connected device. Otherwise, the device may not work properly or it may be affected by signal interference.
- Ensure that your device and the other Bluetooth device are within the maximum Bluetooth range (10 m). The range may change depending on the environment the device is used in.
- Ensure that there are no obstacles between your device and a connected device while using a wireless connection. Obstacles include walls and fences. If there are obstacles between the devices, the operating distance may be reduced.

Device layout

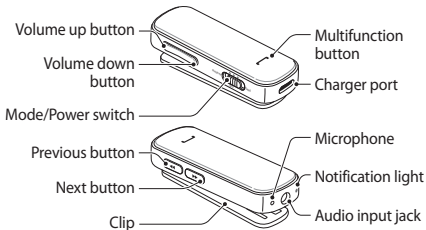

Package contents

Device, earphones, USB cable, audio cable, quick start guide.



The items supplied with the device and any available accessories may vary depending on the region or service provider.

 
Charging the battery

This device has a built-in battery. Before using the device for the first time or when the battery has been unused for extended periods, you must charge the battery.



Use only Samsung-approved chargers and cables. Unapproved chargers or cables can cause the battery to explode or damage the device.

Connect the device to a computer or the USB power adaptor via the USB cable.

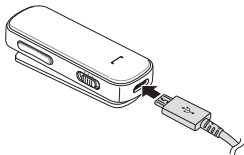

Checking the battery level

 
Simultaneously press the Volume up button and the Multifunction button for 1 second.

- Less than 30%: The notification light flashes red three times.
- 30-60%: The notification light flashes yellow three times.
- More than 60%: The notification light flashes green three times.



To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The charger should remain close to the electric socket and easily accessible while charging.

Turning the device on or off



- When the device turned on and a mode is activated, the notification light flashes blue three times.
- When the device is turned off, the notification light flashes red three times.

Using receiving mode

Pair your Level Link with the other devices that support the Bluetooth feature, such as smartphones and tablets, via Bluetooth. You can receive incoming calls and listen to music without controlling the paired device. In receiving mode, connect earphones to your Level Link, or connect the Level Link to audio devices using an audio cable.

- 1 On the Level Link, slide the Mode switch left to activate receiving mode.
 - 2 On the Level Link, press and hold the Multifunction button for 3 seconds to enter Bluetooth pairing mode.
The notification light flashes red, green, and blue for about 3 minutes.
 - 3 On the other device, select the model name of your device from the list.
-  In this mode, if you connect the Level Link via an audio cable to an audio output device, such as a TV or computer, your Level Link may be damaged.

Using sending mode

Connect your device to a multimedia player, such as a TV or computer via the audio cable. You can listen to music via another audio device, such as a Bluetooth headset.

- 1 On the Level Link, slide the Mode switch right to activate sending mode.
- 2 On the Level Link, press and hold the Multifunction button for 3 seconds to enter Bluetooth pairing mode.
The notification light flashes red, green, and blue for about 3 minutes.

- 3 Place your Level Link within 30 cm of the paired audio device.
The Level Link and the audio device are now connected via Bluetooth.
 - 4 Plug the audio cable into the audio input jack of the Level Link.
 - 5 Plug the other end of the audio cable into the audio input jack of the multimedia player.
-  • When using the Level Link with a TV, turn down the TV's volume before unplugging the audio cable to prevent sudden, loud sounds.
 - When the Level Link is connected to a TV in sending mode, lipsync problems may occur. It is recommended to connect the Level Link to a TV that supports the aptX Low Latency codec.

Connecting additional devices

You can activate multi-pairing mode to connect your Level Link to additional Bluetooth devices. For more information, refer to the user manual.

Reconnecting or disconnecting from other devices

When your Level Link is disconnected from an the audio device due to the distance between the devices, bring the devices closer together and press the Multifunction button to pair them again. Or, you can use the Bluetooth menu on the audio device to pair the devices.

To disconnect the Level Link from the audio device, turn off your device or unpair the devices. If you connected the two devices via an audio cable, unplug the cable from both devices.

Safety information

Follow the safety information to prevent injury to yourself or others and to prevent damage to your device.

Do not touch the device with wet hands

Do not drop or cause an impact to the charger or the device

Keep your device dry

Do not store your device in very hot or very cold areas. It is recommended to use your device at temperatures from -20 °C to 50 °C

Do not store your device near magnetic fields

Do not disassemble, modify, or repair your device

Use caution when using this device with wired earphones. You may choke if the earphones wrap around your neck

Do not use chemicals or detergents when cleaning your device

Protect your hearing and ears when using a device



- Use caution to avoid long-term exposure to loud sounds to prevent damage to your hearing.
- Do not use a device while driving or riding. Doing so may distract your attention and cause an accident, or may be illegal depending on your region.

Do not use your device in a hospital, on an aircraft, or in an automotive equipment that can be interfered with by radio frequency

Correct disposal of this product



(Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This product is RoHS compliant.

Correct disposal of batteries in this product



(Applicable in countries with separate collection systems)

This marking on the battery, manual or packaging indicates that the battery in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in

EC Directive 2006/66.

The battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider. Do not attempt to remove the battery or dispose it in a fire. Do not disassemble, crush, or puncture the battery. If you intend to discard the product, the waste collection site will take the appropriate measures for the recycling and treatment of the product, including the battery.

FCC ID: A3LEORG920**FCC Part 15.19**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

IC: 649E-EORG920

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.