

**SAMSUNG**

Samsung Wireless Speaker Bottle  
EO-SG710

# User Manual

# Table of Contents

## Getting started

- 3 Read me first
- 4 Package contents
- 5 Device layout
- 7 Charging the battery

## Using the speaker bottle

- 11 Turning the speaker bottle on or off
- 11 Connecting to another device
- 14 Listening to music
- 15 Using the lamp

## Appendix

- 19 Troubleshooting
- 21 Removing the battery

# Getting started

## Read me first

Please read this manual before using the device to ensure safe and proper use.

- Images may differ in appearance from the actual product. Content is subject to change without prior notice.
- Before using the speaker bottle, make sure it is compatible with your device.

## Instructional icons



**Warning:** situations that could cause injury to yourself or others



**Caution:** situations that could cause damage to your device or other equipment



**Notice:** notes, usage tips, or additional information

## Package contents

 
Check the product box for the following items:

- Speaker bottle
- Quick start guide



- The items supplied with the device and any available accessories may vary depending on the region or service provider.
- The supplied items are designed only for this device and may not be compatible with other devices.
- Appearances and specifications are subject to change without prior notice.
- You can purchase additional accessories from your local Samsung retailer. Make sure they are compatible with the device before purchase.
- Use only Samsung-approved accessories. Using unapproved accessories may cause the performance problems and malfunctions that are not covered by the warranty.
- Availability of all accessories is subject to change depending entirely on manufacturing companies. For more information about available accessories, refer to the Samsung website.

## Device layout

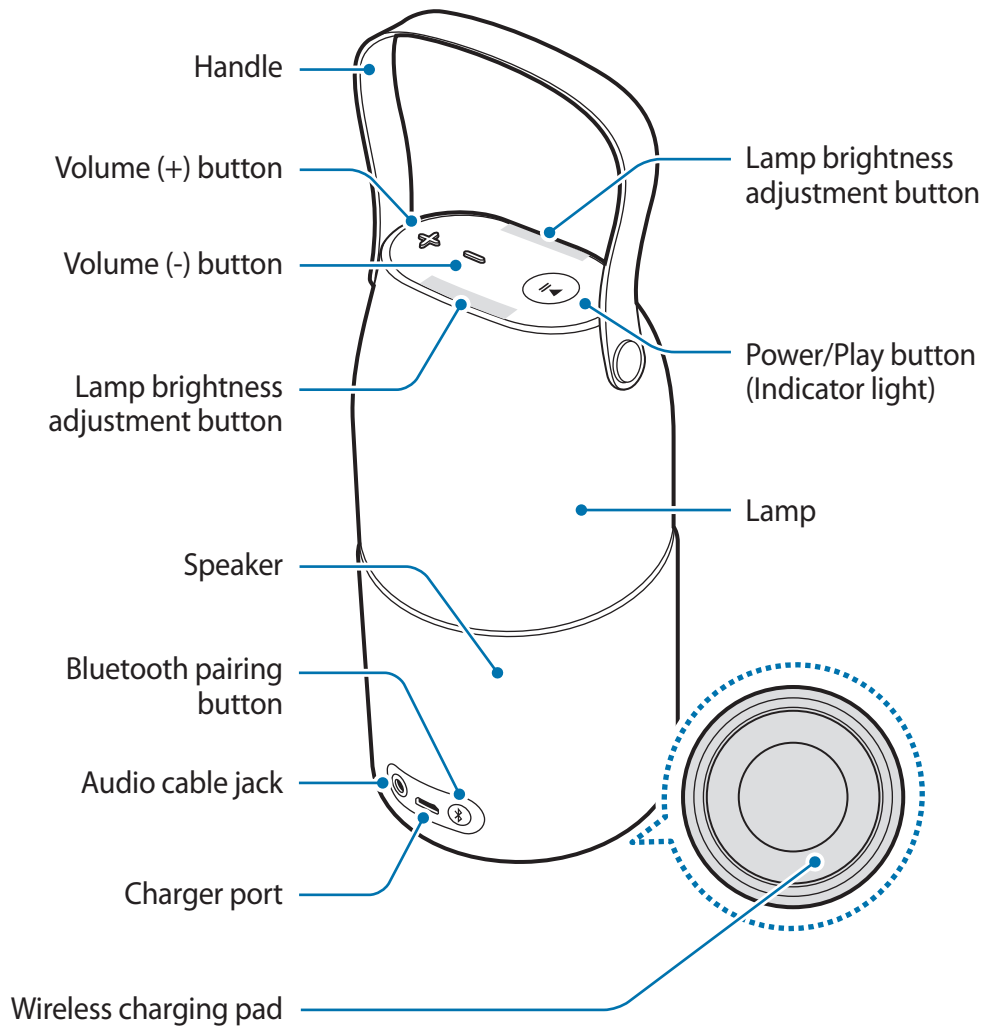

## Buttons

Button	Function
<b>Power/Play button</b>	<ul style="list-style-type: none"> <li>• Press and hold to turn the speaker bottle on or off.</li> <li>• Press to play or pause music.</li> <li>• If your speaker bottle is frozen and unresponsive, press and hold for approximately eight seconds to turn off the speaker bottle.</li> </ul>
<b>Volume (+) button</b>	<ul style="list-style-type: none"> <li>• Press to increase the volume during music playback.</li> <li>• Press and hold to skip to the next song during music playback.</li> </ul>
<b>Volume (-) button</b>	<ul style="list-style-type: none"> <li>• Press to decrease the volume during music playback.</li> <li>• Press and hold to skip to the previous song during music playback.</li> </ul>
<b>Lamp brightness adjustment button</b>	<ul style="list-style-type: none"> <li>• Adjust the lamp brightness.</li> </ul>
<b>Bluetooth pairing button</b>	<ul style="list-style-type: none"> <li>• Press and hold to enter Bluetooth pairing mode.</li> <li>• While in Bluetooth pairing mode, press to end the mode.</li> <li>• When the connection is lost, press to reconnect devices.</li> </ul>

## Indicator light

The indicator light alerts you to the speaker bottle's status.

Colour	Status
<b>Flashes blue three times</b>	The speaker bottle is powering on
<b>Flashes red three times</b>	The speaker bottle is powering off
<b>Continuously red</b>	Charging
<b>Continuously blue</b>	Fully charged
<b>Flashes red and blue</b>	Bluetooth pairing mode

Colour	Status
Quickly flashes blue three times	Connected via Bluetooth
Quickly flashes red three times	Connected via Bluetooth (when the battery is low)
Flashes red every four seconds	The battery is low



If the indicator light does not work as described, disconnect the charger from the speaker bottle and reconnect it.

## Charging the battery

### Battery charging tips and precautions

- You can charge the speaker bottle using the charger (sold separately).
- If the battery is completely discharged, the speaker bottle cannot be turned on immediately when the charger is connected. Allow a depleted battery to charge for a few minutes before turning on the speaker bottle.
- Using a power source other than the charger, such as a computer, may result in a slower charging speed due to a lower electric current.
- The speaker bottle can be used while it is charging, but it may take longer to fully charge the battery.
- If the speaker bottle receives an unstable power supply while charging, it may not function. If this happens, unplug the charger from the speaker bottle.
- While charging, the speaker bottle and the charger may heat up. This is normal and should not affect the speaker bottle's lifespan or performance. If the battery gets hotter than usual, the charger may stop charging.
- If the speaker bottle is not charging properly, take the speaker bottle and the charger to a Samsung Service Centre.
- The charging time may vary depending on the charger specification.

 
## Wired charging

Charge the speaker bottle before using it for the first time or when it has been unused for extended periods.



Use only Samsung-approved chargers (more than 5V/1A for wired charging, more than 5V/2A for wireless charging). Unapproved chargers can cause the battery to explode or damage the speaker bottle.

- 1 Connect the speaker bottle to a charger.

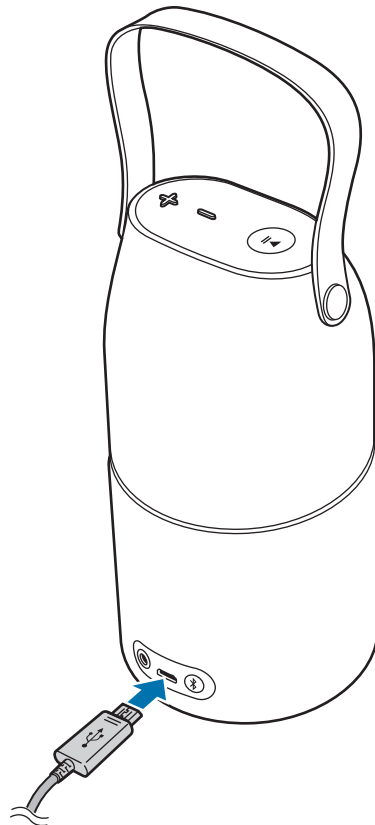

Connecting the charger improperly may cause serious damage to the speaker bottle. Any damage caused by misuse is not covered by the warranty.



**2** After fully charging, disconnect the speaker bottle from the charger.




- To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The charger should remain close to the electric socket and be easily accessible while charging.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

## Wireless charging

 The speaker bottle has a built-in wireless charging coil. You can charge the battery using a wireless charger (sold separately).

**1** Place the speaker bottle's bottom on the wireless charger.

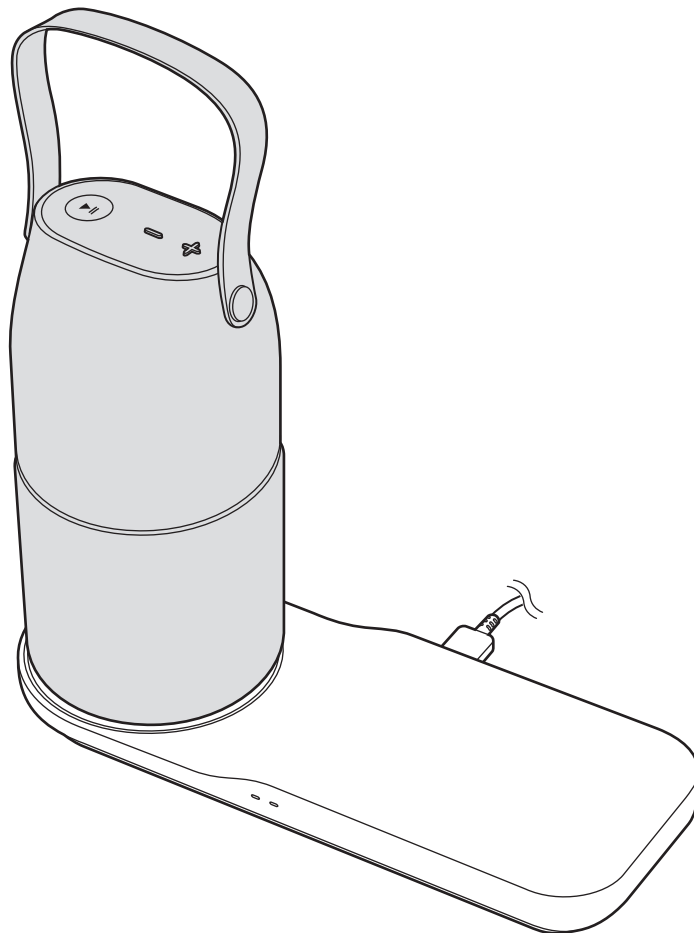

2 After fully charging, disconnect the speaker bottle from the wireless charger.



- When there are foreign materials between the speaker bottle and the wireless charger, the speaker bottle may not charge properly.
- Use Samsung-approved wireless chargers. If you use other wireless chargers, the battery may not charge properly.

# Using the speaker bottle

## Turning the speaker bottle on or off

Press and hold the Power/Play button to turn the speaker bottle on or off.

When you turn on the speaker bottle for the first time, the lamp turns on and it enters Bluetooth pairing mode.



- If your speaker bottle is frozen and unresponsive, press and hold the Power/Play button for approximately eight seconds.
- Follow all posted warnings and directions from authorised personnel in areas where the use of wireless devices is restricted, such as aeroplanes and hospitals.

## Connecting to another device

### Connecting via Bluetooth

Pair the speaker bottle with a mobile device. Once the devices are paired, the speaker bottle will automatically connect to the mobile device whenever you turn on the speaker bottle.

1

**Speaker bottle** Press and hold the Bluetooth pairing button for more than three seconds to enter Bluetooth pairing mode.

The indicator light will flash red and blue.



When you turn on the speaker bottle for the first time, it enters Bluetooth pairing mode.

## 2 **Mobile device** Activate the Bluetooth feature and search for Bluetooth devices.

For more information, refer to the other device's user manual.

## 3 **Mobile device** Tap **[Speaker] Samsung Bottle Design (0000)** from the list of available devices.



- The PIN for the speaker bottle is the four-digit number in parenthesis displayed on the other device's Bluetooth settings screen. The number differs depending on the speaker bottle.
- If the Bluetooth connection fails or the other device cannot locate the speaker bottle, remove the device's information from the other device's list. Then, try to connect again.
- The Bluetooth connection range and sound quality may vary depending on the connected devices.

## Disconnecting or reconnecting devices

You can end the current connection by pressing and holding the speaker bottle's Bluetooth pairing button for approximately three seconds.

If the Bluetooth connection ends due to the distance between the devices, bring the devices closer together within a certain period of time. The devices will automatically reconnect.



- You can also end the connection by turning off the speaker bottle or deactivating the Bluetooth feature on the connected device. When you turn on the speaker bottle again and the devices are in range, or activate the Bluetooth feature on the connected device, the devices will automatically reconnect.
- If the Bluetooth connection ends because of a device malfunction, use the Bluetooth menu on the disconnected device to reconnect the devices.
- Noise may occur if the Bluetooth connection is disconnected improperly.

## Connecting to other devices

After ending the connection between the speaker bottle and the mobile device, you can connect the speaker bottle to other devices.

- 1 Press and hold the Bluetooth pairing button for approximately three seconds to end the current connection and enter Bluetooth pairing mode.
- 2 Connect the speaker bottle to another device.

## Connecting via an audio cable

Connect the speaker bottle to a device via an audio cable. When the speaker bottle is connected via an audio cable, you can only adjust the volume.

- 1 **Speaker bottle** Plug the audio cable into the audio cable jack.
- 2 **Other device** Plug the other end of the audio cable into the audio output jack.



If the speaker bottle is simultaneously connected to a device via an audio cable and another device via Bluetooth, the speaker bottle will only play audio from the device connected via Bluetooth.

## Notices for using Bluetooth

Bluetooth is a wireless technology standard that uses a 2.4 GHz frequency to connect to various devices over short distances. It can connect and exchange data with other Bluetooth enabled devices, such as mobile devices, computers, printers, and other digital home appliances, without connecting via cables.

- To avoid problems when connecting your speaker bottle to another device, place the devices close to each other.
- Ensure that your speaker bottle and the other Bluetooth device are within the Bluetooth connection range (10 m). The distance may vary depending on the environment the devices are used in.

- Ensure that there are no obstacles between the speaker bottle and a connected device, including human bodies, walls, corners, or fences.
- Do not touch the Bluetooth antenna of a connected device.
- Bluetooth uses the same frequency as some industrial, scientific, medical, and low power products and interference may occur when making connections near these types of products.
- Some devices, especially those that are not tested or approved by the Bluetooth SIG, may be incompatible with your speaker bottle.
- Do not use the Bluetooth feature for illegal purposes (for example, pirating copies of files or illegally tapping communications for commercial purposes).

## Listening to music

Listen to music played on the connected device.

Press the Power/Play button to play music.

### Pausing or resuming playback

Press the Power/Play button to pause or resume playback.

### Adjusting the volume

Press the Volume button to adjust the volume during playback.

### Skipping to other songs

Press and hold the Volume (+) button to skip to the next song during playback.

 
Press and hold the Volume (-) button to skip to the previous song during playback.

## Using the lamp

### Lux manager app introduction

To configure the lamp or use the additional lamp features, download and install the **Lux manager** app on your mobile device connected via Bluetooth. You can download the **Lux manager** app from **Galaxy Apps** or **Play Store**.

On the Apps screen of the mobile device, tap **Lux manager**.

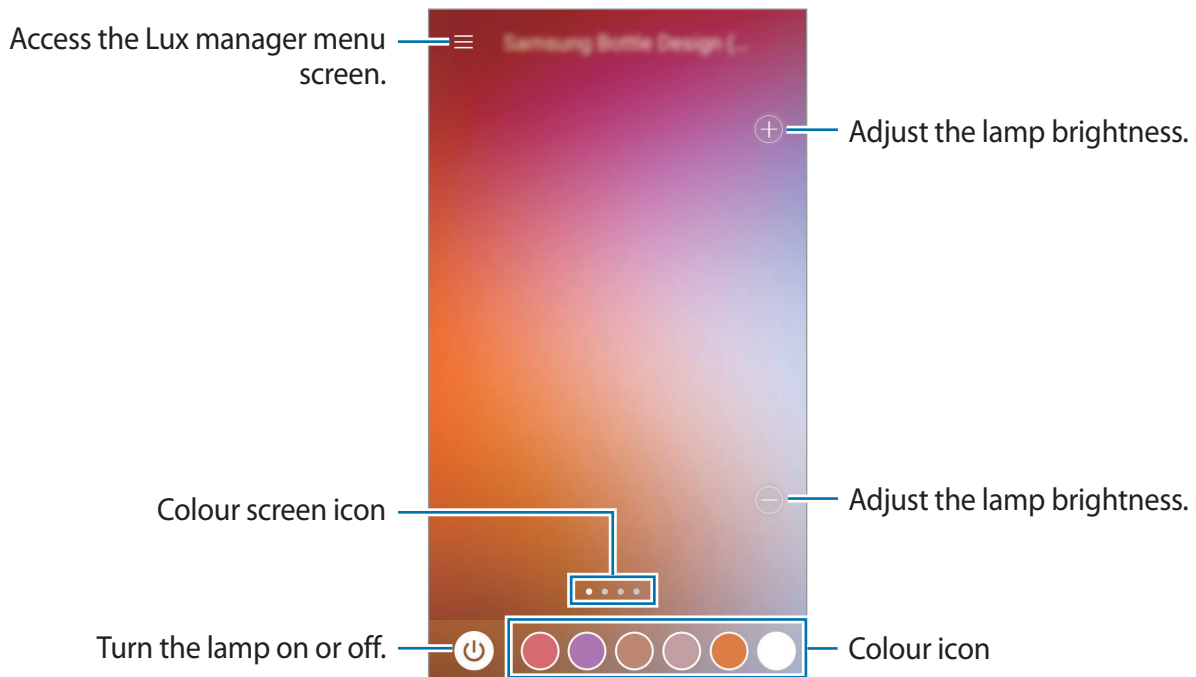

### Adjusting the lamp brightness

- 1 On the Apps screen of the mobile device, tap **Lux manager**.
- 2 Tap  $\oplus$  or  $\ominus$  to adjust the brightness.  
Or, drag your finger up or down on the screen to adjust the brightness.

## Adjusting the lamp brightness with the speaker bottle

To adjust the lamp brightness using the speaker bottle, press the Lamp brightness adjustment button.

Or, you can use the speaker bottle's motion recognition feature. Tilt the speaker bottle by more than 100°. The brightness will gradually change. When the brightness changes to the desired level, turn it upright again.


## Changing the lamp colour

- 1 On the Apps screen of the mobile device, tap **Lux manager**.
- 2 Swipe to the left or right to select a preset colour.
- 3 At the bottom of the colour screen, select a colour icon.  
Alternatively, tap the desired colour on the screen.

The selected colour will be applied to the lamp.

## Selecting additional lamp colours

You can select additional lamp colours other than the preset colours.

- 1 On the Apps screen of the mobile device, tap **Lux manager**.
- 2 Tap  → **My colour**.
- 3 Tap the desired colour from the picker panel.

The selected colour will be applied to the lamp.

To save the selected colour, tap .

To remove the saved colour, tap and hold the saved colour icon.

## Changing the lamp colour with the speaker bottle

Use the speaker bottle's motion recognition feature.

Shake the speaker bottle to change the lamp colour randomly.



## Changing the lamp mode

You can change the lamp mode to produce various moods.

On the Apps screen of the mobile device, tap **Lux manager**.

Tap  and select one of the following.

### Light wave

When you set the lamp mode to **Light wave**, the lamp brightness will change periodically so the lamp light will slowly pulse.

The  icon will appear in the upper-right corner of the screen.

### Music light

When you set the lamp mode to **Music light**, the lamp brightness and colour will change according to the music played. The colour will randomly change and the brightness will change according to the volume of the music played.

The  icon will appear in the upper-right corner of the screen.




### Candle mode

When you set the lamp mode to **Candle mode**, the lamp light flickers naturally like a candle.

The  icon will appear in the upper-right corner of the screen.


## Using the sleep timer

You can set the lamp to turn off automatically at a preset time.

- 1 On the Apps screen of the mobile device, tap **Lux manager**.
- 2 Tap  → **Sleep timer**.
- 3 Set the timer and tap **START**.  
At the preset time, the lamp and music will turn off.

## Configuring additional options

You can customise the settings for the speaker bottle and the **Lux manager** app.

- 1 On the Apps screen of the mobile device, tap **Lux manager**.
- 2 Tap  → **Settings**.

## Connection manager

Search for the speaker bottle to connect or to view the currently connected speaker bottle's information.

## Motion UX

Activate the motion recognition feature to change the speaker bottle's lamp brightness and colour.

## Information

You can view app's version information and open source licence. You can also view the user manual.

# Appendix

## Troubleshooting

Before contacting a Samsung Service Centre, please attempt the following solutions.

### **Your speaker bottle does not turn on**

When the battery is completely discharged, your speaker bottle will not turn on. Charge the battery completely before turning on the speaker bottle.

### **Your speaker bottle freezes**

If the speaker bottle freezes or hangs, try to resolve it by turning off the speaker bottle and then turning it on again.

If the speaker bottle is still unresponsive, end the Bluetooth connection and reconnect it. To do this, press the Bluetooth pairing button for approximately three seconds. When the speaker bottle enters Bluetooth pairing mode, connect the devices again, and then check the operation of the speaker bottle.

If the problem is still not resolved, contact a Samsung Service Centre.

### **The battery does not charge properly (For Samsung-approved USB cables and chargers)**

Ensure that the USB cable or the charger is connected properly.

If the problem is still not resolved, contact a Samsung Service Centre.

## **Another Bluetooth device cannot locate your speaker bottle**

- Ensure that your speaker bottle is in Bluetooth pairing mode.
- Restart your speaker bottle and search for the speaker bottle again.
- Ensure that your speaker bottle and the other Bluetooth device are within the Bluetooth connection range (10 m).

If the tips above do not solve the problem, contact a Samsung Service Centre.

## **Your speaker bottle cannot connect to another Bluetooth device**

- Ensure that your speaker bottle and the other Bluetooth device are within the maximum Bluetooth range (10 m).
- On the device you want to connect with, disconnect all paired devices and try to connect again.

## **Bluetooth connection is often disconnected**

- If there are obstacles between the devices, the operating distance may be reduced.
- Ensure that your speaker bottle and the other Bluetooth device are within the maximum Bluetooth range (10 m).
- When using the speaker bottle with other Bluetooth devices, the connection may be affected by electromagnetic waves. Use the speaker bottle in environments with fewer wireless devices present.

## **The speaker bottle works differently as described in the manual**

Available functions may differ depending on the connected device.

## **The battery depletes faster than when first purchased**

- When you expose the speaker bottle or the battery to very cold or very hot temperatures, the useful charge may be reduced.
- The battery is consumable and the useful charge will get shorter over time.

## The speaker bottle gets dirty

Gently wipe the speaker bottle with a soft cloth. Do not use chemicals or strong detergents. Doing so may discolour or corrode the outside the device.

## Removing the battery

- To remove the battery, you **must** visit an authorised service centre with the provided instructions.
- For your safety, you **must not attempt to remove** the battery. If the battery is not properly removed, it may lead to damage to the battery and device, cause personal injury, and/or result in the device being unsafe.
- Samsung does not accept liability for any damage or loss (whether in contract or tort, including negligence) which may arise from failure to precisely follow these warnings and instructions, other than death or personal injury caused by Samsung's negligence.

- 1 Remove the rubber foot from the bottom of the speaker bottle.
- 2 After removing the rubber foot, you will see four screws. Remove the four screws.
- 3 Remove the cover from the bottom of the speaker bottle.
- 4 Remove the two screws located below the audio jack panel.
- 5 Remove the remaining four screws from the bottom of the speaker bottle.
- 6 Remove the coil in the centre of the speaker bottle.
- 7 Pull down the grill slightly so the audio jack panel protrudes from the speaker bottle.
- 8 Pull and disconnect the ribbon cable to remove the audio jack panel from the speaker bottle.
- 9 Pull the grill out to remove it completely.

- 10 Remove the circuit board by lifting it out of the speaker bottle.
- 11 Remove the four screws on the board connecting the main circuit board and the battery box.
- 12 Unfasten the hook of the battery box to open the lower part of the box and remove the batteries.

## FCC Warning Statement

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Caution: Any changes or modifications not expressly approved by Samsung Electronics Co., Ltd. could void the user's authority to operate the equipment.

## IC Warning Statement

- This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## Copyright

Copyright © 2016 Samsung Electronics

This manual is protected under international copyright laws.

No part of this manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

## Trademarks

- SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- All other trademarks and copyrights are the property of their respective owners.