

Safety information

To prevent injury to yourself and others or damage to your device, read the safety information about your device before using the device

Samsung cannot be held responsible for any injury or property damage caused by failure to comply with the safety cautions and regulations

Do not use damaged power cords or plugs, or loose electrical sockets

Do not touch the power cord with wet hands or disconnect the charger by pulling the cord

Do not bend or damage the power cord

Do not store your device with metal objects, such as coins, keys, and necklaces

Your device may overheat.

Do not use your device for a while if the device is overheated

Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.

Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers

Your device may overheat and cause a fire.

Do not drop or cause an impact to the charger or the device

- Store your device only on flat surfaces.
- · If your device falls, it may be damaged.

Do not bite or suck the device

- · Doing so may damage the device or cause an explosion.
- If children use the device, make sure that they use the device properly.

Keep your device dry

- Humidity and liquids may damage the parts or electronic circuits in your device.
- If your device is wet, dry the device with a towel and take it to a service centre.

Do not disassemble, modify, or repair your device

- Your device may malfunction and your risk of electric shock is increased.
- Any changes or modifications to your device can void your manufacturer's warranty. If your device needs servicing, take your device to a Samsung Service Centre.

This manual's images and content may differ from the product.

Overview



Check the product box for the following items: Wireless Charging Pad and user manual. The items supplied with the Wireless Charging Pad and any available accessories may vary depending on the region.

Using the Wireless Charging Pad

- I Connect the Wireless Charging Pad and a charger with a charging cable, and plug the charger into an electric socket.
 - When the Wireless Charging Pad is connected to the electric socket, the indicator light flashes from red to green to orange, and then turns off.



Use only Samsung-approved chargers (over 2 A). Unauthorized chargers may cause damage or the Wireless Charging Pad may malfunction.



- The charger and the charging cable are sold separately.
- The Wireless Charging Pad's indicator light flashes differently depending on its status. For more information about the indicator light, see below. If the indicator light is not working properly, reconnect the charger to the Wireless Charging Pad.
- To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The charger should remain close to the electric socket and easily accessible while charging.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

	Indicator light	Device status
	$Red \to Green \to Orange$	When connecting to the power outlet
	Orange	When not charging properly
	Green	When charging properly
	Off	When in Idle mode

2 Attach the Wireless Charging Cover to a smartphone, and then place the smartphone on the Wireless Charging Pad.



The Wireless Charging Cover is sold separately. For more information about the Wireless Charging Cover, refer to the Wireless Charging Cover's user manual.

3 When the smartphone is fully charged, disconnect the charger from the Wireless Charging Pad.



- Check the smartphone's battery status using the charging icon displayed on the screen.
- Do not place any other object between the smartphone and the Wireless Charging Pad. The smartphone may not charge properly.
- Charging a smartphone with the Wireless Charging Pad in an area with a weak signal may cause a significant drop in reception.
- The Wireless Charging Pad is compatible with WPC certified devices.

Do not place the Wireless Charging Cover solely on the Wireless Charging Pad

Doing so may overheat the device and cause a fire.

Place the smartphone properly on the Wireless Charging Pad

The position guide indicates the upper side, lower side and the centre of the Wireless Charging Pad. Match the upper and lower side of the smartphone with the Wireless Charging Pad, and place the smartphone in the middle. If not, the smartphone may not charge properly, and its signal may drop.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other

household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.



RSS-GEN section 7.1.3 statements

This device complies with Industry Canada licenceexempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.