



Wireless Charging Pad



www.samsung.com

Type STA_A00101
03/2013, Rev.1.0

English

Safety information

To prevent injury to yourself and others or damage to your device, read the safety information about your device before using the device

Samsung cannot be held responsible for any injury or property damage caused by failure to comply with the safety cautions and regulations

Do not use damaged power cords or plugs, or loose electrical sockets

Do not touch the power cord with wet hands or disconnect the charger by pulling the cord

Do not bend or damage the power cord

Do not store your device with metal objects, such as coins, keys, and necklaces. Your device may overheat.

Do not use your device or applications for a while if the device is overheated

Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.

Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers
Your device may overheat and cause a fire.

Do not drop or cause an impact to the charger or the device

- Store your device only on flat surfaces
- If your device falls, it may be damaged.

Do not bite or suck the device or the battery

- Doing so may damage the device or cause an explosion.
- If children use the device, make sure that they use the device properly.

This device must be installed and used in a manner that keeps the device at least 10cm from users and bystanders.

Keep your device dry

 
- Humidity and liquids may damage the parts or electronic circuits in your device.
- If your device is wet, dry the device with a towel and take it to a service center.

Do not disassemble, modify, or repair your device

- Your device may malfunction and your risk of electric shock is increased.
- Any changes or modifications to your device can void your manufacturer's warranty. If your device needs servicing, take your device to a Samsung Service Center.

This manual's images and content may differ from the product.

Overview

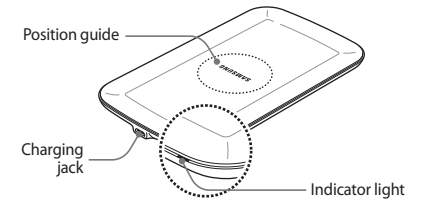


-  Check the product box for the following items: Wireless Charging Pad, Charger, Charging cable, User manual. The items supplied with the Wireless Charging Pad and any available accessories may vary depending on the region.

Using the Wireless Charging Pad

- 1 Connect the Wireless Charging Pad and the charger with the charging cable, and plug the charger into an electric socket.

 - When the Wireless Charging Pad is connected to the electric socket, the indicator light flashes from red to green to orange, and then turns off.

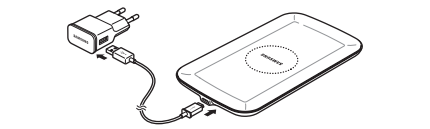


-  Use only Samsung-approved chargers and cables. Unapproved chargers or cables can cause the battery to explode or damage the device.

-  The Wireless Charging Pad's indicator light flashes differently depending on its status. For more information about the indicator light, see below. If the indicator light is not working properly, reconnect the charger to the Wireless Charging Pad.

Indicator light	Device status
Red → Green → Orange	When connecting to the power outlet
Orange	When not charging properly
Green	When charging properly
Off	When in Idle mode

 - 2 Attach the Wireless Charging Cover to a smartphone, and then place the smartphone on the Wireless Charging Pad.

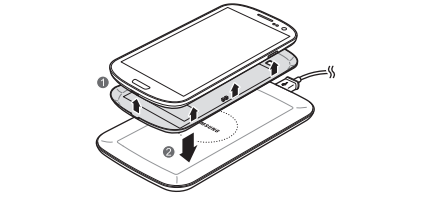


-  The Wireless Charging Cover is sold separately. For more information about the Wireless Charging Cover, refer to the Wireless Charging Cover's user manual.

- 3 When the smartphone is fully charged, disconnect the charger from the Wireless Charging Pad.

-  Check the smartphone's battery status looking at the charging icon displayed on the screen.
- Do not place any other object between the smartphone and the Wireless Charging Pad. The smartphone may not charge properly.
- Charging a smartphone with the Wireless Charging Pad in an area with a weak signal may cause a significant drop in reception.
- The Wireless Charging Pad is compatible with WPC certified devices.


Do not place the Wireless Charging Cover solely on the Wireless Charging Pad

 Doing so may overheat the device and cause a fire.

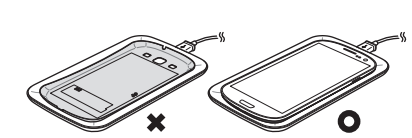

Place the smartphone properly on the Wireless Charging Pad

 The position guide indicates the upper side, lower side and the center of the Wireless Charging Pad. Match the upper and lower side of the smartphone with the Wireless Charging Pad, and place the smartphone in the middle. If not, the smartphone may not charge properly, and its signal may drop.

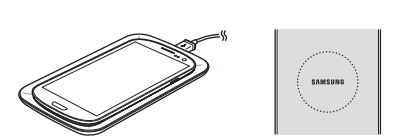

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Users are not permitted to make changes or modify the device in any way.

Changes or modifications not expressly approved by Samsung will void the user's authority to operate the equipment.

Recycling Direct

To dispose electronics properly, follow the recycling process regulated in your area or go to Samsung website to find the nearest recycling location:
www.samsung.com/recyclingdirect
Or call, (877) 278 - 0799.

Samsung Telecommunications America, LLC
1301 E. Lookout Drive
Richardson, Texas 75082
Phone: 1-800-SAMSUNG
Phone: 1-888-987-HELP (4357)