

SAMSUNG


 
QUICK START GUIDE

Wireless charger



SAMSUNG

Printed in Korea
GH68-44694A Rev.1.0
E Type 07/2015

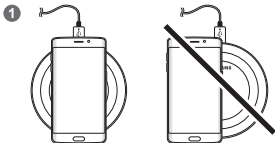

Copyright © 2015 Samsung Electronics

- Please read this guide before using the device to ensure safe and proper use.
- Images may differ in appearance from the actual product. Content is subject to change without prior notice. You can access the full user manual for more information. Visit www.samsung.com to view device information, the user manual, and more.

Device layout

a	Wireless charging surface	c	Indicator light
b	Charger port	d	Fan vent



Wireless charging covers and chargers are sold separately.

Using the wireless charger

1. Connect the charger to the wireless charger. Then, place a supported mobile device in the centre of the charging surface. (1)
2. When the mobile device is fully charged, remove the mobile device from the wireless charger.



Use only Samsung-approved chargers (5 V/2 A, 5.3 V/2 A, and 9 V/1.67 A).



- The charger should remain close to the electric socket and easily accessible while charging.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- If you use the wireless charger in areas with weak network signals, you may lose network reception.

Wireless fast charging

To begin fast charging, place a mobile device that supports wireless fast charging on the wireless charger. For more information, refer to the user manual.



To use this feature, you must connect the wireless charger to a charger that supports Adaptive Fast Charging (AFC).

Safety information

Read all safety information before using the device to ensure safe and proper use. To view the full safety information, refer to the Samsung website.

Use manufacturer-approved batteries, chargers, accessories, and supplies

Do not touch the device with wet hands

Do not drop or cause an impact to the charger or the device

The device can be used in locations with an ambient temperature of 0°C to 35°C. You can store the device at an ambient temperature of -20°C to 50°C. Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan

Prevent the multipurpose jack and the small end of the charger from contact with conductive materials, such as liquids, dust, metal powders, and pencil leads

Do not allow children or animals to chew or suck the device

Do not disassemble, modify, or repair your device

Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields

Correct disposal



This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

This product is RoHS compliant.

FCC Warning Statement

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.