

SAMSUNG  
ELECTRONICS



GH68-XXXXXA Rev.1.0  
English (EU). 12/2013

The Samsung logo, consisting of the word "SAMSUNG" in white, bold, sans-serif capital letters, is centered within a dark, horizontally-oriented oval.



**S Action Mouse**

# User Manual

[www.samsung.com](http://www.samsung.com)

# Getting started

## Device layout

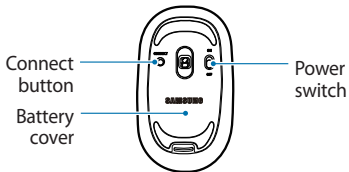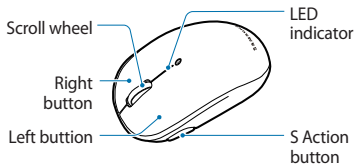

- Images may differ in appearance from the actual product. Content is subject to change without prior notice.

- The device is only compatible with some Samsung devices operated by Google Android. This user manual focuses on the features available after connecting the device to other device.
- Some features may not be available depending on the connected device.

## Turning the device on or off

Slide the power switch to **ON** to turn on the device. When the device is turned on, the notification light flashes blue.



Slide the power switch to **OFF** to turn off the device.

## Changing the battery

Replace the battery when the notification light flashes red.

- 1 Remove the battery cover.

Put your fingernails in to the indentation at the end of the battery cover and pull out the cover.



Be careful not to damage your fingernails when you remove the back cover.

- 2 Replace the battery and be sure that the polarities (+/-) of the batteries are correct.



Do not recharge the batteries (AA type) supplied with the product.

- 3 Replace the battery cover.

To close the cover, attach the upper part of the battery cover and press firmly on each part in order.

## Connecting to other devices

You can connect the device to other Bluetooth-enabled devices, such as smartphones or computers.



You can connect to an other Bluetooth-enabled device only after disconnecting a previously connected device.

- 1 Press and hold the Connect button for more than 3 seconds.  
The notification light flashes red and blue.
- 2 On the Bluetooth-enabled device, access the Bluetooth setup mode and search for Bluetooth devices.
- 3 From the search results, select the device name.  
When pairing is complete, the device's name appears in the device list.



- If the Bluetooth connection fails or the other device cannot search for the device, remove the device's information from the other device's list, and then try again.
- If the mouse doesn't work properly, restart the system, or try to pair both devices again.
- If the mouse is not used for 10 minutes, the mouse hibernates. In this case, click a mouse button to wake it up. Then, you can use the mouse after a moment.

## Disconnecting from other devices

You can connect to another device only after disconnecting a previously connected device.

Press and hold the Connect button for more than 3 seconds.

## Using the device

### Activating Quick Window

You can create windows in various sizes on the connected device's screen and run many applications at the same time.

- 1 Press and hold the S Action button and create a window in the size you desire on the connected device's screen.





- 2 Select one of the applications from the list of available applications appeared on the connected device.

## Using the S Action features

### Opening a list of recently-used applications

Press and hold the S Action button and drag the device to the right.



## Closing the running application

Press and hold the S Action button and drag the device down.



## Zooming in or out the current text or images

Press and hold the S Action button and scroll the Scroll wheel up or down.



## Using the scroll wheel

- Press to return to the Home screen.
- Press and hold to launch Google search.
- Press twice to launch **S Voice**.



# Appendix

## Specifications and features

Dimensions (mm)	57.5 X 97.6 X 33.6
Weight ( $\pm 1$ g)	80.8
Operating Voltage	1.5 VDC
Input Power	35 mW
Input Voltage	1.5 VDC



The wireless connection range may vary depending on the environment the device is used in.

### **FCC Part 15.19**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **FCC Part 15.21**

Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

## **IC: 649E-ETMP900D**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.