

**SAMSUNG  
ELECTRONICS**




[www.samsungmobileusa.com](http://www.samsungmobileusa.com)

GH68-xxxxxx  
04/2011. Sample



# Mono Headset

 HM1200

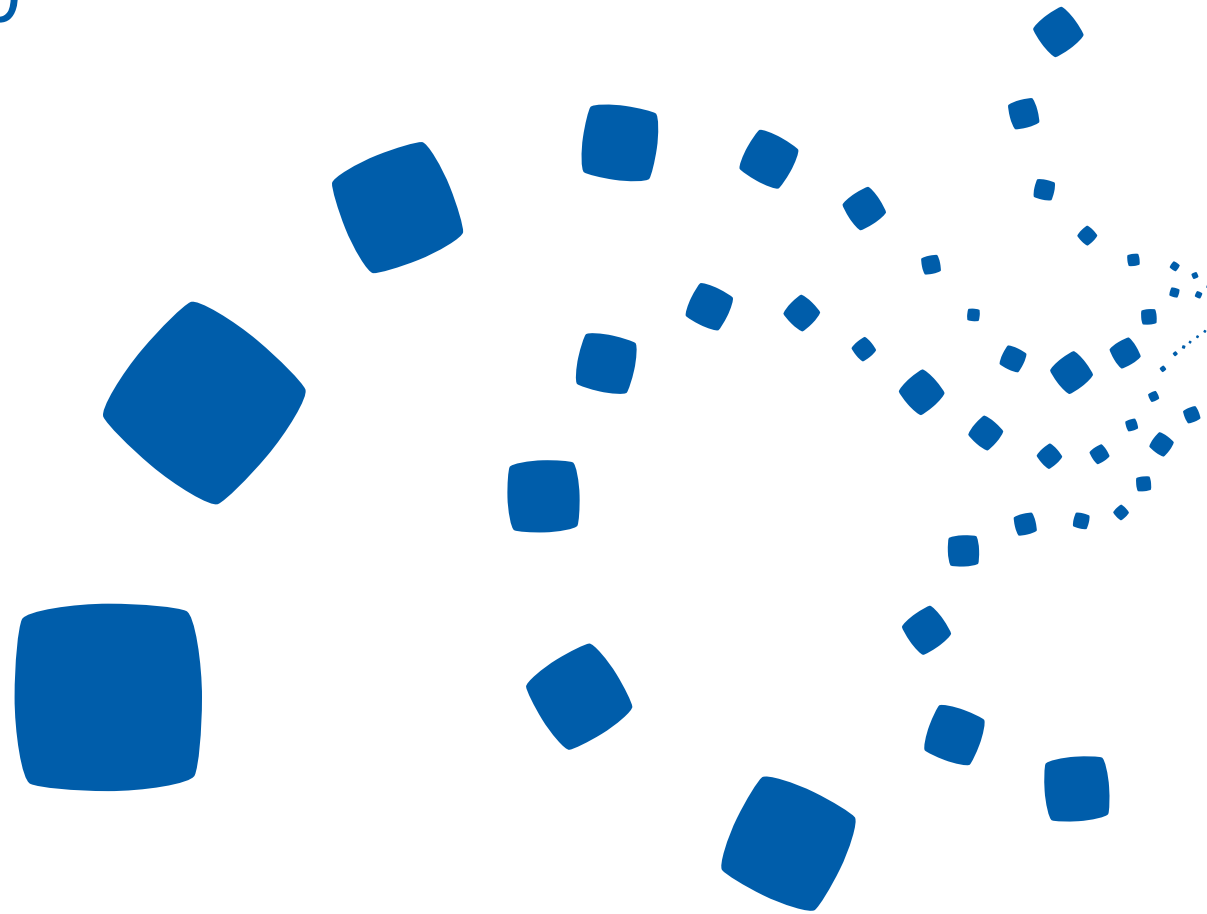

## English .....1

To dispose electronics properly, follow the recycling process regulated in your area or go to Samsung website to find the nearest recycling location:  
[www.samsung.com/recyclingdirect](http://www.samsung.com/recyclingdirect) Or call, (877) 278 – 0799.

Para desechar electrónicos correctamente, siga el proceso de reciclaje regulado en su área o visite el sitio web de Samsung para encontrar el establecimiento de reciclaje más cercano:  
[www.samsung.com/recyclingdirect](http://www.samsung.com/recyclingdirect) O llame al (877) 278-0799.

# Contents

## ***Getting started***

Your headset overview .....	5
Button functions .....	6
Charging the headset.....	7
Wearing the headset.....	9

## ***Using your headset***

Turning the headset on or off .....	11
Pairing and connecting the headset .....	11
Pairing via the Active pairing feature .....	15
Using call functions .....	17
Resetting the headset .....	21

## ***Appendix***

Frequently asked questions .....	22
Certification and Safety approvals .....	25
UL certified travel adapter .....	26
STANDARD LIMITED WARRANTY .....	27
Specifications .....	35

*Please read this manual before operating your headset, and keep it for future reference. Graphics used in this manual are for illustration purposes. The actual products may vary.*

## **Copyright**

Copyright © 2011 Samsung Electronics

This user manual is protected under international copyright laws.

No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

## **Trademarks**

- SAMSUNG, and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. More information about Bluetooth is available at [www.bluetooth.com](http://www.bluetooth.com).
- All other trademarks and copyrights are the property of their respective owners.

*Please read all Safety precautions before using your headset to ensure safe and proper use.*



## **Safety precautions**

 
- When using your headset while driving, follow local regulations in the region you are in.
- Never disassemble or modify your headset for any reason. Doing this may cause the headset to malfunction or become combustible. Bring the headset to an authorized service center to repair it.
- Keep your device and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.
- Avoid exposing your device to very cold or very hot temperatures (below 0 °C or above 45 °C). Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device.
- Do not allow your device to get wet — liquids can cause serious damage. Do not handle your device with wet hands. Water damage to your device can void your manufacturer's warranty.
- Avoid using your device's light close to the eyes of children or animals.
- Do not use the device during a thunderstorm. Thunderstorms can cause the device to malfunction and increase the risk of electric shock.



Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

# Getting started

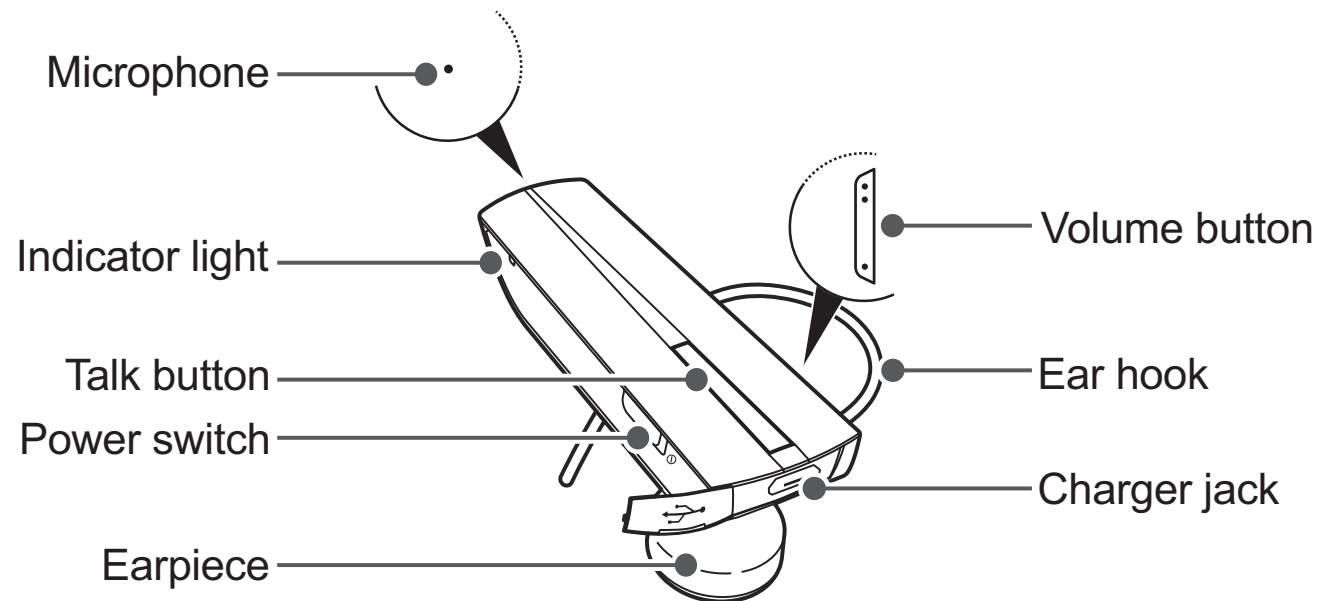


## Your headset overview



- Package includes and not limited to ear pieces, ear hook and user manual.
- The items supplied with your headset may vary depending on your region.



 
## Button functions

Button	Function
 <b>Power switch</b>	<ul style="list-style-type: none"><li>• Slide the switch to turn the headset on or off.</li></ul>
 <b>Talk</b>	<ul style="list-style-type: none"><li>• Press and hold the Talk button for 3 seconds to enter Pairing mode.</li><li>• Press the Talk button to make and answer a call.</li></ul>
 <b>Volume</b>	<ul style="list-style-type: none"><li>• Press to adjust the volume.</li><li>• Press and hold both Volume up and down buttons simultaneously to turn the indicator light on or off.</li><li>• In Pairing mode, press and hold the Volume up button until you hear a beep to turn the Multi-point feature on or the Volume down button until you hear a beep to turn the Multi-point feature off.</li></ul>

## Charging the headset

This headset has a rechargeable internal battery which is non-removable. Make sure the headset is fully charged before using it for the first time. To check the battery level see page 8.

- 1 Connect the charger to the charger jack.
- 2 Plug the charger in to the wall outlet.  
During charging, the indicator light will turn red.  
If charging does not begin, unplug the travel adapter and plug it in again.
- 3 When the headset is fully charged, the red indicator light changes to blue. Unplug the travel adapter from the wall outlet and the headset.

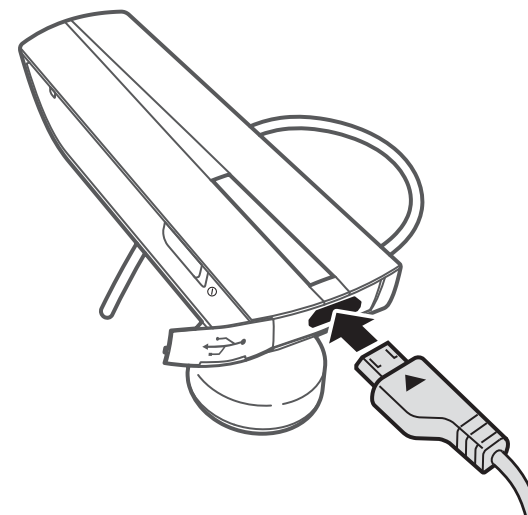

- Use only Samsung-approved chargers. Unauthorized chargers may cause an explosion or damage to the headset.
- Over time, after many charging and discharging cycles, battery performance will diminish. This is normal for all rechargeable batteries.
- When a call comes in while charging, disconnect your headset from the travel adapter and answer the call.

## When the headset charge falls low

When the battery runs out of power, the headset beeps and the indicator light flashes red. To charge the battery, see page 7. If the headset powers off during a call, the call will be automatically transferred to the phone.

 
## Checking the battery level

To check the battery level, hold down the Volume down button and the Talk button at the same time. Depending on the battery level, the indicator light flashes 5 times in one of the following colors:


Battery level	Indicator light color
Above 80%	Blue
80 ~ 20%	Violet
Below 20%	Red

## Wearing the headset

Place the headset on your ear. Depending on what ear you are going to wear the headset, simply adjust the ear hook accordingly.

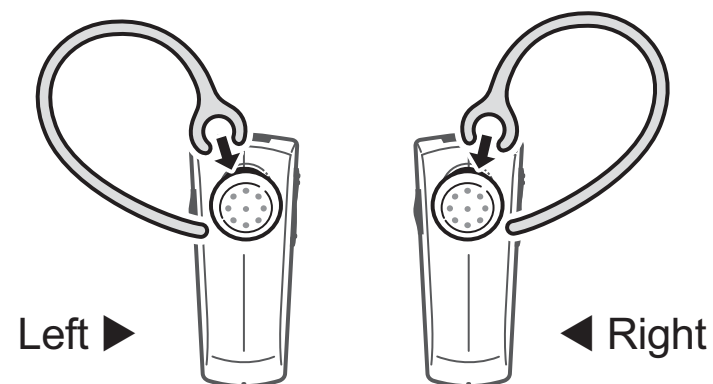

 You can also use the optional earpiece cushions instead of the ear hook. Remove the earpiece cover and attach the earpiece cushion. Then, rotate the earpiece cushion left or right slightly depending on what ear you are going to wear the headset. If it does not fit your ear, replace it with the other.

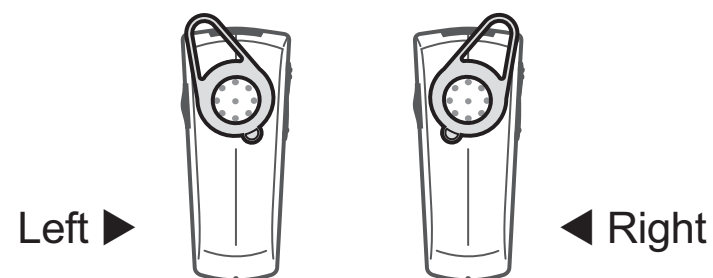

# Using your headset

This section explains how to turn the headset on, pair and connect to the phone, and use various functions.



- Activated functions and features may differ depending on the phone type.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your headset.

## **Handle the headset properly to improve performance**

- Do not block the device's internal antenna. The human body can interfere with a Bluetooth signal.
- If you usually use your mobile phone with your right hand, wear the headset on your right ear.
- Avoid coming in contact with the internal antenna of a headset or mobile phone for better performance.

## Turning the headset on or off

- To turn the headset on, slide up the power switch. The blue indicator light flashes 4 times.
- To turn the headset off, slide down the power switch. The indicator light flashes blue and red then turns off.

## Pairing and connecting the headset

Pairing means unique and encrypted wireless connection between two Bluetooth devices when they agree to communicate with each other. In order to pair two Bluetooth devices, a PIN has to be exchanged between the two devices.

To enter Pairing mode, two devices should be placed close enough to each other.

## Pairing and connecting the headset with a phone

- 1 Enter Pairing mode.
    - With the headset turned on, press and hold the Talk button for 3 seconds. The blue indicator light stays lit.
    - If the headset is turned on for the first time, it will go into Pairing mode immediately and the Pairing mode stays for 3 minutes.
  - 2 Activate the Bluetooth feature on your phone and search for the headset (see your phone's user manual).
  - 3 Select the headset (HM1200) from the list of devices found by your phone.
  - 4 If requested, enter the Bluetooth PIN 0000 (4 zeros) to pair and connect the headset to your phone.
- ☒ Your headset supports the Simple Pairing feature which allows the headset to be paired with a Bluetooth device without requesting a PIN. This feature is available for devices that are compliant with Bluetooth version 2.1 or higher.

The headset also can be paired via the Active pairing feature, see page 15.

## Connecting with two Bluetooth phones

With the Multi-point feature activated, your headset can be connected with two Bluetooth phones at the same time.

- 1** Connect with the first Bluetooth phone.
- 2** Activate Multi-point feature. See page 14.
- 3** Activate the Bluetooth feature on the second Bluetooth phone and search for the headset (see your phone's user manual).
- 4** Select the headset (HM1200) from the list of devices found by the second Bluetooth phone.
- 5** If requested, enter the Bluetooth PIN 0000 (4 zeros) to connect the headset to the second Bluetooth phone.
- 6** Reconnect to the headset from the first Bluetooth phone.





When connecting the headset to two Bluetooth phones, some phones may not be able to connect as a second Bluetooth phone.

### **To turn Multi-point feature on**

- In Pairing mode, press and hold the Volume up button.  
The blue indicator light flashes 2 times and you will hear a beep.

### **To turn Multi-point feature off**

- In Pairing mode, press and hold the Volume down button.  
The red indicator light flashes 2 times and you will hear a beep.

## **Disconnecting the headset**

Turn off the headset or use the Bluetooth menu on your phone to remove the device from your pairing list.

## Reconnecting the headset

If the headset loses the connection to the paired phone,

- Press and hold the Talk button on the headset or use the Bluetooth menu on your phone.

Your headset will attempt to automatically reconnect each time you turn it on. This feature may be unavailable on some phones.




If the Multi-point feature is activated, your headset will attempt to reconnect to the two most recently connected devices.

### Pairing via the Active pairing feature

With the Active pairing feature, your headset automatically look for a Bluetooth device and try to make a connection with it.

This feature is available for mobile phones, but the phone's Bluetooth visibility option must be set to on.

- 1 In Pairing mode, press and hold the Talk button to enter Active pairing mode. To enter Pairing mode, see page 12.
  - 2 The violet indicator light turns on and the headset will search for a Bluetooth phone within your phone's range, and attempt to pair with it.
-  • Ensure the phone you wish to connect to is within range of the headset. Place the headset and phone close to each other to avoid pairing with other devices.
  - The headset will attempt active pairing for up to 20 seconds.
  - The Bluetooth phone you want to connect with must not be paired with other devices. If the phone is already connected to another device, end the connection and restart the Active pairing feature.
  - This feature may not be available on some devices.

## Using call functions

-  Available call functions may vary depending on the phone.

### Making a call


#### Redialing the latest number

To redial the latest number of the primary phone,

- Press and hold the Talk button.

To redial the latest number of the secondary phone,

- Press the Talk button twice.

-  For some phones, pressing the Talk button opens the call log list. Press the Talk button again to dial the selected number.

## Dialing a number by voice

To voice dial from the primary phone,

- Press the Talk button and say a name.
- ☒ • This function is available only on the Hands-Free profile.
- ☒ • This function may not be available on some devices.
- ☒ • This function is not available on the secondary phone.

## Answering a call

Press the Talk button to answer a call when you hear incoming call tones.

- ☒ When two calls from the two connected phones come in, you can answer the call of the first phone.

## Ending a call

Press the Talk button to end a call.

## Rejecting a call

Press and hold the Talk button to reject a call when a call comes in.



- When two calls from the two connected phones come in, you can reject the call of the first phone.
- This function is available only on the Hands-Free profile.

## Using options during a call

You can use the following functions during the call.

### Adjusting the volume

Press the Volume up or down button to adjust the volume.



- You will hear a beep when the volume level of the headset reaches to the lowest or highest level.

## **Muting the microphone**

Press and hold the Volume up or down button to turn the microphone off so that the person with whom you are speaking cannot hear you. When the microphone is turned off, the headset beeps at regular intervals. Press and hold the Volume up or down button again to turn the microphone back on.

## **Transferring a call from the phone to the headset**

Press the Talk button to transfer a call from the phone to the headset.

## **Placing a call on hold**

Press and hold the Talk button to place the current call on hold.



- When the headset is connected with two phones, this function is not available.
- This function is available only on the Hands-Free profile.

## **Answering a second call**

- Press the Talk button to end the first call and answer a second call when you hear call waiting tones.

- Press and hold the Talk button to place the first call on hold and answer a second call when you hear call waiting tones.
- To switch between the current call and the held call, press and hold the Talk button.
- ☒ • When the headset is connected with two Bluetooth phones, you cannot answer a second call from the same phone.
  - This function is available only on the Hands-Free profile.

## Resetting the headset

When the headset is paired with a device, it automatically saves connection and feature settings, such as the Bluetooth address or device type of the mobile phone. When you reset the headset, all connection settings in the headset will be deleted and the connection with your phone will be lost. In order to use the headset, you will have to pair it again.

If you want to reset the connection settings in the headset;

- In Pairing mode, simultaneously press and hold both Volume buttons and Talk button for 3 seconds.



# Appendix

## Frequently asked questions

<b>Will my headset work with laptops, PCs, and PDAs?</b>	Your headset will work with devices that support your headset's Bluetooth version and profiles. For specifications, see page 35.
<b>Why do I hear static or interference while on a call?</b>	Appliances such as cordless phones and wireless networking equipment may cause interference, which usually sounds like static. To reduce any interference, keep the headset away from other devices that use or produce radio waves.

<b>Will my headset interfere with my car's electronics, radio, or computer?</b>	Your headset produces significantly less power than a typical mobile phone. It also only emits signals that are in compliance with the international Bluetooth standard. Therefore, you should not expect any interference with standard consumer-grade electronics equipment.
<b>Can other Bluetooth phone users hear my conversation?</b>	When you pair your headset to your Bluetooth phone, you are creating a private link between only these two Bluetooth devices. The wireless Bluetooth technology used in your headset is not easily monitored by third parties because Bluetooth wireless signals are significantly lower in radio frequency power than those produced by a typical mobile phone.
<b>Why do I hear an echo while on a call?</b>	Adjust the headset volume, or move to another area and try again.

<b>How do I clean my headset?</b>	Wipe it with a soft dry cloth.
<b>The headset does not fully charge.</b>	<p>The headset and the travel adapter may not have been connected properly.</p> <p>Separate the headset from the travel adapter, reconnect, and charge the headset.</p>
<b>I cannot use all the features described in the manual.</b>	Available features may vary depending on the connected device. If your headset is connected to two devices at once, some features may be unavailable.

## Certification and Safety approvals

### FCC

FCC ID: [A3LHM1200](#)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

Users are not permitted to make changes or modify the device in any way.

Changes or modifications not expressly approved by Samsung will void the user's authority to operate the equipment.

### Industry Canada

IC ID: [649E-HM1200](#)

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## **UL certified travel adapter**

The travel adapter for this headset has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

**FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.**

**IMPORTANT SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS.**

**DANGER – TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.**

**FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.**

**THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.**

## STANDARD LIMITED WARRANTY

### What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC (“SAMSUNG”) warrants to the original purchaser (“Purchaser”) that SAMSUNG’s phones and accessories (“Products”) are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Case/Pouch/Holster	90 Days
Other Phone Accessories	1 Year

## STANDARD LIMITED WARRANTY-CONT.

### **What is Not Covered?**

This Limited Warranty is conditioned upon proper use of Product by Purchaser.

This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, neglect, unusual physical, electrical or electromechanical stress, or defects in appearance, cosmetic, decorative or structural items, including framing, and any nonoperative parts unless caused by SAMSUNG; (b) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (c) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible;

## STANDARD LIMITED WARRANTY-CONT.

### What is Not Covered?

(d) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (e) malfunctions resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (f) defects or damage from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (g) defects or damage from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake, or from exposure to weather conditions, or battery leakage, theft, blown fuse, or improper use of any electrical source; (h) defects or damage caused by cellular signal reception or transmission, or viruses or other software problems introduced into the Product; (i) any other acts which are not the fault of SAMSUNG; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.



## STANDARD LIMITED WARRANTY-CONT.

### What are SAMSUNG's Obligations?

During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the original date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product.

Repaired/replaced cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

## STANDARD LIMITED WARRANTY-CONT.

### What Are the Limits On SAMSUNG's Liability?

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

## **STANDARD LIMITED WARRANTY-CONT.**

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

## **STANDARD LIMITED WARRANTY-CONT.**

THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE RE-MAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRDPARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

## **STANDARD LIMITED WARRANTY-CONT.**

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, LLC  
1301 E. Lookout Drive  
Richardson, Texas 75082  
Phone: 1-800-SAMSUNG  
Phone: 1-888-987-HELP (4357)

©2011 Samsung Telecommunications America, LLC. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

## Specifications

Item	Specifications and description
Bluetooth version	3.0
Support profile	Headset Profile, Hands-Free Profile
Operating range	Up to 33 feet (10 meters)
Standby time	Up to 200 hours*
Talk time	Up to 7 hours*
Charging time	Approximately 2 hours*

\* Depending on the phone type and usage, the actual time may vary.