

SAMSUNG

MP3 PLAYER MY-MP200

Instruction Manual



Safety Warnings

 
SAFETY WARNINGS

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
PRODUCTO LASER CLASE 1

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

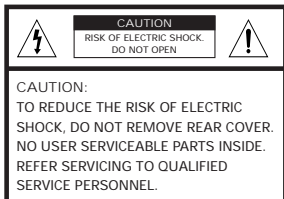

**CAUTION-Invisible laser radiation
when open and interlocks
defeated, avoid exposure to
beam.**



This symbol indicates that dangerous voltage which can cause electric shock is present inside this unit.



This symbol alerts you to important operating and maintenance instructions accompanying the unit.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Attention: FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Safety Warnings

FCC COMPLIANCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables and I/O cords must be used for this equipment to comply with the relevant FCC regulations.

Changes or modifications not expressly approved in writing by Samsung may void the user's authority to operate this equipment.

Table of Contents

◆Safety Warnings	2
◆Accessories Supplied	4
◆Location of controls	5
◆Getting Started	6
◆MP3 Player	
•Connecting to PC.....	7
•Installing the MP3 programs on your PC.....	8
•Using MP3 program.....	9
•MP3 playback	11
•Special features	12
◆Recommendations for Use	
•Troubleshooting Guide	14
•Specifications	14
•Warranty Card	15

Symbols



Press



Push

 


Important



Note

Accessories Supplied



Owner's Manual
(Including Warranty)



CD-ROM DISC



Parallel Cable



Earphone



 
 
Smart Card




Recording Protect Sticker

Location of controls

UNIT

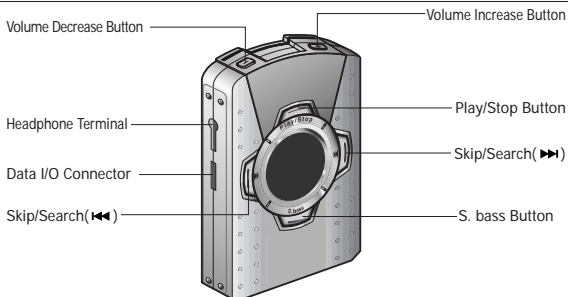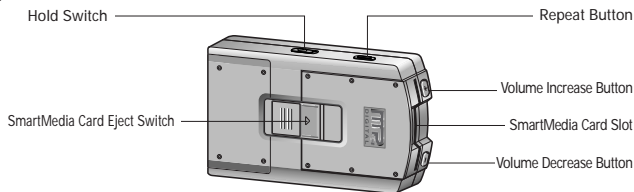

DISPLAY

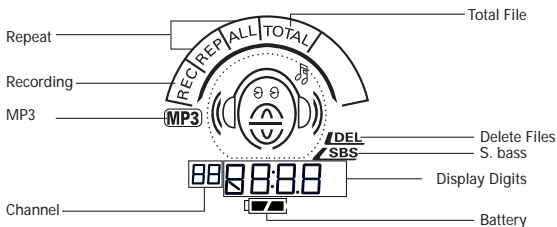 

Getting Started

Setting the SmartMedia Card

 
1 Insert a SmartMedia Card into the Unit

2 Downloading MP3 files.

- Refer to **pages 7~13.**



3 To remove the SmartMedia Card.

- Push the SmartMedia Eject Switch.

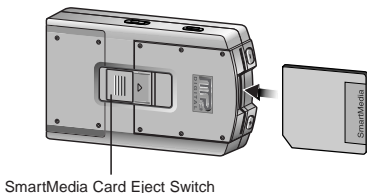

SmartMedia Card Erase Protection Feature

  - To prevent an MP3 file from being erased, attach the memory erasing protection sticker to the memory protection tab.

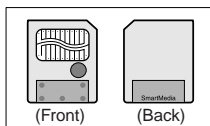


- Be sure to protect SmartMedia Card from magnet, humidity, shock, etc.
- Be sure to power off before inserting or removing the SmartMedia Card. Otherwise, the MP3 files stored in the player may be damaged.
- Only 16MB and 32MB SmartMedia Cards can be used with this product.

Connecting to a PC

Taking the steps shown below will prepare your Wingo for downloading MP3 files.

 - **Connect the MP3 Player to a PC using a parallel cable.**

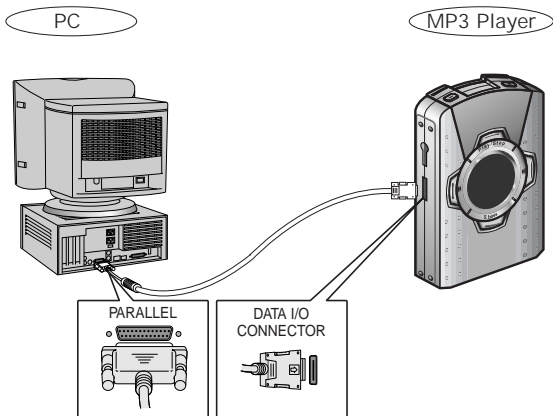

- To download an MP3 file to your MP3 Player, the parallel port should be available on your computer.
- If a printer is connected to the parallel port of your PC, disconnect it temporarily to connect your MP3 Player.
- If your PC does not have a parallel port, inquire with the dealers where you purchased your PC and have a parallel port installed.
- **For best results, your system requirements should be as follows:**
 - Pentium 120MHz or higher
 - Windows 95/98
 - At least 20MB Hard Disk space
 - Parallel Port supporting ECP
 - CD-ROM Drive
 - 32MB RAM or higher

Installing the MP3 programs on your PC

- **The computer should be set while booting as shown below.**

- 1) Turn on the computer.
- 2) While testing the RAM, press the F2 or Del key to enter the Setup screen.
- 3) Move to the Peripheral setting screen to set the Printer port.
- 4) Set the Printer port to the ECP mode.
- 5) Save the setting and reboot the computer.

Check the "Environment → options" menu of unit, set to the ECP mode by check.

- Refer to **page 9**.

In order to download MP3 files to the MP3 Player, you must install programs contained on the CD-ROM supplied for your PC.

- This program may not be installed correctly if MS EXPLORER version 4.01 or higher has not been installed on your PC.

1 Load the supplied software CD into the CD-ROM drive of your PC and click on the "NEXT" Button.

- The MP3 Player setup program will start automatically.
- If the setup does not start automatically, find the "setup.exe" file using the File Finder, then double click on it to execute the program.
- To install in another directory, use the Browse Button to select.



2 Check the program path icon and then press the "NEXT" Button.

- An icon will be created automatically.

 
 


3 After installation procedures are completed, click the "Finish" Button to exit the setup program.



Using MP3 program

- When the MP3 Player is off and the connection cable is disconnected while using this program, an error may occur. If this happens, turn off the MP3 Player and turn it on again, make the correct connection, and run this program again.
- If you stop this program during the downloading or uploading of a file, an error will occur. Select "REFRESH" menu to initialize the program, and reconnect the communication.

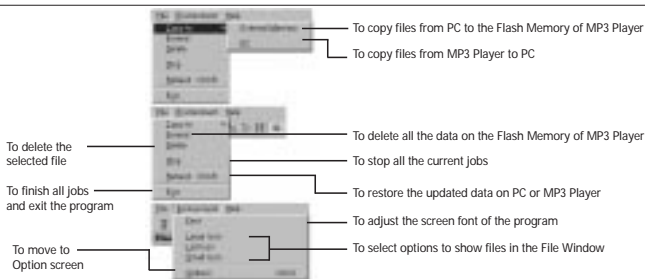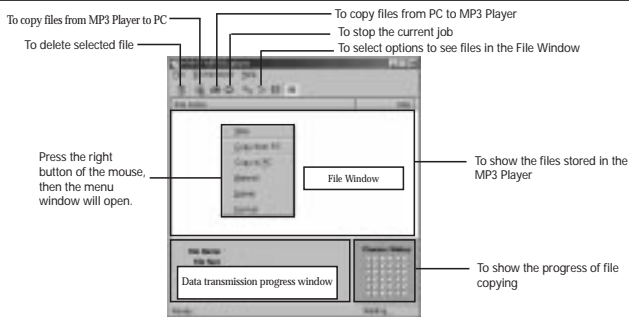


* Communication: When error occurs, to set "Standby Time" (Unit: millisecond (1 sec. = 1000 millisecond))




Using MP3 program

Transferring files from PC to MP3 Player

- 1 Double click on "MP3 Player Explorer icon" to execute the program.
- 2 Then choose "External Memory" command from "Copy to" command. Alternately, press the  Button on the screen.
- 3 From the PC window, choose the "File" menu either by clicking the left button of the Mouse or by using (ins) key.
- 4 Press the OPEN button on the screen.




Transferring files from MP3 Player to PC

- 1 From the MP3 Player window, choose the "File" menu either by clicking the left button of the Mouse or by using (Ins) key.
- 2 Then choose "Flash Memory" command from "Copy to" command. Alternately, press the  Button on the screen.
- 3 From the PC window, choose the "Directory", Press the "SAVE" Button.



Deleting files

- 1 From the MP3 Player window, choose the "File" menu either by clicking the left button of the Mouse or by using (ins) key.
- 2 Then choose the "Delete" command from the File menu. Alternately, press the  Button on the screen.



Deleting all files in the MP3 Player

 
- 1 Choose the "File" menu. Then choose the "Format" command from the "File" menu to delete all the files.



-
- Your unit (MP3 Player) can download up to 32 Mbytes. Hence, depending on the size of MP3 file, the number of files to be downloaded may be limited.
 - The number on the Total Space of the Data transmission progress window indicates the remaining space for download.

MP3 playback

- ➡ Copy audio files from your PC to play them back on the MP3 player.

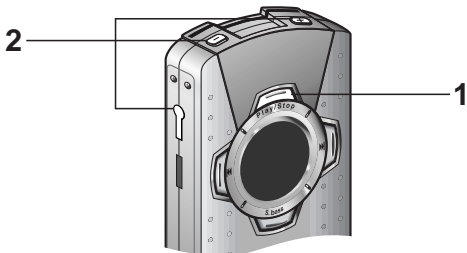


1 Press the Play/Stop Button.

- Switch the player on by pressing **Play/Stop**.
- Switch the player off by pressing **Play/Stop** for over 2 seconds.

2 After connecting headphones, adjust the volume.

- If you want to pause MP3 music, press “Play/Stop” button.
- If you want to play MP3 music again, press “Play/Stop” button again.
-MP3 music will restart to play at the point where it was stopped.

 - ➡ • The player automatically switches off if no buttons are pressed within 100 seconds of when playback is stopped, the end of a file is reached, or pause is activated.
- ➡ • If the power is completely disconnected by replacing the battery, the first MP3 file will be played.

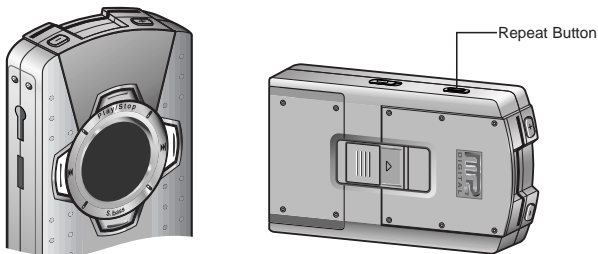

High-Speed Search

During playback, hold down the "◀◀, ▶▶" Button.

- Hold down "▶▶" Button to fast forward the track. Hold down "◀◀" Button to search backwards.
- Release the button for playback at normal speed.

To select a track

During playback, momentarily press the "◀◀, ▶▶" Button.

- Press and release the "▶▶" Button to select the next track.
Press and release the "◀◀" Button to replay the current track.
- When in STOP mode, press and release the "▶▶" Button to playback the second track.
Press and release the "◀◀" Button to playback the last track.

REPEAT Function

Press REPEAT button to select "REPEAT" or "REPEAT ALL"

To listen to the present song repeatedly:

- Press the REPEAT button to select, then "REP" appears on the LCD flash.

 
 
To repeat all the songs:

- Press the REPEAT button once more, then "REP ALL" appears on the LCD.

If you want to disable the repeat function:


- press the REPEAT button once more. "REP ALL" will disappear from the LCD.

Special Features

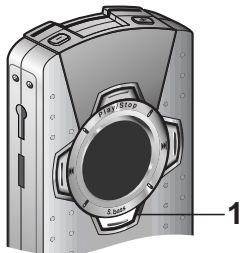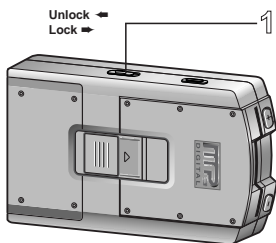

1 Set the HOLD Switch to Lock position.

 - Use the HOLD Function in the following cases:
 - 1) While in playback mode, if the HOLD Switch is set to the Lock position, none of the other buttons will work.
 - 2) Even when the HOLD Switch on main unit is in the Lock position, the Remote Control will work.
- If you carry this unit in your bag without using it, be sure to check that the unit is in "HOLD" mode to prevent the power button from being pressed accidentally. (This function will save the battery life.)



While the HOLD Switch on the main unit is in "Lock" position, pressing any button on MP3 Player unit will cause the "Hold" Indicator to flash and the operation corresponding to the button will not start.

S. bass Function

1 Press the S. bass Button

- "SBS" will appear on the LCD and the bass will be increased.

2 Press it again to select "OFF"

Troubleshooting Guide

	Remedy	Checks	Problem
M P 3 P L A Y E R	<ul style="list-style-type: none"> If the power cannot be turned on or no operations can be performed: 	<ul style="list-style-type: none"> Check the charge level of the general or rechargeable batteries loaded in the set. Check the polarity (+, -) of the loaded batteries. 	
	<ul style="list-style-type: none"> If the buttons on the player do not work: 	<ul style="list-style-type: none"> Check if the Hold function is selected. 	
	<ul style="list-style-type: none"> If music playback is not performed even when the Play button is pressed in the MP3 mode: 	<ul style="list-style-type: none"> Check that MP3 files are stored in the memory of the player. 	
	<ul style="list-style-type: none"> If MP3 file download cannot be performed: Check the power is properly supplied. 	<ul style="list-style-type: none"> Check the connection of the PC and the player. 	

Specifications

MP3

Flash Memory 32MByte

Signal/Noise Ratio 70dB

Frequency Range 20Hz~20KHz

Warranty (for USA users only)

SAMSUNG LIMITED WARRANTY

Samsung Electronics America Inc. (SEA), warrants that this product is free from defective materials and workmanship.

SEA further warrants that if this product fails to operate properly within the specified warranty period and the failure is due to improper workmanship or defective materials, SEA will repair or replace the product at its option.

All warranty repairs must be performed by a SEA Authorized Service Center. (The name and address of the location nearest you can be obtained by calling toll free: 1-800-SAM-SUNG)

LABOR	PARTS
<u>90 Days (Carry-in)</u>	<u>One year</u>

On carry-in models, transportation to and from the service center is the customer's responsibility.

The original dated sales receipt must be retained by the customer and is the only acceptable proof of purchase. It must be presented to the authorized service center at the time service is requested.

EXCLUSIONS (WHAT IS NOT COVERED)

This warranty does not cover damage due to accident, fire, flood and/or other acts of God; misuse, incorrect line voltage, improper installation, improper or unauthorized repairs, commercial use or damage that occurs in shipping. Operations explained in the instruction manual are not covered under the terms of this warranty. This warranty will automatically be voided for any unit found with a missing or altered serial number. This warranty is valid only on products purchased and used in the United States and Puerto Rico.

Some states do not allow the exclusions or limitations of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Warranty (for Canada users only)

SAMSUNG LIMITED WARRANTY

Samsung Electronics Canada (SECA), warrants that this product is free from defective material and workmanship.

SECA further warrants that if this product fails to operate properly within the specified warranty period and the failure is due to improper workmanship or defective materials, SECA will repair or replace the product at its option.

All warranty repairs must be performed by a SECA Authorized Service Center. (The name and address of the location nearest you can be obtained by calling toll free: 1-800-SAM-SUNG)

LABOR	PARTS
<u>90 Days (Carry-in)</u>	<u>One year</u>

On carry-in models, transportation to and from the service center is the customer's responsibility.

The original dated sales receipt must be retained by the customer and is the only acceptable proof of purchase. It must be presented to the authorized service center at the time service is requested.

EXCLUSIONS (WHAT IS NOT COVERED)

This warranty does not cover damage due to accident, fire, flood and/or other acts of God; misuse, incorrect line voltage, improper installation, improper or unauthorized repairs, commercial use or damage that occurs in shipping. Exterior and interior finish, lamps, glass are not covered under this warranty. Customer adjustments which are explained in the instruction manual are not covered under the terms of this warranty. This warranty will automatically be voided for any unit found with a missing or altered serial number. This warranty is valid only on products purchased and used in Canada.

SAMSUNG ELECTRONICS AMERICA, INC.

HEADQUARTERS

105 Challenger Road, Ridgefield Park, N.J.

07660-0511

TEL : 1-800-SAMSUNG

SERVICE DIVISION

1 Samsung Place Ledgewood, N.J. 07852

1-800-SAMSUNG (1-800-726-7864)

www.samsungsupport.com

