 




Play videos

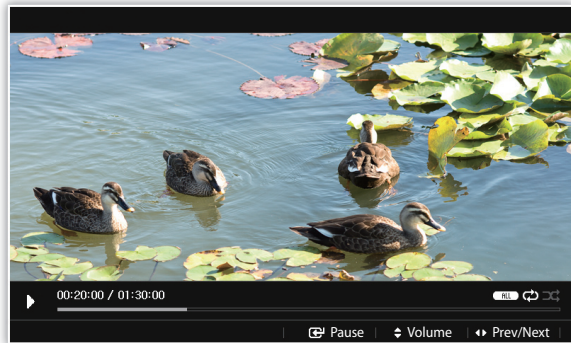

Optimal video resolution or codec

Video	Bit rate	1000 ~ 1500 Kbps
	Resolution	• 800P : 640 X 384 • 1000P : 640 X 375
Audio	AVI	MP3, 48 KHz (sampling rate), 2 channel, 128 Kbps
	MP4	mp4a (AAC-LC), 48 KHz (sampling rate), 2 channel, 128 Kbps

- 1 From the Main menu screen, select a memory location (**Frame Memory**, **SD Card**, or **USB**).
- 2 Scroll to **Videos** and touch .
- 3 Scroll to a file and touch  to play a video.
- 4 Control playback using the following buttons:


Touch button	Description
	Access the Main menu
	Access the video menu
	Adjust the volume
	Skip backward or forward; Scan backward or forward in a file (touch and hold)
	Pause or resume the playback
	Return to the previous level



If the frame is not in use for some time while pausing a video, the screensaver will appear. To return to the video player screen, touch any button except for .

Play multimedia

 Play videos (continued)

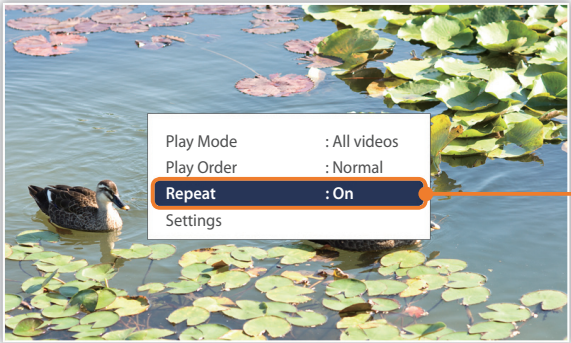

Use video menus


- 1 Touch  during playback.
- 2 Scroll to one of the following options and touch .

Option	Description
Play Mode	• All videos: Play all videos in the order of file names
	• Videos in folder: Play all videos in the selected folder in the order of file names
	• One video: Repeat the selected video
Play Order	• Normal: Play videos in the order of file names • Shuffle: Play videos in a random order
Repeat	Set to play repeatedly
Settings	Access the Settings menu

- 3 When you are finished, touch .
- When you touch  in the **Settings** menu, the Main menu appears. To play the video, refer to steps 1~3 in "Play videos."



 
Play music

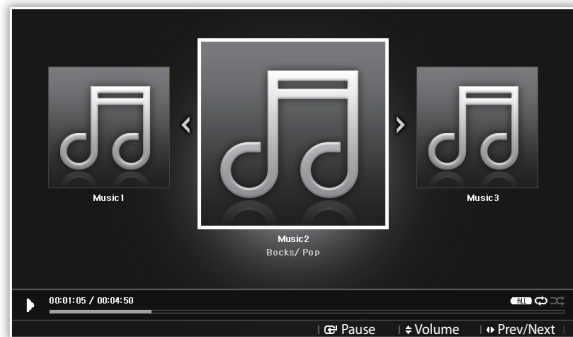

- 1 From the Main menu screen, select a memory location (**Frame Memory**, **SD Card**, or **USB**).
- 2 Scroll to **Music** and touch .
- 3 Scroll to a file and touch  to play music.
- 4 Control playback using the following buttons:

Touch button	Description
	Access the Main menu
	Access the music menu
	Adjust the volume
	Skip backward or forward; Scan backward or forward in a file (touch and hold)
	Pause or resume the playback
	Return to the previous level

 -  If the frame is not in use for some time while not playing music, the screensaver will appear. To return to the music player screen, touch any button except for .

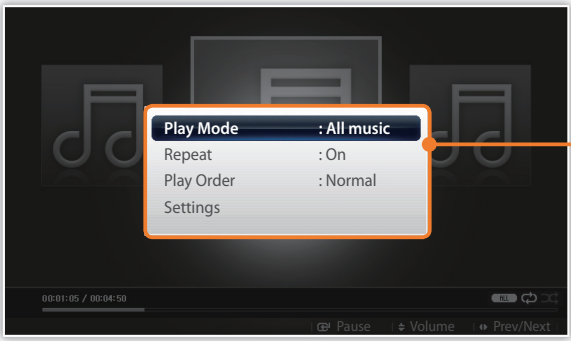

Use music menus

- 1 Touch during playback.
- 2 Scroll to one of the following options and touch .

Option	Description
Play Mode	• All music: Play all music files in the order of file names • Music in folder: Play all music files in the selected folder in the order of file names • One music: Repeat the selected music file
Repeat	Set to play repeatedly
Play Order	• Normal: Play music files in the order of file names • Shuffle: Play music files in a random order
Settings	Access the Settings menu

- 3 When you are finished, touch .
- When you touch in the **Settings** menu, the Main menu appears. To play the music, refer to steps 1~3 in "Play music."

 


Browse and manage multimedia



Browse files

Access the **Photos**, **Videos**, or **Music** menus and browse files.

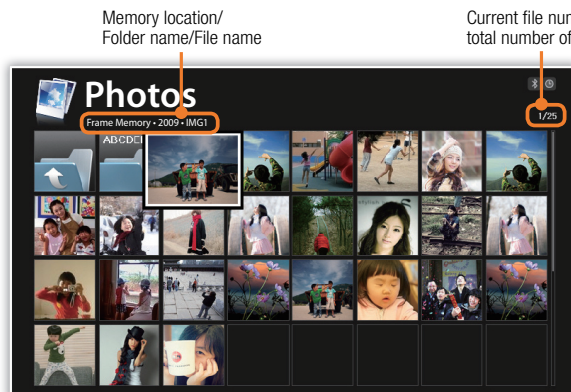

1 From the Main menu screen, select a memory location (**Frame Memory**, **SD Card**, or **USB**).

 
2 Scroll to **Photos**, **Videos**, or **Music** and touch .

3 Touch , , , or  to browse files.

- To view files in a folder, scroll to the folder and touch .




If the frame is not in use for some time, the screensaver will appear. Touch  to access the currently used screen.

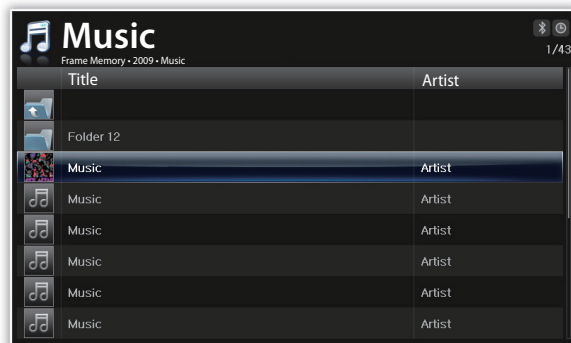



Manage files

 Copy or delete files stored in internal memory or external memory devices.

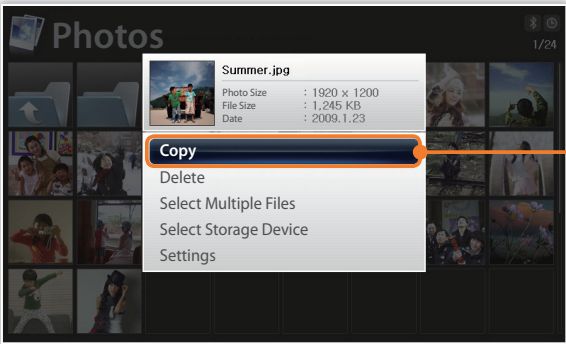

- 1 While browsing files, touch
- 2 Scroll to one of the following options and touch

Option	Description
Copy	Copy the selected folder or file to another memory location (p. 30)
Delete	Delete the selected folder or file (p. 31)
Select Multiple Files	Select multiple files to view as a slideshow, copy, or delete
Select Storage Device	Change the memory location (p. 15)
Settings	Access the Settings menu (p. 36)



 


- Photos copied to the frame will be automatically resized to be optimal for the screen. To copy the photos in their original sizes, from the Main menu screen, select **Settings** → **General** → **Frame Memory Copy** → **Original Size** (p. 39).
- The resized photos will have lower resolution compared to the original photos, but with smaller file sizes, you can store more photos.

Copy files

Connect an external memory device (SD memory card or USB memory device) to the frame and copy files from the external memory device to the frame or vice versa.

- 1 From the Main menu screen, select a memory location (**Frame Memory**, **SD Card**, or **USB**).
- 2 Scroll to **Photos**, **Videos**, or **Music** and touch .
- 3 Scroll to the file you want to copy and touch 
 - To copy all files in the selected folder, select the folder.
- 4 Scroll to **Copy** and touch 
 - To copy multiple files, select **Select Multiple Files**.
- 5 Select a destination for the files.
 - The selected files will be copied.

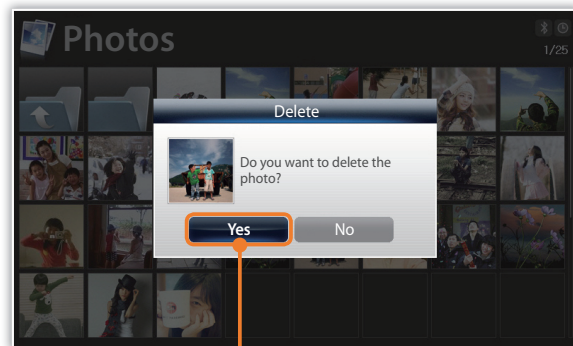

Delete files

- 1 From the Main menu screen, select a memory location (**Frame Memory**, **SD Card**, or **USB**).
- 2 Scroll to **Photos**, **Videos**, or **Music** and touch .
- 3 Scroll to the file you want to delete and touch 
 - To delete all files in the selected folder, select the folder.
- 4 Scroll to **Delete** and touch 
 - To delete multiple files, select **Select Multiple Files**.
- 5 Select **Yes** to confirm.
 - The selected file will be deleted.

 


Use the Bluetooth wireless feature

Connect to other wireless devices for exchanging data.



Find and pair with other Bluetooth-enabled devices

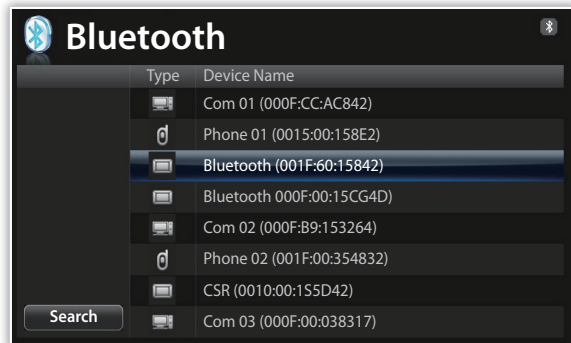


- 1 From the Main menu screen, scroll to **Bluetooth** and touch .
 - The Bluetooth wireless feature turns on by default.
 - To turn off the Bluetooth wireless feature, from the Main menu screen, select **Settings** → **Bluetooth** → **Bluetooth Mode** → **Off**.
- 2 Select **Search** to find other Bluetooth-enabled devices.
- 3 Scroll to a device and touch .
 - When the owner of the other device enters the same PIN or accepts the connection, pairing is complete. The frame's default PIN is 0000.
 - To end the Bluetooth connection, move to any other screens and the connection will terminate automatically.
 - To end the Bluetooth connection when connected to A2DP devices, such as headsets, scroll to the connected device and touch .





 Get data using the Bluetooth wireless feature

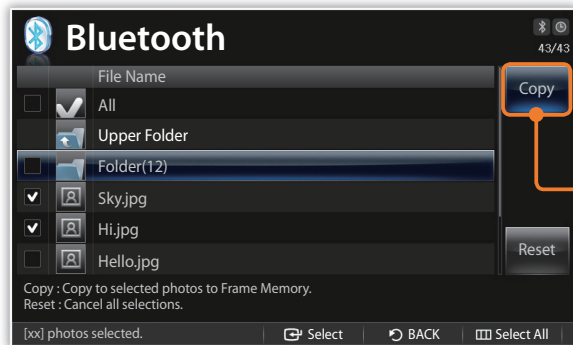

1 In the device list, scroll to one of the paired devices and touch .

2 Scroll to **Photo List** and touch .

- The photo list of the connected device will display.

 **Photo List** is deactivated when you connect to a headset or speaker.

 
3 Select the files you want to copy and select **Copy**.

- The selected files will be copied to the frame's memory.

 Receiving files is available in any screens except for the Bluetooth screen.



Use Bluetooth menus

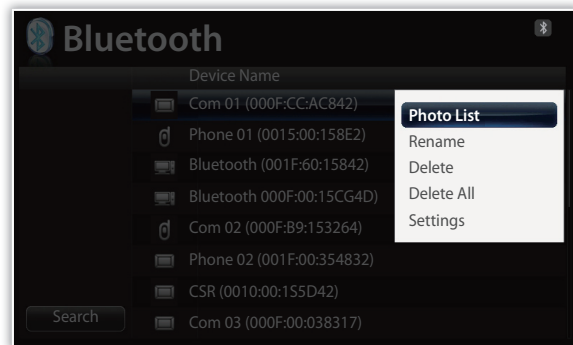

1 In the device list, scroll to one of the paired devices and touch

2 Scroll to one of the following menus and touch

Menu	Description
Photo List*	Access the photo list of the paired device (p. 33)
Rename	Rename the paired device
Delete	Delete one of the paired devices
Delete All	Delete all of the paired devices
Settings	Access the Settings menu (p. 40)

* **Photo List** is deactivated when you select a device that is not connected to the frame.



Information for using Bluetooth

- The Bluetooth wireless feature can transmit data to a maximum of 10 meters (30 feet). This distance may be reduced by obstacles, such as walls or people, or other devices that use or produce radio waves, such as WLAN devices or other mobile phones on the 2.4GHz band. Obstacles or other wireless devices can interfere with the Bluetooth wireless connection and reduce the effective range.
- The frame's wireless antenna is located in front of . For best results, ensure that you are within the maximum distance for a Bluetooth connection and that there are no obstacles between the devices. Interference from other devices may cause the frame to emit unusual noises or function improperly.
- The Bluetooth wireless feature may cause interference with medical devices. Do not use the frame or other Bluetooth-enabled devices in hospitals, airplanes, and trains or near automatic doors, alarms, or flammable gases.
- Your frame supports security settings for safe connections with other Bluetooth-enabled devices. However, you should always take precautions to secure your data when connecting to other Bluetooth-enabled devices. Samsung is not responsible for any loss of private information over a Bluetooth wireless connection.
- The Bluetooth wireless feature in your frame may not be compatible with all Bluetooth-enabled devices. For best results, pair and connect your frame only with devices certified by the Bluetooth SIG and ensure that the Bluetooth profiles of the devices are compatible. Even when a device is certified by the Bluetooth SIG, some incompatibilities may occur and some features or functions may be unavailable.
- When playing music over a Bluetooth wireless connection, you may experience interference from other devices, temporary interruptions in your music, or limited functionality of your frame, depending on wireless devices present in the area or the physical environment.

 


Customize settings

Define frame settings according to your preferences.




Adjust slideshow effects

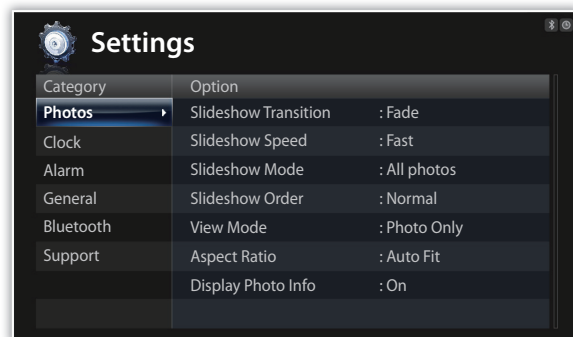

- 1 From the Main menu screen, scroll to **Settings** and touch .
- 2 Scroll to **Photos** and touch .
- 3 Select and adjust slideshow effects (p. 22).



 Set the time and date

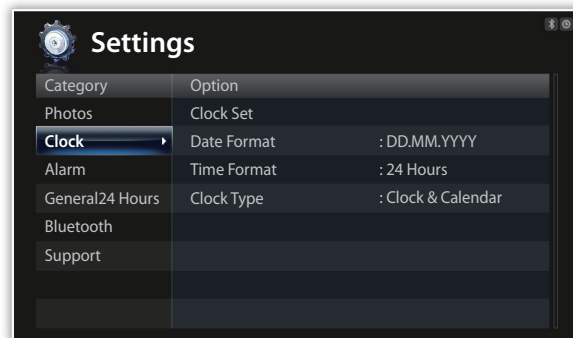


- 1 From the Main menu screen, scroll to **Settings** and touch .
- 2 Scroll to **Clock** and touch .
- 3 Set the time and date and customize the clock settings (p. 13).






Set and use alarms

 Set and control alarms for important events.

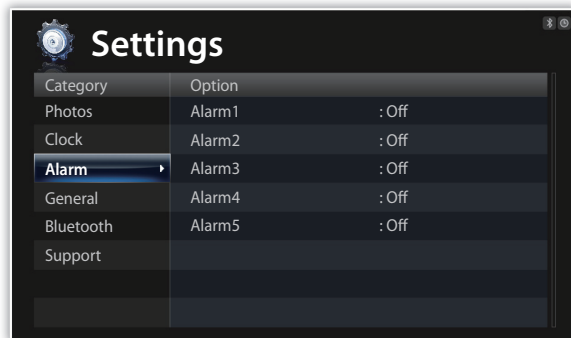


Set a new alarm

 - 1 From the Main menu screen, scroll to **Settings** and touch .
- 2 Scroll to **Alarm** and touch .
- 3 Scroll to an empty alarm and touch .
- 4 Touch , , , or  to set alarm details.

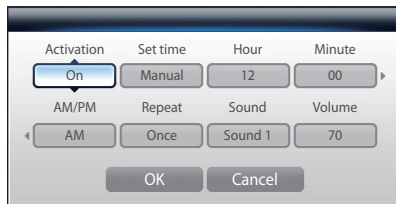

 - 5 When you are finished, select **OK**.
 -  will appear at the top right corner of the screen.
-  You can only have an alarm for a specified time. Duplicate alarms will be ignored.



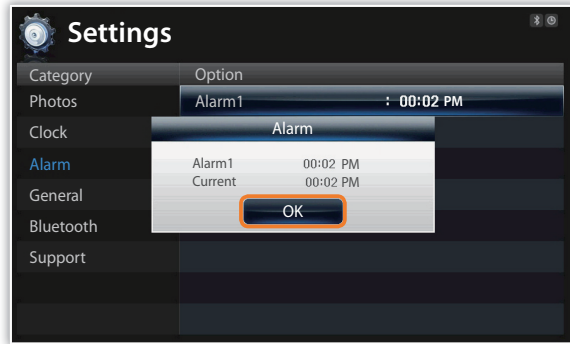

Stop an alarm

When the alarm sounds, touch any button except for  to stop the alarm. If you do not stop the alarm, it will sound for 1 minute.

Deactivate an alarm

- 1 From the Main menu screen, scroll to **Settings** and touch .
- 2 Scroll to **Alarm** and touch .
- 3 Scroll to the alarm you want to deactivate and touch .
- 4 Scroll to **Off** and select **OK**.