



QUESTIONS OR COMMENTS?

| COUNTRY | CALL | OR VISIT US ONLINE AT | WRITE |
|-----------|----------------------------|--|--|
| IN THE US | 1-800-SAMSUNG (7267864) | www.samsung.com/us | Samsung Electronics America, Inc. 105 Challenger Road Ridgefield Park, NJ 07660-0511 |

Code No. AH68-02062R(0.0)

HT-X810
/ PS- WX810

Digital Home Theater System user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service,
please register your product at
www.samsung.com/global/register



features

Playback of many disc types

This Home Theater System allows you to play back various discs, including DVD-AUDIO, DVD-VIDEO, CD, MP3-CD, WMA-CD, DivX, CD-R/RW, and DVD±R/RW.

DVD-Audio compatible

Experience the super high-quality audio performance of DVD-Audio. The on-board 24-bit/192kHz DAC enables this player to deliver exceptional sound quality in terms of dynamic range, low-level resolution and high-frequency detail.

USB Host support

You can connect and play files from external USB storage devices such as MP3 players, USB flash memory, etc. using the Home Theater's USB HOST function.

TV Screen Saver Function

If the main unit remains in Stop mode for 3 minutes, Samsung logo appears on TV screen.

The HT-X810 automatically switches itself into the power saving mode after 20 minutes in the Screen Saver mode.

Power Saving Function

The HT-X810 automatically shuts itself off after 20 minutes in Stop mode.

Customized TV Screen Display

The HT-X810 allows you to select your favorite image during JPEG, DVD playback and set it as your background wallpaper.

HDMI

HDMI transmits DVD video and audio signals simultaneously, and provides a clearer picture.

AV SYNC Function

Video may lag behind the audio if the unit is connected to a digital TV.

To compensate for this, you can adjust the audio delay time to sync up with the video.

Anynet+(HDMI-CEC) Function

Anynet+ is a function that can be used to operate the main unit using a Samsung TV remote control, by connecting the Home Theater to a SAMSUNG TV using an HDMI Cable. (This is only available with SAMSUNG TVs that support Anynet+.)

Bluetooth Function




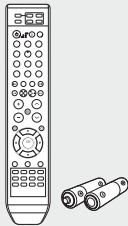
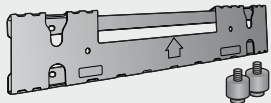
You can use a Bluetooth device to enjoy music with high quality stereo sound, all without wires!

Wireless Subwoofer

You can hear powerful sound from the subwoofer without having to use speaker cables.

WHAT'S INCLUDED



Check for the supplied accessories below.

| | | | | |
|---|---|---|--|---|
|  |  |  |  |  |
| Video Cable (AH39-40001V) | FM Antenna (AH42-00017A) | User's Manual (AH68-02062R) | Remote Control (AH59-01907T) / Batteries (AAA size) (4301-000116) | Bracket-Wall Mount (AH61-02574A) / Mounting Studs (2EA) (AH97-02638A) |

safety information

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

| | | |
|--|--|--|
|  | CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN |  |
| The lightning flash and Arrowhead within Triangle Is a warning sign alerting you of dangerous voltage inside the product | CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. | The explanation point within the triangle is a warning sign alerting you of important instructions accompanying the product. |

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
PRODUCTO LASER CLASE 1

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- If this power supply is used at 240V ac, a suitable plug adapter should be used.

CAUTION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.

This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances, such as radios and televisions, use shielded cables and connectors for connections.

FCC NOTE (for U.S.A):

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution : FCC regulations state that any unauthorized changes or modifications to this equipment may void the user's authority to operate it.

safety information



IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow all the safety instructions listed below. Keep these operating instructions handy for future reference.


- 1) Read these instructions.
- 2) Keep these Instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachment/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




PRECAUTIONS

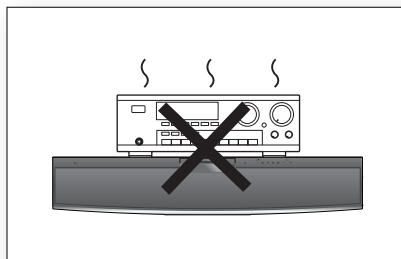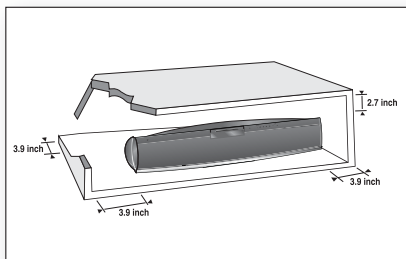


Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4 inches). Make sure the ventilation slots are not covered. Before moving the player, ensure the disc tray is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

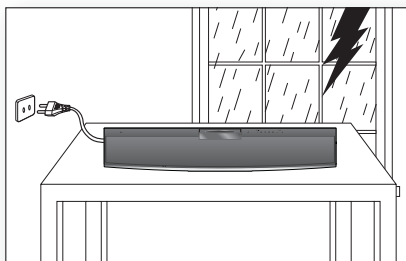

During thunderstorms, disconnect the AC main plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

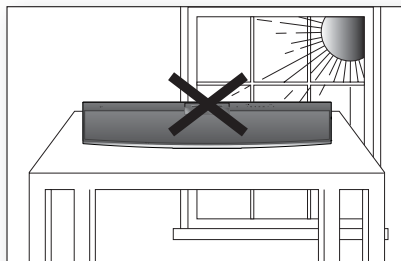


Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and malfunction of the unit.

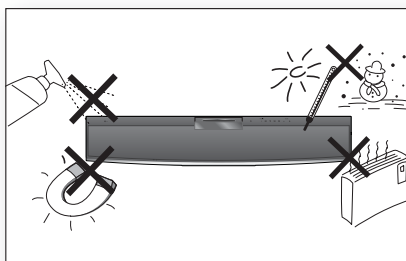

Protect the player from moisture (i.e. vases), and excess heat (e.g. fireplace) or equipment creating strong magnetic or electric fields (i.e. speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use. Use of this product is for personal use only.

Condensation may occur if your player or disc has been stored in cold temperatures. If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

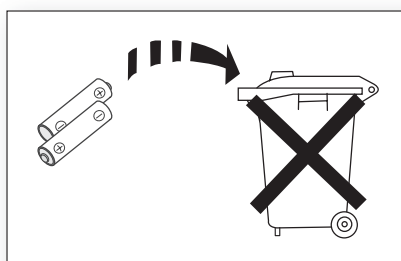

The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash.

This product is covered by one or more of the following U.S. patents:

| | | | | | | | | | | |
|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| 5,060,220 | 5,457,669 | 5,561,649 | 5,705,762 | 6,043,912 | 6,438,099 | 6,467,061 | 6,556,521 | 6,578,163 | 6,697,307 | 6,728,474 |
| 6,771,891 | 6,894,963 | 6,895,593 | 6,937,815 | 6,996,327 | 7,009,926 | 7,085,221 | 7,088,649 | 7,092,327 | 7,099,566 | 7,123,564 |
| 7,142,493 | 7,142,495 | 7,145,861 | 7,146,624 | 7,151,729 | 7,161,879 | 7,164,647 | 7,167,437 | 7,173,891 | 7,177,250 | 7,194,187 |
| 7,203,891 | 7,209,423 | 7,210,067 | 7,228,062 | 7,245,566 | 7,245,567 | 7,257,065 | 7,263,045 | 7,269,110 | 7,272,086 | 7,272,106 |
| 7,280,460 | 7,283,729 | 7,286,454 | 7,304,938 | | | | | | | |

This product is covered by the following U.S. patents:

US4,930,158 US4,930,160

contents

| | | |
|---------------------------------------|----|--|
| FEATURES | 2 | What's included |
| SAFETY INFORMATION | 3 | Safety Warnings |
| | 4 | Important Safety Instructions |
| | 5 | Precautions |
| GETTING STARTED | 8 | Before Reading the User's Manual |
| | 9 | Playable Discs |
| | 9 | Do not use the following types of discs! |
| | 9 | Copy Protection |
| | 10 | Disc Type and Characteristics |
| DESCRIPTION | 11 | Front Panel |
| | 12 | Rear Panel |
| REMOTE CONTROL | 13 | Setting the Remote Control |
| | 14 | Tour of the Remote Control |
| CONNECTIONS | 17 | Connecting the Wireless Subwoofer |
| | 18 | Installing the Wall Mount |
| | 19 | Connecting the Video Out to your TV |
| | 21 | HDMI Function |
| | 22 | Connecting Audio from External Components |
| | 24 | Connecting the FM Antenna |
| BEFORE USING YOUR HOME THEATER | 25 | |
| PLAYBACK | 26 | Disc Playback |
| | 27 | MP3/WMA-CD Playback |
| | 28 | JPEG File Playback |
| | 29 | DivX Playback |
| | 31 | Using the Playback Function |
| | 39 | Using Bluetooth |
| | 41 | Playing Media Files using the USB Host Feature |

SYSTEM SETUP

43

- 43 Setting the Language
- 44 Setting TV Screen Type
- 45 Setting Parental Controls (Rating Level)
- 45 Setting the Password
- 46 Setting the Wallpaper
- 46 To Select One of the 3 Wallpaper Settings You've Made
- 47 DVD Playback Mode
- 47 Setting the DRC (Dynamic Range Compression)
- 48 Setting the AV SYNC
- 48 Setting the HDMI Audio
- 48 Setting the Audio

RADIO

49

- 49 Listening to Radio
- 49 Presetting Stations

CONVENIENT FUNCTION

50

- 50 Sleep Timer Function
- 50 Adjusting Display Brightness
- 50 Mute Function
- 51 V-SOUND (Virtual Sound)
- 51 S.VOL (Smart Volume)
- 51 P.BASS/Audio Upscaling

TROUBLESHOOTING

52

LANGUAGE CODE LIST

54

USB HOST FEATURE SUPPORTED PRODUCTS

55

- 55 Digital Camera
- 55 USB Flash Disc
- 55 MP3 Player

APPENDIX

56








- 56 Cautions on Handling and Storing Discs
- 57 Specifications
- 58 Warranty

getting started


BEFORE READING THE USER'S MANUAL

Make sure to check the following terms before reading the user manual.

Icons that will be used in manual

| Icon | Term | Definition |
|--|---------|--|
|  | DVD | This involves a function available with DVD or DVD-R/DVD-RW discs that have been recorded and finalized in Video Mode. |
|  | CD | This involves a function available with a data CD (CD-R or CD-RW). |
|  | MP3 | This involves a function available with CD-R/-RW discs. |
|  | JPEG | This involves a function available with CD-R/-RW discs. |
|  | DivX | This involves a function available with MPEG4 discs. (DVD±R/RW, CD-R or CD-RW) |
|  | Caution | This involves a case where a function does not operate or settings may be cancelled. |
|  | Note | This involves tips or instructions on the page that help each function operate. |



- In this manual, the instructions marked with "DVD ()" are applicable to DVD-VIDEO, DVD-AUDIO and DVD-R/-RW discs that have been recorded in Video Mode and then finalized. Where a particular DVD type is mentioned, it is indicated separately.
- If a DVD-R/-RW disc has not been recorded properly in DVD Video format, it will not be playable.

About the use of this user's manual

- 1) Be sure to be familiar with Safety Instructions before using this product. (See pages 3~4)
- 2) If a problem occurs, check the Troubleshooting. (See pages 52~53)

Copyright

©2008 Samsung Electronics Co.,Ltd.

All rights reserved; No part or whole of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.



DVD (Digital Versatile Disc) offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie theater or concert hall.



DVD players and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is given on the rear panel of the player.

(Your DVD player will only play DVDs that are labeled with identical region codes.)

PLAYABLE DISCS

| Disc Type | Mark (Logo) | Recorded Signals | Disc Size | Max. Playing Time |
|------------------------|-------------|------------------|--------------|---------------------------------|
| DVD-AUDIO DVD-VIDEO | | AUDIO + VIDEO | 5 inches | Approx. 240 min. (single-sided) |
| | | | | Approx. 480 min. (double-sided) |
| | | | 3 1/2 inches | Approx. 80 min. (single-sided) |
| | | | | Approx. 160 min. (double-sided) |
| AUDIO-CD | | AUDIO | 5 inches | 74 min. |
| | | | 3 1/2 inches | 20 min. |
| DivX | | AUDIO + VIDEO | 5 inches | — |
| | | | 3 1/2 inches | — |

DO NOT USE THE FOLLOWING TYPES OF DISCS !

- LD, CD-G, CD-I, CD-ROM, DVD-RAM and DVD-ROM discs cannot be played on this player. If such discs are played, a <WRONG DISC FORMAT> message appears on the TV screen.
- DVD discs purchased abroad may not play on this player. If such discs are played, a <CAN'T PLAY THIS DISC PLEASE, CHECK REGION CODE> message appears on the TV screen.

COPY PROTECTION

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

getting started

DISC TYPE AND CHARACTERISTICS

This product does not support Secure (DRM) Media files.

❖ CD-R Discs

- Some CD-R discs may not be playable depending on the disc recording device (CD-Recorder or PC) and the condition of the disc.
- Use a 650MB/74 minute CD-R disc.
Do not use CD-R discs over 700MB/80 minute as they may not be played back.
- Some CD-RW (Rewritable) media, may not be playable.
- Only CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

❖ CD-R MP3 Discs

- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the ".mp3" and ".MP3" extensions can be played.
- Only a consecutively written multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- A maximum of 500 tracks can be played per CD.
- A maximum of 300 folders can be played per CD.


❖ CD-R JPEG Discs

- Only files with the ".jpg" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- JPEG file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 9,999 images can be stored on a single CD.
- When playing a Kodak/Fuji Picture CD, only the JPEG files in the picture folder can be played.
- Picture discs other than Kodak/Fuji Picture CDs may take longer to start playing or may not play at all.

❖ DVD±R/RW, CD-R/RW DivX Discs

- Since this product only provides encoding formats authorized by DivX Networks, Inc., a DivX file created by the user might not play.
- Software updates for incompatible formats are not supported.
(Example : QPEL, GMC, resolution higher than 800 x 600 pixels, etc.)
- Sections with a high frame rate might not be played while playing a DivX file.
- For more information about the formats authorized by DivX Networks, Inc., please visit "www.divxnetworks.net".


FRONT PANEL

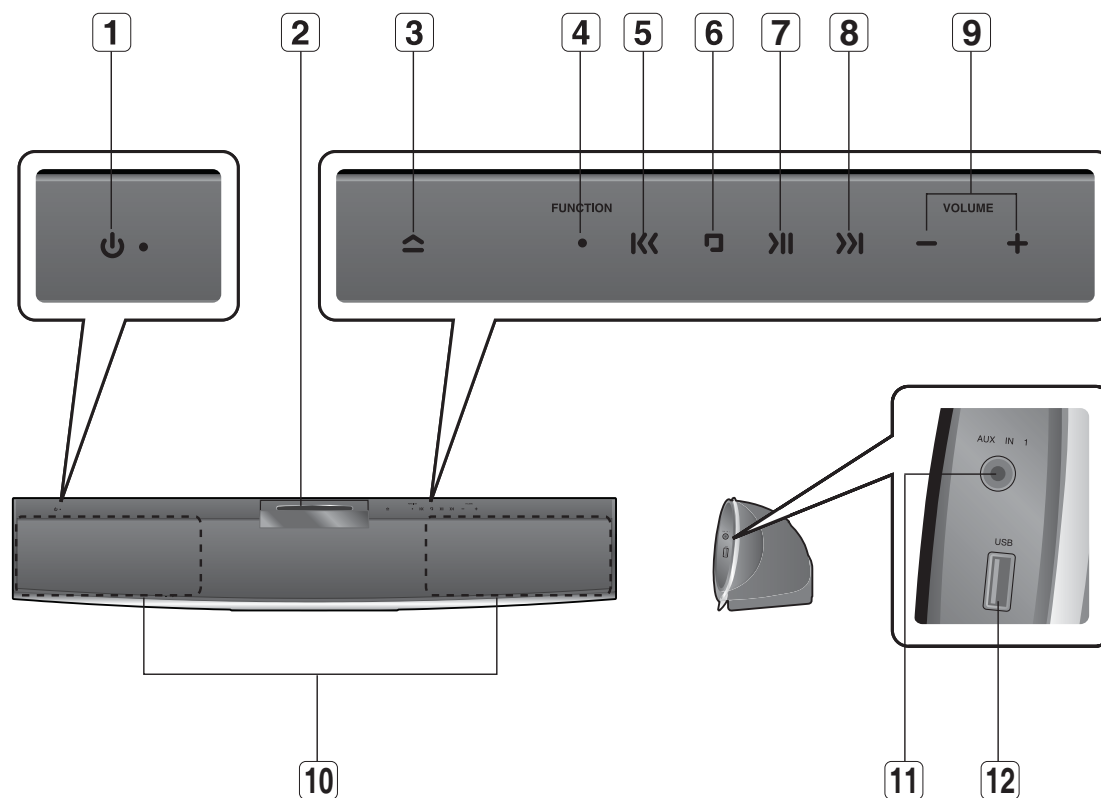

| | | |
|--------------------------|--|-------------------------|
| 1 POWER(⏻) BUTTON | 5 TUNING DOWN & SKIP (⏮) BUTTON | 9 Volume Control |
| 2 DISC SLOT | 6 STOP (■) BUTTON | 10 SPEAKERS |
| 3 EJECT BUTTON | 7 PLAY/PAUSE (⏯) BUTTON | 11 AUX IN 1 Jack |
| 4 FUNCTION BUTTON | 8 TUNING UP & SKIP (⏭) BUTTON | 12 USB Port |

description

REAR PANEL

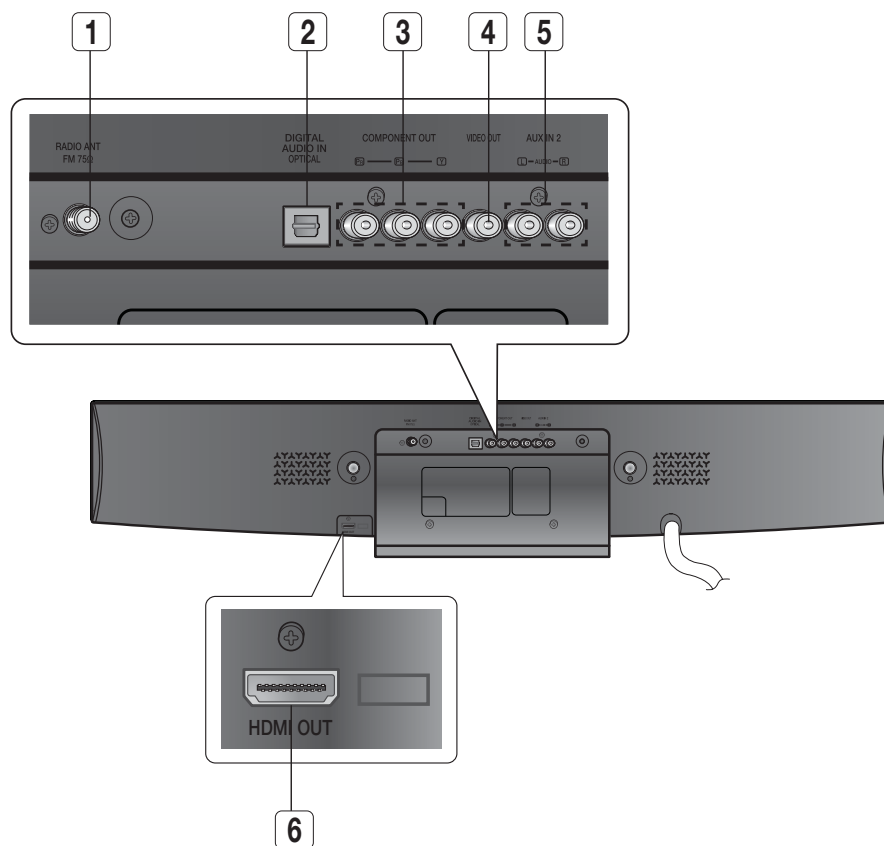

| | | |
|----------|--|--|
| 1 | FM 75Ω COAXIAL JACK | Connect the FM antenna. |
| 2 | EXTERNAL DIGITAL OPTICAL INPUT JACK | Use this to connect external equipment capable of digital output. |
| 3 | COMPONENT VIDEO OUTPUT JACKS | Connect a TV with Component video inputs to these jacks. |
| 4 | VIDEO OUTPUT JACK | Connect the TV's Video Input jack (VIDEO IN) to the VIDEO OUT jack. |
| 5 | AUX IN 2 JACKS | Connect to the 2CH analog output of an external device (such as a VCR) |
| 6 | HDMI OUT JACK | Using an HDMI cable, connect this HDMI output terminal to the HDMI input terminal on your TV for the best quality picture. |

remote control

SETTING THE REMOTE CONTROL

You can control certain functions of your TV with this remote control.

When operating a TV with the remote control


1. Press the **TV** button to set the remote to TV mode.
2. Press the **POWER** button to turn on the TV.
3. While holding down the **POWER** button, enter the code corresponding to your brand of TV.

- If there is more than one code listed for your TV in the able, enter one at a time to determine which code works.

Example : For a Samsung TV

While holding down the **POWER** button, use the **number** buttons to enter 00, 15, 16, 17 and 40.


4. If the TV turns off, the setting is complete.
 - You can use the TV **POWER**, **VOLUME**, **CHANNEL**, and **Numeric** buttons (0~9).

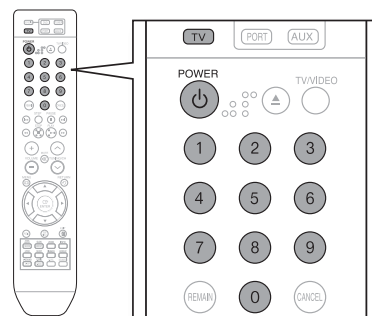

- The remote control may not work on some brands of TVs. Also, some operations may not be possible depending on your brand of TV.
- If you do not set the remote control with the code for your brand of TV, the remote control will work on a Samsung TV by default.


Operation Range of the Remote Control

The remote control can be used up to approximately 23 feet (7 meters) in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

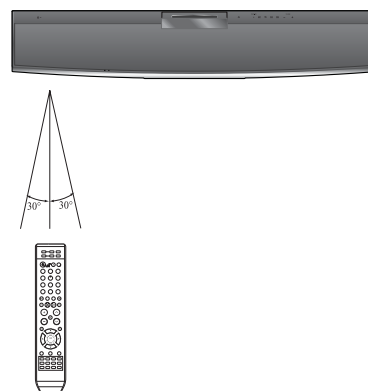


remote control

TOUR OF THE REMOTE CONTROL

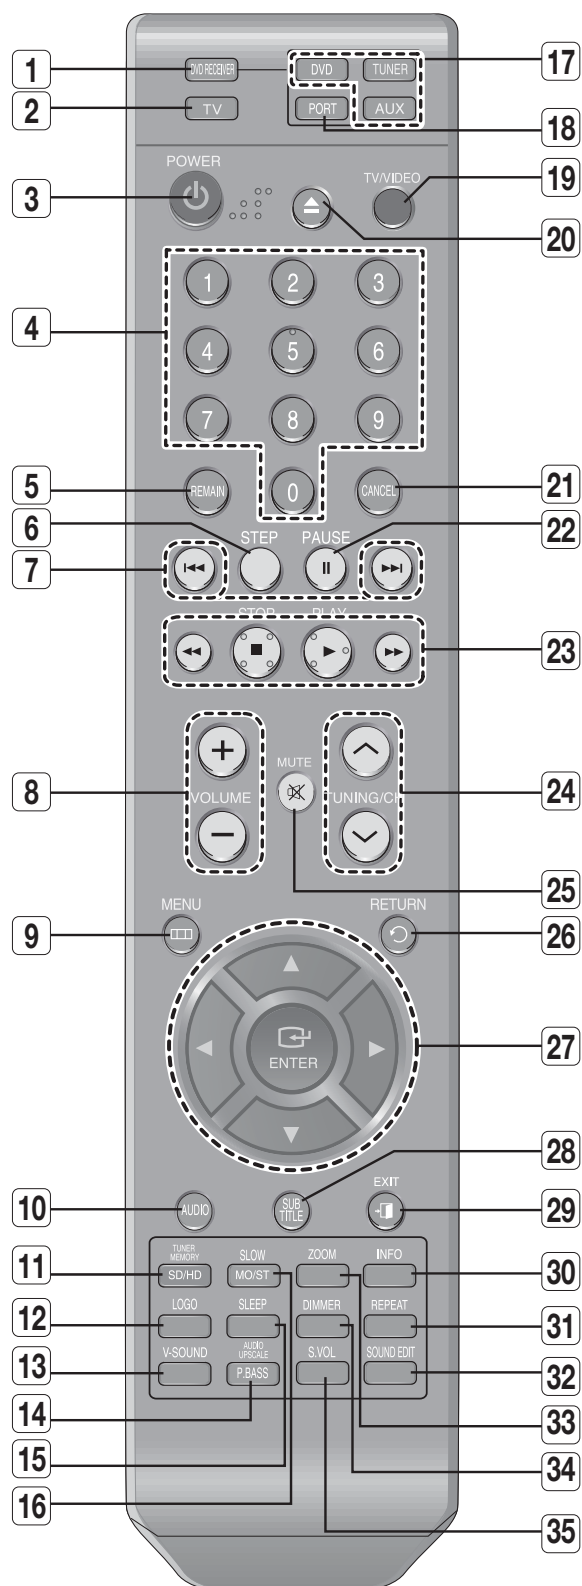

| | | | |
|-----------|--|-----------|----------------------------|
| 1 | DVD RECEIVER button | 18 | PORT button |
| 2 | TV button | 19 | TV/VIDEO button |
| 3 | POWER button | 20 | ⏮ EJECT button |
| 4 | Number (0~9) buttons | 21 | CANCEL button |
| 5 | REMAIN button | 22 | PAUSE button |
| 6 | STEP button | | ▶ PLAY button |
| 7 | Tuning Preset/CD Skip buttons | 23 | ■ STOP button |
| 8 | VOLUME button | | ⏮ ⏭ SEARCH buttons |
| 9 | MENU button | 24 | TUNING/CH button |
| 10 | AUDIO button | 25 | MUTE button |
| 11 | TUNER MEMORY, SD(Standard Definition)/HD(High Definition) button | 26 | RETURN button |
| 12 | LOGO button | 27 | Cursor/ENTER button |
| 13 | V-SOUND(Virtual Sound) button | 28 | SUBTITLE button |
| 14 | AUDIO UPSCALE/P.BASS button | 29 | EXIT button |
| 15 | SLEEP button | 30 | INFO button |
| 16 | SLOW, MO/ST button | 31 | REPEAT button |
| 17 | <div><div>DVD</div> DVD button</div> <div><div>TUNER</div> TUNER button</div> <div><div>AUX</div> AUX button</div> | 32 | SOUND EDIT button |
| | | 33 | ZOOM button |
| | | 34 | DIMMER button |
| | | 35 | S.VOL(Smart Volume) button |

Insert Remote Batteries

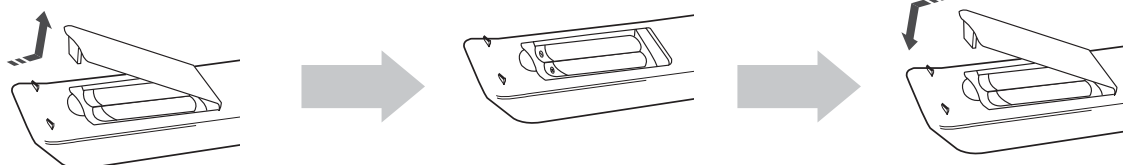

- 1. Remove the battery cover in the direction of the arrow.**
- 2. Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and -).**
- 3. Replace the battery cover.**



Follow these precautions to avoid leaking or cracking cells:

- Place batteries in the remote control so they match the polarity : (+) to (+) and (-) to (-).
- Use the correct type of batteries. Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose the batteries to heat or a flame.


remote control

TV Brand Code List

| No. | Brand | Code | No. | Brand | Code |
|-----|-------------------------|---|-----|--------------------------|---|
| 1 | Admiral (M.Wards) | 56, 57, 58 | 44 | MTC | 18 |
| 2 | A Mark | 01, 15 | 45 | NEC | 18, 19, 20, 40, 59, 60 |
| 3 | Anam | 01, 02, 03, 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14 | 46 | Nikei | 03 |
| 4 | AOC | 01, 18, 40, 48 | 47 | Onking | 03 |
| 5 | Bell & Howell (M.Wards) | 57, 58, 81 | 48 | Onwa | 03 |
| 6 | Brocsonic | 59, 60 | 49 | Panasonic | 06, 07, 08, 09, 54, 66, 67, 73, 74 |
| 7 | Candle | 18 | 50 | Penney | 18 |
| 8 | Cetronic | 03 | 51 | Philco | 03, 15, 17, 18, 48, 54, 59, 62, 69, 90 |
| 9 | Citizen | 03, 18, 25 | 52 | Philips | 15, 17, 18, 40, 48, 54, 62, 72 |
| 10 | Cinema | 97 | 53 | Pioneer | 63, 66, 80, 91 |
| 11 | Classic | 03 | 54 | Portland | 15, 18, 59 |
| 12 | Concerto | 18 | 55 | Proton | 40 |
| 13 | Contec | 46 | 56 | Quasar | 06, 66, 67 |
| 14 | Coronado | 15 | 57 | Radio Shack | 17, 48, 56, 60, 61, 75 |
| 15 | Craig | 03, 05, 61, 82, 83, 84 | 58 | RCA/Proscan | 18, 59, 67, 76, 77, 78, 92, 93, 94 |
| 16 | Croslex | 62 | 59 | Realistic | 03, 19 |
| 17 | Crown | 03 | 60 | Sampo | 40 |
| 18 | Curtis Mates | 59, 61, 63 | 61 | Samsung | 00, 15, 16, 17, 40, 43, 46, 47, 48, 49, 59, 60, 98 |
| 19 | CXC | 03 | 62 | Sanyo | 19, 61, 65 |
| 20 | Daewoo | 02, 03, 04, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 32, 34, 35, 36, 48, 59, 90 | 63 | Scott | 03, 40, 60, 61 |
| 21 | Daytron | 40 | 64 | Sears | 15, 18, 19 |
| 22 | Dynasty | 03 | 65 | Sharp | 15, 57, 64 |
| 23 | Emerson | 03, 15, 40, 46, 59, 61, 64, 82, 83, 84, 85 | 66 | Signature 2000 (M.Wards) | 57, 58 |
| 24 | Fisher | 19, 65 | 67 | Sony | 50, 51, 52, 53, 55 |
| 25 | Funai | 03 | 68 | Soundesign | 03, 40 |
| 26 | Futuretech | 03 | 69 | Spectricon | 01 |
| 27 | General Electric (GE) | 06, 40, 56, 59, 66, 67, 68 | 70 | SSS | 18 |
| 28 | Hall Mark | 40 | 71 | Sylvania | 18, 40, 48, 54, 59, 60, 62 |
| 29 | Hitachi | 15, 18, 50, 59, 69 | 72 | Symphonic | 61, 95, 96 |
| 30 | Inkel | 45 | 73 | Tatung | 06 |
| 31 | JC Penny | 56, 59, 67, 86 | 74 | Techwood | 18 |
| 32 | JVC | 70 | 75 | Teknika | 03, 15, 18, 25 |
| 33 | KTV | 59, 61, 87, 88 | 76 | TMK | 18, 40 |
| 34 | KEC | 03, 15, 40 | 77 | Toshiba | 19, 57, 63, 71 |
| 35 | KMC | 15 | 78 | Vidtech | 18 |
| 36 | LG (Goldstar) | 01, 15, 16, 17, 37, 38, 39, 40, 41, 42, 43, 44 | 79 | Videch | 59, 60, 69 |
| 37 | Luxman | 18 | 80 | Wards | 15, 17, 18, 40, 48, 54, 60, 64 |
| 38 | LXI (Sears) | 19, 54, 56, 59, 60, 62, 63, 65, 71 | 81 | Yamaha | 18 |
| 39 | Magnavox | 15, 17, 18, 48, 54, 59, 60, 62, 72, 89 | 82 | York | 40 |
| 40 | Marantz | 40, 54 | 83 | Yupiteru | 03 |
| 41 | Matsui | 54 | 84 | Zenith | 58, 79 |
| 42 | MGA | 18, 40 | 85 | Zonda | 01 |
| 43 | Mitsubishi/MGA | 18, 40, 59, 60, 75 | 86 | Dongyang | 03, 54 |

connections


This section involves various methods of connecting the Digital Home Cinema to other external components. Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

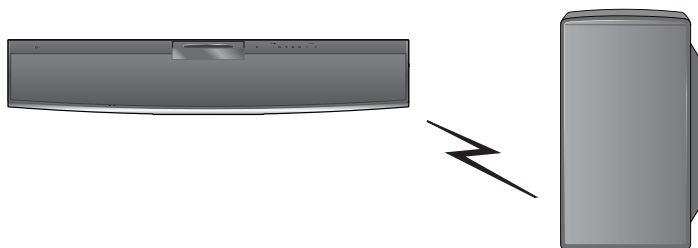

CONNECTING THE WIRELESS SUBWOOFER

Press the **POWER** button on the rear of the subwoofer to turn it on.

- If the main unit is turned on
The subwoofer will be automatically connected to the product and the Link LED on its front will blink blue for a few seconds.
- If the main unit is turned off
The Link LED on the front of the subwoofer will blink blue for about 30 seconds, then will change to red as the sub switches to **STANDBY** mode.

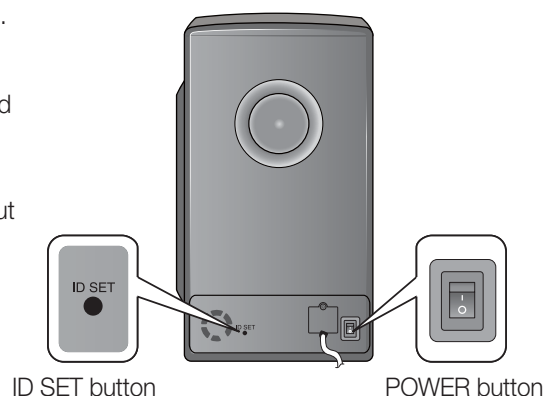

- If the subwoofer is turned off, you will see **S/W CHECK** on the display panel of the main unit.
- Place the wireless subwoofer under the main unit.
- If you use a device such as a microwave oven, wireless LAN Card, Bluetooth equipment, or any other device that uses the same frequency (2.4GHz) near the system, some sound interruption may be heard due to interference.
- The transmission distance of radio wave is about 32 feet, 9.7 inches, but may vary depending on your operating environment. If a steel-concrete wall or metallic wall is between the main unit and the wireless subwoofer, the system may not operate at all, because the radio wave cannot penetrate metal.
- If the main unit doesn't make wireless connection, the system needs ID Setting between the main unit and wireless subwoofer. With the main unit turned off, press the remote control's "0"→"1"→"3"→"5" number buttons and the unit will turn on. With the wireless subwoofer turned on, press **ID SET** button on the back of the unit for 5 seconds.




- The wireless receiving antenna is built into the wireless subwoofer. Keep the unit away from water and moisture.
- For optimal listening performance, make sure that the area around the wireless subwoofer location is clear of any obstructions.


connections

INSTALLING THE WALL MOUNT


1. Place the Mounting Studs on the rear of the product and turn them clockwise to fix.

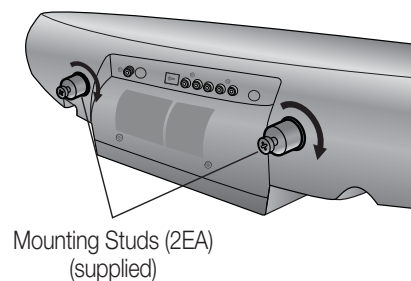


2. Place the wall mount bracket on a wall surface so that the arrow on it points upward, and then secure it with four screws (not supplied).

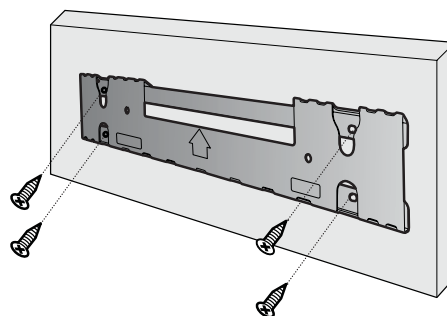

3. Then, fit the product (Mounting Studs installed) into the corresponding hole of the wall mount bracket.

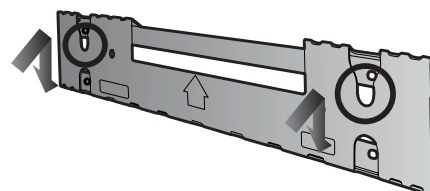


4. This is the completion of the wall mount installation.

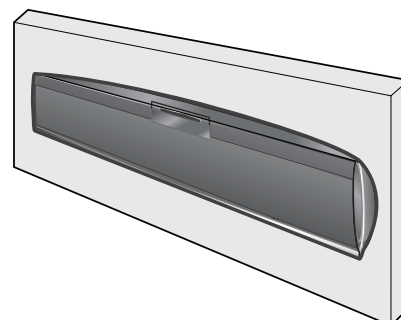

- Secure the Home Theater firmly to the wall so that it does not fall off. If the Home theater falls off, it may result in an injury or damage to the product.
- When the Home Theater is installed on wall, please make sure that a child does not pull any of connecting cables. as it may cause it to fall.

CONNECTING THE VIDEO OUT TO YOUR TV

Choose one of the three methods for connecting to a TV.

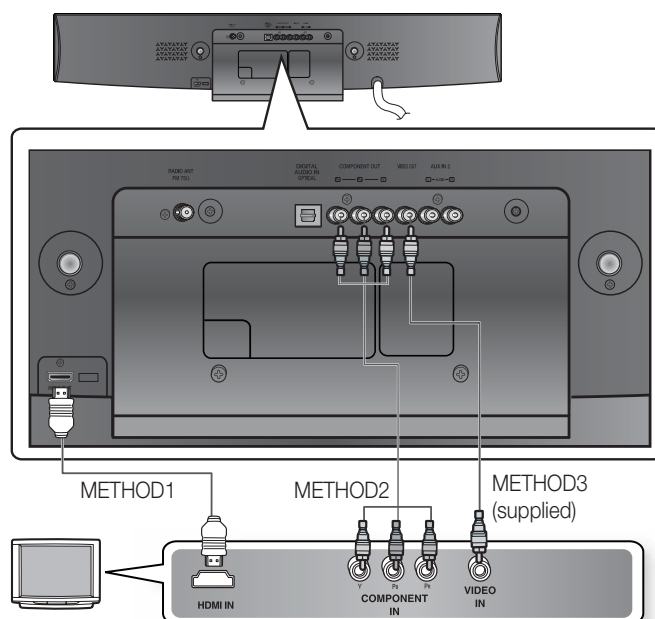

METHOD 1 : HDMI (BEST QUALITY)

Connect the HDMI cable (not supplied) from the HDMI OUT jack on the back of the DVD Player to the HDMI IN jack on your TV.

METHOD 2 : Component Video (BETTER QUALITY)

If your television is equipped with Component Video inputs, connect a Component video cable(not supplied) from the Component Video Output (Pr, Pb and Y) jacks on the back of the DVD Player to the Component Video Input jacks on your TV.

METHOD 3 : Composite Video (GOOD QUALITY)

Connect the supplied Video cable from the VIDEO OUT jack on the back of the DVD Player to the VIDEO IN jack on your TV.



- This product operates in Interlace scan mode (480i) for Component output.
- If you use an HDMI cable to connect a Samsung TV to the DVD Player, you can operate the Home Theater using the TV's remote control. This is only available with SAMSUNG TVs that support Anynet+(HDMI-CEC).
- Please check the **Anynet+** logo (If your TV has an **Anynet+** logo, then it supports the Anynet+ function.)

CONNECTING THE VIDEO OUT TO YOUR TV (CON'T)

HDMI Auto Detection Function

The player's video output will automatically change to HDMI mode when connecting an HDMI cable while power is on.

- **HDMI (High Definition Multimedia Interface)**

HDMI is an interface that enables the digital transmission of video and audio data with just a single connector. Using HDMI, the DVD Home Theater transmits a digital video and audio signal and displays a vivid picture on a TV having an HDMI input jack.

- **HDMI connection description**

HDMI connector - Supports video and digital audio data.

- HDMI outputs only a pure digital signal to the TV.
- If your TV does not support HDCP (High-bandwidth Digital Content Protection), random noise appears on the screen.

- **Why does Samsung use HDMI?**


Analog TVs require an analog video/audio signal. However, when playing a DVD, the data transmitted to a TV is digital. Therefore either a digital-to-analog converter (in the DVD Home Theater) or an analog-to-digital converter (in the TV) is required. During this conversion, the picture quality is degraded due to noise and signal loss. HDMI technology is superior because it requires no D/A conversion and is a pure digital signal from the player to your TV.

- **What is the HDCP?**

HDCP (High-band width Digital Content Protection) is a system for protecting DVD content outputted via HDMI from being copied. It provides a secure digital link between a video source (PC, DVD. etc) and a display device (TV, projector. etc). Content is encrypted at the source device to prevent unauthorized copies from being made.

- **What is Anynet+?**

Anynet+ is a convenient function that offers linked operation of this unit through Samsung TVs with the Anynet+ feature.

- If your Samsung TV has an  logo, then it supports the Anynet+ function.
- If you turn on the player and insert a disc, the player will start playing the disc, and the TV will turn on automatically and switch to HDMI mode.
- If you turn on the player and press the Play button with a disc already inserted, the TV will immediately turn on and switch to HDMI mode.


HDMI FUNCTION

Resolution Selection

This function allows the user to select the screen resolution for HDMI output.

In Stop mode, press and hold the **SD/HD** (Standard Definition/High Definition) button on the remote control.

- Resolutions available for the HDMI output are 480p, 720p, 1080i/1080p.
- SD(Standard Definition) resolution is 480p and HD (High Definition) resolution is 720p, 1080i/1080p. The default value of HDMI output is 480p.

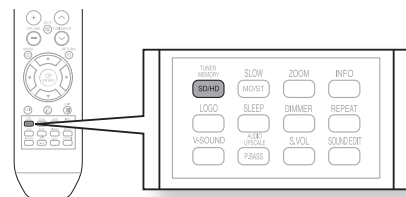

- If the TV does not support the configured resolution, you will not be able to see the picture properly.
- When an HDMI cable is connected, composite and component video signals are not output.
- See your TV owner's manual for more information on how to select the TV's Video Input source.

Why use HDMI (High Definition Multimedia Interface)?

This device transmits a DVD video signal digitally without the process of converting to analog. You will get sharper digital pictures when using an HDMI connection.

Using Anynet+(HDMI-CEC)

Anynet+ is a function that enables you to control other Samsung Devices with your Samsung TV's remote control. Anynet+ can be used by connecting this Home Theater to a SAMSUNG TV using an HDMI Cable. This is only available with SAMSUNG TVs that support Anynet+.

1. Connect the main unit of the Home Theater to a Samsung TV with an HDMI cable. (See page 19)
2. Set the Anynet+ function on your TV. (See the TV instruction manual for more information.)
 - You can operate the Home Theater by using the TV remote control. (Available TV buttons : ◀, ■, ▶, ▶▶, ▲, ▼ and ◀▶ buttons, ①~⑨ button)

With Anynet+

You can operate this unit, power on your TV, or watch a movie by pressing the Play button on your Samsung TV's remote control.

If you select the TV

Set the Anynet+(HDMI-CEC) to On by pressing the Anynet+ button on your TV remote control.

- **Receiver : On** : You can listen to audio through the Home Theater.
- **Receiver : Off** : You can listen to audio through the TV.


If you select the THEATER

Select **THEATER to connect** and set the option of each item below.

- **View TV** : If Anynet+(HDMI CEC) is set to on and you select View TV, the home theater will automatically switch to digital in mode.
- **Theater Menu** : you can access and control the Home theater menu.
- **Theater Operation** : The Home Theater disc playback information will be displayed. You can control the Disc operation of the Home Theater such as title, chapter and subtitle change.
- **Receiver : On** : You can listen to audio through the Home Theater.
- **Receiver : Off** : You can listen to audio through the TV.



- If you chose 'View TV' and you want to listen to TV sound through Digital In of the Home theater, you have to connect an optical cable between the TV and the Home Theater.

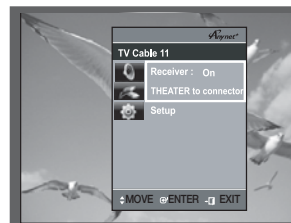


connections



CONNECTING AUDIO FROM EXTERNAL COMPONENTS

AUX1 : Connecting an External Component/MP3 player

Components such as an MP3 Player

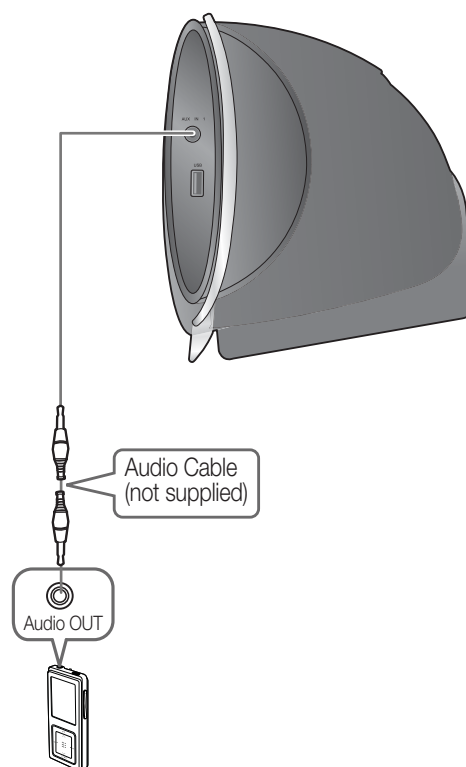

1. Connect AUX IN 1 (Audio) on the Home Theater to the Audio Out of the external component/MP3 player.
2. Press the **AUX** button on the remote control to select **AUX1** input.
 - You can also use the **FUNCTION** button on the main unit.
The mode switches as follows :
DVD/CD → D.IN → AUX 1 → AUX 2 → USB → BT AUDIO → FM.

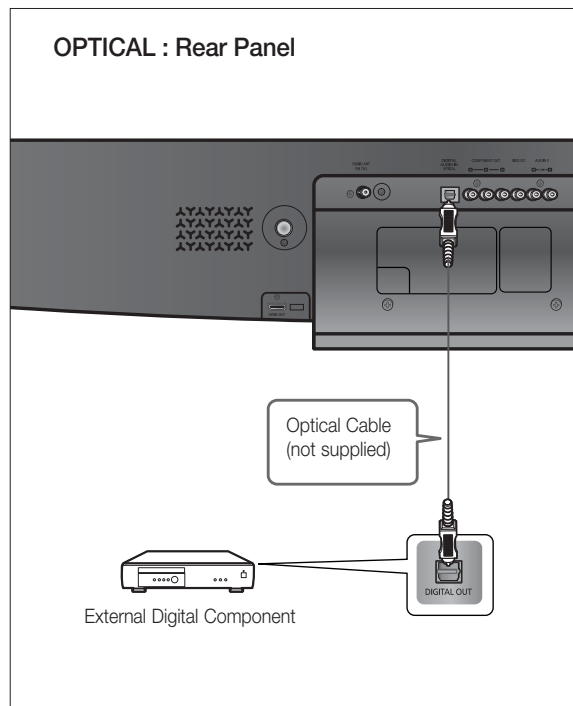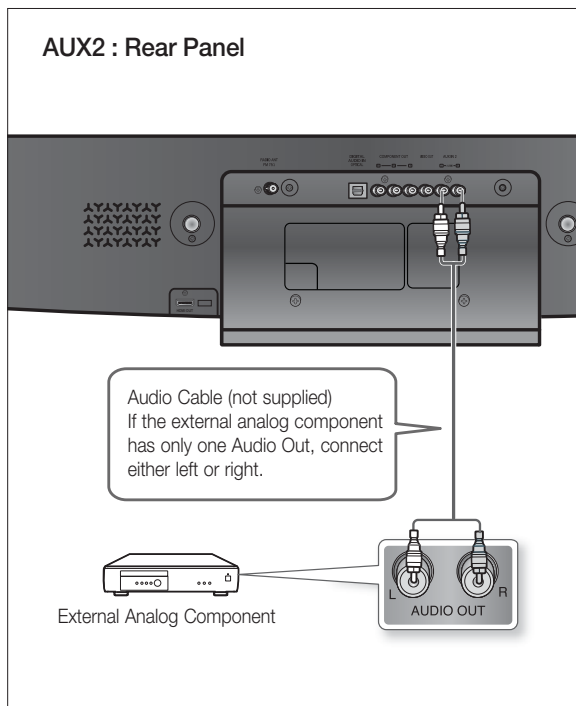

AUX2 : Connecting an External Analog Component

Analog signal components such as a VCR.

1. Connect **AUX IN 2** (Audio) on the Home Theater to the **Audio Out** of the external analog component.
 - Be sure to match connector colors.
2. Press the **AUX** button on the remote control to select **AUX 2** input.
 - You can also use the **FUNCTION** button on the main unit.
The mode switches as follows :
DVD/CD → D.IN → AUX 1 → AUX 2 → USB → BT AUDIO → FM.



- You can connect the Video Output jack of your VCR to the TV, and connect the Audio Output jacks of the VCR to this product.

OPTICAL : Connecting an External Digital Component


Digital signal components such as a Cable Box/Satellite receiver (Set-Top Box).

1. Connect the **Digital Input (OPTICAL)** on the Home Theater to the **Digital Output** of the external digital component.
2. Press the **AUX** button on the remote control to select **DIGITAL IN**.
 - You can also use the **FUNCTION** button on the main unit.
The mode switches as follows :
DVD/CD → D.IN → AUX 1 → AUX 2 → USB → BT AUDIO → FM.

connections

CONNECTING THE FM ANTENNA

1. Connect the FM antenna supplied to the FM 75 Ω COAXIAL Jack.
2. Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.

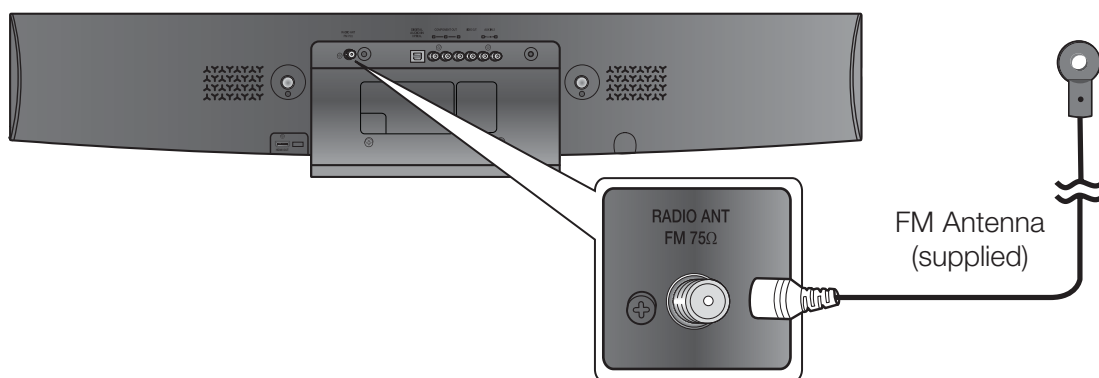

■ This unit does not receive AM broadcasts.

before using your home theater


ENG

The DVD Home Theater's remote can be used to control Samsung TVs.

1. Plug the main unit's power cord into the AC power supply.



2. Press the **DVD RECEIVER** button to switch to DVD RECEIVER mode to operate the DVD Home Theater.
3. Press the **FUNCTION** button on the main unit or **DVD** button on the remote to enable DVD/CD playback.
4. Press the **TV** button to set the remote to TV mode.
5. Press the **POWER** button to turn on your Samsung TV with this remote.
6. Press the **TV/VIDEO** button to select VIDEO mode on your TV.

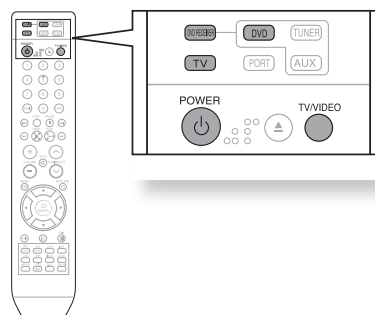



● BEFORE USING YOUR HOME THEATER

playback

DISC PLAYBACK



1. Load a disc vertically into the Disc Insert Hole.
 - Place a disc gently into the tray with the disc's label facing up.
2. Close the compartment by pressing the **PLAY** (▶) button.
 - Playback starts automatically.

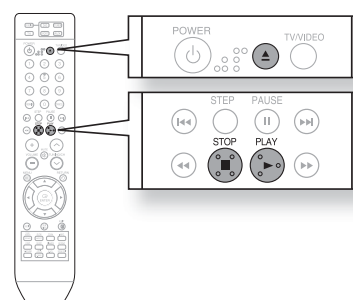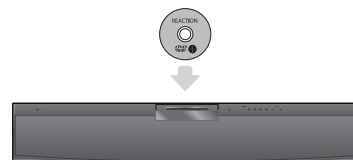

To stop playback, press the **STOP** (■) button during playback.

- If pressed once, **PRESS PLAY** is displayed and the stop position will be stored in memory. If the **PLAY** (▶) button or **ENTER** button is pressed, playback resumes from the stop position. (This function works only with DVDs.)
- If pressed twice, **STOP** is displayed, and if the **PLAY** (▶) button is pressed, playback starts from the beginning.

To temporarily pause playback, press the **PAUSE** (⏸) button during playback.

- To resume playback, press the **PLAY** (▶) button.




- Depending on the content of the disc, the initial screen may appear different.
- Pirated discs will not run in this player because it violates the CSS (Content Scrambling System : a copy protection system) recommendations.

MP3/WMA-CD PLAYBACK

Data CDs (CD-R, CD-RW) encoded in MP3/WMA format can be played.




1. Load an MP3/WMA disc.
 - The MP3/WMA menu screen will appear and playback will start.
 - The appearance of the menu depends on the MP3/WMA disc.
 - WMA-DRM files cannot be played.
2. In Stop mode, use the Cursor **▲, ▼, ◀, ▶** button to select the album, and then press the **ENTER** button.
 - Use the Cursor **▲, ▼** button to select the track.
3. To change the album, use the Cursor **▲, ▼, ◀, ▶** button to select another album in Stop mode, and then press the **ENTER** button.
4. Press the **STOP** (■) button to stop playback.

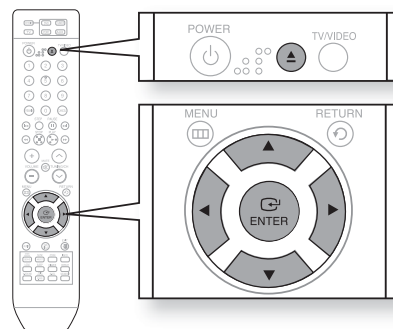

- Depending on the recording mode, some MP3/WMA-CDs may not play.
- Table of contents of a MP3-CD varies depending on the MP3/WMA track format recorded on the disc.

To play a file icon in the screen,

- Press the Cursor **▲, ▼, ◀, ▶** button when it is in Stop mode and select a desired icon from the top part of the menu.

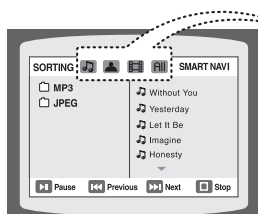

Music File Icon : To play music files only, select the icon.



Image File Icon : To view image files only, select the icon.



Movie File Icon : To view movie files only, select the icon.



All File Icon : To view all files, select the icon.

playback


JPEG FILE PLAYBACK

Images captured with a digital camera or camcorder, or JPEG files on a PC can be stored on a CD and then played back with this Home Theater.


Rotate/Flip Function



Press the Cursor ▲,▼,◀,▶ button during playback.

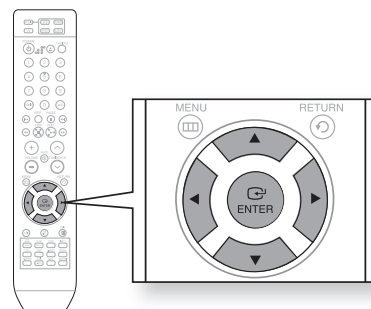

Original Image

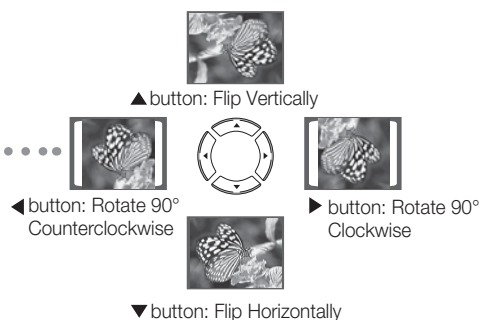

- The maximum resolutions supported by this product are 5120 x 3480 (or 19.0 MPixel) for standard JPEG files and 2048 x 1536 (or 3.0 MPixel) for progressive image files.
- If a JPEG file is played when the HDMI output resolution is 720p/1080i/1080p, the mode is automatically converted to 480p mode.

DIVX PLAYBACK

The functions on this page apply to DivX disc playback.



Skip Forward/Back

During playback, press the **⏮, ⏭** button.

- Goes to the next file whenever you press the **⏭** button, if there are over 2 files in the disc.
- Goes to the previous file whenever you press the **⏮** button, if there are over 2 files in the disc.




Fast Playback

During playback, press the **⏮, ⏭** button.

To play back the disc at a faster speed, press the **⏮** or **⏭** button during playback.

- Each time you press either button, the playback speed will change as follows:
2x → 4x → 8x → 32x → Normal.

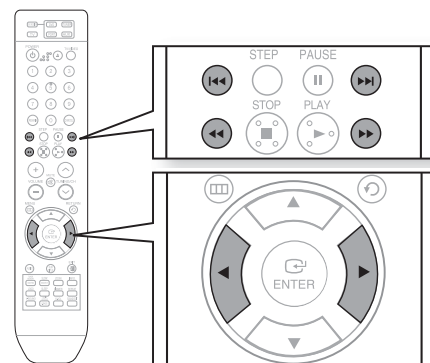

5 Minutes Skip function

During playback, press the Cursor **⏮, ⏭** button.


- Playback skips 5 minutes forward whenever you press the Cursor **⏭** button.
- Playback skips 5 minutes back whenever you press the Cursor **⏮** button.



Audio Display

Press the **AUDIO** button.

- If there are multiple audio tracks on a disc, you can toggle between them.
- Each time you press the button, your selection will toggle between **AUDIO (1/N, 2/N ...)** and .

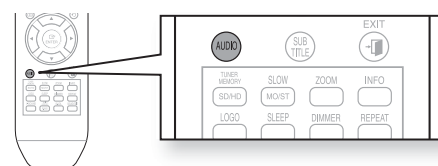


■ is displayed when there is only one supported language in the disc.



Subtitle Display

Press the **SUBTITLE** button.

- Each time you press the button, your selection will toggle between **SUBTITLE (1/N, 2/N ...)** and **SUBTITLE OFF**.
- If the disc has only one subtitle file, it will be played automatically.
- See number 2 (Caption Function) below for more details concerning Subtitle usage with DivX discs.

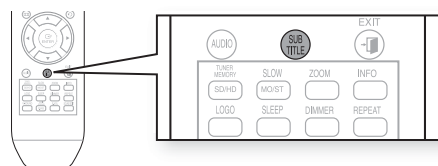


DIVX PLAYBACK (CON'T)

If the Disc has more than One Subtitle File



If the disc has more than one subtitle file, the default subtitle may not match the movie and you will have to select your subtitle language as follows:

1. In Stop mode, press the Cursor ▲, ▼ button, select the desired subtitle (⌨) from the TV screen, and then press the **ENTER** button.
2. When you select the desired DivX file from the TV screen, the movie will be played normally.

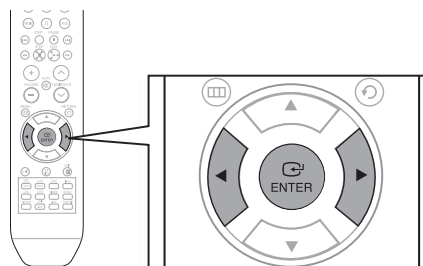

DivX(Digital internet video eXpress)

DivX is a video file format developed by Microsoft and is based on MPEG4 compression technology to provide audio and video data over the Internet in real-time.

MPEG4 is used for video encoding and MP3 for audio encoding so that the users can watch a movie at near DVD-quality video and audio.

1. Supported Formats

This product only supports the following media formats.If both video and audio formats are not supported, the user may experience problems such as broken images or no sound.

Supported Video Formats

| Format | AVI | WMV |
|--------------------|------------------------|-------------|
| Supported Versions | DivX3.11~DivX5.1, XviD | V1/V2/V3/V7 |

Supported Audio Formats

| Format | MP3 | WMA | AC3 |
|--------------------|------------|------------|-------------|
| Bit Rate | 80~384kbps | 56~128kbps | 128~384kbps |
| Sampling Frequency | 44.1khz | | 44.1/48khz |

- Aspect Ratio : Although the default DivX resolution is 640x480 pixels (4:3), this product supports up to 800x600 pixels (16:9). TV screen resolutions higher than 800 will not be supported.
- When you play a disc whose sampling frequency is higher than 48khz or 320kbps, you may experience shaking on the screen during playback.

2. Caption Function

- You must have some experience with video extraction and editing in order to use this feature properly.
- To use the caption function, save the caption file (*.smi) in the same file name as that of the DivX media file (*.avi) within the same folder.
Example. Root Samsung_007CD1.avi
Samsung_007CD1.smi
- Up to 60 alphanumeric characters or 30 East Asian characters (2 byte characters such as Korean and Chinese) for the file name.

USING THE PLAYBACK FUNCTION

Displaying Disc Information



You can view disc playback information on the TV screen.

Press the **INFO** button.




- Depending on the disc, the disc information display may appear different.
- Depending on the disc, you can also select DOLBY DIGITAL, or PRO LOGIC.



appears on the TV screen!

If this symbol appears on the TV screen when pressing a button, that operation is not possible with the disc currently being played.

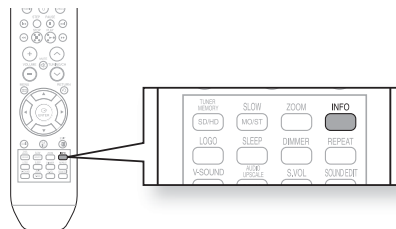


Checking the Remaining Time



Press the **REMAIN** button.

- For checking the total and remaining time of a title or chapter being played.

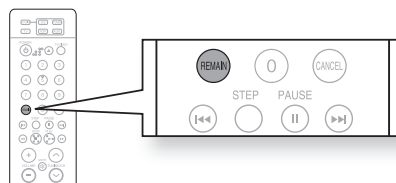

Each time the Remain button is pressed



TITLE ELAPSED → TITLE REMAIN → CHAPTER ELAPSED → CHAPTER REMAIN



GROUP ELAPSED → GROUP REMAIN → TRACK ELAPSED → TRACK REMAIN



TRACK ELAPSED → TRACK REMAIN → TOTAL ELAPSED → TOTAL REMAIN



TRACK REMAIN → TRACK ELAPSED

playback

USING THE PLAYBACK FUNCTION (CON'T)

Fast Playback




Press the ◀◀, ▶▶ button.

- Each time the button is pressed during playback, the playback speed changes as follows:

◀◀ 2X → ◀◀ 4X → ◀◀ 8X → ◀◀ 32X → ▶▶ PLAY

▶▶ 2X → ▶▶ 4X → ▶▶ 8X → ▶▶ 32X → ▶▶ PLAY

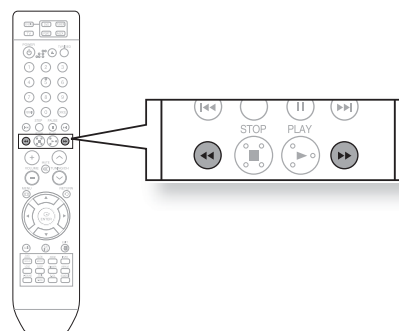

- During fast playback of a CD or MP3-CD, sound is heard only at 2x speed, and not at 4x, 8x, and 32x speeds.

Slow Playback




Press the SLOW button.

- Each time the button is pressed during playback, the playback speed changes as follows:

▶▶ 1/2 → ▶▶ 1/4 → ▶▶ 1/8 → ◀◀ 1/2 → ◀◀ 1/4 → ◀◀ 1/8 → ▶▶ PLAY

▶▶ 1/2 → ▶▶ 1/4 → ▶▶ 1/8 → ▶▶ PLAY

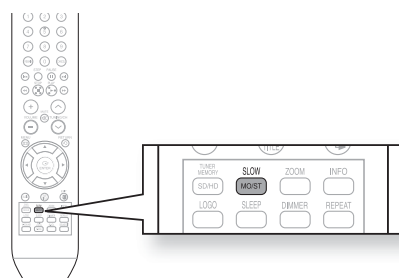


- No sound is heard during slow playback.
- Reverse slow playback does not work with DivX.

Skipping Scenes/Songs



Press the ◀◀, ▶▶ button.

- Each time the button is pressed during playback, the previous or next chapter, track or directory (file) will be played.
- You cannot skip chapters consecutively.

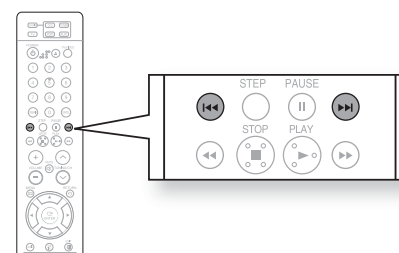


Repeat Playback

Repeat playback allows you to repeatedly play a chapter, title, track (song), or directory (MP3 file).

Press the **REPEAT** button.

- Each time the button is pressed during playback, the repeat playback mode changes as follows:

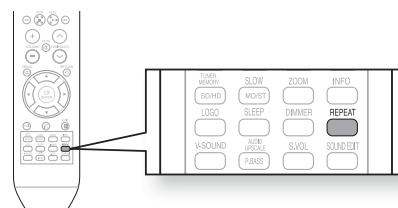

REPEAT : CHAPTER → **REPEAT : TITLE** → **REPEAT : OFF**



REPEAT : TRACK → **REPEAT : GROUP** → **REPEAT : OFF**



REPEAT : TRACK → **REPEAT : DISC** → **REPEAT : OFF**



REPEAT : OFF → **REPEAT : RANDOM** → **REPEAT : TRACK** → **REPEAT : DIR**
→ **REPEAT : DISC** → **REPEAT : OFF**

Repeat Playback Options

CHAPTER : Repeatedly plays the selected chapter.

TITLE : Repeatedly plays the selected title.

GROUP : Repeatedly plays the selected group.

RANDOM : Plays tracks in random order. (A track that has already been played may be played again.)

TRACK : Repeatedly plays the selected track.

DIR : Repeatedly plays all tracks in the selected folder.


DISC : Repeatedly plays the entire disc.

OFF : Cancels Repeat Playback.

To Select a Repeat Playback Mode in the Disc Information Screen



- Press the **INFO** button twice.
- Press the Cursor **▶** button to move to **REPEAT PLAYBACK** (⏮) display.
- Press the Cursor **▼** button to select the desired Repeat Playback mode.
 - To select another album and track, repeat Steps 2 and 3 above.
- Press the **ENTER** button.

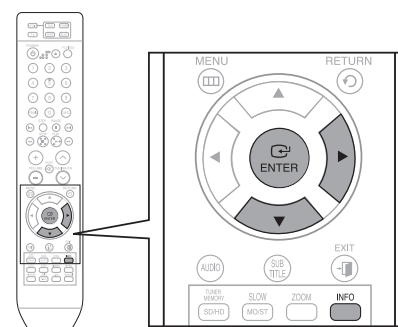

OFF → **A-** → **CHAP** → **TITLE** → **OFF**



OFF → **A-** → **TRACK** → **DISC** → **OFF**



- For DivX, MP3 and JPEG discs, you cannot select Repeat Play from the information display screen.

playback


USING THE PLAYBACK FUNCTION (CON'T)

A-B Repeat Playback



You can repeatedly play back a designated section of a DVD.

1. Press the **INFO** button twice.
2. Press the Cursor **▶** button to move to REPEAT PLAYBACK (↺) display.
3. Press the Cursor **▲, ▼** button to select **A-** and then press the **ENTER** button.
 - When the **ENTER** button is pressed, the selected position will be stored in memory.
4. Press the **ENTER** button at the end of the desired segment.
 - The specified segment will be played repeatedly.

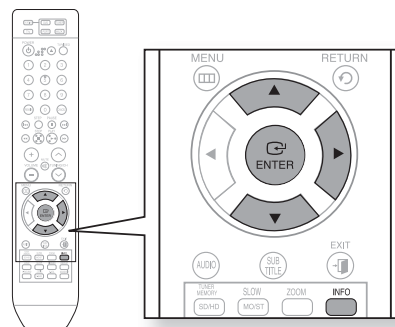

➤ To return to normal playback, press the Cursor **▲, ▼** button to select **OFF**.




- The A-B Repeat function does not operate with DivX, MP3 or JPEG discs.

Step Function



Press the **STEP** button.

- The picture moves forward one frame each time the button is pressed during playback.

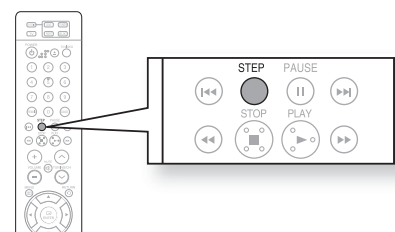

- No sound is heard during step motion playback.


Angle Function



This function allows you to view the same scene in different angles.

1. Press the **INFO** button.
2. Press the Cursor **▶** button to move to **ANGLE** () display.
3. Press the Cursor **▲**, **▼** button or numeric buttons to select the desired angle.
 - Each time the button is pressed, the angle changes as follows:

1/3 → 2/3 → 3/3 → 1/3

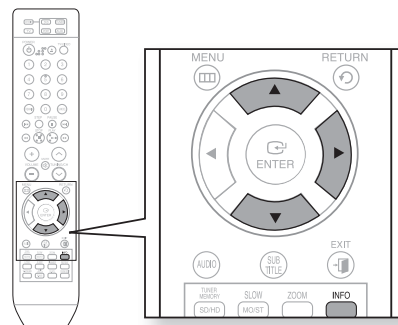

- The Angle function works only with discs on which multiple angles have been recorded.


Zoom (Screen Enlarge) Function



This function allows you to enlarge a particular area of the displayed image.

1. Press the **ZOOM** button.
2. Press the Cursor **▲**, **▼**, **◀**, **▶** button to move to **ANGLE** () display.
3. Press the **ENTER** button.
 - Each time the button is pressed, the zoom level changes as follows:

ZOOM X 1.5 → **ZOOM X 2** → **ZOOM X 3**
→ **ZOOM OFF**

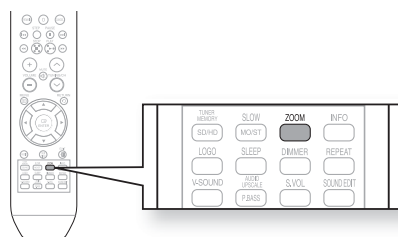

playback


USING THE PLAYBACK FUNCTION (CON'T)

Bonus Group



Some DVD-Audio discs have an extra 'bonus' group that requires a 4-digit key number to access. See the disc packaging for details and the key number.

When you play a DVD-Audio disc that has a bonus group, the key number input screen appears automatically.

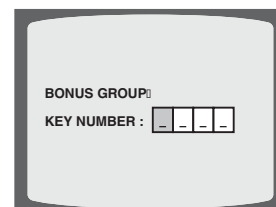


- If you eject the disc, switch the power off, or unplug the player, you will need to re-enter the key number.

Navigating Pages



During playback, press the **∇**, **▲** button on the remote control.


- You can select the desired image from a DVD-Audio disc containing still images.
- With some discs, you may not be able to select images.

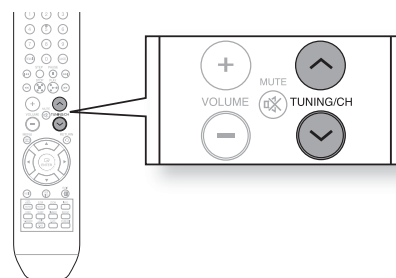

Audio Language Selection Function



1. Press the **INFO** button twice.
2. Press the Cursor **▲**, **▼** button or numeric buttons to select the desired audio language.
 - Depending on the number of languages on a DVD disc, a different audio language (ENGLISH, SPANISH, FRENCH, etc.) is selected each time the button is pressed.

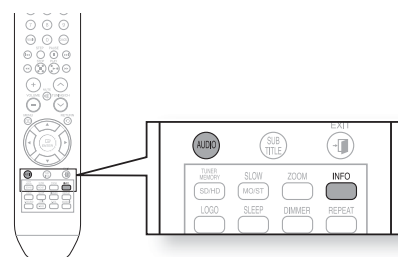

EN 1/3 → **SP 2/3** → **FR 3/3** → **EN 1/3**




- To operate this function, you can also press the AUDIO buttons on the remote control.
- Depending on the disc, the Audio Language functions may not be available.

Subtitle Language Selection Function



1. Press the **INFO** button twice.
2. Press the Cursor **▶** button to move to **SUBTITLE** (📄) display.
3. Press the Cursor **▼** button or numeric buttons to select the desired subtitle.

EN 01/03 → SP 02/03 → FR 03/03 → OFF/03 →
EN 01/03

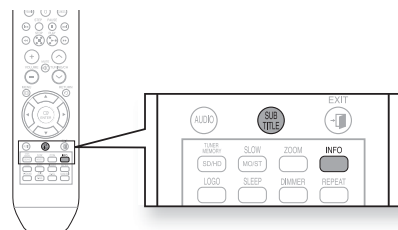


- To operate this function, you can also press the SUBTITLE buttons on the remote control.
- Depending on the disc, the Subtitle Language functions may not be available.

Moving Directly to a Scene/Song




1. Press the **INFO** button.
2. Press the Cursor **▲**, **▼** button or numeric buttons to select the desired title/track (🎵) and then press the **ENTER** button.
3. Press the Cursor **◀**, **▶** button to move to the Chapter (📀) display.
4. Press the Cursor **▲**, **▼** button or numeric buttons to select the desired chapter and then press the **ENTER** button.
5. Press the Cursor **◀**, **▶** button to move to time (🕒) display.
6. Press the numeric buttons to select the desired time and then press the **ENTER** button.

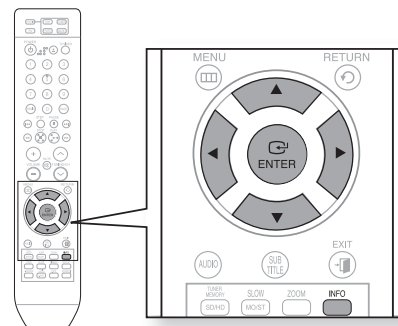

Press the **numeric** buttons.

- The selected file will be played.
- When playing an MP3 or JPEG disc, you cannot use the Cursor **▲**, **▼** button to move to a folder.
To move a folder, press the **STOP** (■) and then press the Cursor **▲**, **▼** button.

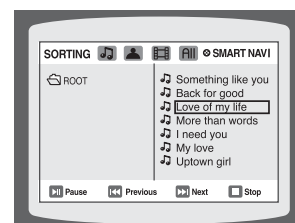

- You can press the **⏮**, **⏭** button on the remote control to move directly to the desired title, chapter, or track.
- Depending on the disc, you may not be able to move to the selected title or time.

playback

USING THE PLAYBACK FUNCTION (CON'T)

Using the Disc Menu




You can use the menus for the audio language, subtitle language, profile, etc.

DVD menu contents differ from disc to disc.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▲**, **▼** button or numeric buttons to move to **Disc Menu** and then press the **ENTER** button.
 - When you select Disc Menu and it is not supported by the disc, the "**This menu is not supported**" message appears on the screen.
3. Press the Cursor **▲**, **▼**, **◀**, **▶** button to select the desired item.
4. Press the **ENTER** button.

➤ Press the **EXIT** button to exit the setup screen.

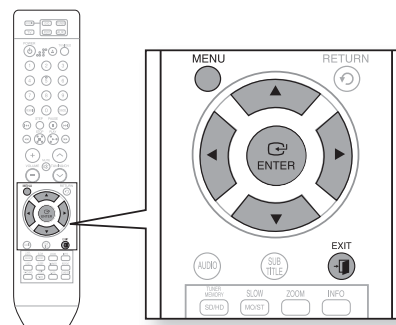

■ The disc menu display may be different depending on the disc.


Using the Title Menu



For DVDs containing multiple titles, you can view the title of each movie. Depending on the disc, the availability of this feature may vary.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▲**, **▼** button to move to **Title Menu**.
3. Press the **ENTER** button.
 - The title menu appears.

➤ Press the **EXIT** button to exit the setup screen.

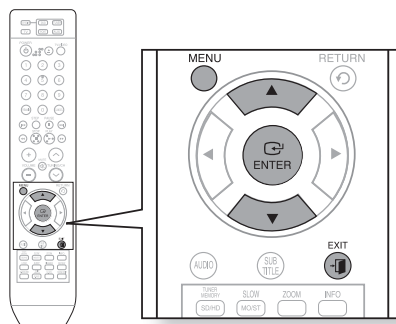

■ The Title menu display may be different depending on the disc.