

SAMSUNG

RF4402d Series Installation Manual

Describes product installation and requirement procedure.

Document Version 1.0
November 2018

01038115

Radio Access Network

Document Number: TBD

© 2018 SAMSUNG Electronics Co., Ltd.

All Rights Reserved. The contents of this document/presentation contain proprietary information that must be kept confidential. No part of this document shall be photocopied, reproduced, stored in a retrieval system, or transmitted, in any form or by any means whether, electronic, mechanical, or otherwise without the prior written permission of SAMSUNG Electronics Co., Ltd.

No warranty of accuracy is given concerning the contents of the information contained in this publication. To the extent permitted by law no liability (including liability to any person by reason of negligence) will be accepted by SAMSUNG Electronics Co., Ltd., its subsidiaries or employees for any direct or indirect loss or damage caused by omissions from or inaccuracies in this document. SAMSUNG Electronics Co., Ltd. reserves the right to change details in this publication without notice.

SAMSUNG

01038115

SNMTC-v3-0312

This manual should be read and used as a guideline for properly installing and/or operating the product. Owing to product variations across the range, any illustrations and photographs used in this manual may not be a wholly accurate depiction of the actual products you are using. This manual may be changed for system improvement, standardization and other technical reasons without prior notice. Samsung Networks documentation is available at <http://www.samsungdocs.com>

Contents

Preface	ix
Conventions in this Document	ix
New and Changed Information	x
Revision History	x
Organization of This Document	x
Related Documentation	x
Personal and Product Safety	xi
Equipment Markings	xv
Chapter 1 Before Installation	1
System View and Interface	1
<i>RRH View</i>	1
<i>RRH External Interface</i>	2
<i>AC/DC Converter View</i>	3
<i>AC/DC Converter External Interface</i>	4
Specifications	5
Cautions for Installation	7
<i>Before Installing</i>	7
<i>While Installing</i>	7
<i>After Installing</i>	8
Installation Tools	9
Chapter 2 Installing System	12
Installation Procedure	12
System Arrangement	13
Unpacking and Transporting	17
<i>Bringing in Items</i>	17
<i>Unpacking Items</i>	17
RRH Handling	18
Fixing RRH	19
<i>Fixing Unit Bracket</i>	19
<i>Fixing AC/DC Converter</i>	23
<i>Fixing Pole Type</i>	26
<i>Fixing Wall Type</i>	54
Chapter 3 Connecting Cables	61
Cabling Procedure	61
Guidelines for Cable Connections	62
<i>Cable Path Inspection</i>	62
<i>Cable Cutting</i>	63
<i>Cable Installation</i>	63
<i>Cable Binding</i>	63
<i>Connector Attachment</i>	64
<i>Identification Tag Attachment</i>	65
Cabling Diagram	66
Grounding	69
<i>Connecting Ground Cable</i>	69
Power Cabling	75

<i>Connecting Power Cable</i>	76
Interface Cable Connection.....	86
<i>Remove/Insert Optical Module</i>	86
<i>Connecting CPRI Cable</i>	89
<i>Connecting UDA Cable</i>	94
<i>Connecting RET Cable</i>	99
<i>Connecting RF Cable</i>	101
Chapter 4 Inspect the Installation	108
Appendix A Acronyms	112
Appendix B Sector Antenna Installation	113
Cautions when Installing a Sector Antenna	113
Sector Antenna Installation.....	114
Appendix C Clean the Optical Connectors	115
Introduction	115
<i>Measure the Optical Output and Connecting the Optical Connector</i>	115
Appendix D Standard Torque	117



01038115

List of Figures

Figure 1.	RRH View	1
Figure 2.	RRH External Interface	2
Figure 3.	AC/DC Converter View	3
Figure 4.	AC/DC Converter External Interface	4
Figure 5.	Procedure to Install the RRH	12
Figure 6.	RRH Arrangement_1 Sector Pole Type Installation (Standard Installation)	13
Figure 7.	RRH Arrangement_1 Sector Pole Type Installation (Side Installation)	13
Figure 8.	RRH Arrangement_2 Sector Pole Type Installation (Back to Back Installation)	14
Figure 9.	RRH Arrangement_2 Sector Pole Type Installation (Side by Side Installation)	14
Figure 10.	RRH Arrangement_1 Sector Wall Type Installation (Standard Installation)	16
Figure 11.	RRH Arrangement_1 Sector Wall Type Installation (Side Installation)	16
Figure 12.	RRH Handling	18
Figure 13.	Fixing Unit Bracket_Standard Installation (1)	20
Figure 14.	Fixing Unit Bracket_Standard Installation (2)	20
Figure 15.	Fixing Unit Bracket_Side Installation (1)	21
Figure 16.	Fixing Unit Bracket_Side Installation (2)	22
Figure 17.	Fixing AC/DC Converter_Front Installation (1)	24
Figure 18.	Fixing AC/DC Converter_Front Installation (2)	24
Figure 19.	Fixing AC/DC Converter_Side Installation (1)	25
Figure 20.	Fixing AC/DC Converter_Side Installation (2)	25
Figure 21.	Assembling Mounting Bracket (1)	27
Figure 22.	Assembling Mounting Bracket (2)	28
Figure 23.	Lifting RRH & Mounting Bracket Assembly	29
Figure 24.	Lifting RRH & Mounting Bracket Assembly	30
Figure 25.	Fixing Mounting Bracket Assembly_1 Sector Pole Type (1)	31
Figure 26.	Fixing Mounting Bracket Assembly_1 Sector Pole Type (2)	32
Figure 27.	Fixing Mounting Bracket Assembly_1 Sector Pole Type (3)	32
Figure 28.	Levelling Mounting Bracket Assembly_1 Sector Pole Type	33
Figure 29.	Fixing RRH_1 Sector Pole Type (Standard Installation)	34
Figure 30.	Fixing RRH_1 Sector Pole Type (Side Installation)	35
Figure 31.	Assembling Mounting Bracket (1)	37
Figure 32.	Assembling Mounting Bracket (2)	38
Figure 33.	Lifting RRH & Mounting Bracket Assembly	39
Figure 34.	Fixing Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation 1)	40
Figure 35.	Fixing Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation 2)	41
Figure 36.	Fixing Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation 3)	41
Figure 37.	Fixing Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation 4)	42
Figure 38.	Fixing Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation 5)	42
Figure 39.	Levelling Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation)	43
Figure 40.	Fixing RRH_2 Sector Pole Type (Side by Side Installation 1)	45
Figure 41.	Fixing RRH_2 Sector Pole Type (Side by Side Installation 2)	45
Figure 42.	Assembling Mounting Bracket (1)	47
Figure 43.	Assembling Mounting Bracket (2)	48
Figure 44.	Lifting RRH & Mounting Bracket Assembly	49
Figure 45.	Fixing Mounting Bracket Assembly_2 Sector Pole Type (Back to Back Installation 1)	50
Figure 46.	Fixing Mounting Bracket Assembly_2 Sector Pole Type (Back to Back Installation 2)	51
Figure 47.	Fixing Mounting Bracket Assembly_2 Sector Pole Type (Back to Back Installation 3)	51

Figure 48. Levelling Mounting Bracket Assembly_2 Sector Pole Type (Back to Back Installation 3) 52

Figure 49. Fixing RRH_2 Sector Pole Type (Back to Back Installation 1) 53

Figure 50. Fixing RRH_2 Sector Pole Type (Back to Back Installation 2) 54

Figure 51. RRH marking dimensions_1 Sector Wall Type (Standard Installation)..... 55

Figure 52. RRH marking dimensions_1 Sector Wall Type (Side Installation) 55

Figure 53. Marking_Wall Type 56

Figure 54. Drilling & Anchoring 57

Figure 55. Fixing Mounting Bracket_1 Sector Wall Type 58

Figure 56. Fixing RRH_1 Sector Wall Type (Standard Installation)..... 59

Figure 57. Fixing RRH_1 Sector Pole Type (Side Installation)..... 60

Figure 58. Procedure to Connect System Cable..... 61

Figure 59. Cable Connection Procedure..... 62

Figure 60. RRH Cable Diagram_RF Connection: 2T2R..... 66

Figure 61. RRH Cable Diagram_RF Connection: 2T4R, 4T4R 66

Figure 62. AC/DC Convertor Cable Diagram 68

Figure 63. Connecting RRH Ground Cable (1) 70

Figure 64. Connecting RRH Ground Cable (2) 71

Figure 65. Connecting AC/DC Convertor Ground Cable (1) 73

Figure 66. Connecting AC/DC Convertor Ground Cable (2) 73

Figure 67. Power Equipment Elements..... 75

Figure 68. Connecting RRH DC Power Cable (1)..... 77

Figure 69. Connecting RRH DC Power Cable (2)..... 78

Figure 70. Connecting AC/DC Convertor DC Power Cable (1)..... 81

Figure 71. Connecting AC/DC Convertor DC Power Cable (2)..... 81

Figure 72. Connecting AC/DC convertor AC Power Cable (1) 84

Figure 73. Connecting AC/DC convertor AC Power Cable (2) 84

Figure 74. Optical Module Removal (1) 86

Figure 75. Optical Module Removal (2) 86

Figure 76. Optical Module Removal (3) 87

Figure 77. Optical Module Inset..... 88

Figure 78. Connecting CPRI Cable (1)..... 90

Figure 79. Connecting CPRI Cable (2)..... 90

Figure 80. Connecting CPRI Cable (3)..... 91

Figure 81. Connecting CPRI Cable (4)..... 91

Figure 82. Connecting CPRI Cable (5)..... 92

Figure 83. Connecting CPRI Cable (6)..... 92

Figure 84. Connecting UDA Cable (1)..... 94

Figure 85. Connecting UDA Cable (2)..... 96

Figure 86. Connecting UDA Cable (3)..... 96

Figure 87. Connecting UDA Cable (4)..... 97

Figure 88. Connecting UDA Cable (5)..... 97

Figure 89. Connecting UDA Cable (6)..... 98

Figure 90. Connecting RET Cable (1)..... 100

Figure 91. Connecting RET Cable (2)..... 100

Figure 92. Connecting RET Cable (3)..... 101

Figure 93. Connecting RET Cable (4)..... 101

Figure 94. Connecting RF Cable_2T2R Connection (1)..... 103

Figure 95. Connecting RF Cable_2T2R Connection (2)..... 103

Figure 96. Connecting RF Cable_2T2R Connection (3)..... 103

Figure 97. Connecting RF Cable_2T2R Connection (4)..... 104

Figure 98. Connecting RF Cable_2T2R Connection (5)..... 104

Figure 99. Connecting RF Cable_2T2R Connection (6)..... 105

Figure 100. Connecting RF Cable_2T2R Connection (7)..... 105
Figure 101. Connecting RF Cable_2T4R, 4T4R Connection (1)..... 106
Figure 102. Connecting RF Cable_2T4R, 4T4R Connection (2)..... 106
Figure 103. Installation Inspection Procedure 108
Figure 104. Sector Antenna..... 114

SAMSUNG

01038115

List of Tables

Table 1.	RRH Specifications.....	5
Table 2.	AC/DC Converter Specifications.....	6
Table 3.	Basic Installation Tools.....	9
Table 4.	Parts and Tools for fixing Unit Bracket_Standard installation	19
Table 5.	Parts and Tools for fixing Unit Bracket_Standard Installation	21
Table 6.	Parts and Tools for fixing AC/DC converter_Front Installation.....	24
Table 7.	Parts and Tools for fixing AC/DC converter_Side Installation.....	25
Table 8.	Parts and Tools for assembling Mounting Bracket	26
Table 9.	Parts and Tools for fixing Mounting Bracket Assembly_1 Sector Pole Type.....	31
Table 10.	Fixing RRH_1 Sector Pole Type (Standard & Side Installation).....	34
Table 11.	Parts and Tools for assembling Mounting Bracket	36
Table 12.	Parts and Tools for fixing Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation) 40	40
Table 13.	Parts and Tools for fixing RRH_2 Sector Pole Type (Side by Side Installation).....	44
Table 14.	Parts and Tools for assembling Mounting Bracket	46
Table 15.	Parts and Tools for fixing Mounting Bracket Assembly_2 Sector Pole Type (Back to Back Installation) 50	50
Table 16.	Parts and Tools for fixing RRH_2 Sector Pole Type (Back to Back Installation).....	53
Table 17.	Tools for Marking	54
Table 18.	Parts and Tools for Drilling & Anchoring.....	56
Table 19.	Anchor Bolt Drill Bits and Hole Depth	56
Table 20.	Parts and Tools for fixing Mounting Bracket_1 Sector Wall Type.....	58
Table 21.	Fixing RRH_1 Sector Wall Type (Standard & Side Installation)	59
Table 22.	Recommended Minimum Allowed Cable bend Radius.....	63
Table 23.	RRH Connection Cable	67
Table 24.	AC/DC Converter Connection Cable.....	68
Table 25.	Parts and Tools for connecting RRH Ground Cable.....	69
Table 26.	Parts and Tools for connecting AC/DC Converter Ground Cable	72
Table 27.	Parts and Tools for connecting RRH DC Power Cable	76
Table 28.	RRH DC Power Cable Connector Pin Map	76
Table 29.	Parts and Tools for connecting AC/DC Converter DC Power Cable	80
Table 30.	AC/DC Converter DC Power Cable Connector Pin Map	80
Table 31.	Parts and Tools for connecting AC/DC Converter DC Power Cable	83
Table 32.	AC/DC Converter AC Power Cable Connector Pin Map	83
Table 33.	Parts and Tools for connecting CPRI Cable	89
Table 34.	Parts and Tools for connecting UDA Cable	94
Table 35.	UDA Cable Pin Map	94
Table 36.	Parts for connecting RET Cable	99
Table 37.	RET Cable Pin Map	99
Table 38.	RF Cable Minimum Radius of Curvature	102
Table 39.	Parts and Tools for connecting RF cable	102
Table 40.	RF Cable Identification Tag.....	107
Table 41.	Construction Situation Check list	109
Table 42.	Standard Torque Value for Fastening Bolts	117
Table 43.	Brass Bolts Torque Value	117
Table 44.	Connector Connection Torque Value.....	117

Preface

This manual describes how to install the 1.9/2.1 GHz RRH including how to connect cables. This manual includes the following 1.9/2.1 GHz RRH:

- RF4402d-D1A

Conventions in this Document

Samsung Networks product documentation uses the following conventions.

Symbols

Symbol	Description
	Indicates a task.
	Indicates a shortcut or an alternative method.
	Provides additional information.
	Provides information or instructions that you should follow to avoid service failure or damage to equipment.
	Provides information or instructions that you should follow to avoid personal injury or fatality.
	Provides antistatic precautions that you should observe.

Menu Commands

menu | command

This indicates that you must select a command on a menu, where **menu** is the name of the menu, and **command** is the name of the command on that menu.

File Names and Paths

These are indicated by a bold typeface. For example:

Copy **filename.txt** into the **/home/folder1/folder2/bin/** folder.

User Input and Console Screen Output Text

Input and output text is presented in the Courier font. For example,
`context <designated epc-context-name>`

CLI commands are presented in bold small caps. For example,

Type the **RTRV-NE-STS** command in the input field.

New and Changed Information

This section describes information that has been added/changed since the previous publication of this manual.

- Added 'Make sure RF Power Feeding Off when connecting TMA'. (Chapter 1. While Installation)

Revision History

The following table lists all versions of this document.

Document Version	Publication Date	Remarks
1.0	November 2018	-

Organization of This Document

Section	Title	Description
Chapter 1	Before Installation	This chapter introduces RRH and describes items should be understood before installation.
Chapter 2	Installing System	This chapter describes the procedures to install the RRH.
Chapter 3	Connecting Cables	This chapter describes the procedures to connect the cables to the RRH installed.
Chapter 4	Inspect the Installation	This chapter describes the procedures of inspecting installation status after RRH installation and cabling is completed.
Appendix A	Acronyms	This annex describes the acronyms used in this manual.
Appendix B	Sector Antenna Installation	This annex describes the sector antenna installation.
Appendix C	Clean the Optical Connectors	This annex describes the procedure of cleaning the optical connector and cleaning tool.
Appendix D	Standard Torque	This annex describes the standard torque when fastening the bolt.

Related Documentation

- LTE eNB System Description

Personal and Product Safety

This product safety information includes European directives, which you must follow. If these do not apply in your country, please follow similar directives that do apply in your country.

Proposition 65 Warning (US Only)

State of California Proposition 65 Warning (US only)

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Electrical

The product is designed to operate from a -48 V DC supply and is therefore classified as Safe Extra Low Voltage (SELV) equipment.

All structural parts are grounded and all input and outputs have built-in isolation from the network. All input and output ports that connect to external power sources are designed to meet relevant national safety requirements.

The product contains hazardous energy levels as defined by EN 60950. Care must be taken when maintaining this equipment as injury to personnel or damage to the equipment could result from mistakes. Maintenance should only be carried out by trained and competent engineers who are familiar with the relevant procedures and instructions.

Lasers

The product is fitted with optic modules rated as Class 1 radiation-emitting devices under EN 60825-1. During installation, operation, and maintenance, never look into the end of an optical fiber directly or by reflection either with the naked eye or through an optical instrument. Do not operate equipment with exposed fiber connectors—cover these with fiber cables or blanking caps. Do not remove equipment covers during operation unless requested to do so in the documentation. Carry out normal safety precautions when trimming fibers during installation.

Manual Handling

Care should be taken when handling equipment. Give due consideration to the weight of the equipment, the physical capability of the individual(s) handling the equipment, and movements such as twisting, bending and stooping, which could lead to skeletal and muscular injuries.

Installation

Installation must be carried out by trained and competent engineers only. All relevant safety measures should be taken to ensure equipment is not connected to

live power and transmission sources during installation. Equipment must be correctly installed in order to meet the relevant safety standards and approval conditions.

Each power feed to the unit requires a separate fused feed from the provided power supply. The cable between the power distribution point and the installed equipment must have a minimum cross-sectional area of 2.5 mm².

Rack-mountable equipment must be placed in a standard 19-inch rack and secured with the appropriate fixings as detailed in the installation manual.

Maintenance

Maintenance must only be carried out by a suitably trained and competent technician. All safety instructions must be carefully observed at all times. Equipment covers should not be removed while live power and transmission is connected unless in a controlled environment by trained technicians.

Fire

The product is powered from a -48 V DC supply. To protect against fire, the equipment is fused.

Environment

The product must be operated in an environment with the specified relative humidity and ambient temperature ranges.

Keep all liquids away from the equipment as accidental spillage can cause severe damage.

Cooling

The product cools down by its own set of cooling fans housed in a fan module. Each fan module detects a fan that is not operating normally. LEDs on the front panel of the fan module provide an alarm indication in the event of fan failure.

In the event of fan failure, take urgent remedial action to restore full cooling capacity.

Take appropriate measures to ensure that fan modules do not start spinning during repair and maintenance procedures.

Anti-Static Precautions

The circuit boards and other modules in the product are sensitive to and easily damaged by static electricity. If any card or sub-assembly is removed from the unit, the following anti-static precautions must be observed at all times:

- Service personnel must wear anti-static wrist straps.
- Circuit boards and sub-assemblies must be placed on ground conductive mats

or in conductive bags.

- All tools must be discharged to ground before use.
- The anti-static wrist strap and cord must be checked at regular intervals for their suitability for use.

Grounding

To comply with EN 60950, the equipment must be connected to a safety grounding point via a permanent link. Grounding points are located on the product for this purpose. Always connect the ground cable before fitting other cables. The product must remain grounded continuously unless all connections to the power supply and data network are all removed.

If equipment is grounded through a cabinet or rack, make sure it is done so properly according to the installation instructions.

Power Supply Connection

The equipment is designed to be powered from a -48 V DC supply. Power connections and installation of associated wiring must be carried out by a suitably qualified technician.

Only devices that comply with all relevant national safety requirements should be connected to the unit's power supply inlets. Other usage will invalidate any approval given to this equipment.

Connection of this equipment to devices that are not marked with all relevant national safety requirements may produce hazardous conditions on the network.

When the power supply is obtained by a rectifier/safety isolation transformer, the supply must meet the requirements of EN 60950 providing double/reinforced insulation between hazardous voltages and SELV/TNV circuits. Any battery must be separated from hazardous voltages by reinforced insulation.

Indirect Connection

Before indirectly connecting any equipment to another device through a shared power supply, ALWAYS seek advice from a competent engineer.

Devices that are not marked according to the relevant national safety standards may produce hazardous conditions on the network.

Product Disposal

To reduce the environmental impact of products, Samsung has joined WEEE compliance activities.

The WEEE symbol on the product indicates that the product is covered by the European Directive 2002/96/CE for the disposal of Waste Electrical and Electronic Equipment (WEEE). This means that the product should be disposed of separately from the municipal waste stream via designated collection facilities appointed by

the government or the local authorities. This will help prevent potential negative consequences for the environment and human health. Please check the terms and conditions of the purchase contract for information about correct disposal.

Battery Disposal

The product contains a battery on the processor card. The battery should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. The battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider. Do not attempt to remove the battery or dispose it in a fire. Do not disassemble, crush, or puncture the battery.

End of life recycling materials information is available from Samsung.

California USA Only

This Perchlorate warning applies only to primary CR (Manganese Dioxide) Lithium coin cells in the product sold or distributed ONLY in California USA

‘Perchlorate Material-special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate.’

Equipment Markings



This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



**Correct disposal of batteries in this product
(Applicable in countries with separate collection systems.)**

The marking on the battery, manual or packaging indicates that the battery in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66.

The battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider. Do not attempt to remove the battery or dispose it in a fire. Do not disassemble, crush, or puncture the battery. If you intend to discard the product, the waste collection site will take the appropriate measures for the recycling and treatment of the product, including the battery.



Protective earth

RRH & AC/DC Converter should be grounded.

01038115


Chapter 1 Before Installation

System View and Interface

RRH View

The view of RRH is as follows.


Figure 1. RRH View

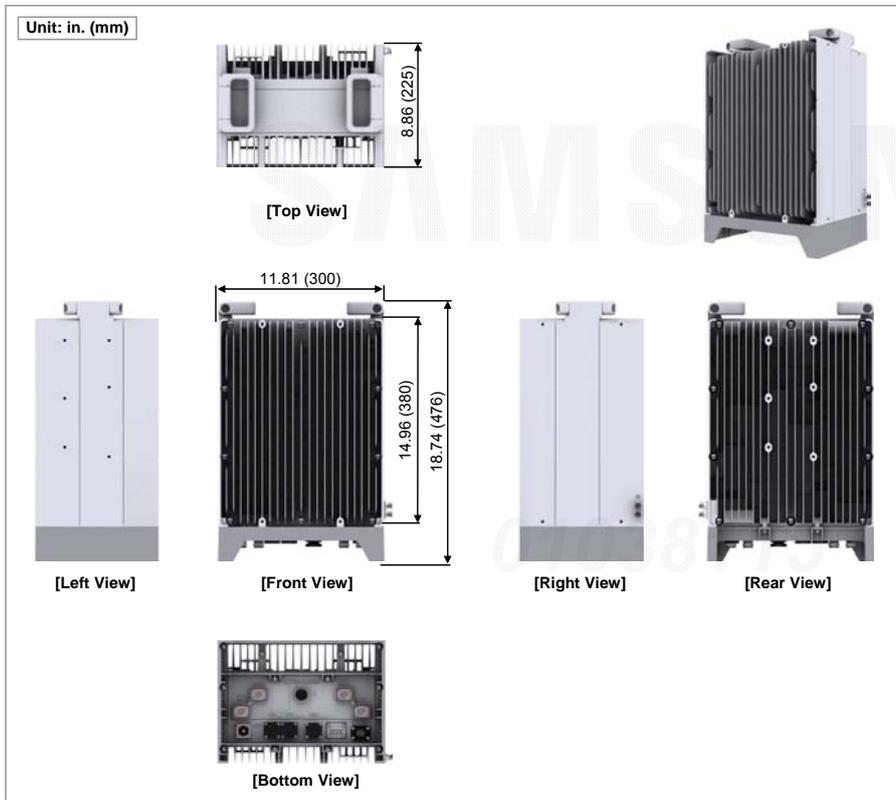

RRH External Interface

The external interface structure of RRH is as follows.

Figure 2. RRH External Interface

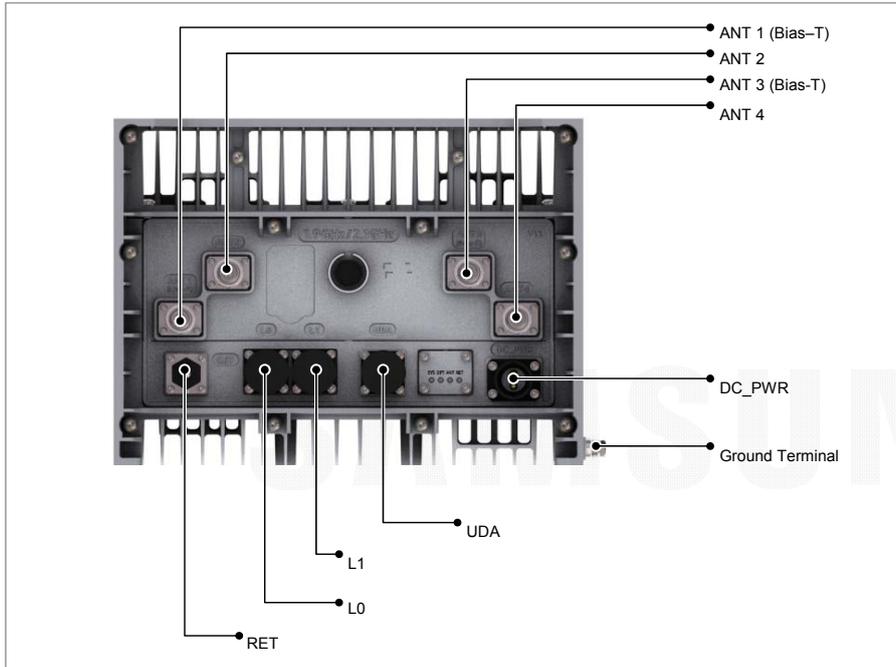

01038115

AC/DC Converter View

The view of AC/DC Converter is as follows.


Figure 3. AC/DC Converter View



AC/DC Converter External Interface

The external interface structure of AC/DC converter is as follows.

Figure 4. AC/DC Converter External Interface

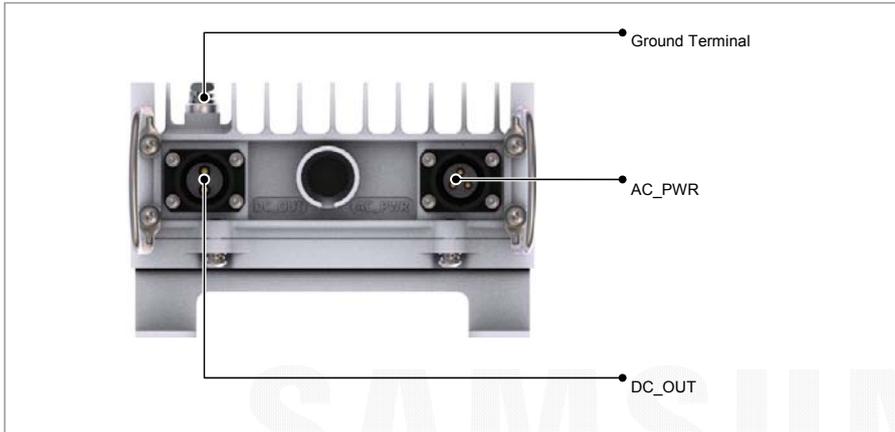

SAMSUNG

01038115

Specifications

The table below lists the main specifications of the RRH.

Table 1. RRH Specifications

Item	RF4402d-D1A
Technology	3GPP Rel. 13
Duplex type	FDD
Operating Frequency	Band66 (2,100 MHz) DL: 2,110 to 2,180 MHz UL: 1,710 to 1,780 MHz Band2 (1,900 MHz) DL: 1,930 to 1,990 MHz UL: 1,850 to 1,910 MHz
Channel Bandwidth	5 MHz, 10 MHz, 15 MHz, 20 MHz 2Tx2Rx/2Tx4Rx/4Tx4Rx per RRH
Input Voltage	-48 V DC (-38~-57 V DC)
Input Current	17 A @ - 48 V DC
Dimension (W × D × H)	11.81 in.(300 mm) × 9.25 in.(235 mm) × 14.96 in.(380 mm)
Weight (kg)	Approx. 28.5
Operating Temperature (Ambient)	-40~55°C (without solar load)
Operating Humidity	5~100 % RH, condensing, not to exceed 30 g/m ³ absolute humidity
Altitude (m)	-60~1,800 (Telcordia GR-63-CORE)
Earthquake	Telcordia Earthquake Risk Zone4 (Telcordia GR-63-CORE)
Vibration	Office Vibration (Section 4.4.4) Transportation Vibration (Section 4.4.5)
Noise	Fanless (natural convection cooling)
EMC	FCC Title 47 CFR Part 15
Safety	UL 60950-1 2nd Ed.
RF	FCC Title 47 CFR Part 27

메모 포함[H1]: 300×225×380
메모 포함[H2]: Approx. 29

Table 2. AC/DC Converter Specifications

Item	OPU01-48A
Input Current	15 A @ 100 V AC
Dimension (W × D × H)	13.34 in.(339 mm) × 3.14 in.(80 mm) × 6.77 in.(172 mm)
Weight (kg)	Approx. 5.6

SAMSUNG

01038115

Cautions for Installation

Observe the following safety instructions when installing the system:
Installation shall be in accordance with the applicable local electric codes.

Before Installing

- Post warning signs in areas where high-voltage cables are installed.
- Post 'off limit' signs in areas where accidents are most expected.
- With guardrails or fences, block open areas such as connecting parts, roof, and scaffold.



Install the system in the Restrict Access Area.

While Installing

- The system power must be cut off before installing.
- Make sure RF Power Feeding Off when connecting TMA.
- Be careful not to damage or scratch the boards mounted on the system and the cables among the boards when the system is transported or installed.



Make sure the power switch of power supply is off when installing the system. Installing the system with power switch on may cause system damage or fatal human injury when cables are not correctly connected.



Make sure that worker wears protection gloves and goggles to prevent damage from debris while drilling holes in a wall or ceiling.



Do not wear accessories such as watches and rings in order to prevent electrical shock.



Never allow foreign substances to be inserted into unused ports by covering them with a cap.



To prevent foreign substances, outdoor air and moisture from entering the cable inlet (including cable gland and conduit), finish it as follows:

- Unused inlet

Use the hole finishing materials including cap and rubber packing.

- Cable-installed inlet

After cable installation, block any space in the inlet with tape, compressed sponge, rubber packing, and silicon.

After Installing

Remove any debris produced during the work and clean up the installation site.



In the system, the laser beam light runs through the optical cable. Handle the optical cables with care as the laser beam can seriously damage the worker's eyes.



Make sure that worker does not damage installed cables while cleaning the system.



While cleaning the power supply device, take caution that the device does not come in contact with foreign objects that may cause power failure.

SAMSUNG

01038115

Installation Tools

The basic tools for installation are listed in the table below. The additional tools required for each site need to be identified and prepared during a site survey before starting installation.

Table 3. Basic Installation Tools

No.	Name	Specification	Purpose of use
1	Torque Driver 	Apply a torque range : 20~90 lbf-in	For fastening RRH ground pressure terminal (M6)
2	Screw Driver Bit 	'+', No. 3	For fastening RRH ground pressure terminal (M6)
3	Screw Driver 	'+', No. 3	For loosening M6 screw
4	Torque Wrench 	Apply a torque range : 10~50 lbf-in	For tightening M6 Hex.Bolt and RF connector of system (4.3-10 Type)
		Apply a torque range : 100~400 lbf-in	For tightening M10 Hex.Bolt and RF connector of antenna (DIN Type)
5	Torque Wrench Spanner Head 	Apply Hexagon Head: 10 mm (for 10~50 lbf-in)	For tightening M6 Hex.Bolt
		Apply Hexagon Head: 17 mm (for 100~400 lbf-in)	For tightening M10 Hex.Bolt
		Apply Hexagon Head: 22 mm (for 10~50 lbf-in)	For tightening RF connector of system (4.3-10 Type)
		Apply Hexagon Head: 32 mm (for 100~400 lbf-in)	For tightening RF connector of antenna (DIN Type)
6	Spanner 	10 mm	For loosening M6 Hex.Bolt
		17 mm	For loosening M10 Hex.Bolt
		22 mm	For loosening RF connector of system (4.3-10 Type)
		32 mm	For loosening RF connector of antenna (DIN Type)
7	Ratchet Wrench 	10 x 13/17 x 19 (4 in 1)	For fastening Hex. Bolt
8	Tape Measure 	16 ft./150 ft.	Tape measure for length measurement
9	Power Extension Cable 	100 ft.	Basic tool

No.	Name	Specification	Purpose of use
10	Level 	Normal	For horizontality and verticality
11	Hammer Drill 	Normal	Wall Type Drilling
12	Concrete Drill Bit 	0.55 in. (14 mm)	For M10 Strong Anchor
13	Anchor Punch 	M10	For M10 Strong Anchor
14	Hammer 	Normal	Anchor fixing
15	Vacuum Cleaner 	Normal	For removing dust during the drilling work
16	Heating Gun 	122~572°F (50~300°C)	Shrinking Feeder cable tube
17	Cable Cutter 	0.24~1.26 in. (6~32 mm)	Cable cutting
18	Crimping Tool 	AWG14~AWG4 (1.5~16 mm ²)	Pressure terminal for crimping
19	Wire Stripper 	Apply cable thickness: 1.5~6.2 in. (4~16 mm)	Cable sheath for removal
20	Nipper 	Basic Tool	For cutting cable
21	Flush cutter 	Basic Tool	For cutting cable tie
22	LAN Tool 	Basic Tool	RJ45 Crimper
23	Industrial Scissor 	Basic Tool	Cutting

No.	Name	Specification	Purpose of use
24	Knife 	Basic Tool	Cutting
25	Optical Connector Cleaner 	For LC Connector	For Optical Connector Cleaning
26	Optical Transceiver Removal Tool 	Normal	Separate the Optical Module
27	Multi tester 	Digital Pocket Tester	The voltage and current measurements Whether measured cable disconnection
28	Fiber Optical Test Set 	Wave length: 1310 nm, 1550 nm (single mode) 850 nm, 1310 nm (multi mode)	Optical level check
29	Angle Meter 	Normal	Antenna angle measurement
30	Antenna Alignment Tool 	-	Checking azimuth and tilting
31	Multi master (VSWR & RF Power) 	Normal	Feeder VSWR measurement
32	Compass 	Normal	Check azimuth during installation




The required installation tools may vary depending on the conditions at the site. In addition to the basic tools, a protractor, ladder, safety equipment, cleaning tools, and so on should also be prepared in consideration of the site conditions.

Chapter 2 Installing System

Installation Procedure

The procedure to install the RRH is as follows.

Figure 5. Procedure to Install the RRH

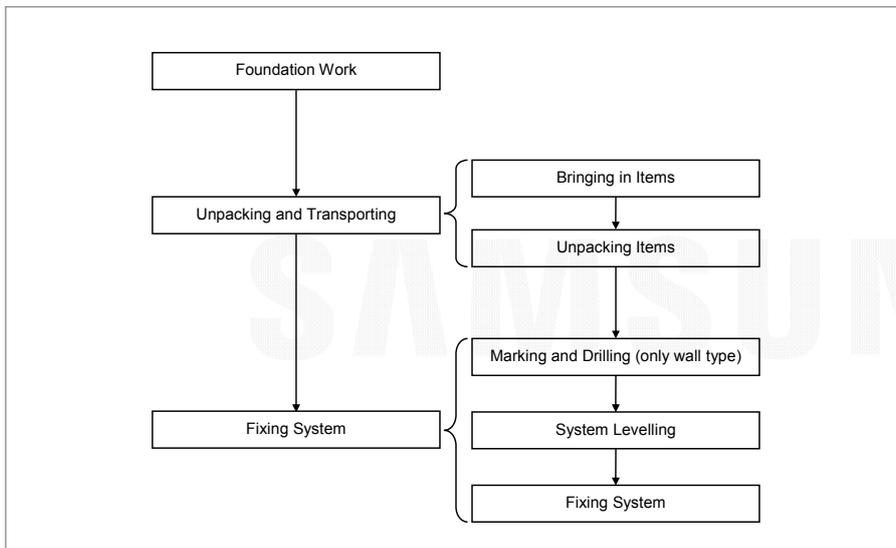

Make sure that the power switch of the power supply is OFF when installing the system. Installing the system with the power switch ON may cause system damage or fatal human injury when connecting or disconnecting the cables.



To prevent the risk of electrical shock do not wear accessories such as watches and rings.

System Arrangement

A minimum distance must be secured around the RRH, in each direction for installation and maintenance.

Figure 6. RRH Arrangement_1 Sector Pole Type Installation (Standard Installation)

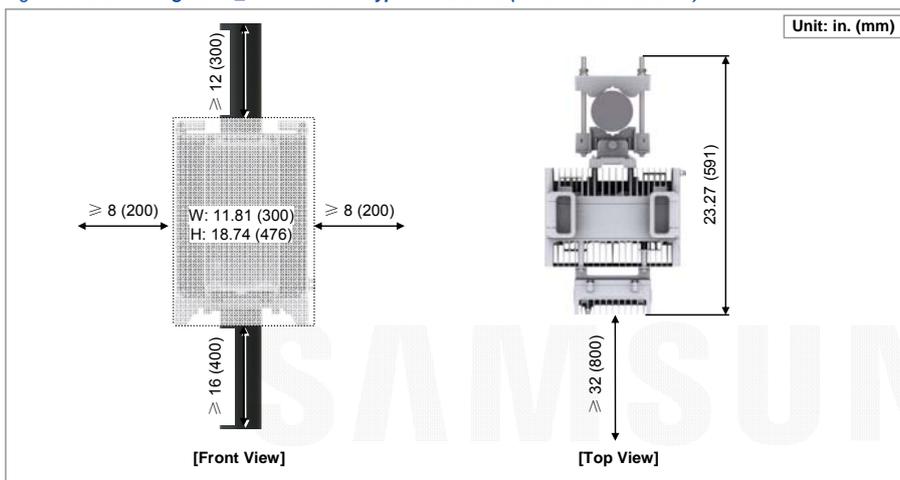


Figure 7. RRH Arrangement_1 Sector Pole Type Installation (Side Installation)

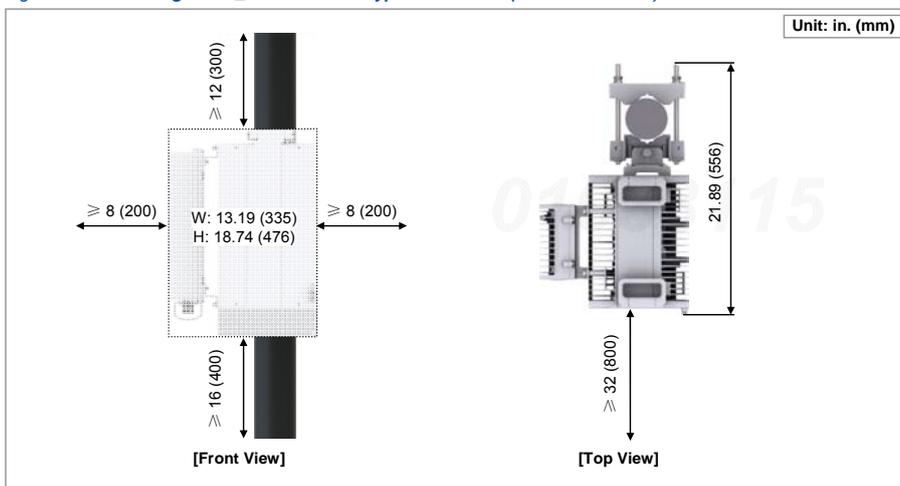


Figure 8. RRH Arrangement_2 Sector Pole Type Installation (Back to Back Installation)


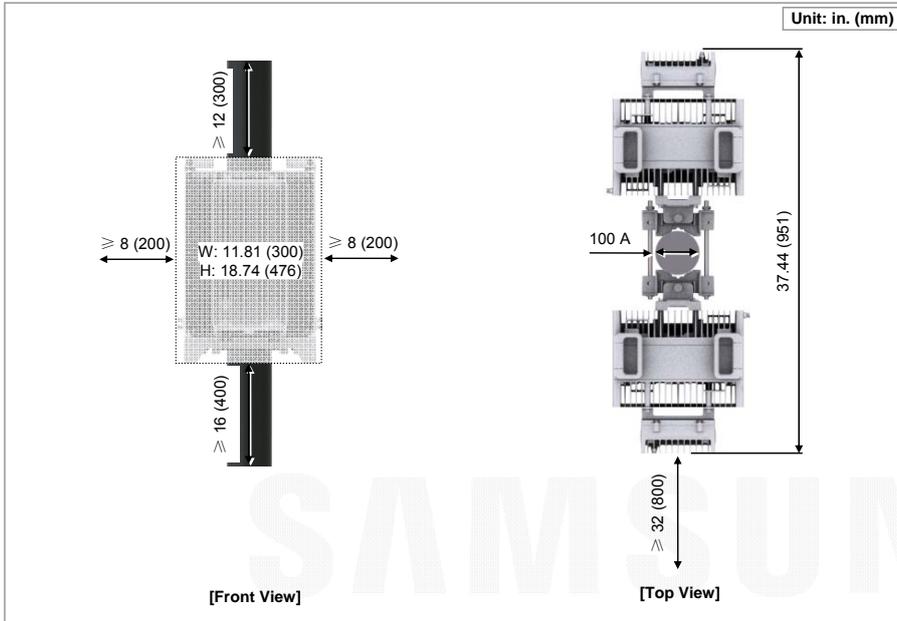


Figure 9. RRH Arrangement_2 Sector Pole Type Installation (Side by Side Installation)



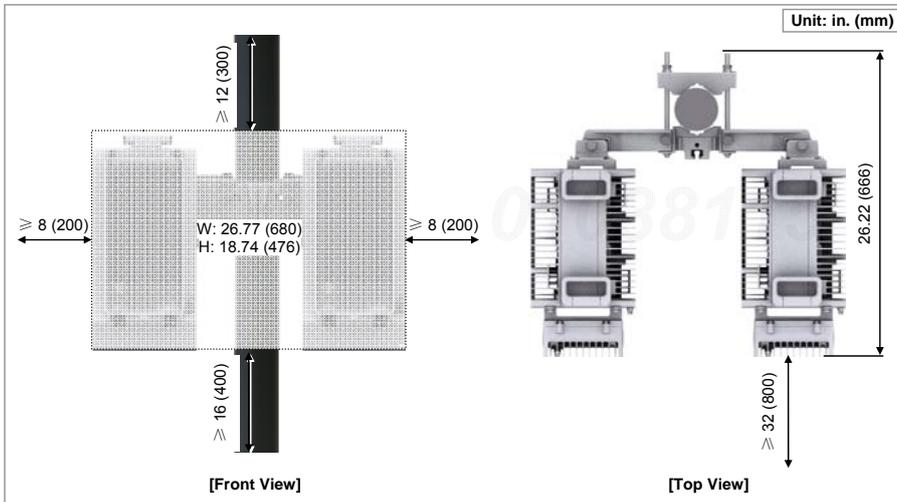

When fixing a pole mounting bracket, the length of a stud bolt is 200 mm for the pole diameter 50~80 A and 230 mm for the pole diameter 80~100A.

Pole Size (Diameter)	Length of Stud Bolt
50 A (60.5 mm)	200 mm
65 A (76.3 mm)	
80 A (89.2 mm)	200 mm or 230 mm
90 A (101.6 mm)	230 mm
100 A (114.3 mm)	

메모 포함[H3]: The different length of stud bolt is just for back to back pole mounting. If there is no back to back case, 230mm can be used for the pole diameter 50~100A.

SAMSUNG

01038115

Figure 10. RRH Arrangement_1 Sector Wall Type Installation (Standard Installation)


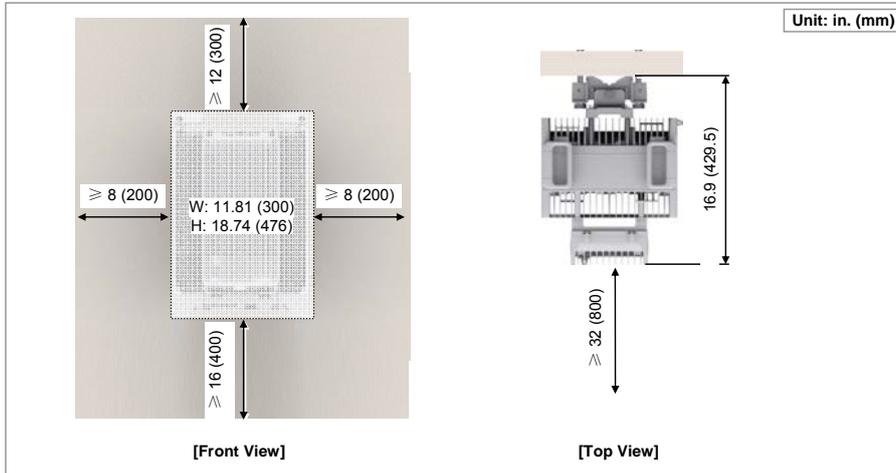


Figure 11. RRH Arrangement_1 Sector Wall Type Installation (Side Installation)

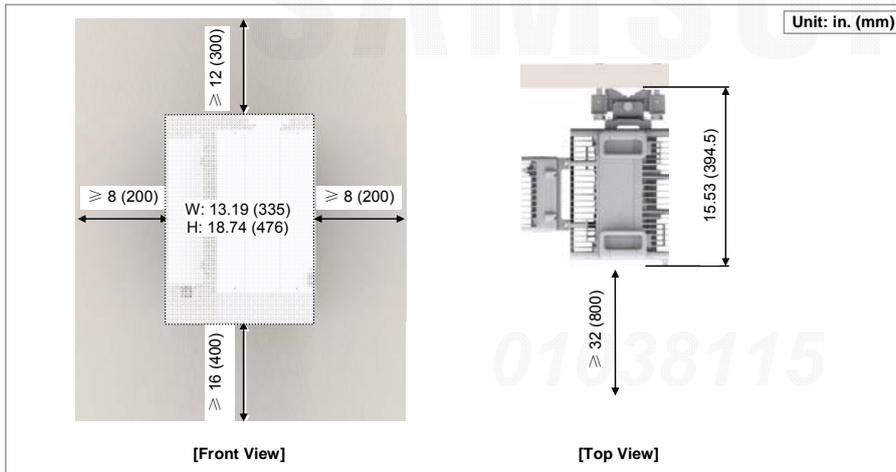

Unpacking and Transporting

This paragraph describes the work to unpack cabinets and other components and transport them to the place to be installed.

Bringing in Items

Bring in items, taking care of the followings:

- When carrying a system, fasten the system firmly to the transport vehicle or carrier to prevent damage to the system for a vibration or shock.
- When carrying system, use a lift to prevent accidents. However, if the system must be carried by people, enough people are required to carry the system.
- Before moving the system, check the storage place for the system and remove obstacles in advance.
- While moving system, the system should not be shocked physically and damaged caused by dust, moisture, and static electricity.

Unpacking Items


The procedure to unpack items is as follows:

- The packing items must be packed until they reach the installation place.
- The items are classified in accordance with each job specification and stored on a place that does not interfere with working.
- Unpacked systems must be installed immediately. If not installed immediately, the systems must be stored in the installation place temporarily.
- Unpack only external packing, leaving the internal packing in unpacked status.
- Unpack the inner packaging after each system is placed on its installation location.
- Scrap by-products (packaging waste) in accordance with the rule. Do not recycle the by-products.

RRH Handling

When transporting an RRH, hold a handle at the top of the RRH. (No tool is needed for using the handle.)

Figure 12. RRH Handling

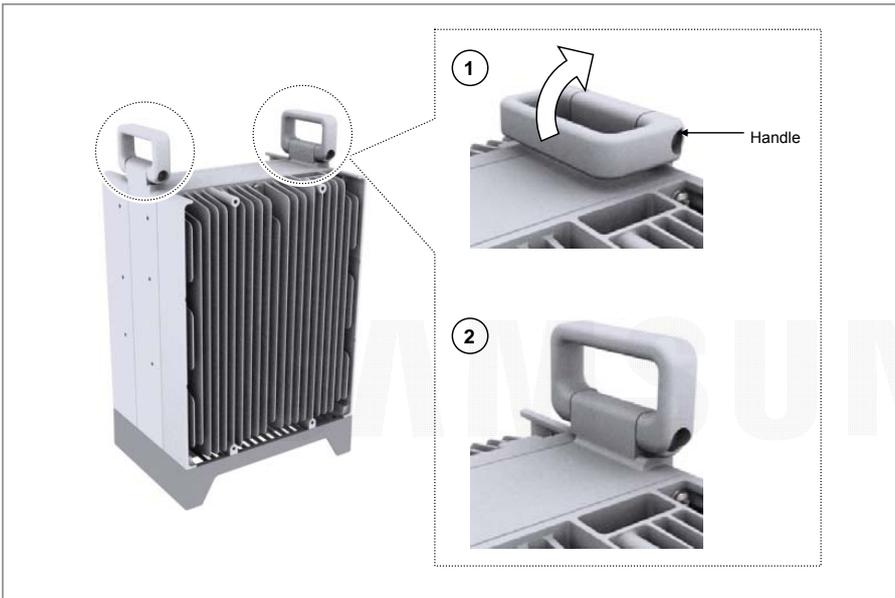


01038115

Fixing RRH

Fixing Unit Bracket



There are two ways to fix a unit bracket to the RRH. One is fixing a unit mounting bracket to the rear side of RRH (Standard installation). The other is fixing a unit bracket to the side of RRH (Side installation). These are the same for the pole type and wall type installation procedures.

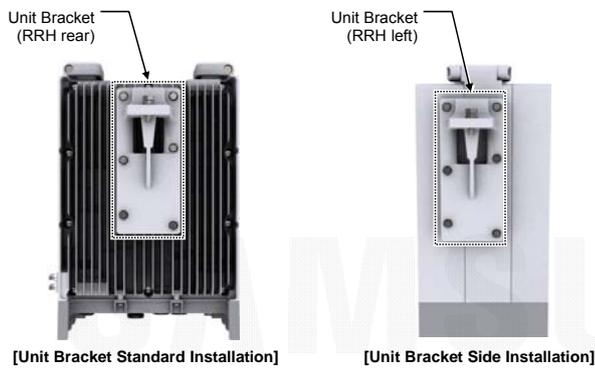

▶ To fix Unit Bracket_Standard Installation


- 1 Make sure that you have the following items:

Table 4. Parts and Tools for fixing Unit Bracket_Standard installation

Category	Description		
Parts	Unit bracket		1 EA/RRH
	Fasteners	M6 × L35 Hex. Bolt (washer assembly)	6 EA/RRH
Recommended Torque Value	M6 Hex. Bolt		43 lbf-in
Working Tools	<ul style="list-style-type: none"> • Torque Wrench (10~50 lbf-in) • Torque Wrench Spanner head (apply Hexagon Head: 10 mm) • Spanner (10 mm) 		


- 2 Place a unit bracket to the RRH rear.

Figure 13. Fixing Unit Bracket_Standard Installation (1)

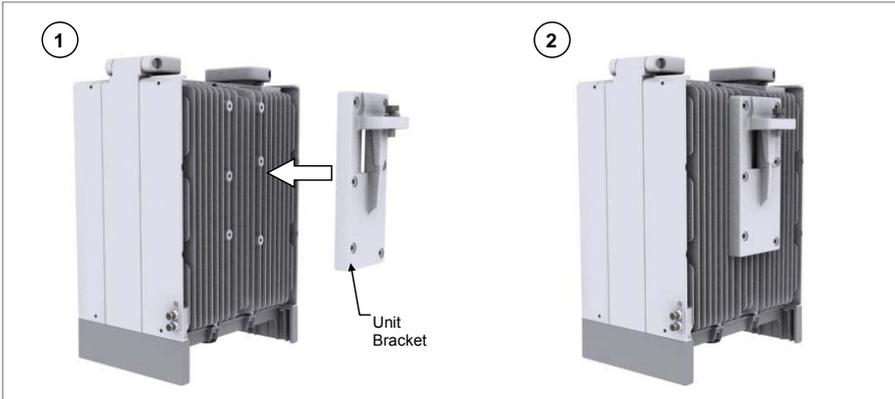

- 3 Fix a unit bracket using fasteners.

Figure 14. Fixing Unit Bracket_Standard Installation (2)

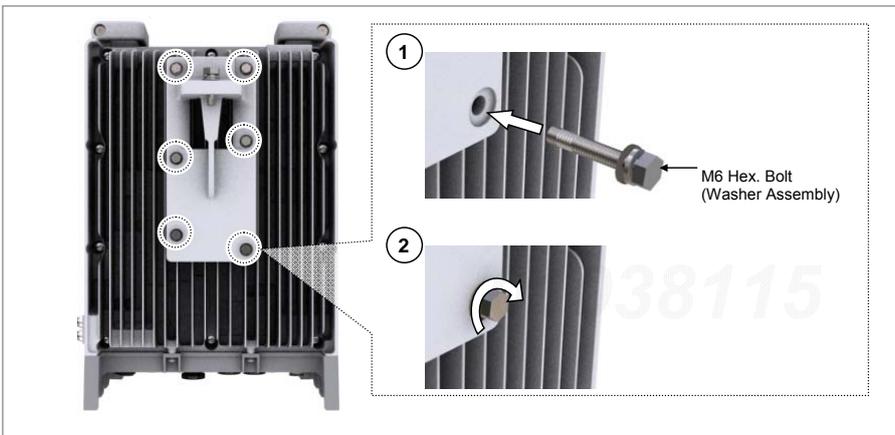

▶ To fix Unit Bracket_Side Installation


- 1 Make sure that you have the following items:

Table 5. Parts and Tools for fixing Unit Bracket_Standard Installation

Category	Description	
Parts	Unit bracket	1 EA/RRH
	Fasteners	M6 × L35 Hex. Bolt (washer assembly) 6 EA/RRH
Recommended Torque Value	M6 Hex. Bolt	43 lbf-in
Working Tools	<ul style="list-style-type: none"> • Torque Wrench (10~50 lbf-in) • Torque Wrench Spanner head (apply Hexagon. Head: 10 mm) • Spanner (10 mm) 	

- 2 Place a unit bracket to the RRH left.


Figure 15. Fixing Unit Bracket_Side Installation (1)

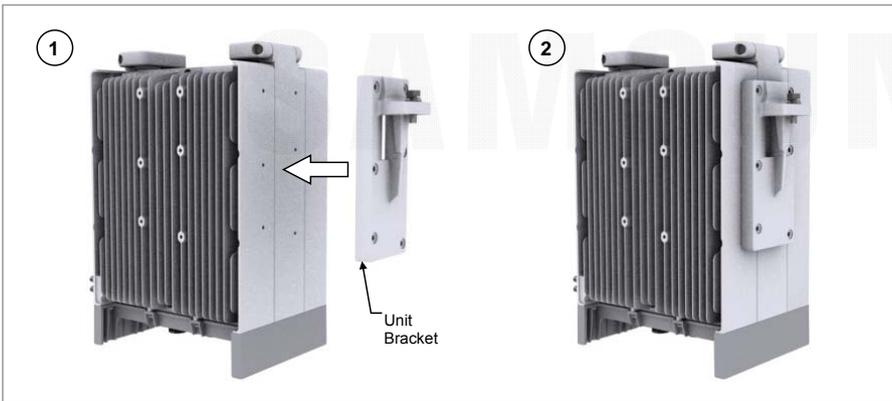

01038115

3 Fix a unit bracket using fasteners.

Figure 16. *Fixing Unit Bracket_Side Installation (2)*

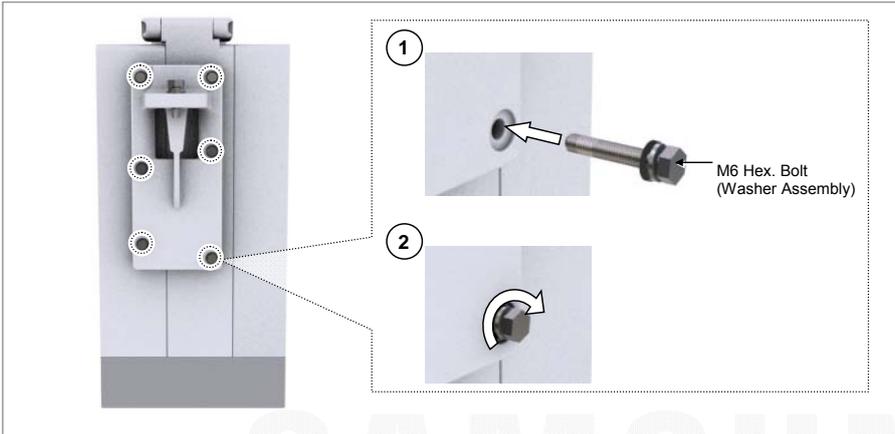

SAMSUNG

01038115

Fixing AC/DC Converter

There are two ways to fix a AC/DC converter to the RRH. One is fixing a AC/DC converter to the front side of RRH (Front installation). The other is fixing a AC/DC converter to the side of RRH (Side installation). These are the same for the pole type and wall type installation procedures.



메모 포함[H4]: There is no ACDC bracket in the figures.

설치 타입 별 AC/DC converter 고정 위치는 다음과 같다.

설치 환경	Sector	설치 타입	AC/DC Converter 고정 위치
Pole	1 Sector	Standard	RRH Front Side
		Side	RRH Front Side
	2 Sector	Side by Side	RRH Right Side
		Back to Back	RRH Front Side
Wall	1 Sector	Standard	RRH Front Side
		Side	RRH Front Side

Unit bracket 보호를 위해 AC/DC converter 고정 전 바닥에 PE 폼을 깔고 작업을 한다.



▶ To fix AC/DC convertor_Front Installation

1 Make sure that you have the following items:

Table 6. Parts and Tools for fixing AC/DC convertor_Front Installation

Category	Description	
Fasteners	M6 × L20 Hex. Bolt (washer assembly)	4 EA/RRH
Recommended Torque Value	M6 Hex. Bolt	43 lbf-in
Working Tools	<ul style="list-style-type: none"> • Torque Wrench (10~50 lbf-in) • Torque Wrench Spanner head (apply Hexagon Head: 10 mm) • Spanner (10 mm) 	


2 Place an AC/DC convertor to the RRH front.

Figure 17. Fixing AC/DC Convertor_Front Installation (1)



3 Fix an AC/DC convertor using fasteners.

Figure 18. Fixing AC/DC Convertor_Front Installation (2)

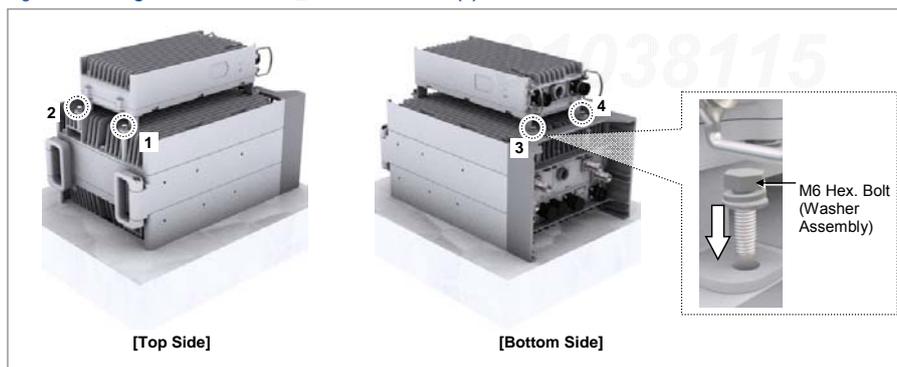

▶ To fix AC/DC convertor_Side Installation

1 Make sure that you have the following items:

Table 7. Parts and Tools for fixing AC/DC convertor_Side Installation

Category	Description	
Fasteners	M6 × L20 Hex. Bolt (washer assembly)	4 EA/RRH
Recommended Torque Value	M6 Hex. Bolt	43 lbf-in
Working Tools	<ul style="list-style-type: none"> • Torque Wrench (10~50 lbf-in) • Torque Wrench Spanner head (apply Hexagon Head: 10 mm) • Spanner (10 mm) 	


2 Place an AC/DC convertor to the RRH right.

Figure 19. Fixing AC/DC Convertor_Side Installation (1)



3 Fix an AC/DC convertor using fasteners.

Figure 20. Fixing AC/DC Convertor_Side Installation (2)

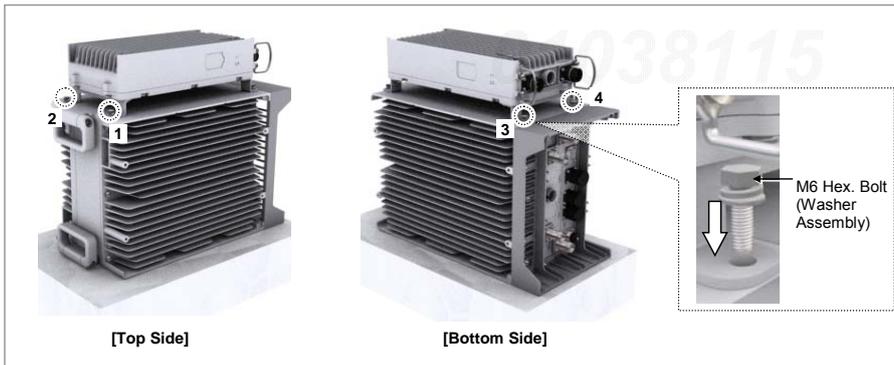

Fixing Pole Type

For 1 Sector

Assembling Mounting Bracket

▶ To assemble Mounting Bracket


1 Make sure you have the following items:

Table 8. Parts and Tools for assembling Mounting Bracket

Category	Description		
Parts	Mounting Bracket_Front		1 EA
	Mounting Bracket_Rear		1 EA
	Fasteners	M10 × L200 Stud Bolt Assembly	4 EA
		M10 Plain Washer	4 EA
		M10 Spring Washer	4 EA
M10 Hex. Nut		4 EA	
Working Tools	• Spanner (17 mm)		



When fixing pole, fix it using the outside hole of mounting bracket_front.

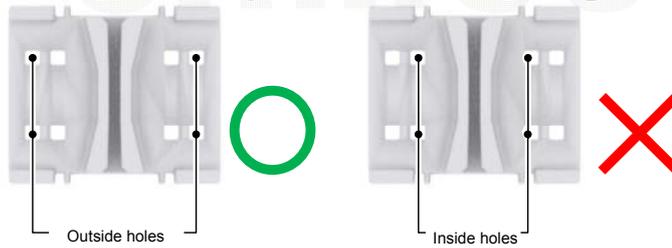

01038115

- 2 Insert stud bolts to the outside hole of mounting bracket_front.

Figure 21. *Assembling Mounting Bracket (1)*




SAMSUNG

01038115

- 3 Pass the stud bolt through the side closed hole of the mounting bracket_rear, fix the fastening material, and fasten the other stud bolt to the mounting bracket_front only.

Figure 22. Assembling Mounting Bracket (2)

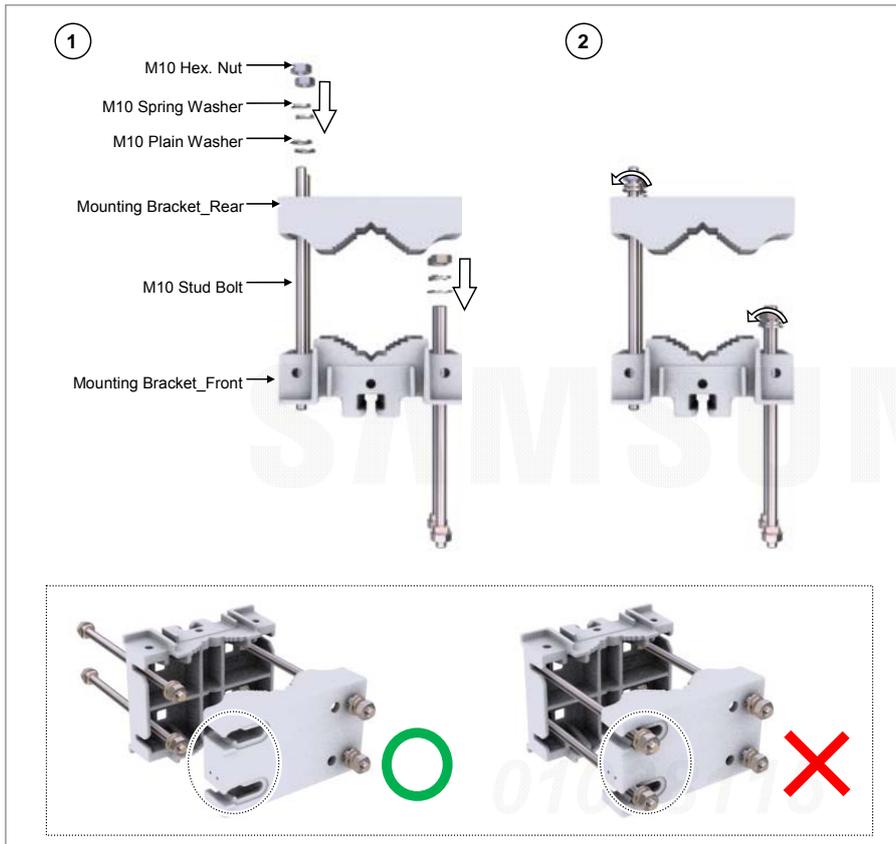


Lifting RRH & Mounting Bracket Assembly

▶ To lift RRH/Mounting Bracket Assembly


- 1 Tie the rope in two carrying points of RRH and Mounting bracket assembly.

Figure 23. *Lifting RRH & Mounting Bracket Assembly*

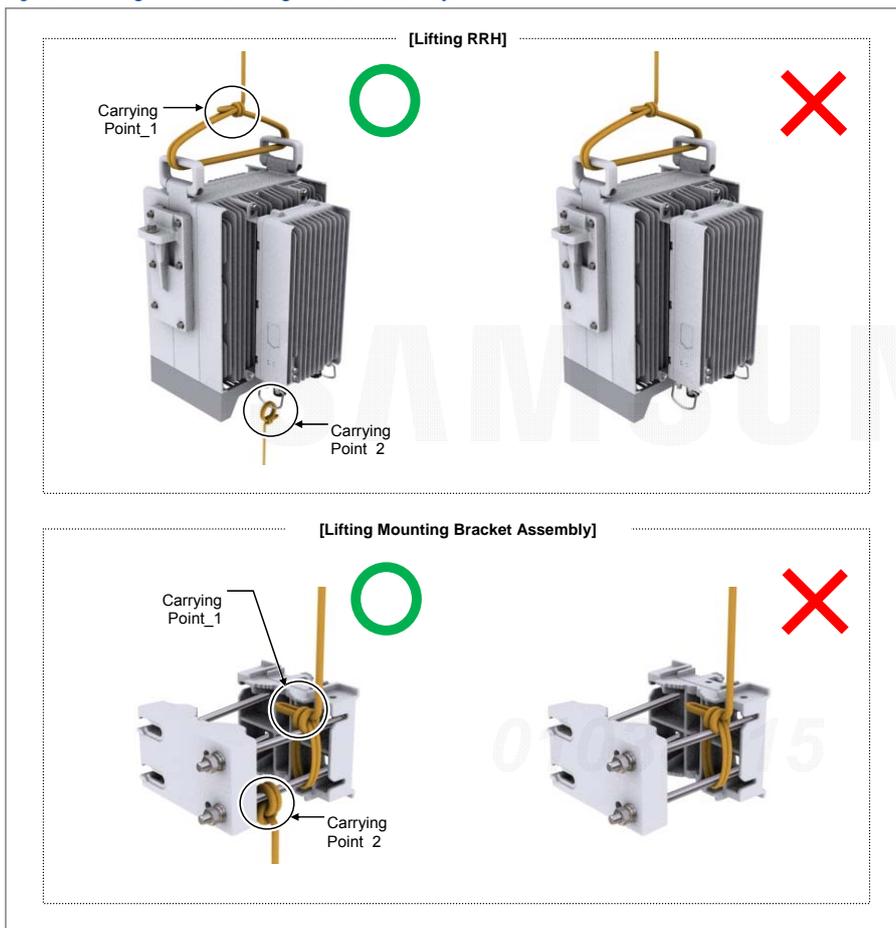

- 2 While Operator A hauls the rope to carry up the RRH/mounting bracket assembly, Operator B pulls the rope outward so that RRH/mounting bracket assembly would not hit the tower platform.

Figure 24. Lifting RRH & Mounting Bracket Assembly

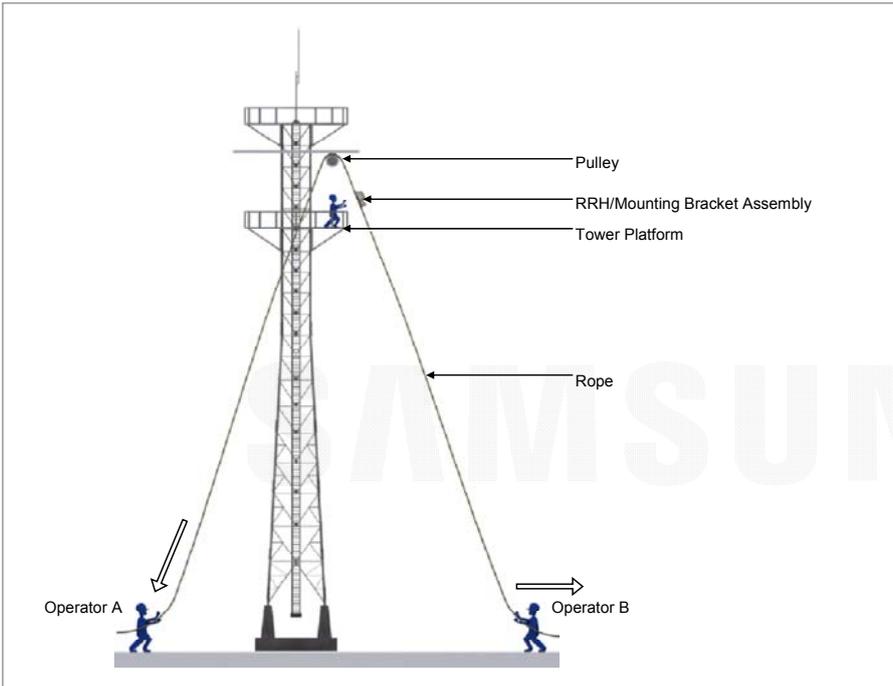

01038115

Fixing Mounting Bracket Assembly

The way to fix 1 Sector mounting bracket assembly is as follows:

▶ To fix Mounting Bracket Assembly_1 Sector Pole Type

1 Make sure you have the following items:

Table 9. Parts and Tools for fixing Mounting Bracket Assembly_1 Sector Pole Type

Category	Description	
Parts	1 Sector Mounting Bracket Assembly	1 Set
Recommended Torque Value	M10 Hex. Nut	217 lbf.in
Working Tools	<ul style="list-style-type: none"> • Torque Wrench (100~400 lbf.in) • Torque Wrench Spanner head (apply Hexagon Head: 17 mm) • Spanner (17 mm) • Level 	


2 Place a mounting bracket assembly to the pole.

Figure 25. Fixing Mounting Bracket Assembly_1 Sector Pole Type (1)



- 3 Locate the upper stud bolt in the upper side hole of the mounting bracket_rear and fix the fastening materials temporarily on upper side.

Figure 26. Fixing Mounting Bracket Assembly_1 Sector Pole Type (2)

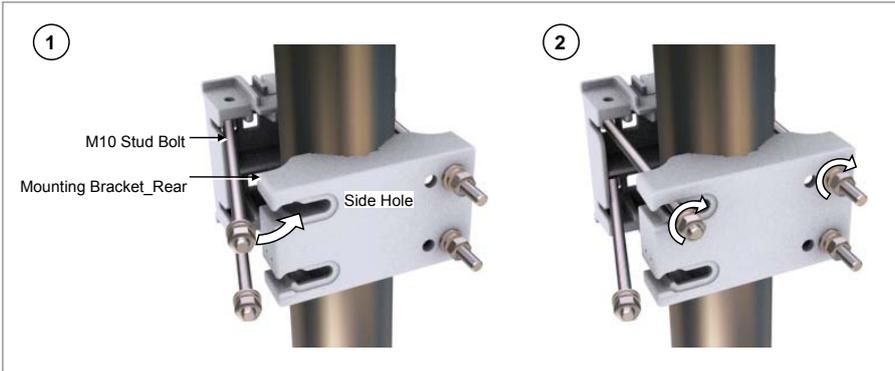


- 4 Locate the lower stud bolt in the lower side hole of the mounting bracket_rear and fix the all fastening materials.

Figure 27. Fixing Mounting Bracket Assembly_1 Sector Pole Type (3)



5 Check the level of mounting bracket assembly on a pole and adjust the level.

Figure 28. Levelling Mounting Bracket Assembly_1 Sector Pole Type

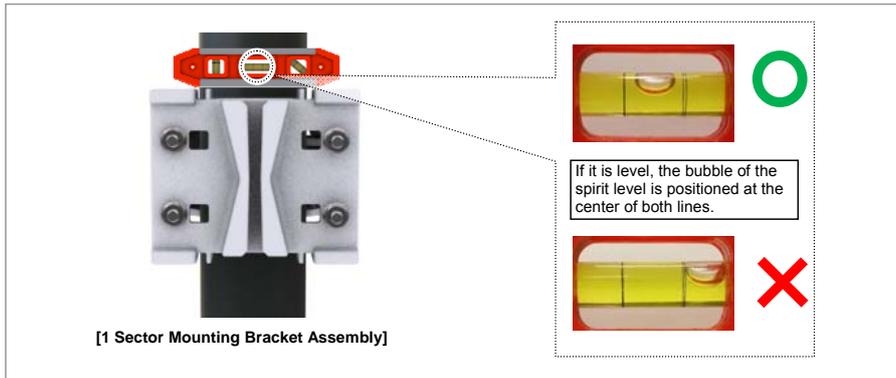

- When fixing the pole mounting bracket assembly on a pole, be sure to check the level of bracket. After finishing the installation, you can adjust the level minutely.
- When occurring poor levelling, adjust the position of fasteners used to fix the Mounting bracket assembly or its levelling status.

01038115

Fixing RRH

▶ To fix RRH_1 Sector Pole Type (Standard & Side Installation)

1 Make sure you have the following items:

Table 10. Fixing RRH_1 Sector Pole Type (Standard & Side Installation)

Category	Description	
Parts	M10 × 35L Hex. Bolt (washer assembly, attached to the unit bracket)	1 EA
Recommended Torque Value	M10 Hex. Bolt	217 lbf·in
Working Tools	<ul style="list-style-type: none"> • Torque Wrench (100~400 lbf·in) • Torque Wrench Spanner head (apply Hexagon Head: 17 mm) • Spanner (17 mm) 	

2 Hang the unit bracket hook of RRH side on the mounting bracket_front hook's groove and fix it using fasteners.

Figure 29. Fixing RRH_1 Sector Pole Type (Standard Installation)


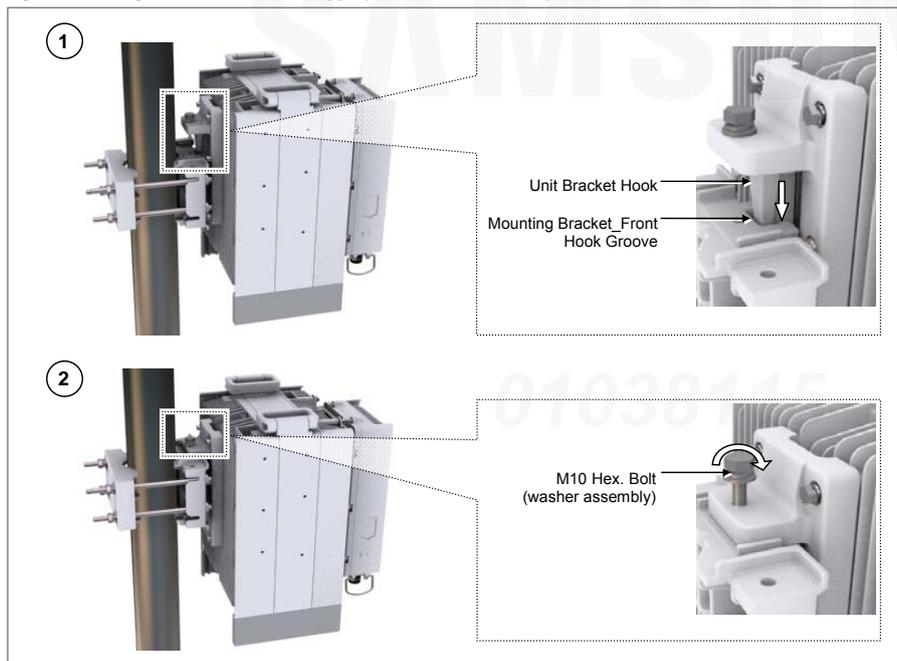


Figure 30. Fixing RRH_1 Sector Pole Type (Side Installation)

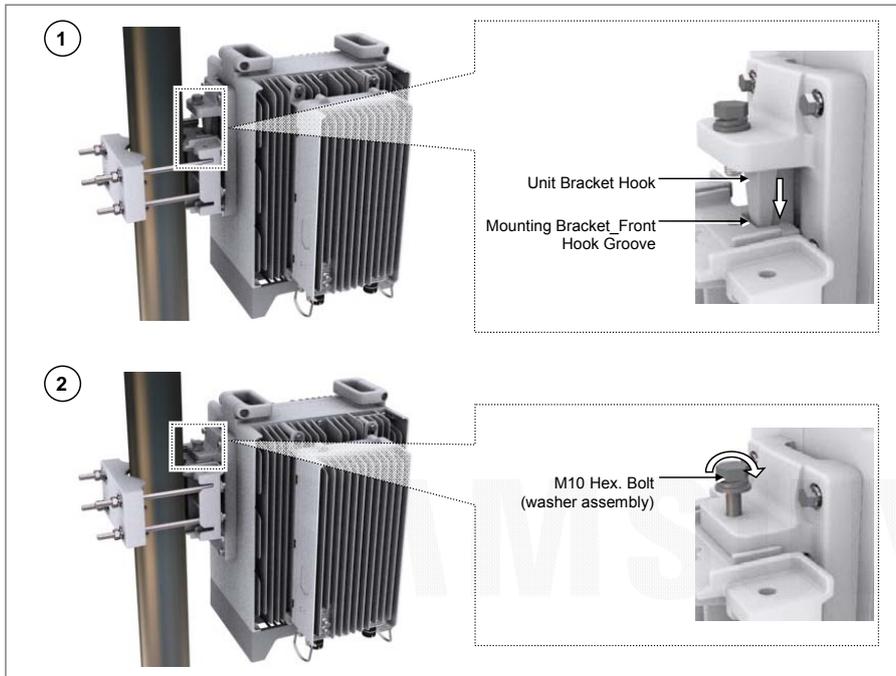

01038115

For 2 Sector (Side by Side Installation)

Assembling Mounting Bracket


To assemble Mounting Bracket

- 1 Make sure you have the following items:

Table 11. Parts and Tools for assembling Mounting Bracket

Category	Description		
Parts	Mounting Bracket_Front	1 EA	
	Mounting Bracket_Rear	1 EA	
	Fasteners	M10 × L200 Stud Bolt Assembly	4 EA
		M10 Plain Washer	4 EA
M10 Spring Washer		4 EA	
M10 Hex. Nut		4 EA	
Working Tools	• Spanner (17 mm)		

When fixing pole, fix it using the outside hole of mounting bracket_front.

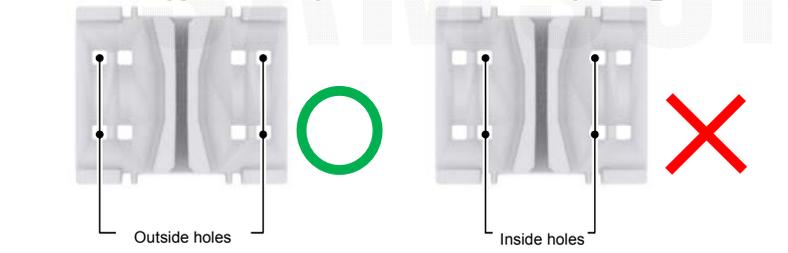

01038115

- 2 Insert stud bolts to the outside hole of mounting bracket_front.

Figure 31. *Assembling Mounting Bracket (1)*




SAMSUNG

01038115

- 3 Pass the stud bolt through the side closed hole of the mounting bracket_rear, fix the fastening material, and fasten the other stud bolt to the mounting bracket_front only.

Figure 32. Assembling Mounting Bracket (2)

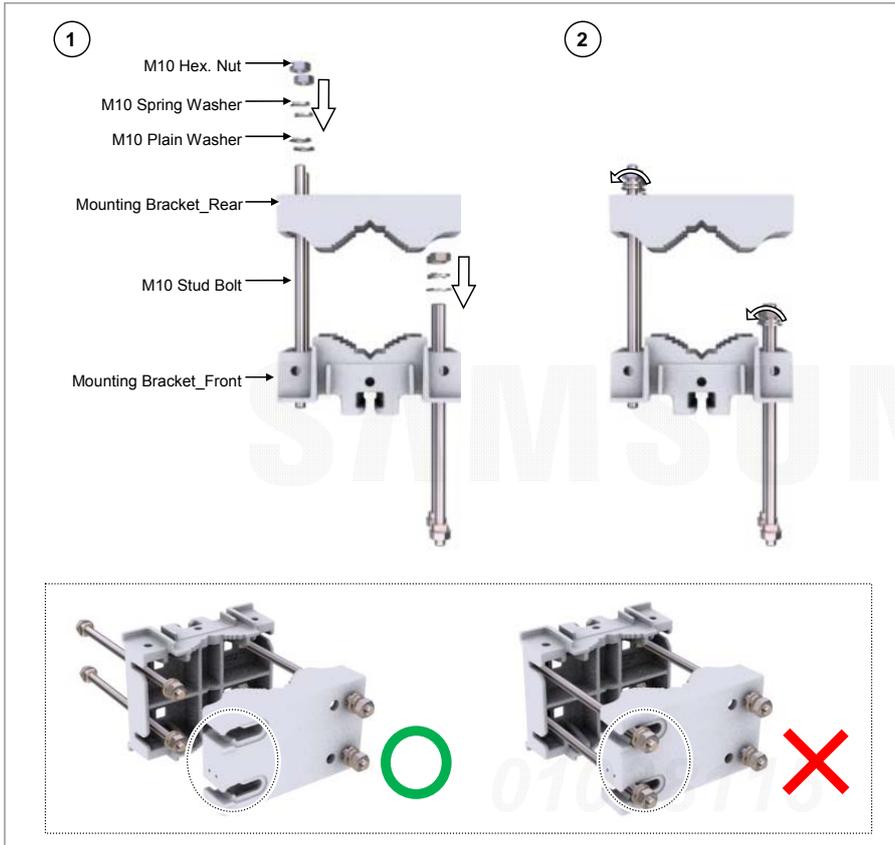


Lifting RRH & Mounting Bracket Assembly



1 sector pole 설치의 'lifting RRH & mounting bracket assembly' 공정을 참조하여 RRH 와 mounting bracket assembly 를 인양한다.

Figure 33. Lifting RRH & Mounting Bracket Assembly

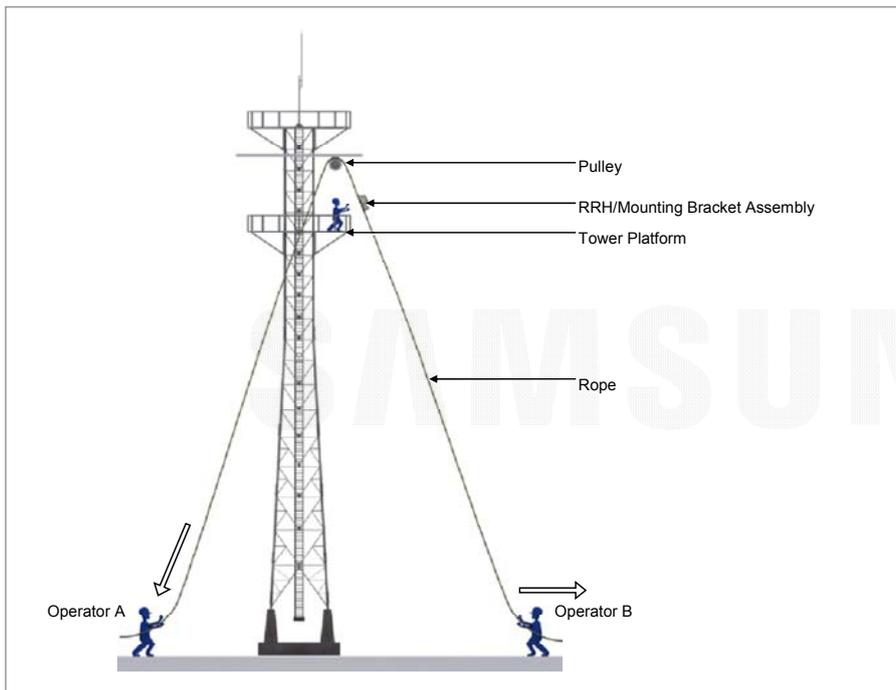

Fixing Mounting Bracket Assembly

The way to fix 1 Sector mounting bracket assembly is as follows:

▶ To fix Mounting Bracket Assembly_2 Sector Pole Type

1 Make sure you have the following items:

Table 12. Parts and Tools for fixing Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation)

Category	Description	
Parts	1 Sector Mounting Bracket Assembly	1 Set
	Extension Mounting Bracket	2 EA
	Fastener	M10 × L25 Hex. Bolt (washer assembly) 2 EA
Recommended Torque Value	M10 Hex. Nut	217 lbf·in
Working Tools	<ul style="list-style-type: none"> • Torque Wrench (100~400 lbf·in) • Torque Wrench Spanner head (apply Hexagon. Head: 17 mm) • Spanner (17 mm) • Level 	


2 Place a mounting bracket assembly to the pole.

Figure 34. Fixing Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation 1)



- 3 Locate the upper stud bolt in the upper side hole of the mounting bracket_rear and fix the fastening materials temporarily on upper side.

Figure 35. Fixing Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation 2)

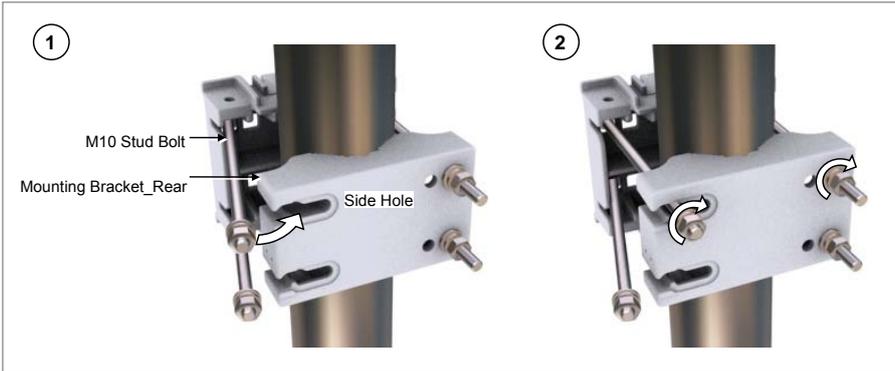

- 4 Locate the lower stud bolt in the lower side hole of the mounting bracket_rear and fix the all fastening materials.

Figure 36. Fixing Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation 3)



- 5 Fit the Extension mounting bracket's groove into the mounting bracket_front's right hook, fix it using fasteners.

Figure 37. Fixing Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation 4)




- 6 Fit the Extension mounting bracket's groove into the mounting bracket_front's left hook, fix it using fasteners.

Figure 38. Fixing Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation 5)



7 Check the level of mounting bracket assembly on a pole and adjust the level.

Figure 39. *Levelling Mounting Bracket Assembly_2 Sector Pole Type (Side by Side Installation)*

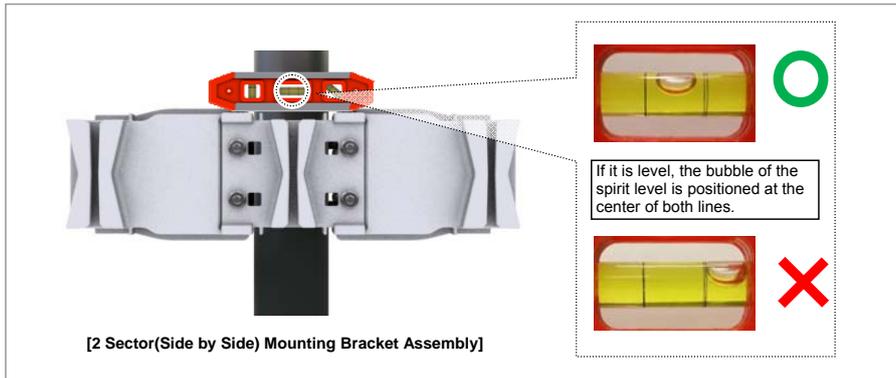

- When fixing the pole mounting bracket assembly on a pole, be sure to check the level of bracket. After finishing the installation, you can adjust the level minutely.
- When occurring poor levelling, adjust the position of fasteners used to fix the Mounting bracket assembly or its levelling status.

01038115

Fixing RRH

The way to fix 2 sector RRH is as follows:

▶ To fix RRH_2 Sector Pole Type (Side by Side Installation)

1 Make sure you have the following items:

Table 13. Parts and Tools for fixing RRH_2 Sector Pole Type (Side by Side Installation)

Category	Description	
Parts	M10 × L35 Hex. Bolt (washer assembly, attached to the unit bracket)	1 EA/RRH
Recommended Torque Value	M10 Hex. Bolt	217 lbf-in
Working Tools	<ul style="list-style-type: none"> • Torque Wrench (100~400 lbf-in) • Torque Wrench Spanner head (apply Hexagon Head: 17 mm) • Spanner (17 mm) 	

 Check the location to install the RRH.




 Fix the RRH according to the order of [RRH-0 → RRH-1].




- 2 Hang the unit bracket hook of RRH-0 side on the mounting bracket_front hook's groove and fix it using fasteners.

Figure 40. Fixing RRH_2 Sector Pole Type (Side by Side Installation 1)

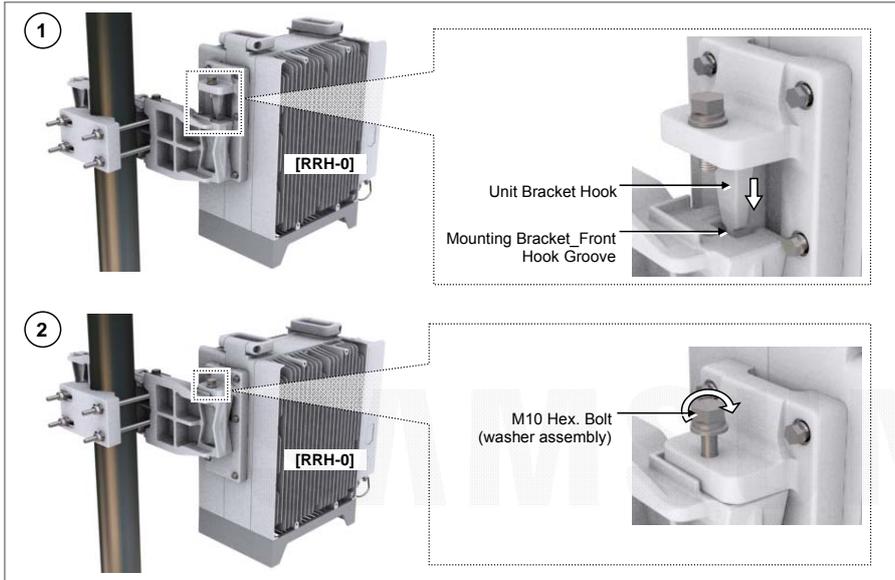

- 3 Fix RRH-1 in the same way as the RRH-0.

Figure 41. Fixing RRH_2 Sector Pole Type (Side by Side Installation 2)

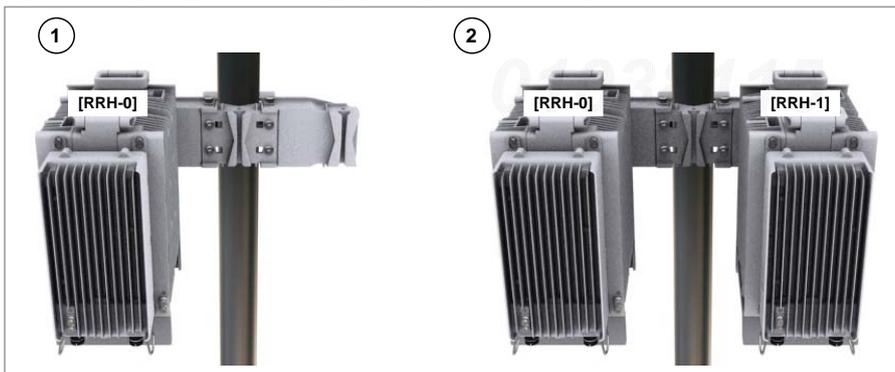

For 2 Sector (Back to Back Installation)

Assembling Mounting Bracket


▶ To assemble Mounting Bracket

1 Make sure you have the following items:

Table 14. Parts and Tools for assembling Mounting Bracket

Category	Description		
Parts	Mounting Bracket_Front		2 EA
	Fasteners	M10 × L200 Stud Bolt Assembly	4 EA
		M10 Plain Washer	4 EA
		M10 Spring Washer	4 EA
		M10 Hex. Nut	4 EA
Working Tools	• Spanner (17 mm)		

 When fixing pole, fix it using the outside hole of mounting bracket_front.

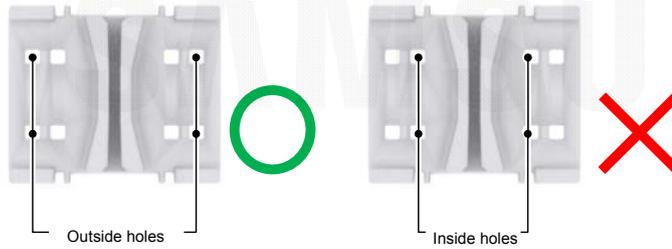

01038115

- 2 Insert stud bolts to the outside hole of mounting bracket_front.

Figure 42. *Assembling Mounting Bracket (1)*




SAMSUNG

01038115

- 3 Pass the stud bolt through the hole of the mounting bracket_front, fix the fastening material, and fasten the other stud bolt to the mounting bracket_front only.

Figure 43. Assembling Mounting Bracket (2)

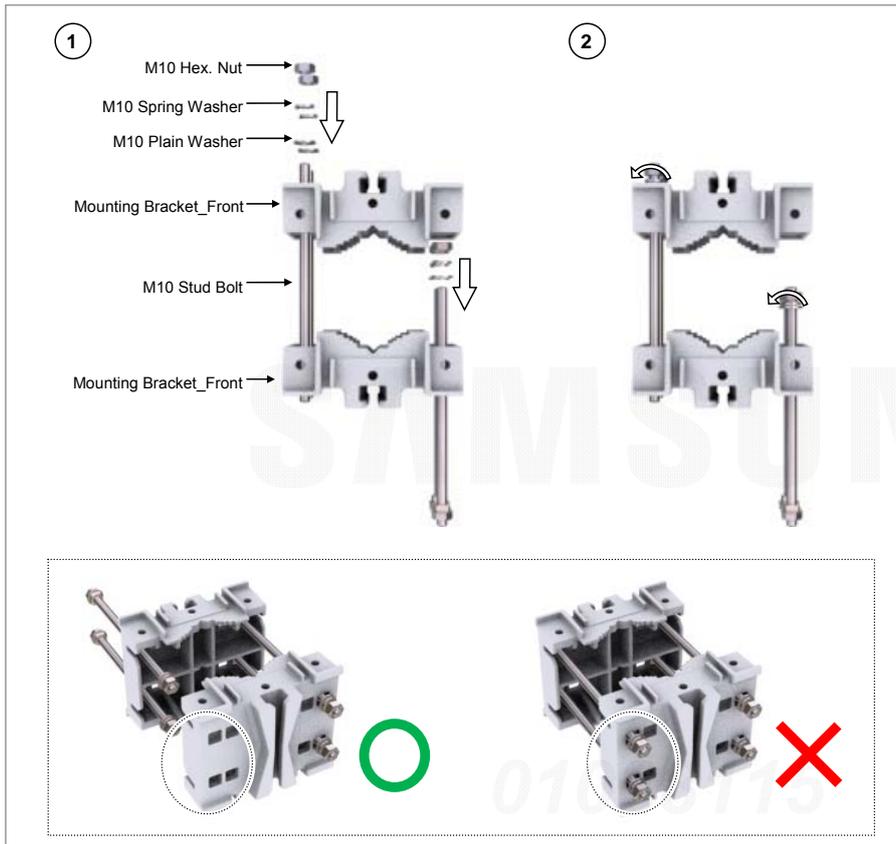


Lifting RRH & Mounting Bracket Assembly



1 sector pole 설치의 'lifting RRH & mounting bracket assembly' 공정을 참조하여 RRH 와 mounting bracket assembly 를 인양한다.

Figure 44. Lifting RRH & Mounting Bracket Assembly

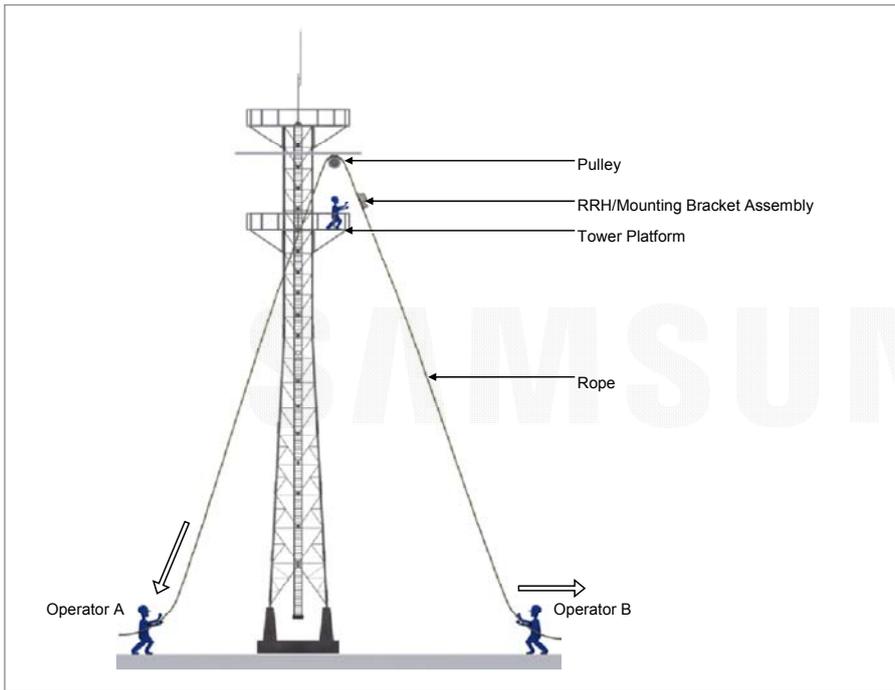

Fixing Mounting Bracket Assembly

The way to fix 1 Sector mounting bracket assembly is as follows:

▶ To fix Mounting Bracket Assembly_2 Sector Pole Type


- 1 Make sure you have the following items:

Table 15. Parts and Tools for fixing Mounting Bracket Assembly_2 Sector Pole Type (Back to Back Installation)

Category	Description	
Parts	2 Sector(Back to Back Installation) Mounting Bracket Assembly	1 Set
Recommended Torque Value	M10 Hex. Nut	217 lbf-in
Working Tools	<ul style="list-style-type: none"> • Torque Wrench (100~400 lbf-in) • Torque Wrench Spanner head (apply Hexagon Head: 17 mm) • Spanner (17 mm) • Level 	

- 2 Separate inside fasteners of a mounting bracket assembly.

Figure 45. Fixing Mounting Bracket Assembly_2 Sector Pole Type (Back to Back Installation 1)

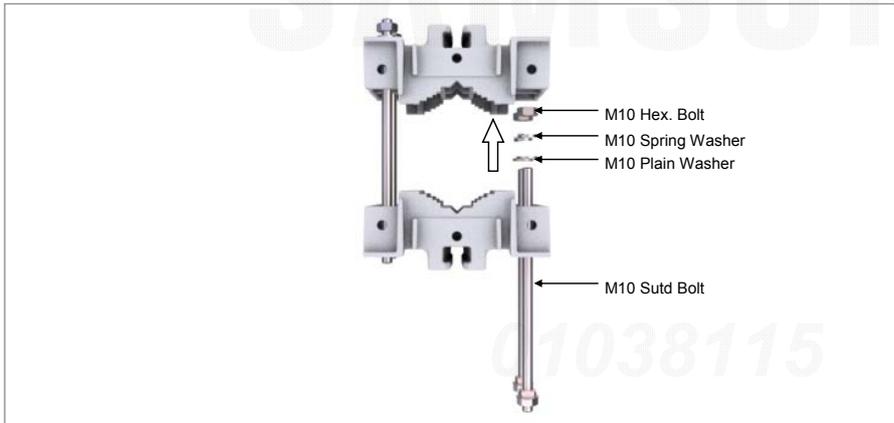


3 Place a mounting bracket assembly to the pole.

Figure 46. Fixing Mounting Bracket Assembly_2 Sector Pole Type (Back to Back Installation 2)




4 Pass a stud bolt through 2sector mounting bracket assembly_front hole and fix mounting bracket assembly using fasteners.

Figure 47. Fixing Mounting Bracket Assembly_2 Sector Pole Type (Back to Back Installation 3)

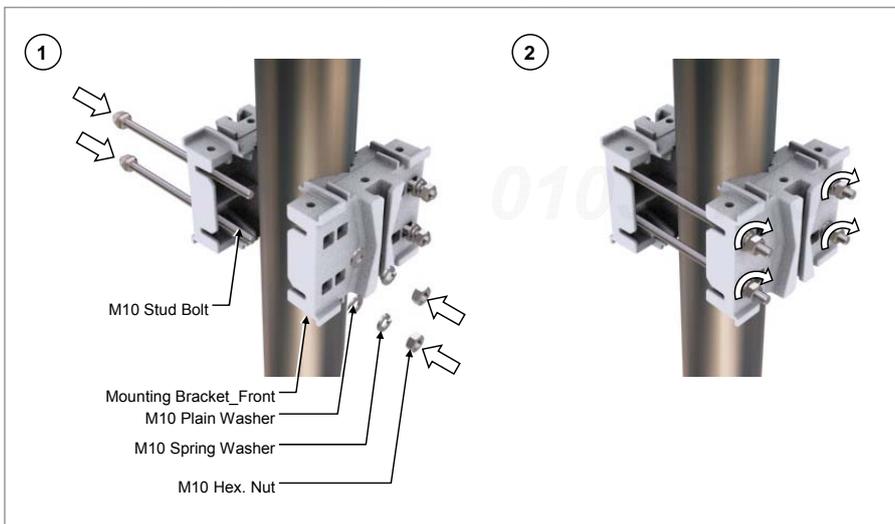

- 5 Check the level of mounting bracket assembly on a pole and adjust the level.

Figure 48. *Levelling Mounting Bracket Assembly_2 Sector Pole Type (Back to Back Installation 3)*

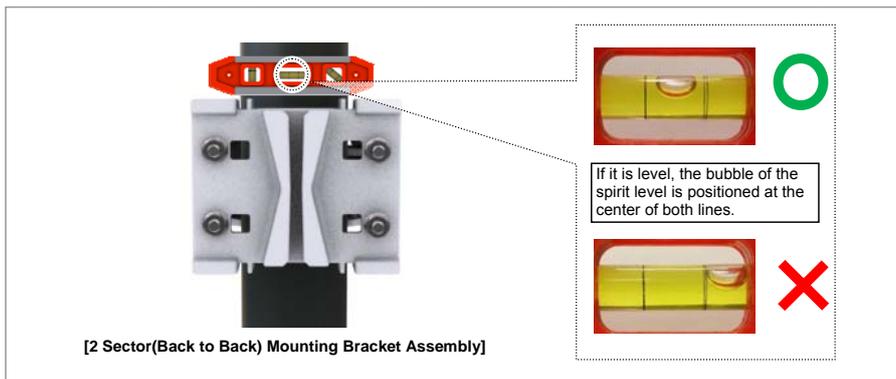

- When fixing the pole mounting bracket assembly on a pole, be sure to check the level of bracket. After finishing the installation, you can adjust the level minutely.
- When occurring poor levelling, adjust the position of fasteners used to fix the Mounting bracket assembly or its levelling status.

01038115

Fixing RRH

The way to fix 2 sector RRH is as follows:

▶ To fix RRH_2 Sector Pole Type (Back to Back Installation)


1 Make sure you have the following items:

Table 16. Parts and Tools for fixing RRH_2 Sector Pole Type (Back to Back Installation)

Category	Description	
Parts	M10 × L35 Hex. Bolt (washer assembly, attached to the unit bracket)	1 EA/RRH
Recommended Torque Value	M10 Hex. Bolt	217 lbf-in
Working Tools	<ul style="list-style-type: none"> • Torque Wrench (100~400 lbf-in) • Torque Wrench Spanner head (apply Hexagon Head: 17 mm) • Spanner (17 mm) 	


2 Hang the unit bracket hook of RRH-0 side on the mounting bracket_front hook's groove and fix it using fasteners.

Figure 49. Fixing RRH_2 Sector Pole Type (Back to Back Installation 1)

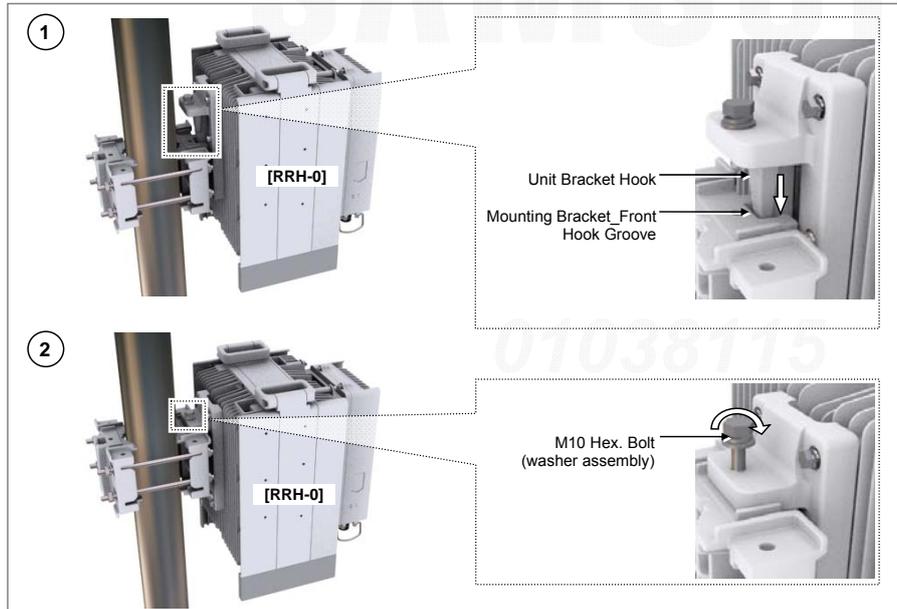

- 3 Fix RRH-1 in the same way as the RRH-0.

Figure 50. Fixing RRH_2 Sector Pole Type (Back to Back Installation 2)

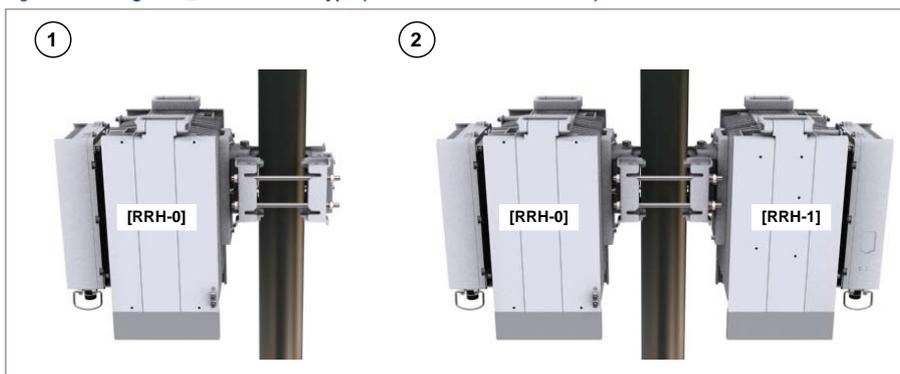

Fixing Wall Type

For 1 Sector

Marking and Drilling for Wall Mounting

▶ To mark on a wall

- 1 Make sure you have the following items:

Table 17. Tools for Marking

Category	Description
Working Tools	<ul style="list-style-type: none"> • Tape Measure • Permanent Marker • Level

⚠ To mount the system on a wall, perform the leveling test by referring to System Leveling to check the positions are marked to be horizontal or vertical before drilling. If the result shows they are not horizontal or vertical, modify the marking positions.

📄 When the position where the system will be placed is determined, place the system on that position and then mark the positions where anchor bolts will be fixed. This will reduce marking error range.

- 2 Check the distance between the location for fixing the RRH and anchor bolt hole.

Figure 51. RRH marking dimensions_1 Sector Wall Type (Standard Installation)



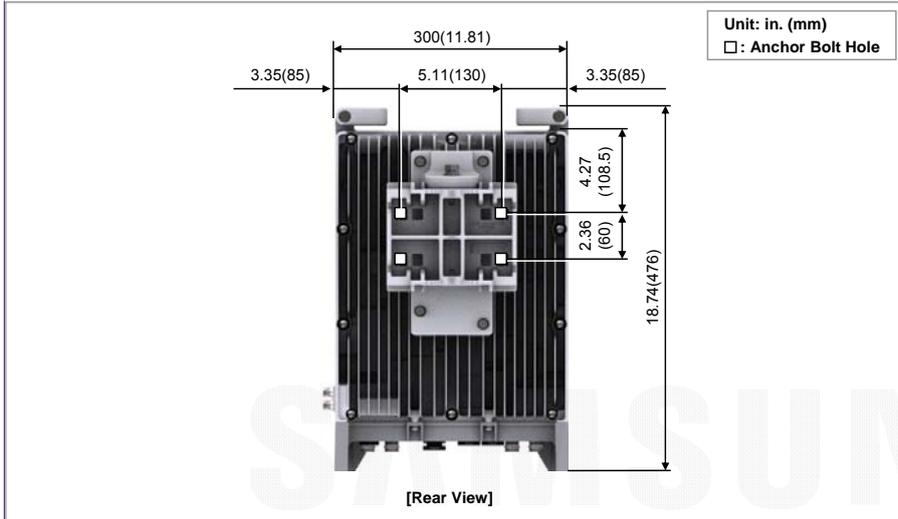


Figure 52. RRH marking dimensions_1 Sector Wall Type (Side Installation)

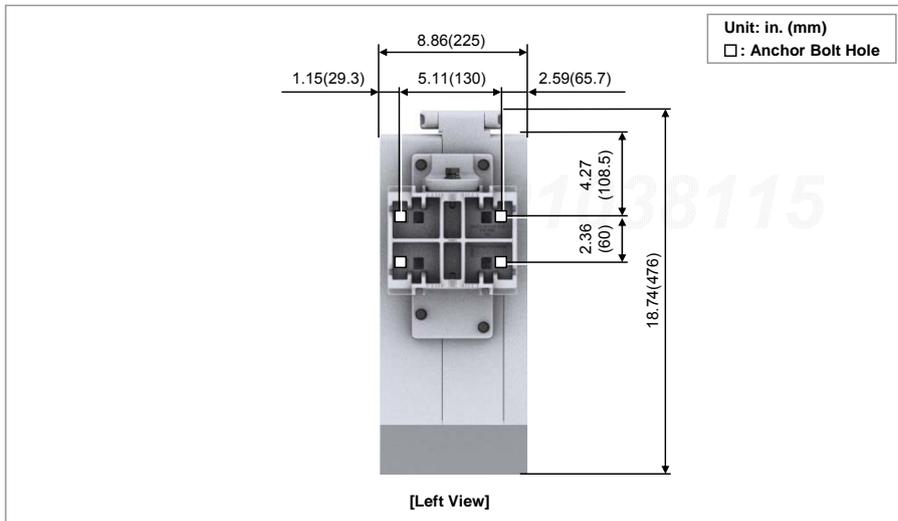

- 3 Place a mounting bracket on the fixing location, Check the level status using a level and adjust the level of bracket assembly.
- 4 If the level status is normal, mark the anchor bolt holes on a wall.

Figure 53. *Marking_Wall Type*

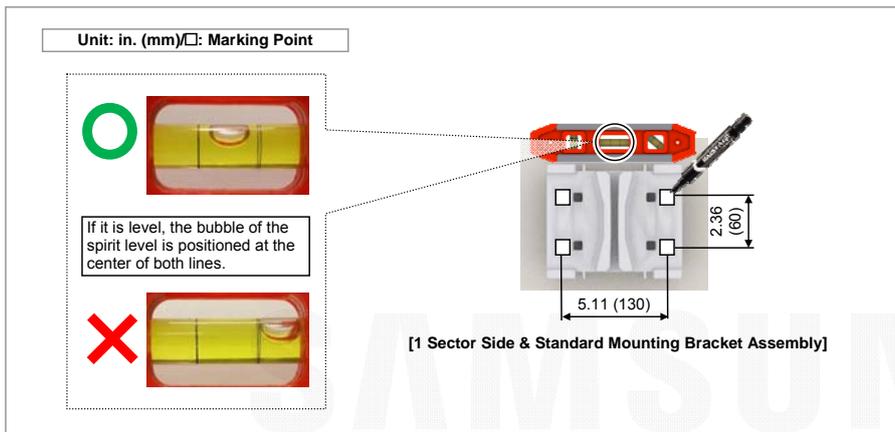

▶ To drill anchor holes and fix anchors

 
 
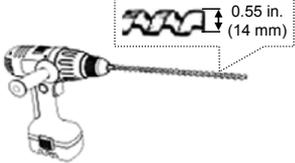
- 1 Make sure you have the following items:

Table 18. *Parts and Tools for Drilling & Anchoring*

Category	Description
Parts	M10 Strong Anchor 4 EA/RRH
Working Tools	<ul style="list-style-type: none"> • Hammer Drill • Concrete Drill Bit [0.55 in. (14 mm)] • Vacuum Cleaner • Hammer • Anchor Punch (For M10 Strong Anchor)


Table 19. *Anchor Bolt Drill Bits and Hole Depth*

Category	Anchor Bolt	Drill Bits	Hole Depth
RRH (Wall Type)	M10	0.55 in. (14 mm)	1.73 in. (44 mm)

Category	Anchor Bolt	Drill Bits	Hole Depth
[Anchor Hole Cross Section]			
	 <p>[O]</p>	 <p>[X]</p>	 <p>0.55 in. (14 mm)</p>
* Remove the debris from the drilled hole.			

- 2 Drill anchor holes at marked points with removing dust from the holes using a cleaner. Fix strong anchor to the drilled hole.

Figure 54. Drilling & Anchoring

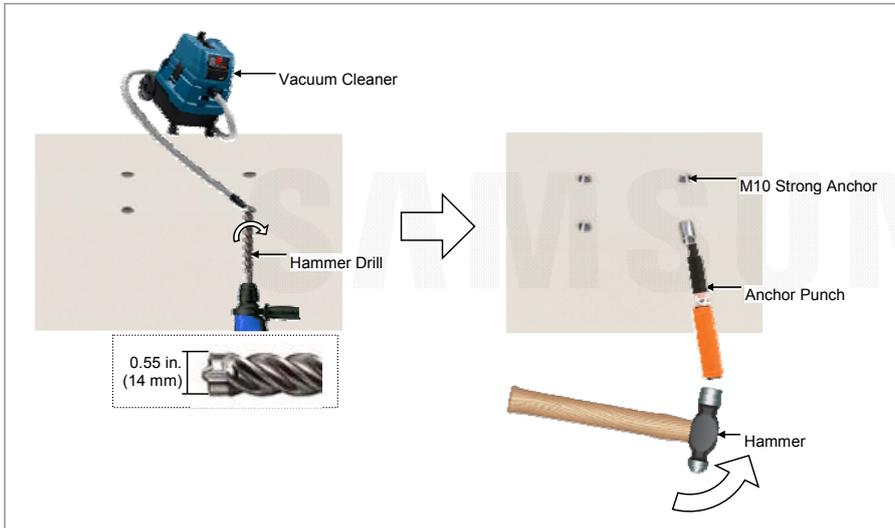

01038115

Fixing Mounting Bracket

The way to fix 1 sector mounting bracket is as follows:

▶ To fix Mounting Bracket_1 Sector Wall Type


1 Make sure you have the following items:

Table 20. Parts and Tools for fixing Mounting Bracket_1 Sector Wall Type

Category	Description		
Parts	Mounting Bracket_Front		1 EA
	Fastener	M10 Plain Washer	4 EA
		M10 Spring Washer	4 EA
		M10 × L70 Hex. Bolt	4 EA
Recommended Torque Value	M10 Hex. Bolt	217 lbf·in	
Working Tools	<ul style="list-style-type: none"> • Torque Wrench (100~400 lbf·in) • Torque Wrench Spanner head (apply Hexagon Head: 17 mm) • Spanner (17 mm) 		

2 Place the mounting bracket_front along with the fixed strong anchors and fix it using fasteners.

Figure 55. Fixing Mounting Bracket_1 Sector Wall Type

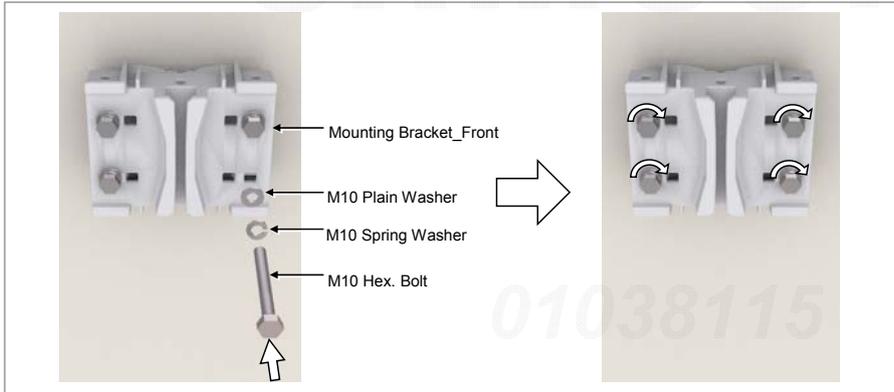

Fixing RRH

▶ To fix RRH_1 Sector Wall Type (Standard & Side Installation)

1 Make sure you have the following items:

Table 21. Fixing RRH_1 Sector Wall Type (Standard & Side Installation)

Category	Description	
Parts	M10 × L35 Hex. Bolt (washer assembly, attached to the unit bracket)	1 EA
Recommended Torque Value	M10 Hex. Bolt	217 lbf·in
Working Tools	<ul style="list-style-type: none"> • Torque Wrench (100~400 lbf·in) • Torque Wrench Spanner head (apply Hexagon Head: 17 mm) • Spanner (17 mm) 	

2 Hang the unit bracket hook of RRH side on the mounting bracket_front hook's groove and fix it using fasteners.

Figure 56. Fixing RRH_1 Sector Wall Type (Standard Installation)


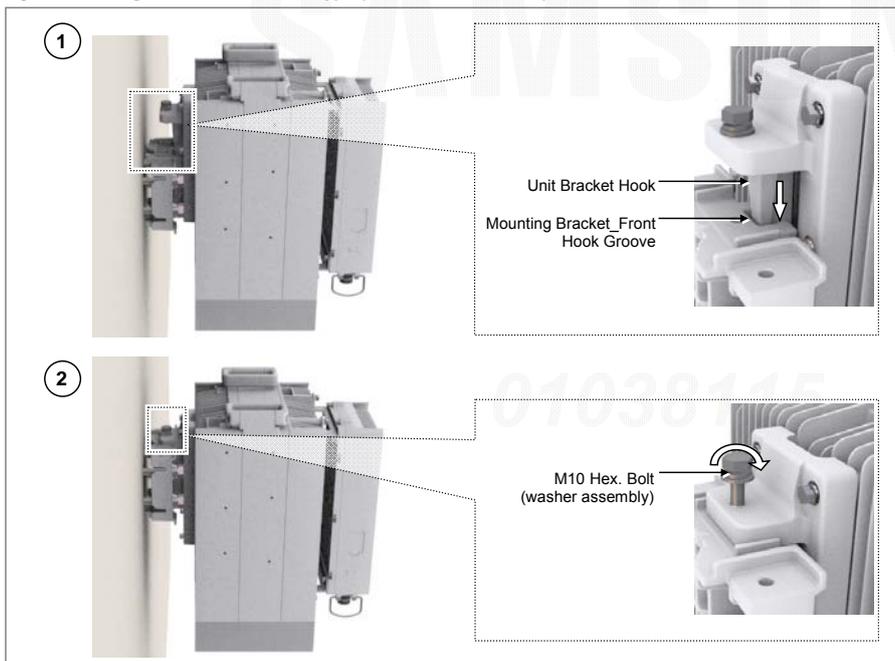


Figure 57. Fixing RRH_1 Sector Pole Type (Side Installation)

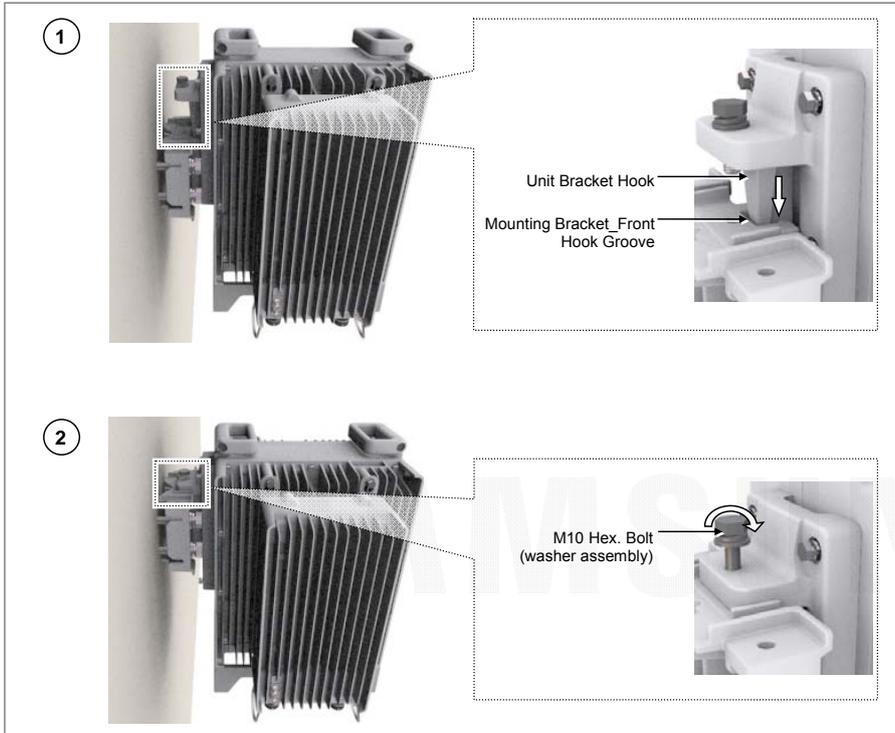


01038115

Chapter 3 Connecting Cables

Cabling Procedure

The procedure to connect system cables is as follows:


Figure 58. Procedure to Connect System Cable

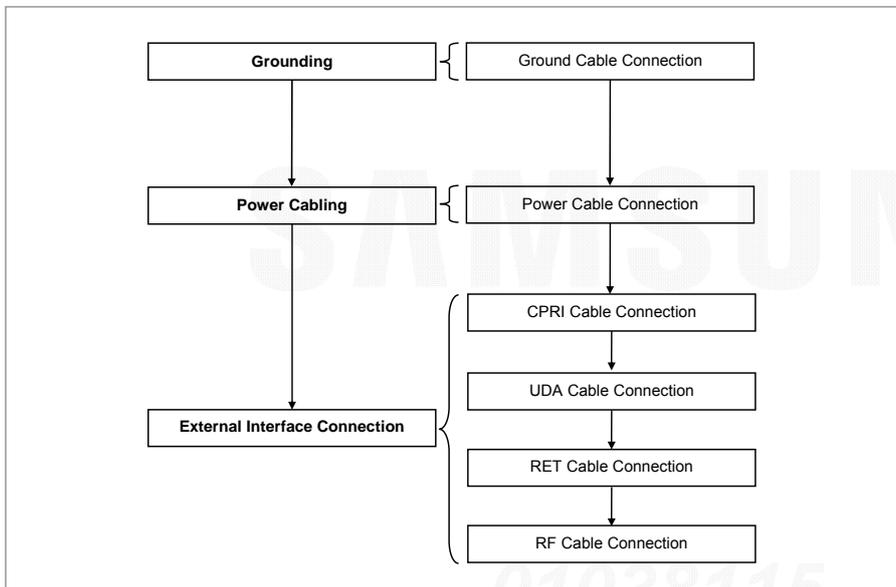

Guidelines for Cable Connections

The procedure for cable connections is as follows:

Figure 59. Cable Connection Procedure

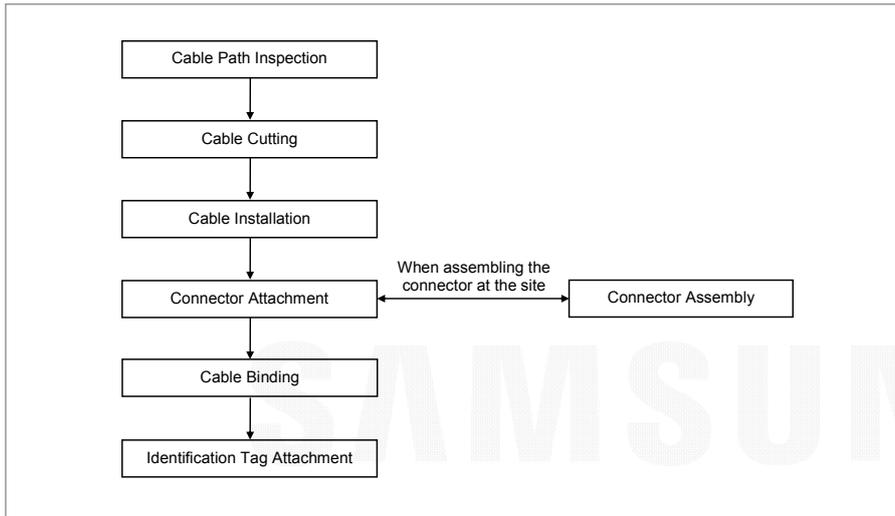

When cutting the cable after installation, make sure that the connector is disconnected. Installation of the cable with the connector connected to the system may cause contact failure or damage to the connector assembled to the system and the cable due to cable tension or the operator's mistakes.



The sequence of cable cutting and installation of the cable workflow can be changed depending on the field situation such as 'cutting after installing' or 'installing after cutting'.

Cable Path Inspection

When installing a cable that connects between the rectifier, Main Ground Bar (MGB), and backhaul device, and so on within the system, the cable path, length and the cable installation method, and so on must be inspected.

Follow these guidelines when inspecting the cabling path.

- A minimum cable length must be selected provided that it does not affect the cable installation and maintenance.

- The cable must be placed in a location where it will not be damaged by external factors (power line, flooding, footpaths, and so on).
- In areas where the cable may be damaged by external factors, ensure that measures are taken to prevent damage to the cable (cable tray, ducts, flexible pipe, and so on).

Cable Cutting

Measure the exact distance, carefully checking the route, and cut the cable using a cutting tool.

Follow these guidelines when cutting the cable.

- Cut the cable to the length determined in the Cable Path Inspection step.
- Use a dedicated cable cutting tool.
- Cut the cable at right angles.
- Be careful to keep the cable away from any moisture, iron, lead, dust, or other foreign material when cutting.
- Remove any foreign material attached to the cable using solvent and a brush.

Cable Installation

Cable installation involves running the cable along the cabling path to the target connector of the system or an auxiliary device after cable path inspection and cable cutting have been completed.

Follow these guidelines when installing a cable:

- Be careful not to damage the cable.
- If the cable is damaged, cut out the damaged section before installing, or replace the cable.
- Run the cable so that it is not tangled. In particular, when installing a cable from a horizontal section to a vertical section, be careful not to reverse the upper and lower lines of the cable.
- Always use the maximum curvature radius possible, and make sure that the minimum curvature radius specification is complied with.
- If the cable needs to be protected, use for example, a PVC channel, spiral sleeve, flexible pipe, cable rack, and so on.
- Install the DC power cable and data transmission cable away from the AC power cable to prevent electromagnetic induction.

Table 22. Recommended Minimum Allowed Cable bend Radius

No	Type	Allowed Cable Bend Radius
1	Ground Cable	8 × Outer Diameter (OD)
2	AC Power Cable	10 × OD

No	Type	Allowed Cable Bend Radius	
3	DC Power Cable	Operation: 8 × OD	Installation: 12 × OD
4	Optical Cable (Outdoor)	10 × OD	
5	UDA Cable	Operation: 5 × OD	Installation: 10 × OD
6	RET Cable	Operation: 8 × OD	Installation: 12 × OD
7	1/2 in. Feeder Line (Flexible)	125 mm	

* If the allowed cable bend radius is specified by the manufacturer, comply with the bend radius specified.

Cable Binding

Cable binding involves fixing and arranging an installed cable using binding thread, cable ties, binding wire, and ram clamps, and so on.

Follow these guidelines when binding a cable.

- Be careful not to damage the cable during binding.
- Use appropriate cable binding tools according to the target location (indoor or outdoor, and so on) and the type of the cable (power supply cable, optical cable, feeder line, and so on).
- Do not let the cutting section of a cable tie and binding line, and so on be exposed to the outside. This may cause damage to cables or personal injury. Make sure that the cutting sections of cable ties and binding lines, and so on are not exposed to the outside.
- Cut off the remainder of the cable thread by leaving about 50 mm of extra length to prevent the knot from easily getting untied.
- If there is a danger that contact failure may occur in a connector connection due to tension, bind the cable at the closest location to the connector.

Connector Attachment

Connector attachment involves assembling a connector to an installed cable or to a device on the site.

Follow these guidelines when attaching a connector.

- Make sure operator is fully aware of the connector assembly method before assembling a connector. Assemble the connector in accordance with its pin map.
- Each connector has a hook to prevent its core positions from being changed.
- Check the corresponding grooves before connecting a connector to another connector.
- Use a heat shrink tube at a connector connection for cables that are installed outdoor, such as feeder lines, to prevent water leakage and corrosion from occurring at the part exposed to the outside.
- Connect each cable of the connector assembly in a straight line.

- Be careful when connecting a cable so that contact failure does not occur at a connector connection due to tension.

Identification Tag Attachment

Identification tag attachment involves attaching a marker cable tie, nameplate, and label, and so on to the both ends of a cable (connections to a connector) to identify its use and cabling path.

Follow these guidelines when attaching an identification tag.

- When installing a cable outdoor, use relief engraving and coated labels, and so on to prevent the markings from being erased.
- Since the form and attachment method for identification tags are different for each provider, consult with the provider before attaching them.



When connecting the cables, always connect the ground cable first. If worker contacts the equipment, connect a cable or perform maintenance without connecting the ground cable, the system can be damaged or a worker may be injured due to static electricity and short circuit.



When performing cable work for the system, proceed with the ground work before any other work to prevent errors occurring due to static electricity and other reasons.



After completing cable installation, unused port should be capped.



When installing, take care not to overlap or tangle the cables; also, consider future expansion. Install the DC power cable and data transmission cable away from the AC power cable to prevent electromagnetic induction.



Make sure the work is done by personnel properly trained for the cabling job.

Cabling Diagram

The cabling diagrams of the RRH & AC/DC converter are as follows:

Figure 60. RRH Cable Diagram_RF Connection: 2T2R

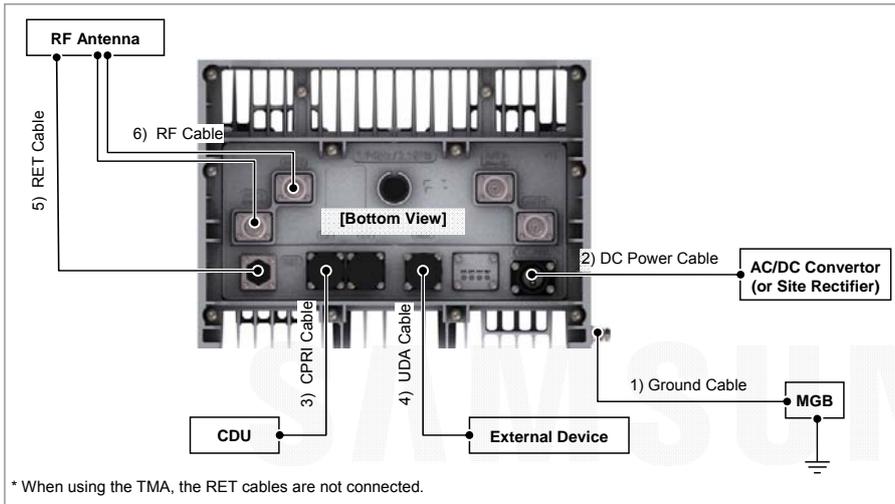


Figure 61. RRH Cable Diagram_RF Connection: 2T4R, 4T4R

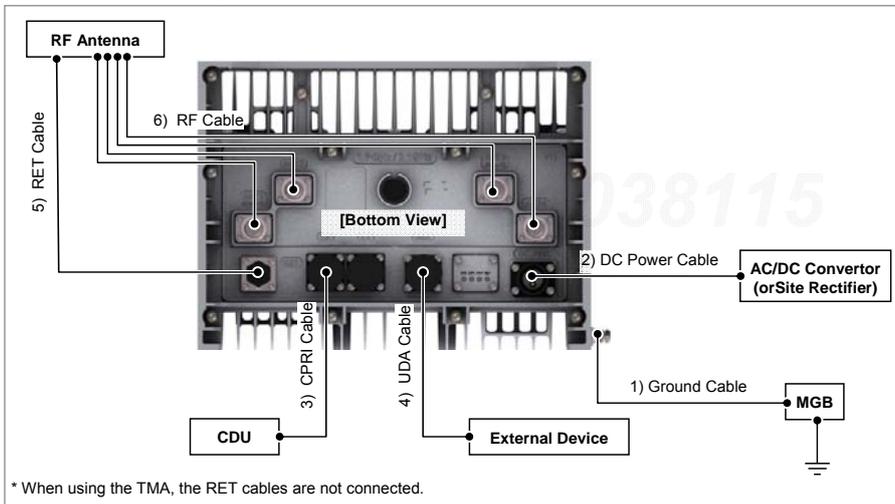



Table 23. RRH Connection Cable

From	To	Cable
MGB	RRH	1 Ground Cable : 6 AWG × 1C
RRH	AC/DC Converter (or Site Rectifier)	2 DC Power Cable : 8 AWG × 2C
	CDU	3 CPRI Cable : Single Mode (Outdoor Type)
	External Device	4 UDA Cable Assembly
	RF Antenna	5 RET Cable Assembly 6 RF Cable : 1/2 in. Feeder Line

SAMSUNG

01038115

Figure 62. AC/DC Convertor Cable Diagram

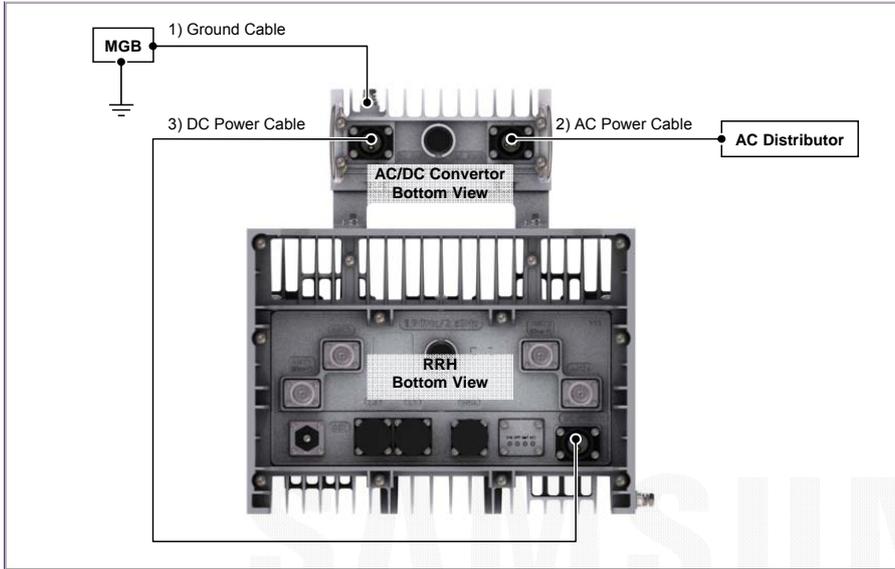

메모 포함[H6]: There should have one more ground cable to connect AC/DC with RRH. Please check with PM SY.Kim again.

Table 24. AC/DC Convertor Connection Cable

From	To	Cable
MGB	AC/DC Convertor	1 Ground Cable : 6 AWG × 1C
AC/DC Convertor	AC Distributor	2 AC Power Cable : 12 AWG × 3C
	RRH	3 DC Power Cable : 8 AWG × 2C



The inlet hole finishing method of external equipment must be progressed after consultation with operation company in case of the cable connected to external equipment. (Optical distribution box, etc)
- The Cable: AC Power Cable, CPRI Cable, UDA Cable

Grounding

Grounding is the process of operating an electronic system (for example, power supplying system, communication system, and control system) stably from a lightning, transient-current, transient-voltage and electric noise and of preventing injury from electric shock.

Ground equipment minimizes the electrical potential of the electronic device to that of the ground, which is zero electrical potential, so that it can prevent the device from occurring electrification.



Connect the ground cable first. In cabling, the connection of cables without the connection to the ground cable may cause damage of the equipment or bodily injury to personnel.

The purposes of the ground construction are as follows:

- To prevent human life and the system from over-current, over-voltage, and lightning
- To provide a discharge path for surge voltage generated by lightning and power switch
- To protect the system from static electricity
- To eliminate or minimize the high-frequency potential in the system housing
- To provide a conductor for the balance and stability of high-frequency current
- To stabilize the potential of the circuit against the ground

Connecting Ground Cable

Connecting RRH Ground Cable

▶ To connect RRH Ground Cable

- 1 Make sure you have the following items:

Table 25. Parts and Tools for connecting RRH Ground Cable

Category	Description	
Installation Section	MGB~RRH Ground Terminal	
Cable	6 AWG × 1C	
Bend Radius	8 × OD	
Heat Shrink Tube (Spec/Color/Length)	Φ 0.47 in. (12 mm)/Clear/1.96 in. (50 mm)	
Pressure Terminal	MGB	Checking MGB specifications per site and preparing connecting parts
	RRH	6 AWG, 2 Hole, Hole diameter: 1/4 in. (6.4 mm), Hole spacing: 0.63 in. (16 mm)
Fastener	MGB	Checking MGB specifications per site and preparing connecting parts

Category	Description	
	RRH	M6 × L14 SEMS (Hex. +)/2 EA
Recommended Torque Value	M6 SEMS	43 lbf-in
Working Tools	<ul style="list-style-type: none"> • Cable Cutter • Wire Stripper • Crimping tool • Heating Gun • Nipper • Screw Driver ('+', No. 3) • Torque Driver (20~90 lbf-in.) • Screw Driver Bit ('+', No. 3) 	




For the pressure terminal or the cable, the UL Listed products or equivalent should be used.

Ex) Manufacturer-Panduit
RRH: 6 AWG Pressure Terminal (LCD6-14A-L)




2 Install a ground cable from the MGB to the RRH ground terminal.

Figure 63. Connecting RRH Ground Cable (1)

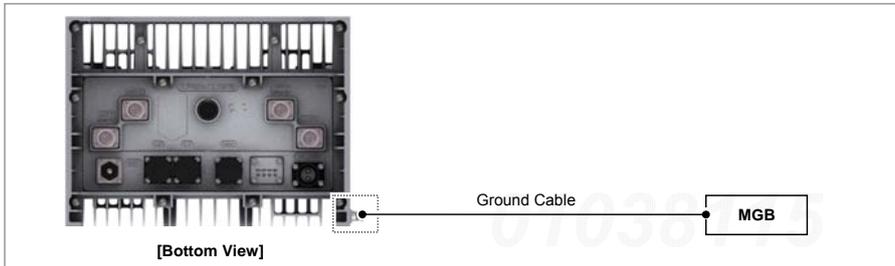

- 3 Assemble a pressure terminal and a heat shrink tube at the end of the RRH ground cable.
- 4 Align the pressure terminal to the mounting hole of the RRH ground terminal.
- 5 Firmly fix the pressure terminal onto the RRH ground terminal using fasteners.

Figure 64. Connecting RRH Ground Cable (2)

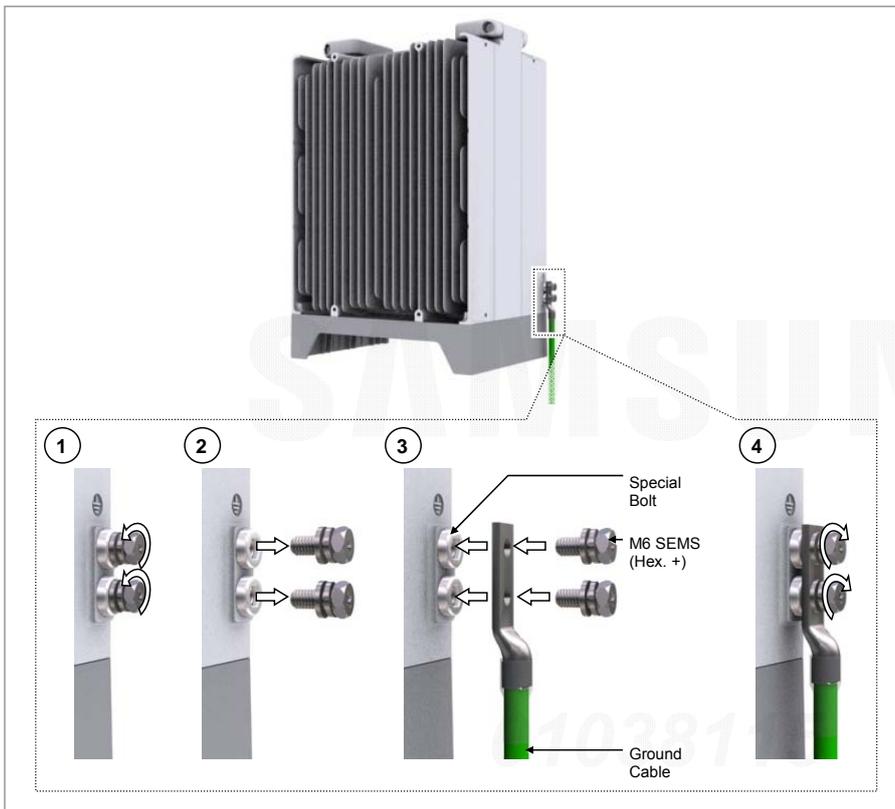

Connecting AC/DC Converter Ground Cable

▶ To connect AC/DC Converter Ground Cable

1 Make sure you have the following items:

Table 26. Parts and Tools for connecting AC/DC Converter Ground Cable

Category	Description	
Installation Section	MGB~ AC/DC Converter Ground Terminal	
Cable	6 AWG × 1C	
Bend Radius	8 × OD	
Heat Shrink Tube (Spec/Color/Length)	Φ 0.47 in. (12 mm)/Clear/1.96 in. (50 mm)	
Pressure Terminal	MGB	Checking MGB specifications per site and preparing connecting parts
	AC/DC Converter	6 AWG, 2 Hole, Hole diameter: 1/4 in. (6.4 mm), Hole spacing: 0.63 in. (16 mm)
Fastener	MGB	Checking MGB specifications per site and preparing connecting parts
	AC/DC Converter	M6 × L14 SEMS (Hex. +)/2 EA
Recommended Torque Value	M6 SEMS	43 lbf-in
Working Tools	<ul style="list-style-type: none"> • Cable Cutter • Wire Stripper • Crimping tool • Heating Gun • Nipper • Screw Driver ('+', No. 3) • Torque Driver (20~90 lbf-in.) • Screw Driver Bit ('+', No. 3) 	



For the pressure terminal or the cable, the UL Listed products or equivalent should be used.


Ex) Manufacturer-Panduit

RRH: 6 AWG Pressure Terminal (LCD6-14A-L)




2 Install a ground cable from the MGB to the AC/DC converter ground terminal.

Figure 65. Connecting AC/DC Converter Ground Cable (1)

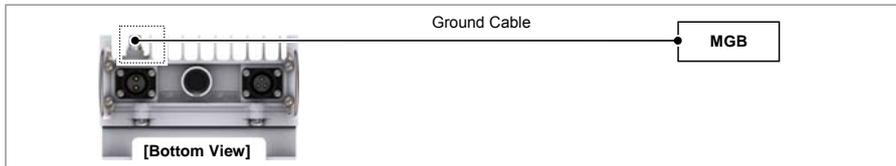

- 3 Assemble a pressure terminal and a heat shrink tube at the end of the AC/DC converter ground cable.
- 4 Align the pressure terminal to the mounting hole of the AC/DC converter ground terminal.
- 5 Firmly fix the pressure terminal onto the AC/DC converter ground terminal using fasteners.

Figure 66. Connecting AC/DC Converter Ground Cable (2)

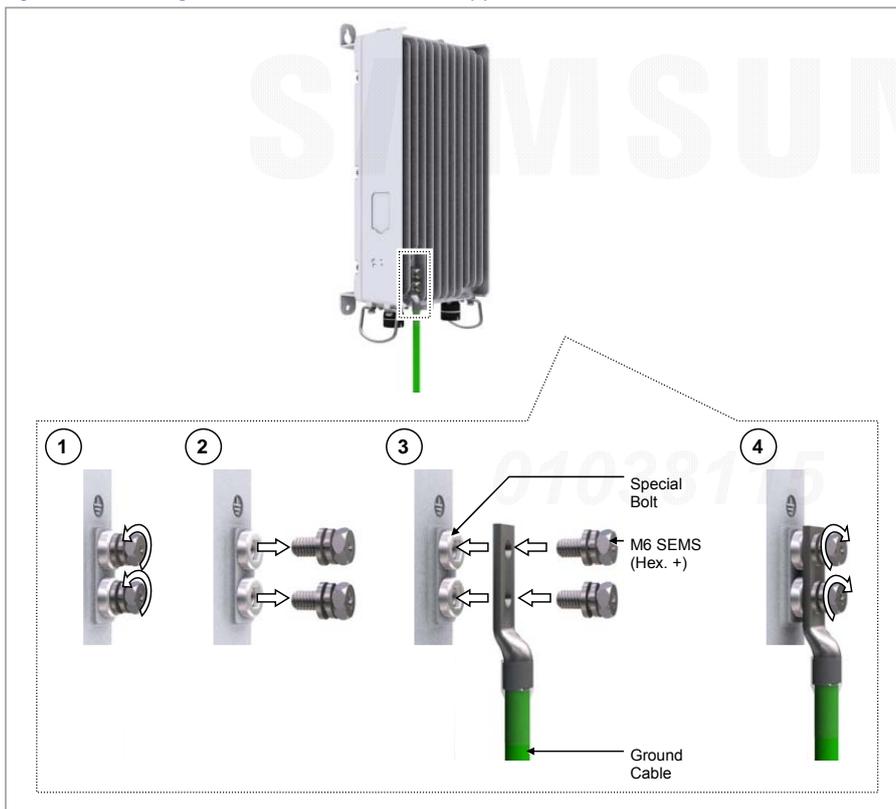


SAMSUNG

01038115

Power Cabling

The power supply device consists of the following elements:

 Figure 67. Power Equipment Elements



 Since power is applied to the system where the power cable is connected by manipulating the circuit breaker of the rectifier, be sure to check the rectifier's breaker is turned off (open) before connecting the power cable to the power connector. If the system is installed while the circuit breaker is on, the worker may be critically injured as soon as the cable is connected in the wrong way.

-  Handling the power cable incorrectly may damage the rack or cause an electric short-circuit through the cable. Ensure the power switch on the rectifier or the system is turned off before handling the power.
-  The fasteners for power cable must be tightly secured to prevent electrical accidents.
-  The heat-resistant temperature of the power cable should be 90°C or more.
-  Install the power cable to the power port of the system by considering the radius of curvature of its cable specification and then cut the cable. If operator installs the cable after cutting, there may be length difference among the core wires at the end of the cable because of cable curvature. This may result in poor contact after the cable is connected to the power port.
-  When using the same DC power source with a device for outdoor, discuss with a installation engineer of manufacturer to protect a CDU from a residual surge energy.
-  When using a DC power cable, it is possible to use up to 10 m for 8 AWG. However, the distance is under the condition that the cable is installed normally. When the condition changes, the distance changes.
-  When using an AC power cable, it is possible to use up to 30 m for 12 AWG. However, the distance is under the condition that the cable is installed normally. When the condition changes, the distance changes.

 Install a circuit breaker to a rectifier (or power distributor) for the stable power. The capacity of circuit breaker is 40 A. (Use UL Listed circuit breakers.)



Install a circuit breaker to a AC distributor for the stable power. The capacity of circuit breaker is 20 A. (Use UL Listed circuit breakers.)

Connecting Power Cable

Connecting RRH Power Cable

▶ To connect RRH DC Power cable

- 1 Make sure you have the following items:



Table 27. Parts and Tools for connecting RRH DC Power Cable

Category	Description	
Installation Section	AC/DC Converter(or Site Rectifier) ~ RRH Power Port	
Cable	8 AWG × 2C	
Bend Radius	Operation: 8 × OD	Installation: 12 × OD
Connector	AC/DC Converter	JONHON, Push Pull Type, CT48J-1502TSCBM-07
	* Check specifications of rectifier output terminal per site and prepare fasteners when connect RRH power cable to the site rectifier	
	RRH	JONHON, Push Pull Type, CT48J-1502TSCBM-07
Working Tools	<ul style="list-style-type: none"> • Cable Cutter • Wire Stripper • Compressor • Heating Gun • Nipper 	

Table 28. RRH DC Power Cable Connector Pin Map


Power Connector Pin No.	Description	Color
Pin 1	-48 V DC	White
Pin 2	RTN	Black

* The color of the core wire can be changed according to the specification of the cable used.

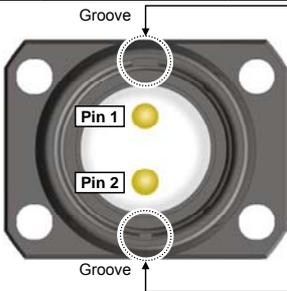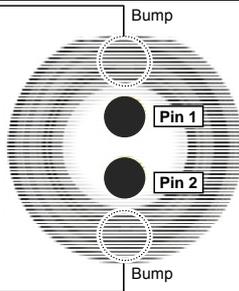Power Connector Pin No.	Description	Color
	 <p>[System side Connector]</p>	
	 <p>[Cable side Connector]</p>	


- 2 Install a DC power cable from the AC/DC converter (or site rectifier) to the RRH.

Figure 68. Connecting RRH DC Power Cable (1)

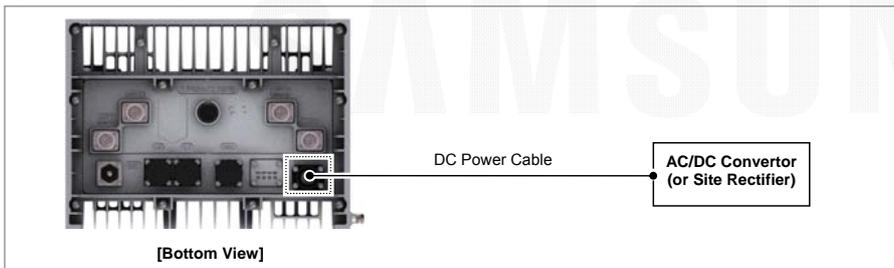

- 3 Insert the connector aligning the cable side connector's white dot and system side connector's white dot. When inserting the connector, push the shell to upper side.

Figure 69. Connecting RRH DC Power Cable (2)

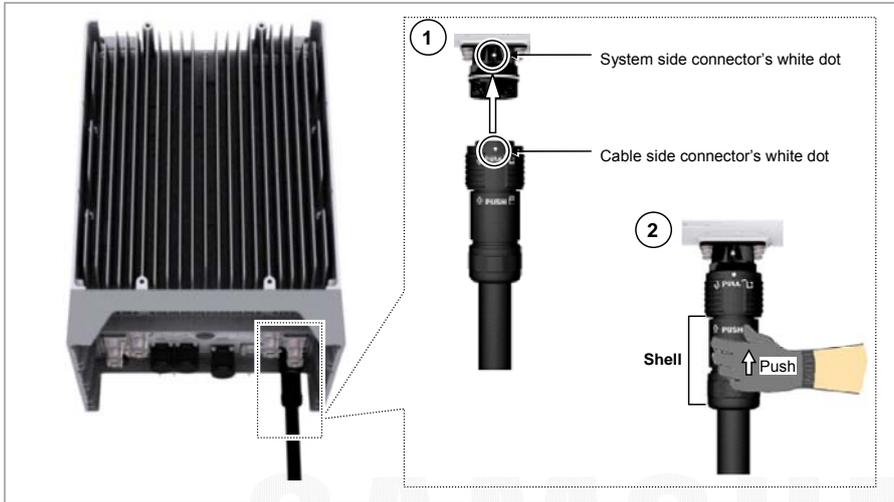


SAMSUNG

01038115

When the connector is fastened tight, the white line on the system side connector should be invisible (or hidden).



The method for connecting/disconnecting the power connector is as follows:
- For connecting the connector, push the shell to upper side.
- For disconnecting the connector, pull the coupling nut to lower side.

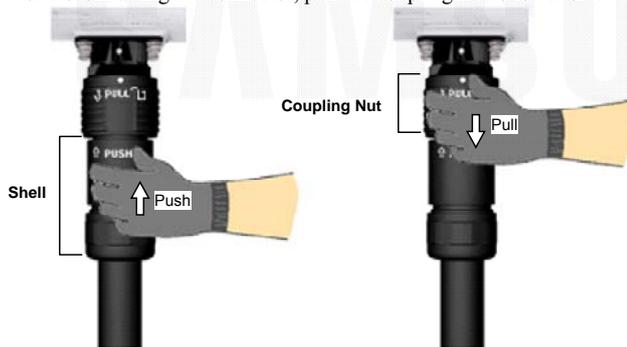

01038115

Connecting AC/DC Convertor Power Cable

▶ To connect AC/DC Convertor DC Power cable

- 1 Make sure you have the following items:


Table 29. Parts and Tools for connecting AC/DC Convertor DC Power Cable

Category	Description
Installation Section	RRH Power Input Port ~ AC/DC Convertor DC power output Port
Cable	8 AWG × 2C
Bend Radius	Operation: 8 × OD Installation: 12 × OD
Connector	JONHON, Push Pull Type, CT48J-1502TSCBM-07

Table 30. AC/DC Convertor DC Power Cable Connector Pin Map


Power Connector Pin No.	Description	Color
Pin 1	-48 V DC	White
Pin 2	RTN	Black

* The color of the core wire can be changed according to the specification of the cable used.

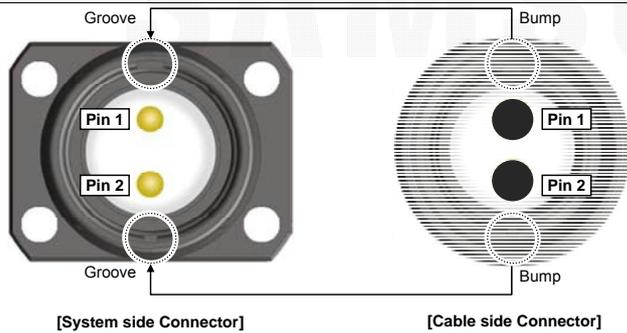


- 2 Install a DC power cable from the RRH to the AC/DC Converter.

Figure 70. Connecting AC/DC Converter DC Power Cable (1)

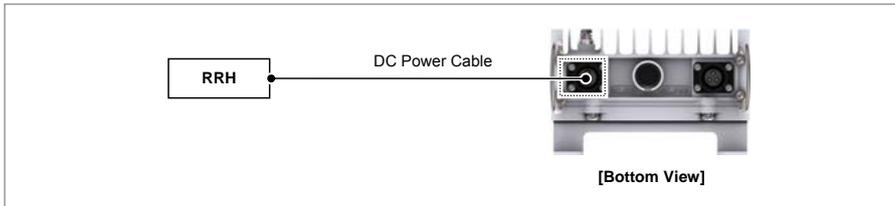

- 3 Insert the connector aligning the cable side connector's white dot and system side connector's white dot. When inserting the connector, push the shell to upper side.


Figure 71. Connecting AC/DC Converter DC Power Cable (2)

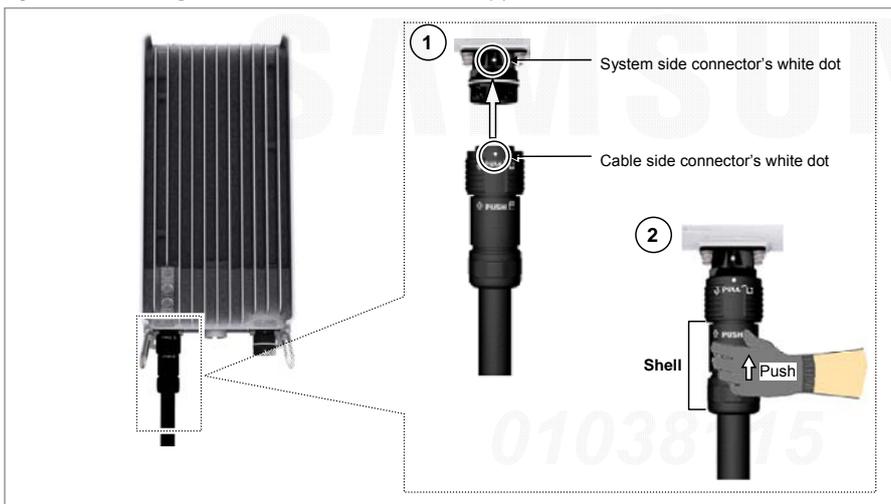

When the connector is fastened tight, the white line on the system side connector should be invisible (or hidden).



The method for connecting/disconnecting the power connector is as follows:
- For connecting the connector, push the shell to upper side.
- For disconnecting the connector, pull the coupling nut to lower side.

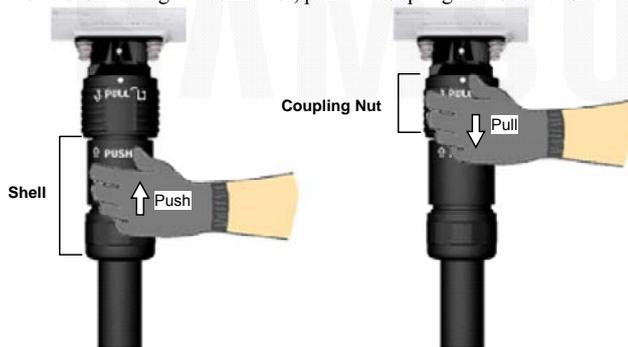

01038115

▶ To connect AC/DC Converter AC Power cable

- 1 Make sure you have the following items:


Table 31. Parts and Tools for connecting AC/DC Converter DC Power Cable

Category	Description	
Installation Section	AC Distributor ~ AC/DC Converter Power Input Port	
Cable	12 AWG × 3C	
Bend Radius	10 × OD	
Connector	AC Distributor	Check specifications of AC distributor output terminal per site and prepare fasteners
	AC/DC Converter	JONHON, Push Pull Type, CT48J-1502TSCBM-07 to Open
Working Tools	<ul style="list-style-type: none"> • Cable Cutter • Wire Stripper • Compressor • Heating Gun • Nipper 	

Table 32. AC/DC Converter AC Power Cable Connector Pin Map


Power Connector Pin No.	Color
L	Brown
N	Blue
PE	Yellow/Green

* The color of the core wire can be changed according to the specification of the cable used.

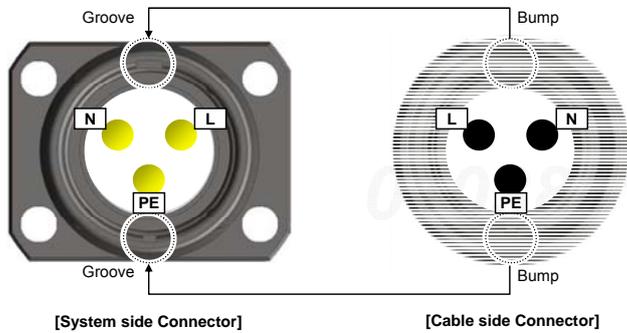


- 2 Install an AC power cable from the AC distributor to the AC/DC convertor.

Figure 72. Connecting AC/DC convertor AC Power Cable (1)

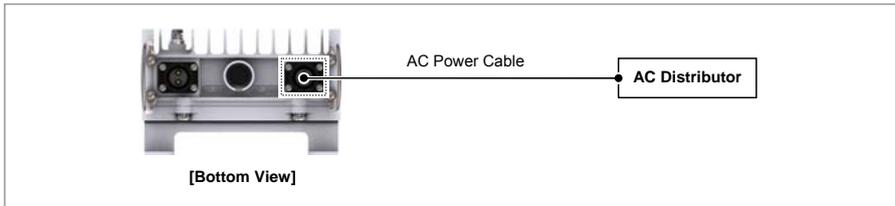


- 3 Insert the connector aligning the cable side connector's white dot and system side connector's white dot. When inserting the connector, push the shell to upper side.


Figure 73. Connecting AC/DC convertor AC Power Cable (2)

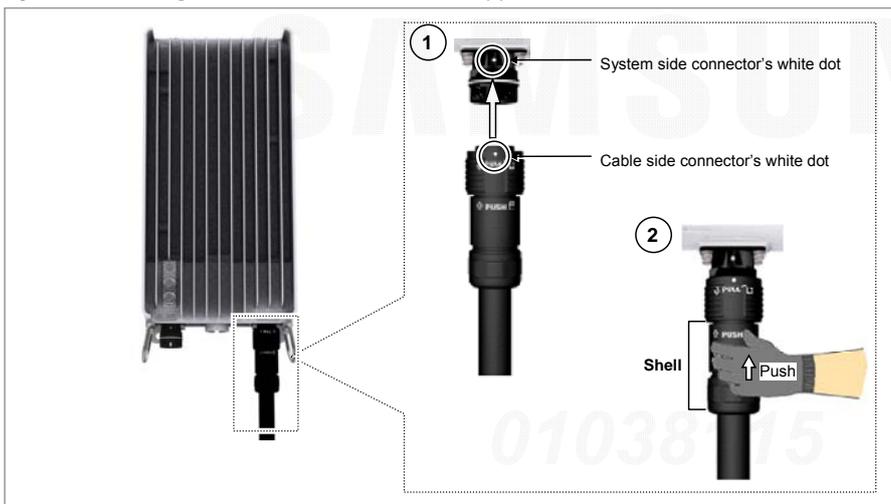

When the connector is fastened tight, the white line on the system side connector should be invisible (or hidden).

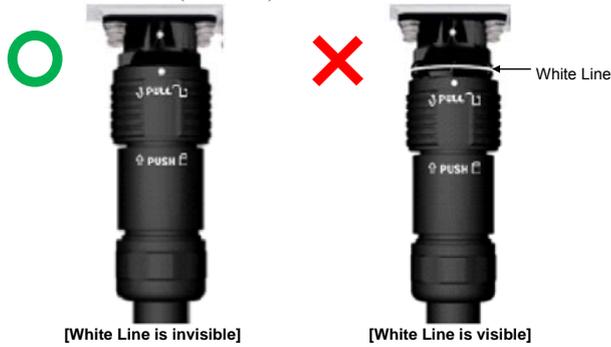

The method for connecting/disconnecting the power connector is as follows:
- For connecting the connector, push the shell to upper side.
- For disconnecting the connector, pull the coupling nut to lower side.

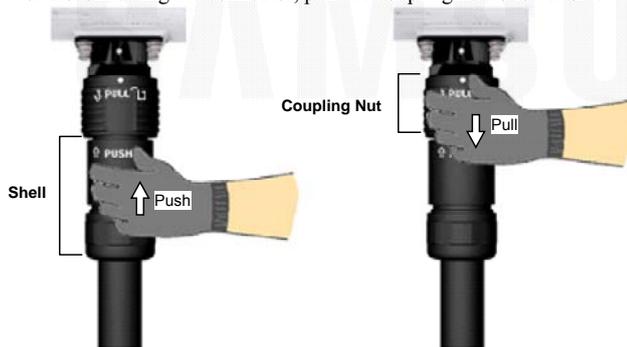

01038115

Interface Cable Connection


Remove/Insert Optical Module

If the optical module needs to be removed or inserted before connecting the cable, follow the below process.

▶ To remove Optical Module


- 1 Hang the Optic Transceiver Removal Tool's hook on the optical module's bail within the system.

Figure 74. Optical Module Removal (1)

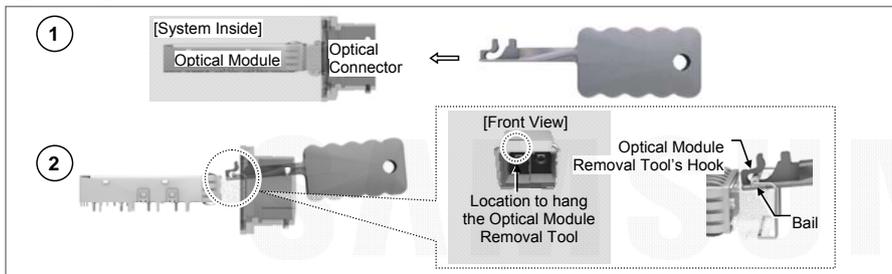


- 2 Completely remove the optical module from the optical module cage by pulling the Optical Module Removal Tool.

Figure 75. Optical Module Removal (2)

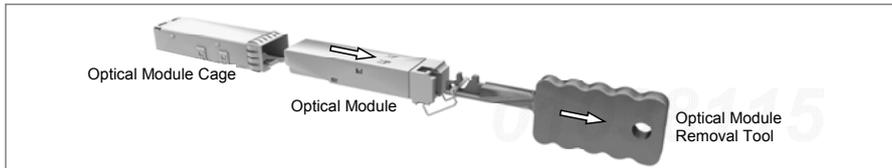

! 광모듈 탈착 시 전용 공구(광 모듈 탈착 Tool)를 사용하여 손잡이를 약 90° 가량 열어 탈착하여야 한다.
 전용 공구를 사용하지 않고 광모듈을 탈착할 경우 최소 필요한 손잡이의 열림량 부족으로 광모듈 걸림 및 손잡이가 파손될 수 있다.

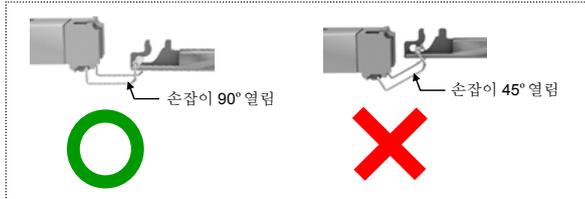

3 Remove the optical module and the jig by pressing the Optic Module Removal Tool's hook grip.

Figure 76. Optical Module Removal (3)




01038115


▶ To inset Optical Module

Push the optical module into the optical module cage within the connector.


Figure 77. Optical Module Inset

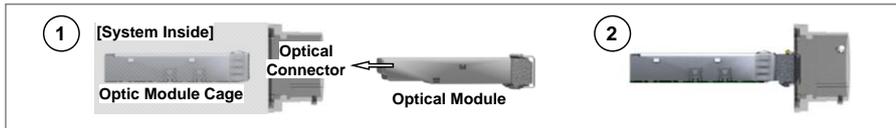

Inset the optical module's bail, facing the front of the system, to the port.

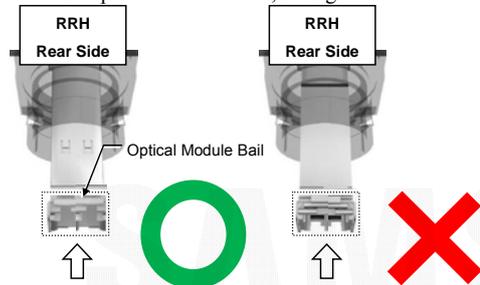

Do not inset when the optical module's bail is unlocked.

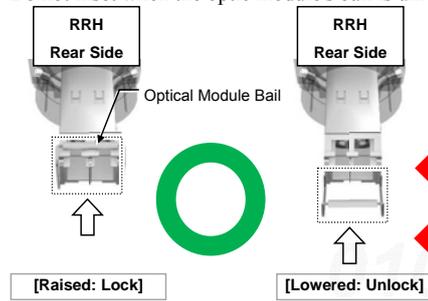

Connecting CPRI Cable

▶ To connect CPRI cable

- 1 Make sure you have the following items:

Table 33. Parts and Tools for connecting CPRI Cable


Category	Description	
Installation Section	RRH L0 Port ~ CDU	
Cable	CPRI Cable (Optical, Single Mode, for Outdoor Type)	
Bend Radius	10 × OD	
Connector	RRH	JONHON, Push Pull Type, PDLC03T03 (DLC/UPC)
Working Tools	Optical Connector Cleaner	



In the system, the laser beam light runs through the optical cable. The exposure of the laser beam on worker's eye may cause serious injury so that it should be handled with care.




- Remove the cap of the optical connector before connecting.
- Before connecting the optical cable, check if the ferrule of the connector is soiled. Be careful to keep the cutting section away from dust or foreign material. If the cable is soiled with foreign material, do not blow to remove them.
 - Make sure to clean the connector in accordance with the cleaning directions in Annex.
 - Do not touch the ferrule at the end of optical cable because it is easy to be damaged.

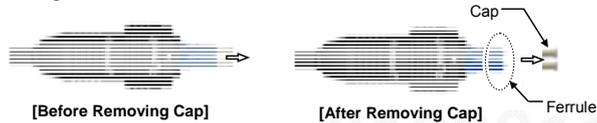


- 2 Install a CPRI cable from the RRH (L0 port) to the CDU.

Figure 78. Connecting CPRI Cable (1)

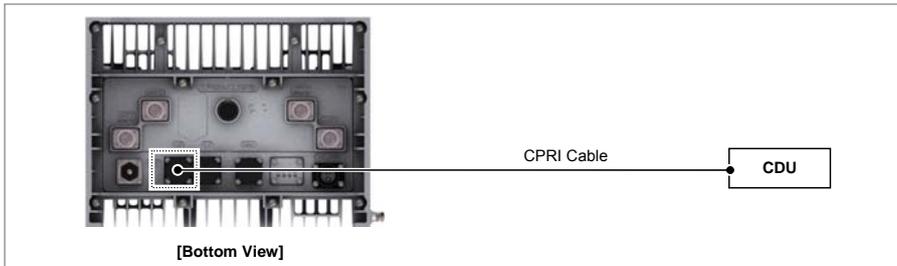

- 3 Separate the cap from the system side connector (L0 port).


Figure 79. Connecting CPRI Cable (2)

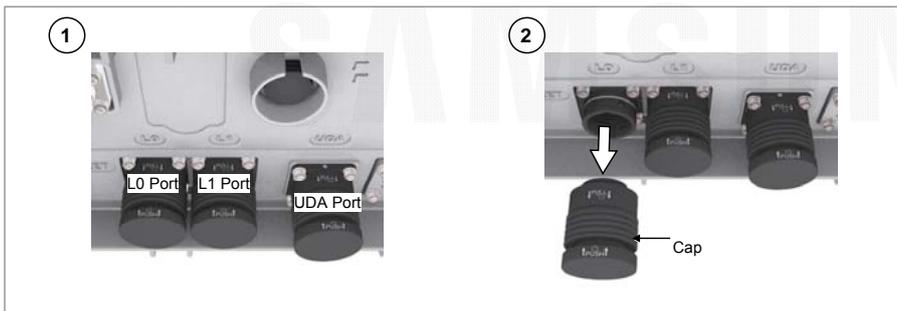

01038115


- 4 Separate the cap from the cable side connector.

Figure 80. Connecting CPRI Cable (3)

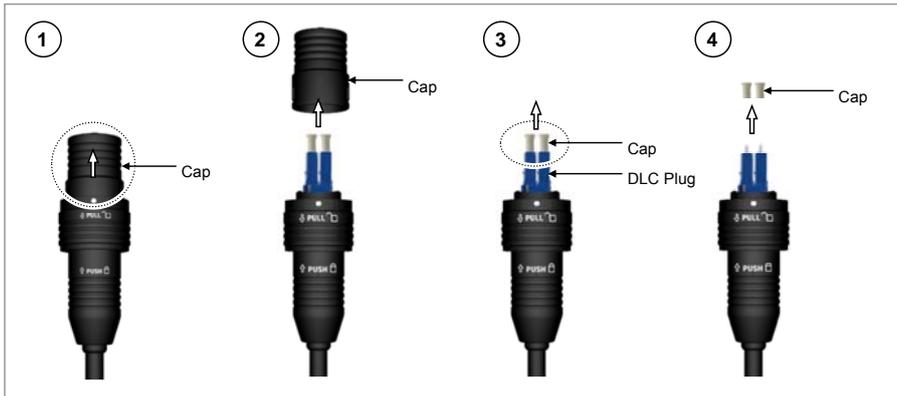


- 5 The latch of cable side connector should be toward the rear side.

Figure 81. Connecting CPRI Cable (4)

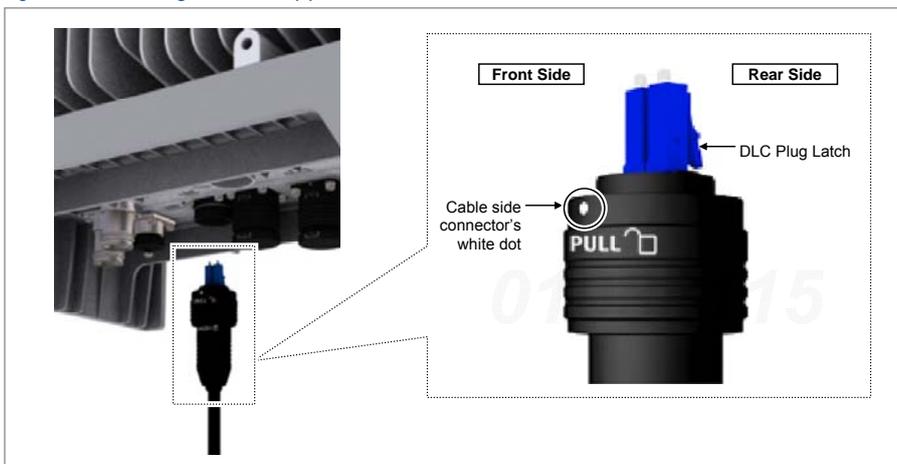


- 6 Insert the DLC plug to the system side's optical module.

Figure 82. Connecting CPRI Cable (5)

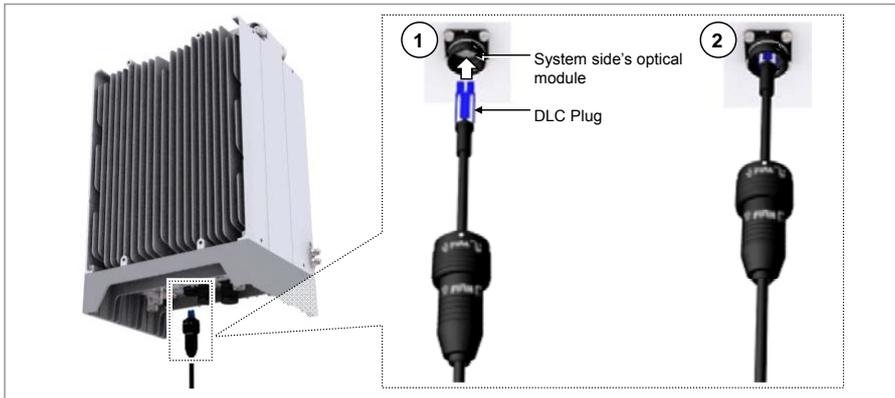

- 7 Insert the connector aligning the cable side connector's white dot and system side connector's white dot. When inserting the connector, push the shell to upper side.

Figure 83. Connecting CPRI Cable (6)

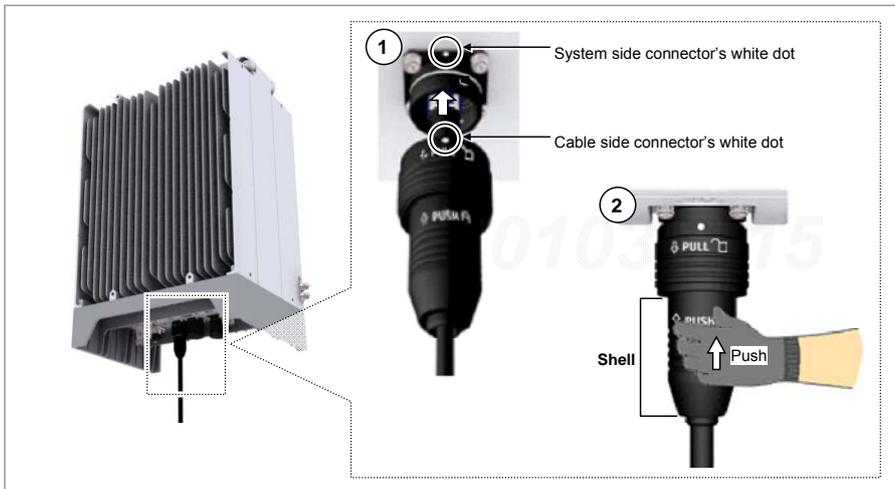


When the connector is fastened tight, the white line on the system side connector should be invisible (or hidden).



The method for connecting/disconnecting the CPRI (optical) connector is as follows:

- For connecting the connector, push the shell to upper side.
- For disconnecting the connector, pull the coupling nut to lower side.

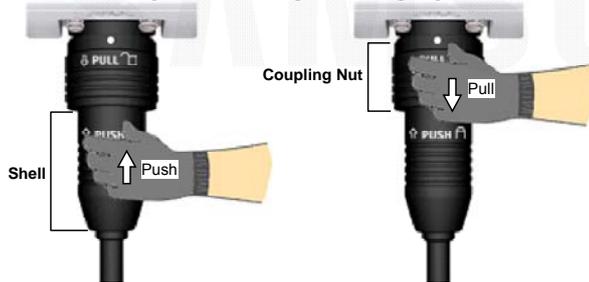

01038115

Connecting UDA Cable

▶ To connect UDA cable

- 1 Make sure you have the following items:

Table 34. Parts and Tools for connecting UDA Cable


Category	Description	
Installation Section	External Device~RRH UDA Port	
Cable	UDA Cable Assembly (AWG24, 8C, CAT5e, SFTP)	
Bend Radius	Operation: 5 × OD	Installation: 10 × OD
Connector	External Device	Check specifications of external device output terminal per site and prepare fasteners.
	RRH	JONHON, Push Pull Type, RJ45MF-CT-07
Working Tool	<ul style="list-style-type: none"> • Cable Cutter • Wire Stripper • Nipper • LAN Tool 	

Table 35. UDA Cable Pin Map

System Side	Color Map	Description
1	White/Blue	UDA3_RTN
2	Blue	UDA3
3	White/Orange	UDA2_RTN
4	Orange	UDA2
5	White/Green	UDA1_RTN
6	Green	UDA1
7	White/Brown	UDA0_RTN
8	Brown	UDA0

- 2 Install a UDA cable from the External Device to the RRH.

Figure 84. Connecting UDA Cable (1)

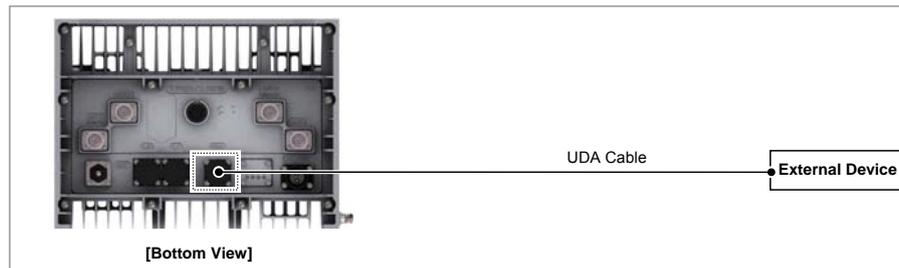


SAMSUNG

01038115


3 Separate the cap from the system side connector (UDA port).

Figure 85. Connecting UDA Cable (2)

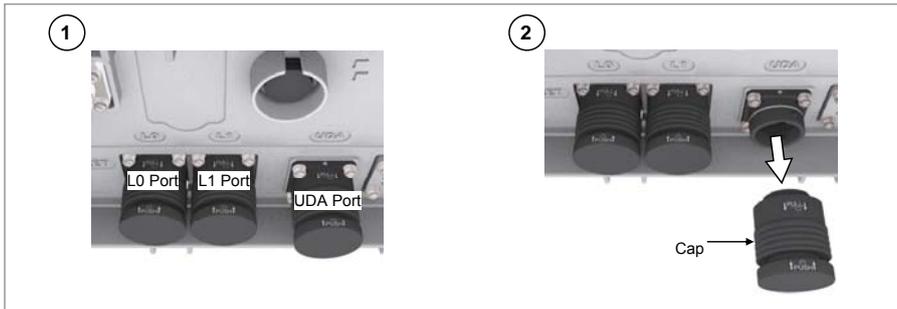


4 Separate the cap from the cable side connector.

Figure 86. Connecting UDA Cable (3)

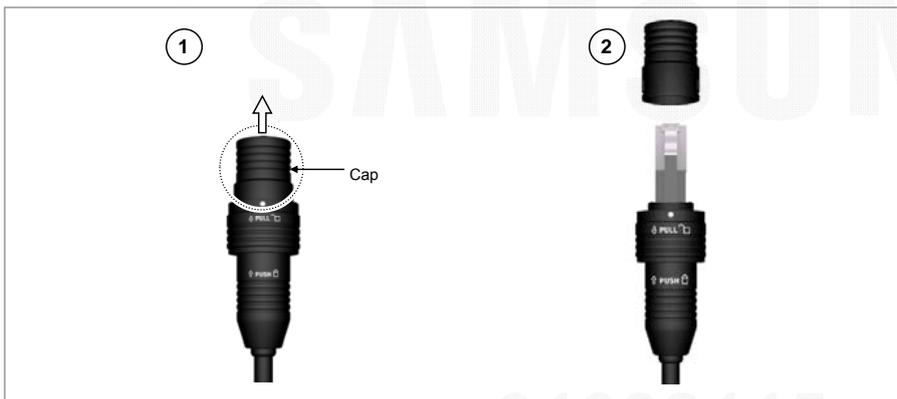

- 5 The latch of cable side connector should be toward the front of the system.

Figure 87. Connecting UDA Cable (4)

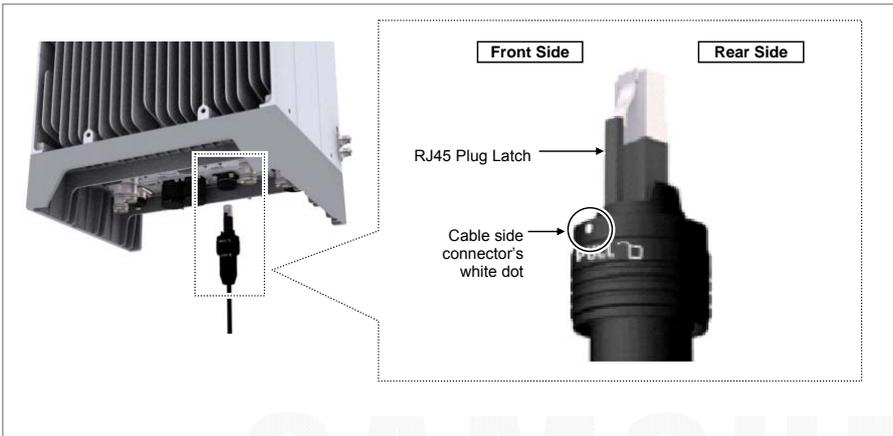


- 6 Insert the RJ-45 plug to the system side connector.

Figure 88. Connecting UDA Cable (5)



- 7 Insert the connector aligning the cable side connector's white dot and system side connector's white dot. When inserting the connector, push the shell to upper side.


Figure 89. Connecting UDA Cable (6)

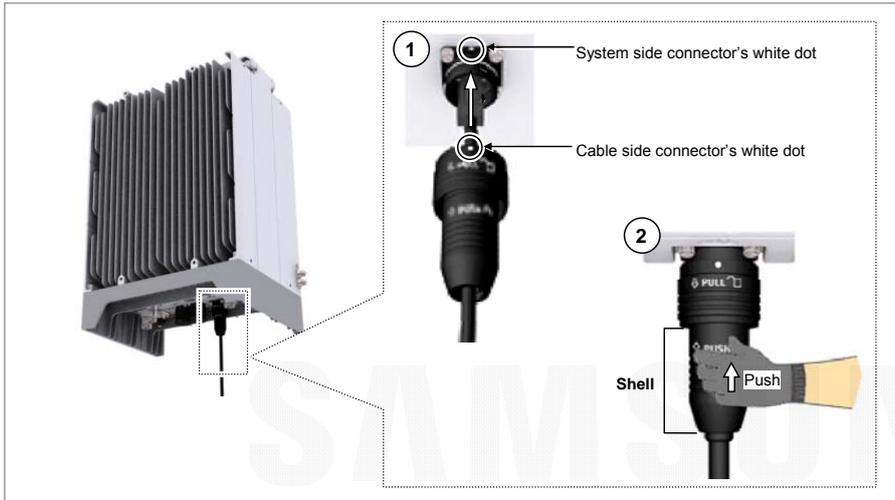

When the connector is fastened tight, the white line on the system side connector should be invisible (or hidden).



The method for connecting/disconnecting the UDA (RJ45) connector is as follows:
 - For connecting the connector, push the shell to upper side.
 - For disconnecting the connector, pull the coupling nut to lower side.

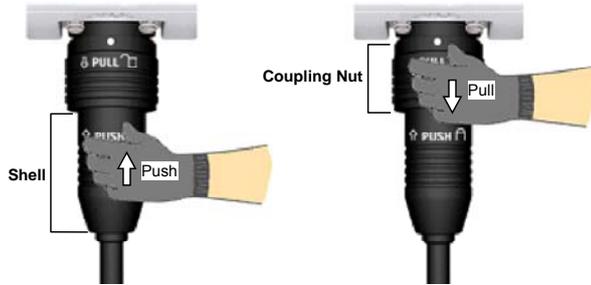

Connecting RET Cable

▶ To connect RET cable

- 1 Make sure you have the following items:


Table 36. Parts for connecting RET Cable

Category	Description	
Installation Section	RF Antenna ~ RRH RET port	
Cable	RET Cable Assembly	
Bend Radius	Operation: 8 × OD	Installation: 12 × OD
Connector	RF Antenna	Check the RF antenna (RETu) RET connector specification per site
	RRH	AISG 2.2

Table 37. RET Cable Pin Map


Pin No	Description	Cable Color
1	N/C (Not Connected)	-
2	N/C (Not Connected)	-
3	RS485 B	White
4	GND	Blue
5	RS485 A	Brown
6	+24 V DC	Red
7	DC Return	Black
8	N/C (Not Connected)	-



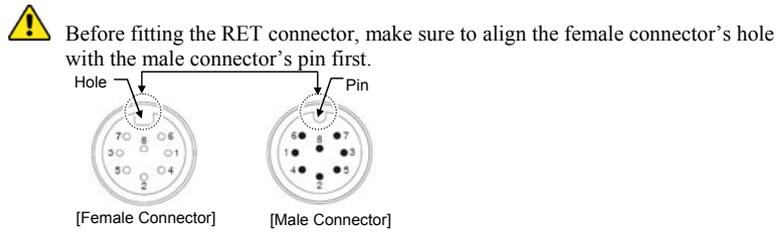


- 2 Install an RET cable from the RF Antenna to the RRH RET port.

Figure 90. Connecting RET Cable (1)

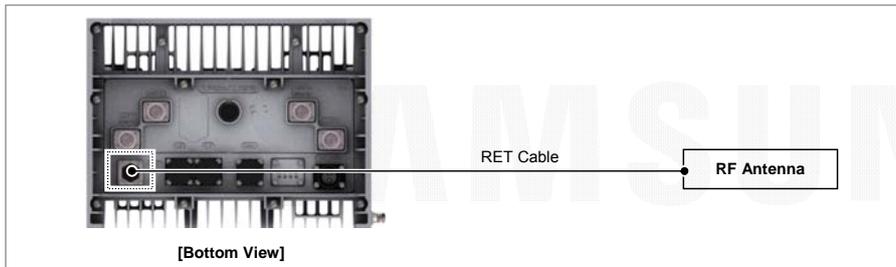

- 3 Separate the cap from the system side connector (RET port).

Figure 91. Connecting RET Cable (2)

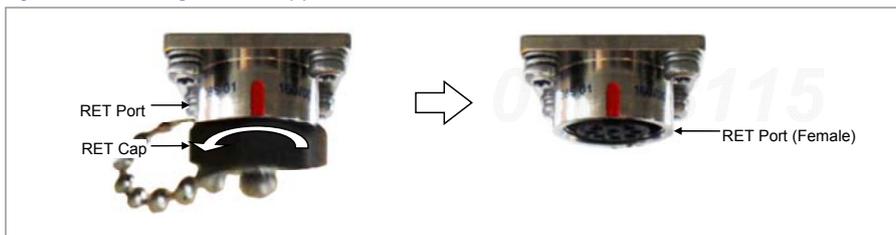

4 Connect the cable side RET connector to the system side RRH RET port.

Figure 92. Connecting RET Cable (3)



5 Tie the system side RET cap to the RET connector with a waxed string.

Figure 93. Connecting RET Cable (4)



Connecting RF Cable

⚠ The RF cable minimum radius of curvature must be observed.

Table 38. RF Cable Minimum Radius of Curvature

Category	Description		
RF cable min. radius of curvature	1/2 in. Feeder Line	Super Flexible Type	1.26 in. (32 mm)
		Flexible Type	4.92 in. (125 mm)


▶ To connect RF cable

Make sure you have the following items:

Table 39. Parts and Tools for connecting RF cable

Category	Description	
Installation Section	2T2R Connection	RF Antenna~RRH ANT1, ANT2
	2T4R, 4T4R Connection	RF Antenna~RRH ANT1, ANT2, ANT3, ANT4
Cable	RF Cable Assembly (1/2 in. Feeder Line)	
Connector	RF antenna	DIN Type-Male (Check the RF antenna specification and prepare connecting parts.)
	RRH	4.3-10 Type-Male
Recommended Torque Value	RF antenna	217 lbf-in
	RRH	44 lbf-in
Working Tools	RF antenna	<ul style="list-style-type: none"> • Torque Wrench (100~400 lbf-in), • Torque Wrench Spanner head (apply Hex. Head: 32 mm) • Spanner (32 mm)
	RRH	<ul style="list-style-type: none"> • Torque Wrench (10~50 lbf-in), • Torque Wrench Spanner head (apply Hex. Head: 22 mm) • Spanner (22 mm)


⚠ When operator installs the antenna, the antenna must be within the protective angle (left/right side 45° each from the central axis) to prevent the antenna from lightning damage.

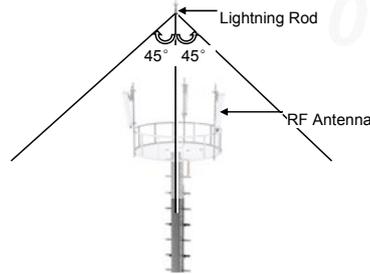

▶ To connect RF cable_2T2R Connection


- 1 Install RF cable from the RRH to the RF antenna.

Figure 94. Connecting RF Cable_2T2R Connection (1)

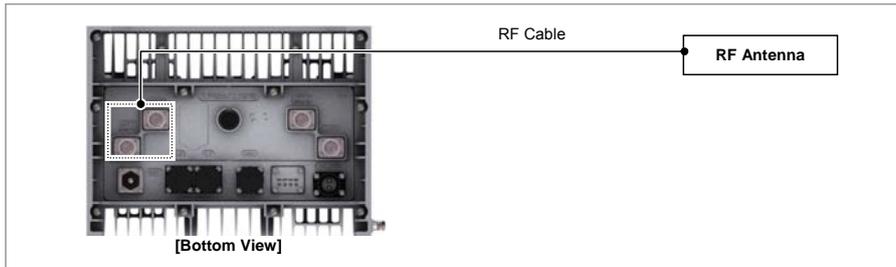


- 2 Insert the rubber for waterproofing boot to the RF antenna ports.

Figure 95. Connecting RF Cable_2T2R Connection (2)

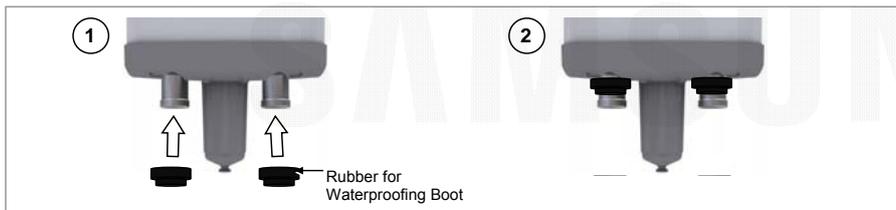

- 3 Connect cables to the RF antenna ports.

Figure 96. Connecting RF Cable_2T2R Connection (3)

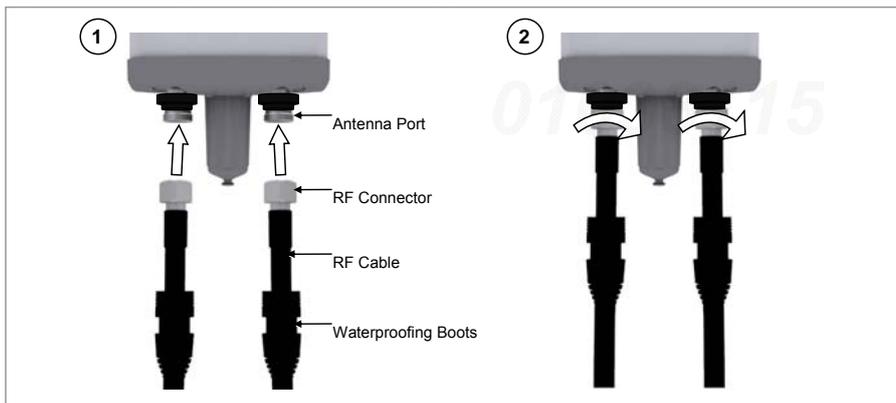




As different connector types may be used depending on the RF antenna type, check the antenna connector before connecting the cable.


- 4 After connecting the connector, push waterproofing boots up to the connector connection.

Figure 97. Connecting RF Cable_2T2R Connection (4)

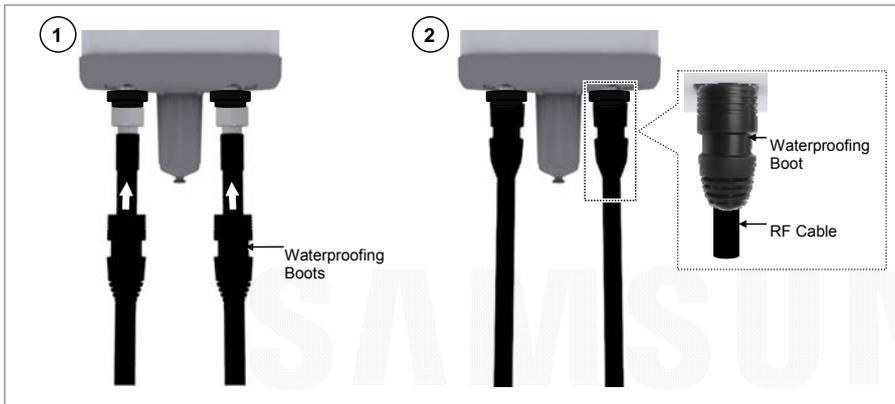


- 5 Insert the rubber for waterproofing boot to the system side RF ports. (ANT1, ANT2)

Figure 98. Connecting RF Cable_2T2R Connection (5)

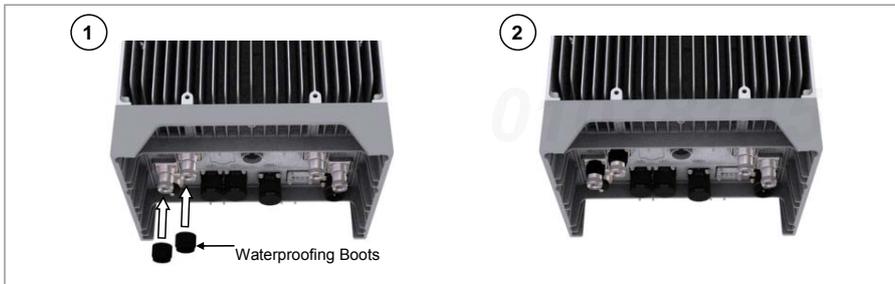


6 Connect cables to the system side RF port. (ANT1, ANT2)

Figure 99. Connecting RF Cable_2T2R Connection (6)

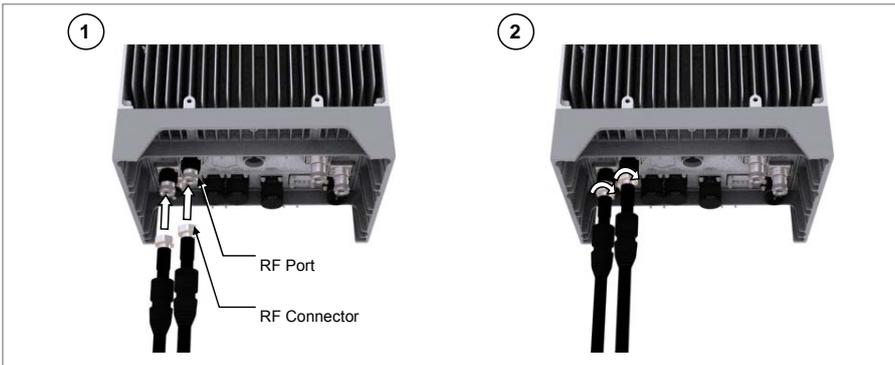

7 After connecting the connector, push waterproofing boots up to the connector connection.


Figure 100. Connecting RF Cable_2T2R Connection (7)

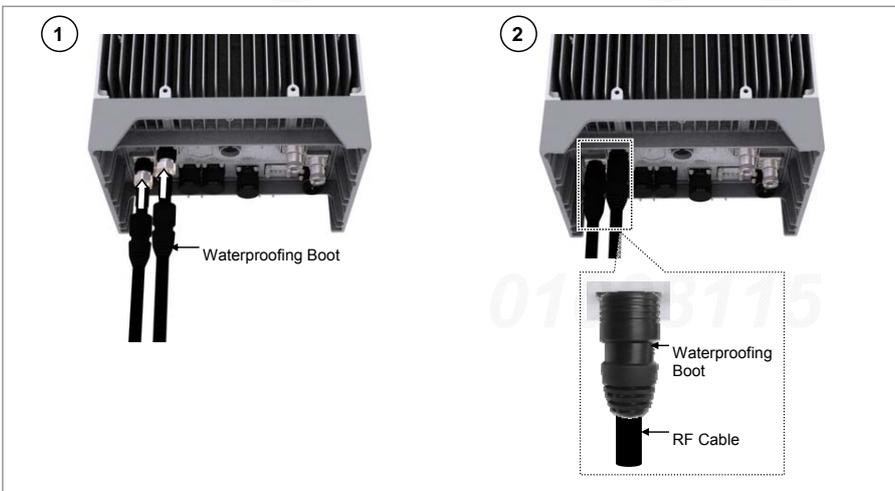

▶ To connect RF cable_2T4R, 4T4R Connection


- 1 Install RF cable from the RRH to the RF antenna.

Figure 101. Connecting RF Cable_2T4R, 4T4R Connection (1)

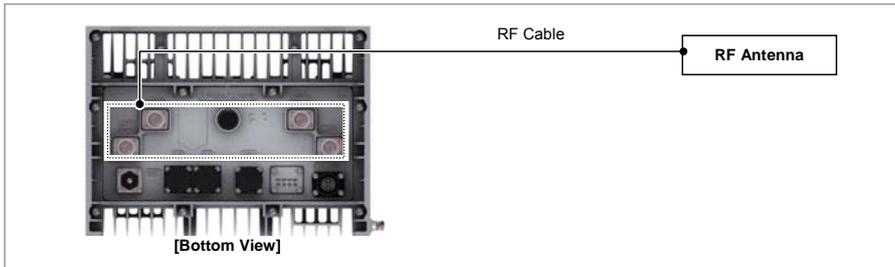

- 2 2T2R RF 케이블 연결과 동일한 방식으로 RF antenna ~ RRH(ANT 1, ANT 2, ANT 3, ANT 4) port 간 RF 케이블을 연결한다.

Figure 102. Connecting RF Cable_2T4R, 4T4R Connection (2)

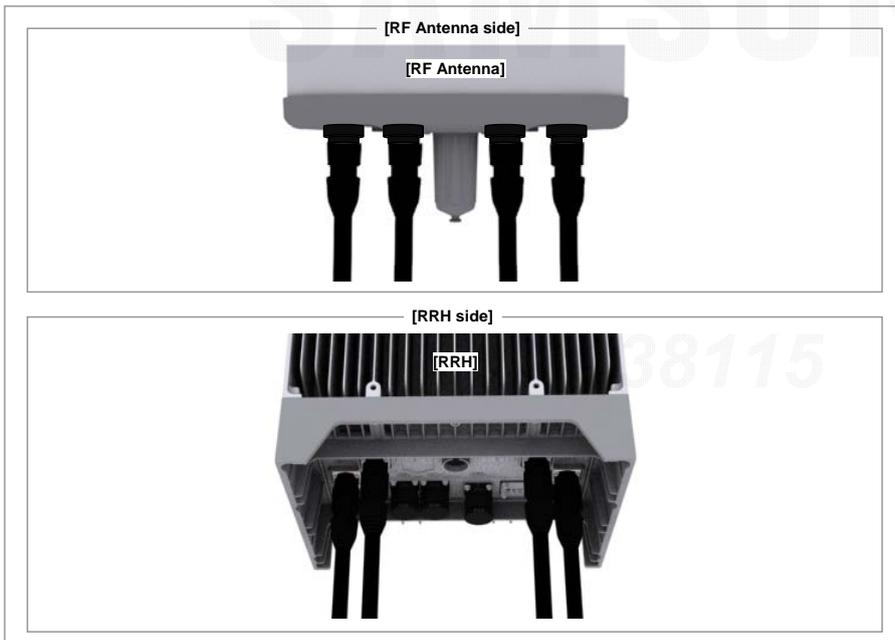

Checking RF Cable Connection

After connecting the RF cables, perform the continuity test and feeder cable return loss to check if the RF cable is changed and measure VSWR of antenna and RF cable.



Measure all cables of section ①~②. The measured VSWR should be the specification value or less. If the VSWR exceeds the specification value, disassemble the connector and measure each section separately.

-  If the VSWR value for minimum cable bend radius and length of RF cable is not applied, system may not work properly because RF signals cannot transmit or receive smoothly. So, the VSWR value for minimum cable bend radius and length of RF cable must be checked and applied.
-  When measuring VSWR, if operator opens the antenna port when the transmission output is not completely off, a spike signal may flow into the reception path, which may cause damage to LNA. Make sure the transmission output is completely off when measuring VSWR.
-  When RF cable connection integrated RET signal and DC power is applied using ANT1 port of RRH, RET cable should be installed separated from RF cable to RF Antenna.

Depending on the supplier or manufacturer of antenna/arrestor the connector type may be different. Also, the detail specifications of a connector may be different depending on cable type even for the same connector type. Therefore, check the detail specifications of a connector before preparing parts.
Ex) DIN Type-Male: for 1/2 in. Feeder line, for 7/8 in. Feeder Line

RF Cable Identification Tag Installation

Attach the identification tape in the below table to the RF cable.


Table 40. RF Cable Identification Tag

Category	Description
Installation position	Attach the identification tag to the both ends of the antenna.
Materials	Use the material of aluminum coated by vinyl for the identification tag.
Fixing method	Antenna side: Attach the tag to the feeder line using binding strings through the two holes on the tag. Equipment Side: Cover up the feeder line with the tag and fix it using binding strings through the two holes on the tag.
Identification method	The markings must be prevented from being erased by using relief engraving or coated labels.

Chapter 4 Inspect the Installation

The procedure to check the installation status is as follows:

Figure 103. *Installation Inspection Procedure*

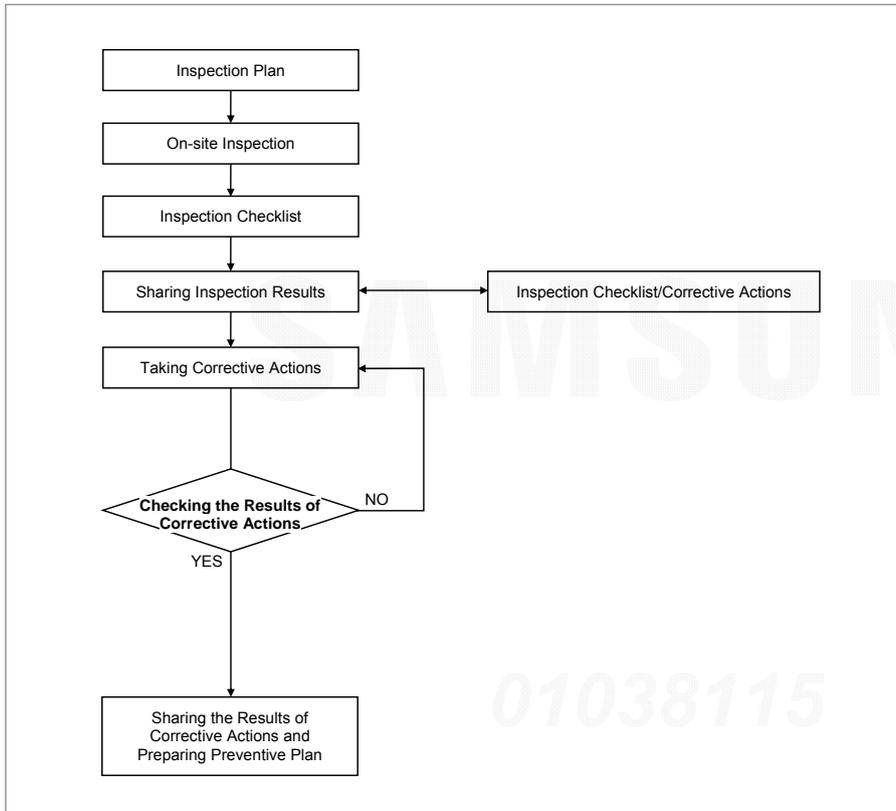

Inspection Plan

Create an inspection sheet per system and select an inspector to set an inspection schedule per site.

On-site Inspection and Inspection Checklist

The on-site inspection is to perform inspection visually or using instruments for

each specification, standard, and installation status, and so on based on the inspection checklist actually at a site where the system is installed.

The inspector must record the results onto the inspection checklist during or after filed inspection.

Sharing Inspection Results and Taking Corrective Actions

The inspector must share the inspection results (inspection checklist/corrective actions) with an installation operator and, the installation operator must take the corrective actions if necessary after reviewing the requirements.

Checking the Results of Corrective Actions

The inspector must check if the corrective actions are properly taken. If they are not sufficient, the inspector must ask the installation operator to take the corrective actions again.

Sharing the Results of Corrective Actions and Preparing Preventive Plan

After the corrective actions are all completed, the inspector must share the results with the installation operator and relevant departments and prepare a preventive plan to prevent the same or similar problems from re-occurring.

Construction Situation Checklist

Table 41. Construction Situation Check list

Category	Check Items	Criteria	Result		
			Pass	Fail	
Installing Equipment	Appearance of equipment and mechanical parts	Equipment damage such as Dent, scratch and crack, and so on			
	Placement of equipment and mechanical parts	Maintenance and horizontal/vertical placement			
	Leveling condition of equipment and mechanical parts	Horizontal/vertical status			
	Validity of status and specifications of fastening bolt/nut/washer, and so on		Checking fasteners omission		
			Compliance with assembly order of fasteners		
			Compliance with fastening torque value		
Insulation status	Checking electrical contact between insulators (insulation resistance tester)				
Grounding	Installation of ground bar	Checking the separation of communication/power/lightning grounding			
	Cable specification	Checking the specification			
	Cabling	Cable damage			
		Proper installation route			
Compliance with the radius of curvature					

Category	Check Items	Criteria	Result	
			Pass	Fail
	Cable binding status	Binding status		
		Binding interval		
		Checking binding materials		
	Cable connection	Assembly condition of a pressure terminal		
		Fastening condition of a pressure terminal		
		Checking compliance with fastening torque value		
	Installation status of cable tag	Position		
		Marking content		
		Checking tag installation method		
	Power	Installation status of power supply	Power supply capacity	
Output voltage (tester)				
Installation of circuit breaker		Checking circuit breaker capacity		
Cable specification		Checking the specification		
		Checking the limit distance		
Cabling		Cable damage		
		Proper installation route		
		Compliance with the radius of curvature		
Cable binding status		Binding status		
		Binding interval		
		Checking binding materials		
Cable connection		Checking cable connection (Pin Map)		
		Input voltage		
		Assembly condition of a pressure terminal and connector		
		Fastening condition of a pressure terminal and connector		
	Checking compliance with fastening torque value			
Installation status of cable tag	Position			
	Marking content			
	Checking tag installation method			
Other data cables	Cable specification	Checking the specification		
	Cabling	Cable damage		
		Proper installation route		
		Compliance with the radius of curvature		
	Cable binding status	Binding status		
		Binding interval		
		Checking binding materials		
	Cable connection	Checking cable connection (Pin Map)		

Category	Check Items	Criteria	Result		
			Pass	Fail	
		Assembly condition of a connector			
		Fastening condition of a connector			
		Checking compliance with fastening torque value			
	Installation status of cable tag	Position			
		Marking content			
		Checking tag installation method			
	RF	Antenna installation status	Checking specifications		
			Checking installation position		
			Checking fixing status		
			Checking gap between antennas		
Cable specification		Checking the specification			
Installation status of arrester		Checking the specification			
		Checking installation position			
		Checking fixing status			
Cabling		Cable damage			
		Proper installation route			
		Compliance with the radius of curvature			
Cable binding status		Binding status			
		Binding interval			
		Checking binding materials			
Cable connection		Compliance with connector finishing			
Installation status of cable tag		Position			
		Marking content			
		Checking tag installation method			
		Checking compliance with fastening torque value			
	Compliance with connector finishing				
Installation status of cable tag	Position				
	Marking content				
	Checking tag installation method				
Others	Reserved ports	Checking port cap fastening status			
	Cable inlet status/Connection of equipment I/O port	Checking fastening status (Conduit/Cable Gland)			
	Cable tray and duct	Checking installation status			
	Status of inside/outside of the equipment and system surrounding area	Checking the stocking condition (waste parts, waste materials, packing materials, and so on)			
Opinion					

Appendix A Acronyms

AC	Alternating Current
CDU	Cabinet Digital Unit
CPRI	Common Public Radio Interface
DC	Direct Current
DL	Down-Link
eNB	Evolved UTRAN Node-B
FTP	Foiled Twisted Pair
LTE	Long Term Evolution
MGB	Main Ground Bar
RET	Remote Electrical Tilting
RF	Radio Frequency
RRH	Remote Radio Head
RTN	Return
SEMS	pre-asSEMBled washers and screws
UDA	User Defined Alarm
UL	Up-Link
VSWR	Voltage Standing Waveform Ratio

SAMSUNG

01038115

Appendix B Sector Antenna Installation


Cautions when Installing a Sector Antenna

Precautions of antenna installation are as follows.

- Sector antennas should be installed vertically. ($\pm 1^\circ$)
- Antenna is the precise material, so be careful not to make damage or form change.
- When moving antenna, use the tool suitable to rating. In addition, use the rated carrying device which is at least 200 % or more than antenna considering the stability.
- Be careful not to give too much strength to the antenna.
- If it rains, suspend connecting the feeder cable and antenna.
- Fix it after adjusting the direction of antenna exactly.
- Distance between steel tower and antenna and the distance between send-receive antennas are based on the antenna layout.
- Attach the antenna on the position specified in the drawing.
- Install the antenna not to make a feature change of the antenna considering the direction of the radiation
- Connect the antenna not making the alien substance flowed so that Passive Inter-Modulation Distortion (PMID) is not affected.
- Measure VSWR of all antennas and the value should be within the regulated value.



When you install the antenna, the antenna must be within the protective angle (left/right side 45° each from the central axis) to prevent the antenna from lightning damage.

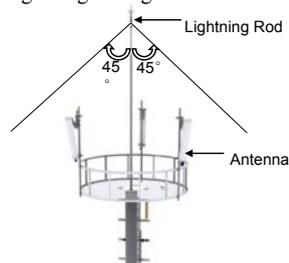


Sector Antenna Installation

The method of sector antenna installation is as follows.

- 1 Put up an antenna pole and insert the sector antenna into the antenna pole using a fixing clamp.
- 2 Set the antenna's up/down tilt to 0° and fix the fixing clamps at the top and bottom.
- 3 Adjust the tilted angle of the antenna by taking the signal strength into account.
- 4 The bolts on the upper and lower guide clamps must be loose as to allow angle adjustment of the antenna.
- 5 After adjusting the antenna angle, tighten up the 4 loose bolts on the upper and lower guide clamps.

Figure 104. Sector Antenna

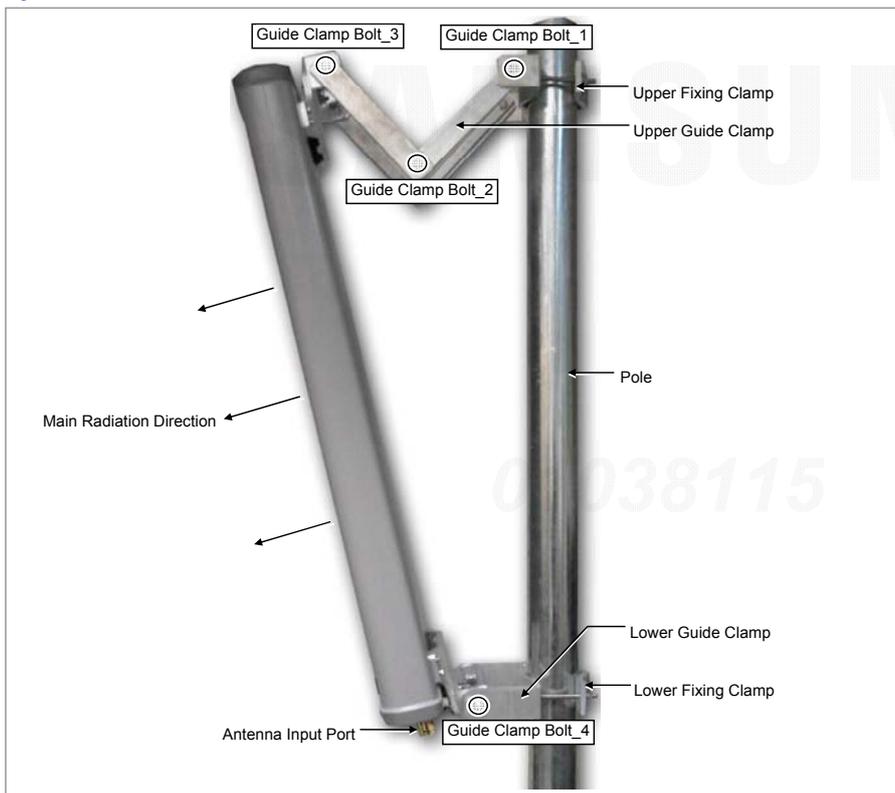

Appendix C Clean the Optical Connectors

Introduction

When connecting an optical cable to the system, the performance of the system can be decreased or failures can occur if the core section of an optical connector is dirty due to dust or foreign material. Therefore, operator should clean the optical connector before connecting an optical cable to the system.

When using an optical connector cleaner, use the products shown in the example below or their equivalents.

Examples:

Manufacturer-USCONEC (<http://www.usconec.com>)

- IBC™ Brand Cleaner (P/N: 9393): For LC-LC and MU Connector Cleaning
- IBC™ Brand Cleaner (P/N: 9392): For SC Connector Cleaning
- IBC™ Brand Cleaner (P/N: 12910): For ODC Connector Cleaning



Manufacturer-The Fibers (www.thefibers.com)

- HuxCleaner 1.25 mm Type: For LC and MU Connector Cleaning
- HuxCleaner 2.5 mm Type: For SC, FC and ST Connector Cleaning



Follow the manufacturer's instructions for cleaning the optical connectors.

Measure the Optical Output and Connecting the Optical Connector

▶ To measure the optical output

- 1 Using an optical power meter check the optical output.

- 2 If the optical output measurement result meets the reference value, clean the connector again and connect it.
- 3 If the measurement result does not meet the reference value, discard the cable, replace it with a new cable, and then clean the new one and connect it to the system.



[LC/PC Plug]



[Optical Power meter]

SAMSUNG

01038115

Appendix D Standard Torque

When operator fastens the bolt, refer to the standard torque value below to prevent the equipment and bolt from damage and secure by fastening. When the torque value for each connection part is defined already, refer to the defined value.

Table 42. Standard Torque Value for Fastening Bolts

Bolt Spec.	Torque Value (N·m)	Torque Value (lbf·in)	Torque Value (kgf·cm)
M3	0.63	5.6	6.4
M4	1.5	13	15
M5	2.8	25	29
M6	4.9	43	50
M8	12	110	127
M10	25	217	250
M12	42	372	428

Table 43. Brass Bolts Torque Value

Bolt Spec.	Torque Value (N·m)	Torque Value (lbf·in)	Torque Value (kgf·cm)
M6	2.9	26	30
M8	6.3	56	64

Table 44. Connector Connection Torque Value

Connector	Torque Value (N·m)	Torque Value (lbf·in)	Torque Value (kgf·cm)
SMA connector	0.59	5.2	6
TNC connector	0.88	7.8	9
N-type connector	2	17	20
DIN-type connector	25	217	250
4.3-10-type connector	5	44	51



Torque value can be different, depending on the material, characteristic and specification of the equipment and fastener. Make sure to check the proper torque value for each specification of the equipment and fastener.

SAMSUNG

SAMSUNG

RF4402d Series
Installation Manual

Document Version 1.0

© 2018 Samsung Electronics Co., Ltd.
All rights reserved.