 
 


Qwerty Remote (RMC-QTD1)

Remote Side View

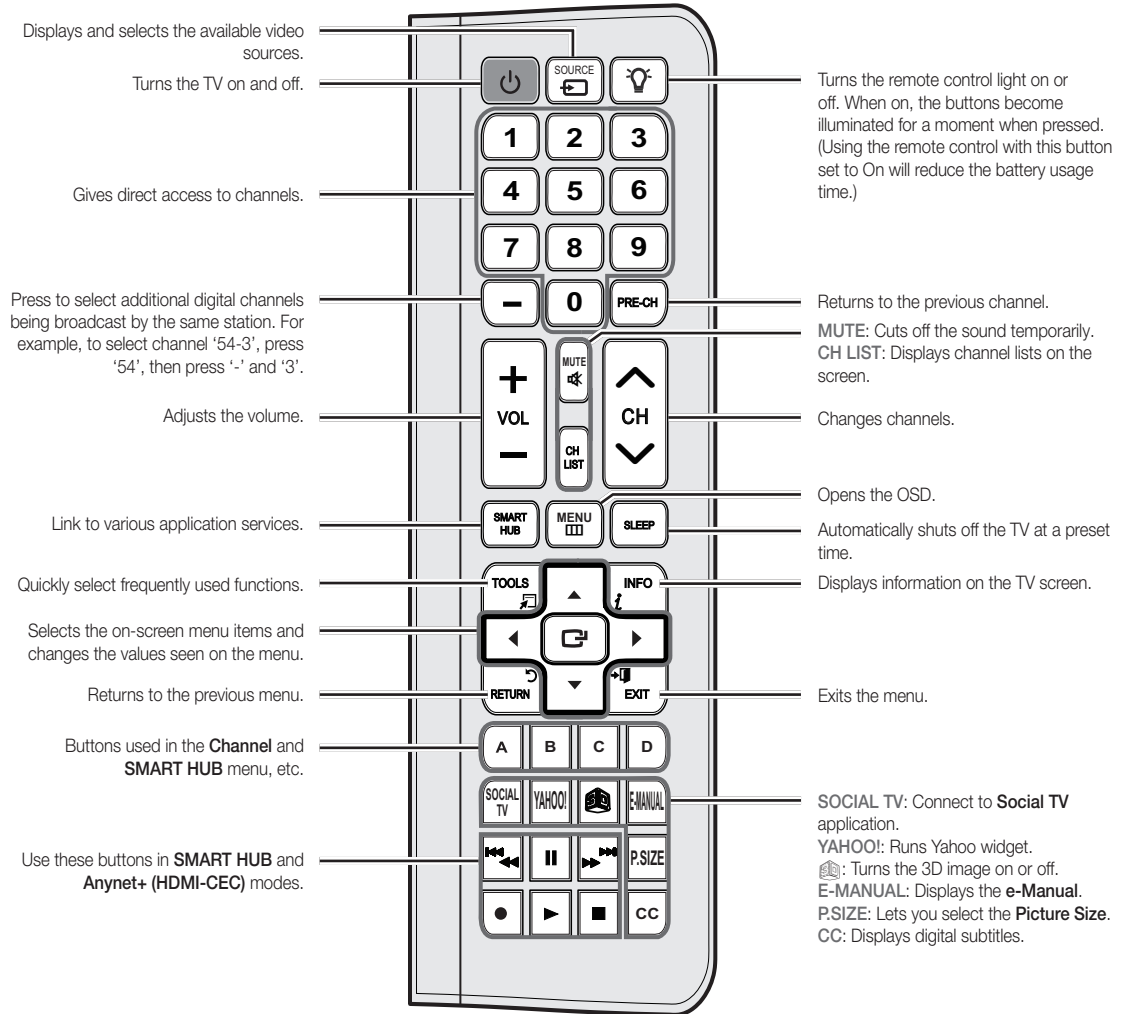

Qwerty Side View

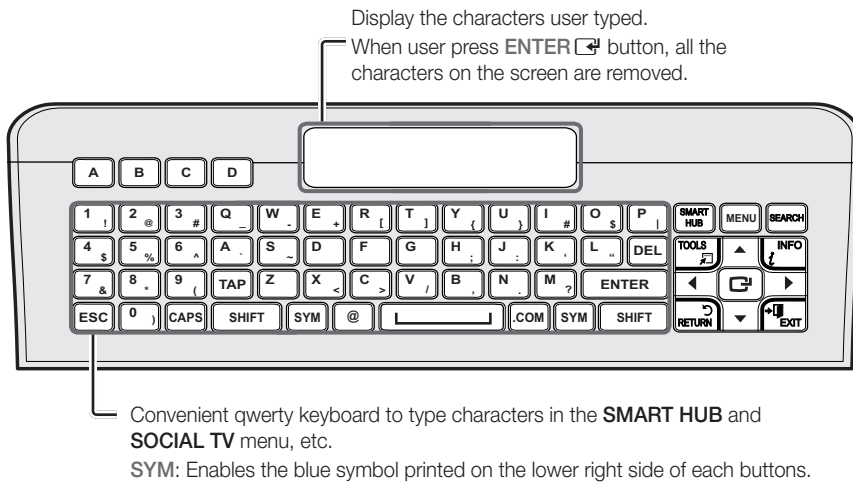 


NOTE

- The Remote side doesn't work when the Qwerty side is up, and vice versa.


Insert Batteries

1

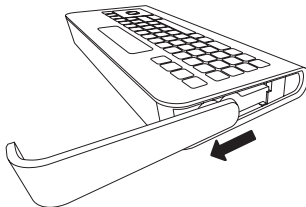


- Slide out the battery cover.

 2

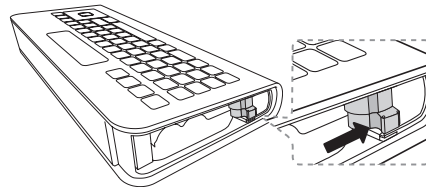


- Push the button right.

 3

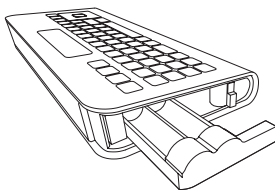

- Pull the battery tray out.

 4

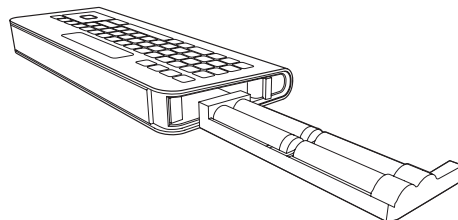

- Insert 4 AAA batteries in the tray and then insert the battery tray into the Qwerty Remote and put the cover.

Initial Pairing

- When the user inserts batteries into the Qwerty Remote, then "NEED PAIRING PRESS @+TAB" will be displayed repetitively on the screen.
- Press @ and **TAB** buttons at the same time.
 - A TV can be paired with only one Qwerty Remote.

To perform the pairing process again

- Press **MUTE**, **0**, **MUTE** and **0** buttons on the Remote side of new Qwerty Remote facing the TV.
- Follow the initial pairing process.

Specifications - Qwerty Remote

Model Name	RMC-QTD1
Battery	AAA x 4 To extend the battery life, use of alkaline battery is recommended.
Dimension(WxDxH)	2.4 X 1.0 X 6.0 inches (60.9 x 24.36 x 152.2 mm)
Weight	0.295 lbs (134 g)

Notice

FCC Statement

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Statement

This Class B digital apparatus complies with Canadian ICES-003.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.