


## Body-control type (SC12F50V Series)

### - HOSE

To reduce suction for leaning draperies, small rugs, and other light fabrics, pull the tap air until the hole is open

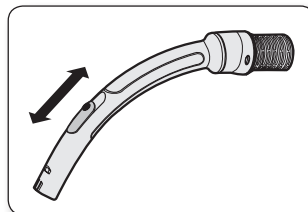


### - BODY

To control power level, just slide the power control up and down.

MIN = For delicate fabrics, e.g.net curtains.

MAX = For hard floors and heavily soiled carpets.

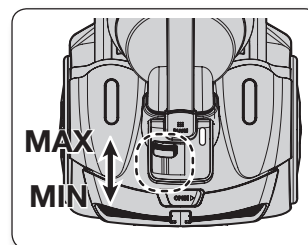

# operating the cleaner

## POWER BRUSH (SC12F50P SERIES)


### Vacuuming with the power brush

1. **Attaching the power brush**

The hose must be plugged into the canister and the power brush must be plugged into the hose and extension wand.

2. **Vacuuming**

- For best results, move the power brush slowly using short, overlapping strokes.
- For heavily soiled areas, repeat strokes in several directions.

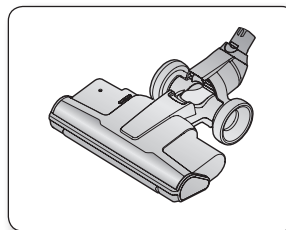

Do not invert the power brush while it is running.

3. **Checking the Performance of the power brush**

You can check whether the power brush is operating correctly by lifting up the extension tube slightly to view the back of the brush.

The power brush will not operate when it is jammed or the unit is turned off.


If the power brush is jammed, unplug the power cord from the electrical outlet.

Turn the power brush over and remove the jammed object.

Turn the power brush back to the vacuuming position and resume vacuuming.

### Overload protector

The overload protector shuts off the brush motor if the floor brush becomes obstructed. The floor brush will stop, but the suction motor will continue to run. To reset the overload protector, turn the vacuum off and unplug it. Clear the obstruction from the floor brush area. Use a pen tip to press down the reset switch. Turn the vacuum on and continue cleaning.

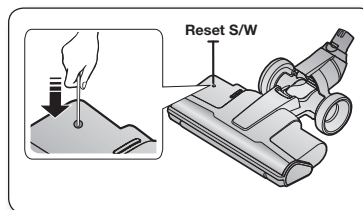

# maintain tools and filter

## POWER BRUSH (SC12F50P SERIES)

### CHECKING the Rotating Floor Brush and Drive Belt


You should check your vacuum cleaner's rotating floor brush and drive belt regularly for wear or damage. You should also clean strings, hair, and carpet fibers off the brush and brush ends. These can wrap around the brush and hamper its ability to effectively clean your carpet. Also remove any debris that has accumulated under the brush cover.

1. Unplug the vacuum from the electrical outlet.
2. Place the handle in low position and turn the vacuum cleaner over so the bottom side is up.
3. Remove the five screws (at arrows, right) with a screwdriver.
4. Remove the brush cover from the floor brush.
5. Grasp the rotating floor brush at both ends and lift.
6. Clean string, hair and other debris off the rotating floor brush, paying particular attention to brush ends.
7. Clean string, hair and other debris off the motor pulley and drive belt areas.
8. Check the drive belt carefully for wear, cuts or stressed areas.
9. Check the air passageway for obstructions. Remove debris from this area.



The rotating floor brush could cause the fringe of a rug to become tangled within the vacuum.


Use caution and turn off the floor brush when vacuuming throw rugs with fringe.

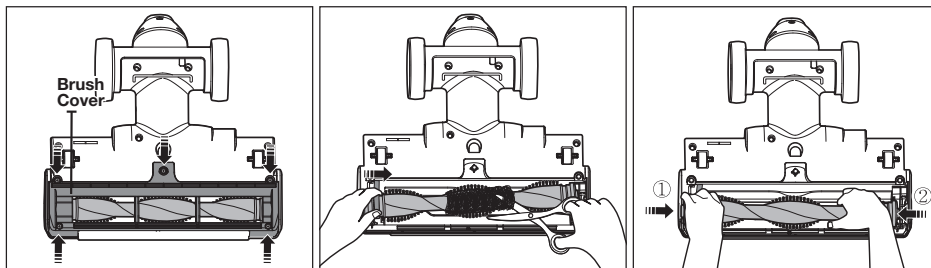


# maintain tools and filter

## Parquet brush (OPTIONAL)

- Vacuums dust in a wide area at once.
- Remove waste matter completely from the inlet if the inlet is blocked.

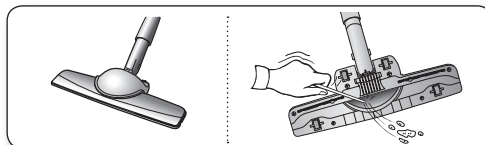

## Blanket brush (OPTIONAL)

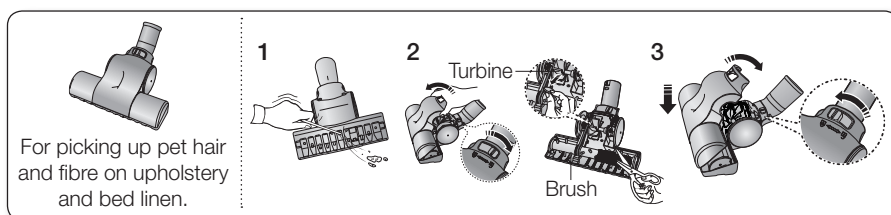

1. Remove waste matter completely when inlet is blocked.
2. Turn the lock button to (🔓), and remove.
3. To reassemble, align the cover to the front of the main body and close. After closing the cover, ensure that the lock button is turned to the (🔒) position.




Use for bedclothes only. Be careful not to damage the brush during unclogging.


## USING ACCESSORY

### Pipe

- Adjust the length of the telescopic pipe by sliding the length control button located in the center of the telescopic pipe back and forth.

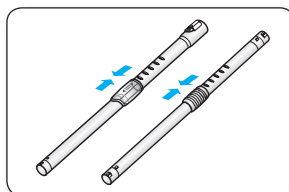


- To check for blockages, separate the telescopic pipe and adjust to shorten. This allows for easier removal of waste clogging the tube.

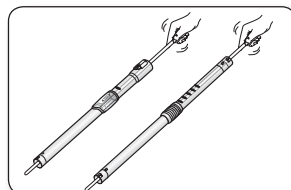


### Accessory (SC12F50H, SC12F50V Series)

- To use the upholstery tool, push the accessory on to the end of the hose handle.

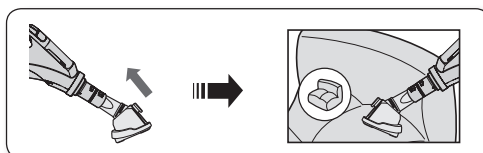

- Pull out the button, to use the dusting brush.

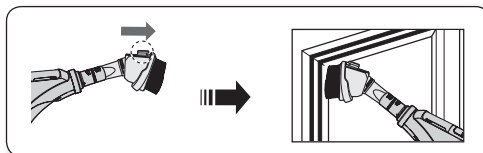

- To use the crevice tool, push the accessory on to the end of the hose handle in the opposite direction.

