



maintain tools and filter

Accessories (SC12F50P Series)


- Push the accessory onto the end of the hose handle.

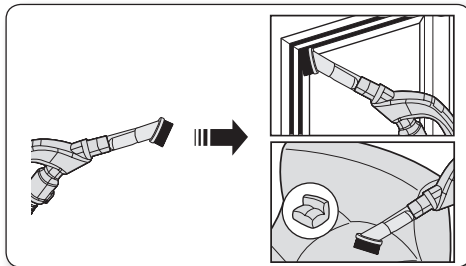


- Pull out the dusting brush to use the crevice tool.

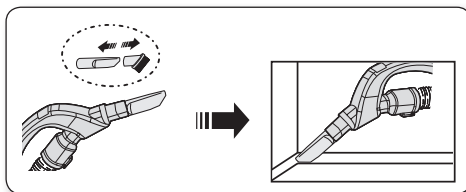

- Push the accessory onto the end of the pipe.

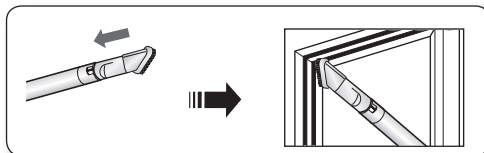


- Pull out the dusting brush to use the crevice tool.

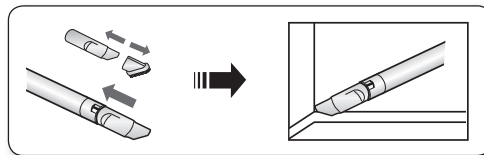


MAINTAIN FLOOR TOOLS

2-Step Brush (Optional)

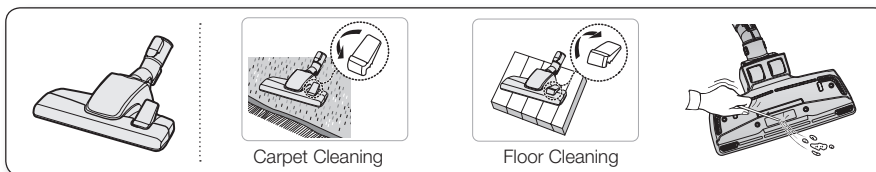

- Adjust the inlet lever according to the floor surface.
- Remove waste matter completely if the inlet is blocked.

Power Pet Plus Brush (Optional)

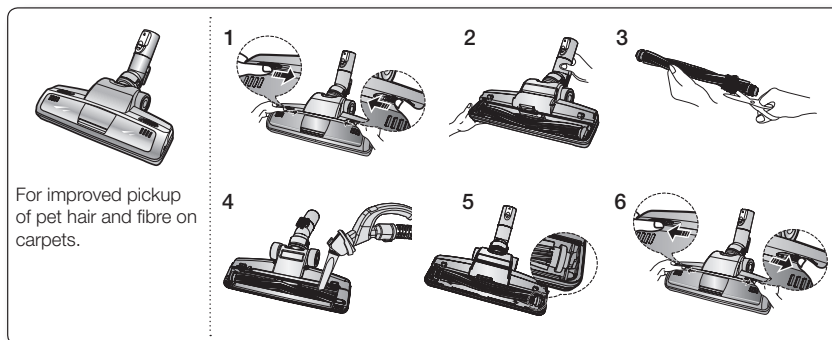


Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.

1. Push the Open button of the transparent screen cover to separate the cover.
2. Remove the brushbar from the transparent screen.
3. Remove waste matter such as dust and hair tangled around the brushbar using scissors.
4. Remove dust inside the brush housing using a dry duster or crevice tool.
5. Insert brushbar into rotating belt and assemble.
6. Click the transparent screen cover back into place to reassemble.

Parquet Master Brush (Optional)

- Vacuum dust in wide area at once.
- Remove waste matter completely if the inlet is blocked.

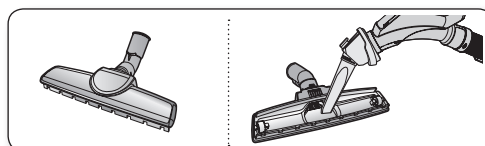


maintain tools and filter


Mini turbo brush (Optional)

- To replace brushroll

1. If a clog is present or debris is visible, unscrew the two screws on the back of the Mini turbo brush to remove the faceplate and clear any obstructions.

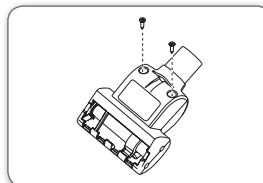


2. Inspect condition of brushroll.
Replace brushroll if brushes are worn down.
To remove brushroll, pull up and out of end slots in nozzle housing.
Insert ends of brushroll into same slots to replace.

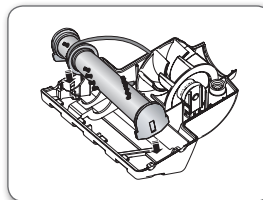



- Inspect belt to ensure that it is in good condition.
If belt is broken or cracked, replace belt according to To Replace Belt instructions.

3. Using at MAX.
Press the MAX button to operate the vacuum at maximum intake.





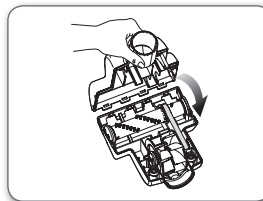


- To replace belt



1. Remove bottom plate.
See figure in to replace brushroll instructions.
2. Loop one end of new belt around shaft of pulley.
3. Loop other end of belt around designated area for it on brushroll.
Insert brushroll into slots in nozzle housing.
See figure in to replace brushroll instructions.
4. Fit Mini turbo brush back together as described in to replace brushroll instructions.

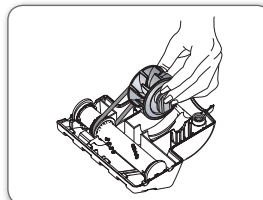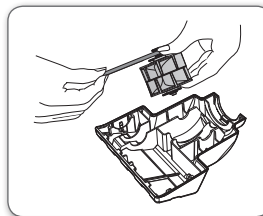

EMPTYING THE DUST BIN

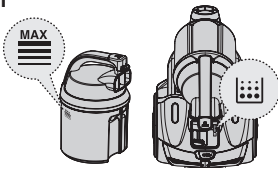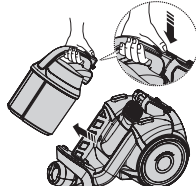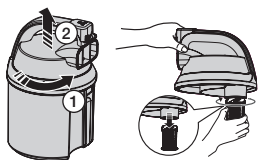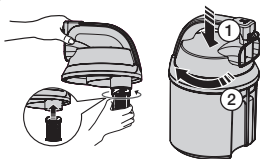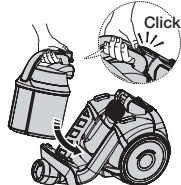1 	2 	3 
Once dust reaches the dust full mark, empty the dust bin.	Take the dust bin out by pushing the button.	Separate the dust bin cover.
4 	5 	6 
Throw the dust away in the bin.	Close the dust bin cover.	Before use, push the dust bin into the main body of the vacuum cleaner until you hear the "click" sound.

- Empty into a plastic bag.
(recommended for asthma/allergy sufferers)

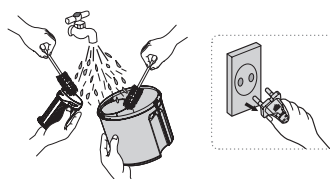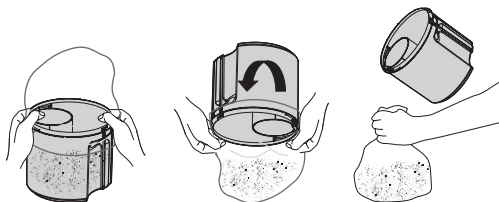


★ You may rinse the dust bin with cold water.

maintain tools and filter


CLEANING THE DUST FILTER

When to clean the dust filter


- The lamp will turn red when suction is reduced. If the light comes on, please clean the dust filter.

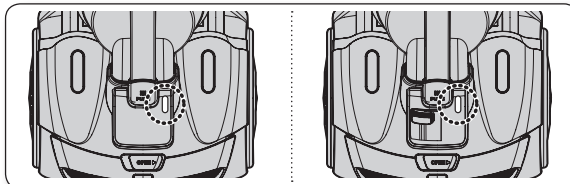

- Turn the vacuum power to 'MAX'.

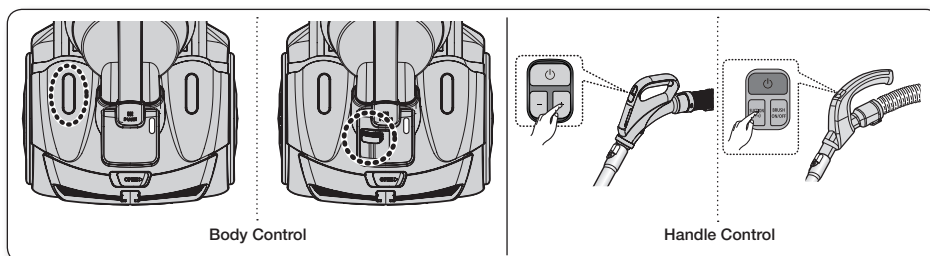

- If the filter check indicator turns red with the inlet floating 10cm above flat floor, clean the dust pack.

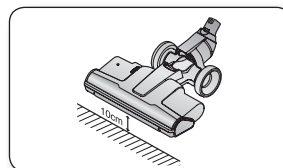

When suction is noticeably reduced continuously or vacuum cleaner abnormally overheats, please clean the dust pack.