

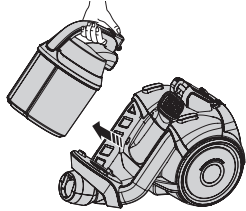
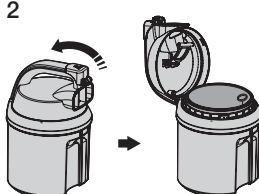
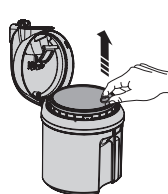
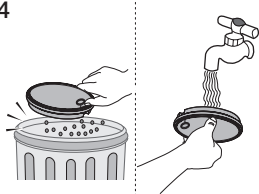
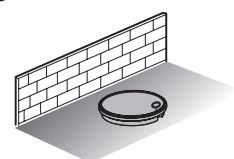
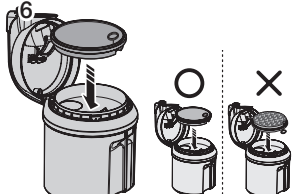


CLEANING THE DUST FILTER






1  Take the dust bin out.	2  Pull the dust bin cover to open.	3  Remove the filter from the dust bin.
4  Shake the filter over a garbage can to remove loose dust, then wash the filter with water.	5  Let the filter dry in the shade for more than 12 hours.	6  Put the filter into the dust bin.
7  Close the dust bin cover. To close the dust bin cover, filter should be assembled.		8  Before use, push the dust bin into the main body of the vacuum cleaner until you hear the "click" sound.

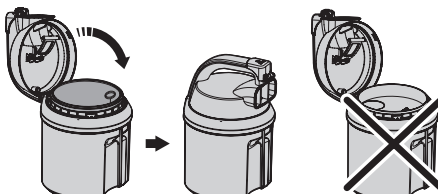

Make sure the filter is completely dry before putting it back into the vacuum cleaner. Allow 12 hours for it to dry.

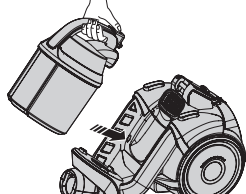

CLEANING THE OUTLET FILTER

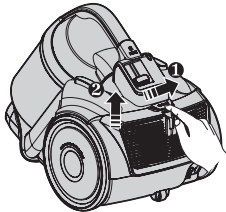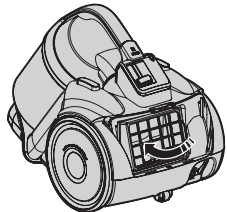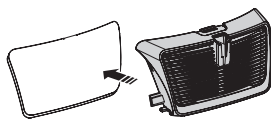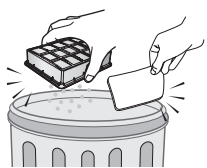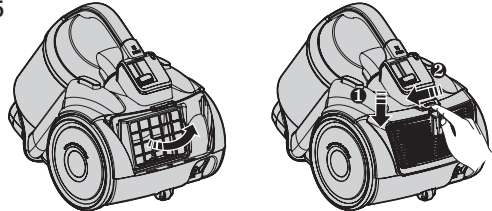1  Remove the fixed frame part at the back of the main body.	2  Pull out the HEPA filter using the tab.	3  Pull out the micro filter
4  Clean the filter.	5  Put the HEPA filter and frame part into the main body.	



- When suction is noticeably reduced continuously or vacuum cleaner abnormally overheats, please clean the outlet filter. Note. Do not wash HEPA filter. If cleaning does not resolve the problem Please replace blocked out filter.
- Replacement filters are available at your local Samsung distributor.

CHANGING THE BATTERY




1. If the vacuum cleaner does not work, replace the batteries in the handle. If the problem persists, please contact an authorized dealer.
2. Use 2 AAA batteries.



WARNING

1. Never disassemble or recharge the batteries.
2. Never heat up the batteries or throw them into a fire.
3. Do not reverse the (+), (-) poles.
4. Dispose of the batteries properly.

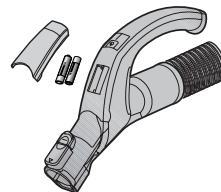

BATTERY TYPE : AAA Size



troubleshooting

PROBLEM	SOLUTION
Motor does not start.	• Check cable, plug and socket. • Leave to cool.
Suction force is gradually decreasing.	• Check for blockage and remove.
Cord does not rewind fully.	• Pull the cord out 2-3 m and push down the cord rewind button.
Vacuum cleaner does not pick up dirt.	• Check hose and replace if required.
Low or decreasing suction.	• Please check filter and, if required, clean as illustrated in the instructions. If filters are out of condition change them to new ones.
Body overheating.	• Please check filters, if required clean as illustrated in the instruction.
Static electricity discharge.	• Please decrease power suction. • This can also occur when air in the room is very dry. Please ventilate the room to air humidity become a normal.



If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

COUNTRY	CUSTOMER CARE CENTER	WEB SITE
CANADA	1-800-SAMSUNG(726-7864)	www.samsung.com/ca/support (English) www.samsung.com/ca_fr/support (French)
U.S.A	1-800-SAMSUNG(726-7864)	www.samsung.com/us/support

Série SC12F50

Aspirateur manuel d'utilisation

- * Avant d'utiliser cet appareil, veuillez lire attentivement les instructions.
- * Utilisation intérieure uniquement.

Français

imagine the possibilities

Merci d'avoir choisi un produit Samsung.

