

SAMSUNG

Keyboard


(KB-160E)



The KB-160E Keyboard is NEXiO S160's exclusive keyboard which combines functionality and mobility.

You may use the external keyboard immediately by attaching it to NEXiO. Also, when on the run, the keyboard can be folded and used as a protective cover for the LCD.

Keyboard Overview

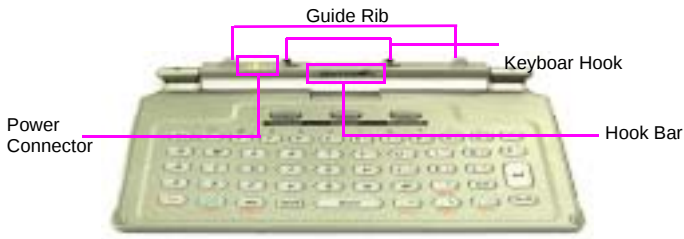

Attaching/Removing the Keyboard

To Attach the Keyboard

- 1 Place the keyboard on top of NEXiO, and then align the guide rib on keyboard with the keyboard hole on the bottom of NEXiO.




- 2 Push the bottom of the keyboard down to attach it to NEXiO.
- 3 The keyboard icon () will appear in the NEXiO task bar.

Note You will hear a sound when the keyboard is connected or disconnected from NEXiO.


To Remove the Keyboard

- 1 While (a) holding hook bar on keyboard to the right, (b) slide the keyboard toward the bottom side of NEXiO.

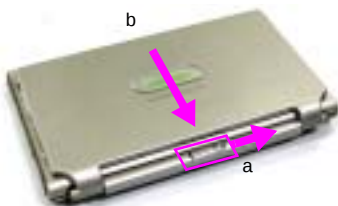

- 2 Keyboard is now disconnected.

Using the Keyboard

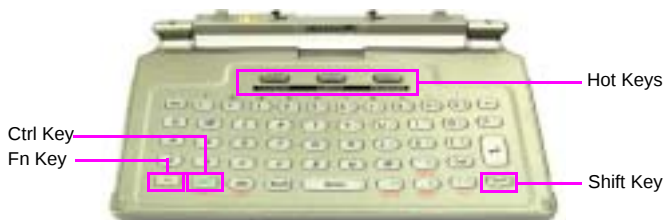

- ▶ **Hot Keys** Executes the Calendar, Contact and Messenger programs.
- ▶ **Fn Key** Allows you to use the orange keys.
- ▶ **Ctrl Key** Allows you to use the green keys.
- ▶ **Shift Key** Allows you to type capital letters or the symbols on the upper part of the keys.

Note The keyboard will not work when NEXiO's Hold Button is activated or when the LCD is turned off.

Note Due to the fewer number of keys (53) than a standard keyboard, the following features are not supported.
We recommend using the software keyboard in the following instances:
- The features on a standard keyboard are activated using Ctrl + the arrow keys.

- Key entry when using the RDP (Remote Desktop Protocol) to activate the PC's Client terminal.

To Lock Internal Software Keyboard

You can lock the NEXiO's internal software keyboard when using the external keyboard.

- 1 Tap on the extended keyboard () icon in NEXiO's task bar. "Lock Soft Keyboard" message appears.
- 2 Tap the message. The software keyboard will be locked, and () icon will replace () icon in the NEXiO's taskbar.
- 3 Tap on this message again to activate the software keyboard.

To Keep Keyboard while not in Use

Attach the keyboard to the underside of NEXiO when not in use.


Turn the NEXiO so its LCD is down, and attach keyboard to the

backside. Use the same method explained above.



Specifications

- ▶ Total number of keys 53
- ▶ Size 47.6mm * 81mm * 4mm
- ▶ Interface Serial

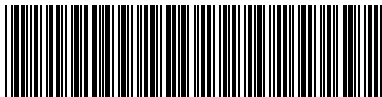

BA68-01881A10