



PORTABLE CELLULAR
TELEPHONE
SCH-611
Owner's Manual



Printed in Korea
Code No. : GG68-xxxxxA
Basic. 5/99. Rev.1.0



Table of Contents

GETTING STARTED

Unpacking	X
Phone Layout	X
Key Functions	X
Display	X
Icons	X
Installing Battery	X
To Install the Battery	X
To Remove the Battery	X
Charging a Battery	X
Low Battery Indicator	X
Switching the Phone On/Off	X

GENERAL FUNCTIONS

Making a Call	X
Correcting the Number	X
Ending a Call	X
Emergency Dialing	X
Prepend Dialing	X
Making a Call from the Phone Book	X
Voice Dialing	X
Last Number Redial	X
Answering a Call	X
Viewing Missed Calls	X
In-Call Options	X
Call Waiting	X
Three-Way Calling.....	X
Call Forwarding.....	X
Adjusting the Volume.....	X
Quick Switching to Vibration Mode	X
Recording Voice Memo	X

USING THE MENUS

Using the Scroll Keys	X
Using the Index System	X
Menu Map	X

CALLS

Outgoing (<i>MENU 1-1</i>)	X
Incoming (<i>MENU 1-2</i>)	X
Erase Logs (<i>MENU 1-3</i>)	X
Air Time (<i>MENU 1-4</i>)	X

PHONE BOOK

Find Name (<i>MENU 2-1</i>)	X
My Phone Number (<i>MENU 2-2</i>)	X
Add Entry (<i>MENU 2-3</i>)	X
Storing Phone Numbers at Call End	X
Entering a Name	X
Find Entry	X

SOUNDS

Ring (<i>MENU 3-1</i>)	X
Ring Volume	X
Ring Type	X
Ring Tone	X
Key Volume (<i>MENU 3-2</i>)	X
Alert (<i>MENU 3-3</i>)	X
Minute Beep	X
Service Area	X
Remind Call (<i>MENU 3-4</i>)	X
Differential Ring (<i>MENU 3-5</i>)	X

DISPLAY

Backlight (<i>MENU 4-1</i>)	X
Greeting (<i>MENU 4-2</i>)	X
Version (<i>MENU 4-3</i>)	X
Language (<i>MENU 4-4</i>)	X
Contrast (<i>MENU 4-5</i>)	X

MESSAGES

Voicemail	X
Page	X
Text	X
Alert	X
Erase All	X

ACCESSORIES

Batteries	X
Dual-Slot Desktop Charger	X
Cigarette Lighter Adapter	X
Travel Charger	X
Hands-Free Car Kit	X
Ear-Microphone	X
RS-232C Cable	X

USING THE BATTERIES..... X

SAFETY INFORMATION..... X

GLOSSARY OF TERMS..... X

INDEX..... X

Safety Precautions and Important Notices

Read these simple guidelines. Failure to comply with these guidelines may be dangerous or illegal.

For more detailed safety information, see Safety Information on page xx.

ROAD SAFETY COMES FIRST

Do not use a hand-held phone while driving; park the vehicle first.

SWITCH OFF IN AIRCRAFT

Mobile phones can cause interference. Using them on aircraft is illegal.

SWITCH OFF NEAR BLASTING

Do not use the phone where a blasting operation is in progress. Observe restrictions, and follow any regulations or rules in force.

SWITCH OFF WHEN REFUELLING

Do not use the phone at a refuelling point or near fuels or chemicals.

INTERFERENCE

All mobile phone may be subject to radio interference, which may affect their performance.

QUALIFIED SERVICE

Only qualified service personnel must install or repair cellular equipment. Use only approved accessories and batteries.

USE SENSIBLY

Use only in the normal position (to ear).

Avoid unnecessary contact with the antenna when the phone is switched on.

IMPORTANT! Use only accessories approved by the phone manufacturer. This apparatus is intended for use when supplied with power from SAMSUNG approved Travel adapter TA12(??) and Desktop charger DTC33(??). The use of any other types will invalidate any approval or warranty applying to the phone, and may be dangerous.

When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

Getting Started


Unpacking

Your package contains the following items.

Handset



Travel Charger

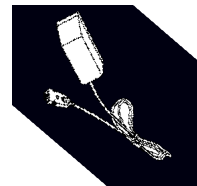


Battery



Strap



 
User's Manual



In addition, you can obtain the accessories for your phone from your local SAMSUNG dealer. For information on the accessories, see page xx.

Phone Layout

The following illustration shows the main elements of your phone.

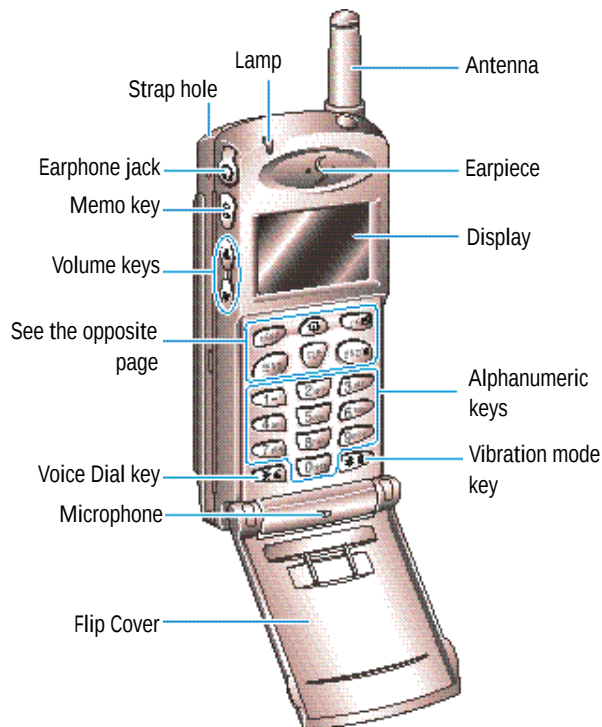

Key Functions

MENU Enters the menu facility. Also, scrolls through the menu options.

 *In the menu facility*, scrolls through the menu options.
In the idle mode, displays Phone Book names.

 *In the idle mode*, enters RX Message menu.
In the menu facility, selects a menu function or stores information that you have entered (such as a name in the phone memory).

SEND Makes or answers call.
In the idle mode, enters Outgoing call log.

CLR Deletes characters from the display. *In the menu facility*, returns to the previous menu level.

  Ends a call. Also switches the phone on and off when pressed and held. *In the menu facility*, returns to the idle mode and cancels your input.

0-9 Enters numbers, letters and some special characters.

 *In the idle mode*, enters Voice Dial mode when pressed and held. *In name input mode*, moves cursor to left.

 *In the idle mode*, quickly changes to Vibration mode when pressed and held. *In name input mode*, moves cursor to right.


(On the side of the phone)

 Adjusts voice volume during conversation and key beep volume in the idle mode. *In the menu facility*, scrolls through the menu options.

 Enters Voice Memo menu. Holding down the key starts recording voice memo.

Display

The display comprises two areas: an upper line of static icons, and the lower text and graphic area. The following icons display at power-on:

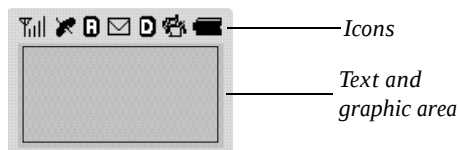

Icons



Shows the received signal strength. The greater the number of bars, the better the signal strength.



Indicates that the phone is outside a service area and cannot send or receive calls.



Appears when you are out of your home area and have registered with a different network (when travelling in other countries, for example).



Appears when a new message has been received.



Indicates a Digital mode.



Indicates a Vibrate mode.




Shows the level of your battery. The more bars you see, the more power you have left.


Installing Battery

To Install the Battery

1. Hold the battery so that the metal contacts on the bottom of the battery line up with the metal contacts on the back of the phone.
2. Place the battery on the back of the phone with the top of the battery about a quarter of an inch from the latch.

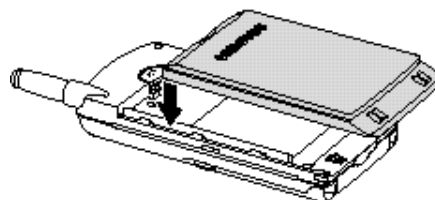


3. Gently slide the battery toward the top of the phone until snaps into place.

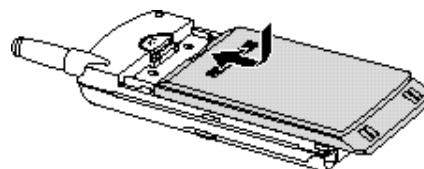

To Remove the Battery

If you want to remove the battery, do as follows:

1. If necessary, switch off the phone by holding down the  key until **Bye Bye** message is displayed.
2. Push and hold down the catch above the battery on the back of the phone, and slide the battery down the phone. Then lift the battery away.

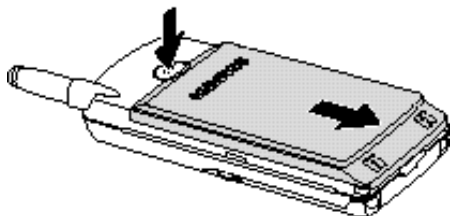


Charging a Battery

Your phone is powered by a rechargeable Li-Ion battery. A travel adapter is provided with your phone. Use only approved batteries and chargers. Ask your local SAMSUNG dealer for further details.

The phone can be used while the battery is charging.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery is fully recharged in approximately 180 minutes.

1. Check the lead from the travel adapter to the bottom of the phone. Check that the arrow on the lead connector is facing towards the front of the phone.

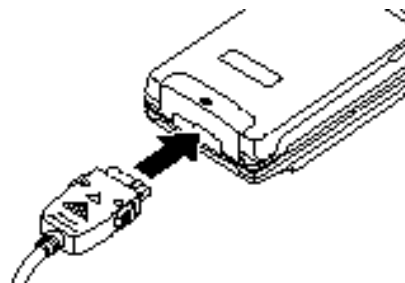


2. Connect the adapter to a standard AC wall outlet.

Switching the Phone On / Off


3. When charging is finished, disconnect the adapter from the power outlet.

Disconnect the adapter from the phone by pressing the grey tabs on either side of the connector and pulling the connector out.

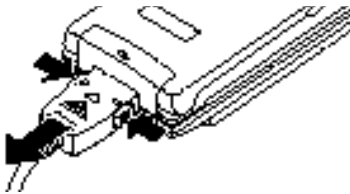

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, a clear battery icon (no bars displayed) flashes in the upper right corner of the screen. You will hear a warning tone and a message will be repeated at regular intervals on the display:

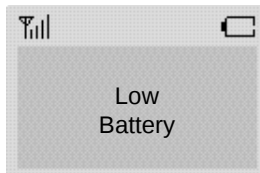

When the battery becomes too weak for the phone to operate, it switches off automatically.

1. Open the flip cover.
2. Hold down  key for more than one second to switch the phone on.

The red light flashes, an alert sounds:

- When the system locates services, the greeting message displays along with the date and time. You can now place and receive calls.
- If the system cannot locate service, the greeting message displays without the date and time. In this case, you cannot place and receive calls. Power off the phone, then try again later when service is available.
- If your phone is locked, '**-Locked-**' displays. Press **MENU** key, and enter the four-digit lock code to unlock the phone.

3. When you wish to switch the phone off, hold down the  key for more than two seconds.

Making a Call

When the idle screen is displayed, key in the area code and phone number and press **SEND** key.

Note: If you have set **Auto Retry** option (7-1) to **On** (see page xx) and the call does not connect, the phone automatically retries to make the call.

Correcting the Number

To clear...

Then

The last digit displayed

Press **CLR** key.

The whole display

Hold down the **CLR** key for more than one seconde.

Ending a Call

When you have finished you call, briefly press the  key or close the flip.

Emergency Dialing

You can place calls to 100 or one of the three emergency numbers that are in your emergency number list even if your phone is locked. For further information on emergency number list, refer to page xx.

Prepend Dialing

The Prepend option enables you to add up to three digits, such as area codes and network feature activation codes, to a phone number of up to 10 digits. You can prepend an existing entry in the Phone Book or Call Logs before dialing.

To prepend existing phone numbers in the Phone Book or Call Logs:

1. Access the phone number entry.
2. When the desired phone number displays, press **MENU** key to access Options.
3. Press **3** to select **Prepend** option.
4. Enter the area code or feature code.
5. Press **SEND** key to dial the number.

Making a Call from the Phone Book

You can store the phone numbers called regularly in memory, called the Phone Book. You then simply recall the number to dial. For further information on Phone Book, refer to page xx.

FINDING ENTRIES BY NAME, THEN DIAL

1. Press  key in the idle mode.

The screen shows the names stored in the Phone Book in the alphabetical order.

2. Use  key to find the desired name. You can also enter the first letter of the name by pressing the associated alphanumeric key.

3. Press **SEND** key to dial the stored number with the name.

ONE-TOUCH DIALING BY MEMORY LOCATION

Memory locations 01 through 09 are special one-touch locations. You can dial the phone numbers stored in the Phone Book memory from 01 through 09 simply by pressing one button.

1. Press and hold the second digit of the memory location containing the number to be dialed.

For example: Location no. 09
Press **9** and hold.

The number (and name) stored is displayed, then dialed.

TWO-TOUCH DIALING BY MEMORY LOCATION

Once you have stored phone numbers in the phone book memory, you can dial them easily whenever you want.

1. Press the first digit briefly, then hold down the second digit of the memory cell.

For example: Location no. 23
Press **2** briefly and hold down **3**.

The number (and name) stored is displayed, then dialed.

Voice Dialing

1. To place the call, press and hold  key, or open the flip, depending on the **Set Active** option (see page xx).

2. At the voice prompt, say the name into the phone.

- If the phone recognizes the name, the phone attempts a connection.
- If the phone does not recognize the name, the screen prompts for the name again.
- If the phone is unable to recognize the name after two attempts, the message **Cannot Recognize Name.** **Please check name** displays. Try the call again later, or check the recorded name.


Last Number Redial

The phone stores the last 10 numbers dialed. To recall any of these numbers, proceed as follows.

1. If there are any characters on the display, clear the display by holding down the **CLR** key for more than one second.
2. Press **SEND** key. The list of outgoing calls are displayed.
3. Use the  key (or **▲** or **▼** key on the left side of the phone) to scroll through the numbers until you select the required number.
4. Press **SEND** key to dial the number displayed.

Answering a Call

When somebody calls you, the phone rings and **CALL** in the middle of the screen is displayed.

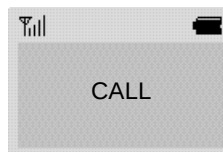

If the caller can be identified, the caller's phone number (or name if stored in your Phone Book) is displayed. If the caller cannot be identified, only the **CALL** message appears.

1. To answer a call, open the flip cover. If the flip is already open, press **SEND** key.


If the Any key Ans menu option (7-4) is set to On, you can press any key to answer a call except for  .

2. End the call by closing the flip cover or pressing .

Note: You can answer a call while using the phone book or menu features.

Viewing Missed Calls

If you are unable to answer a call for any reason, you can find out who was calling you, if this service is available. In this way, you can call the person back, if necessary.

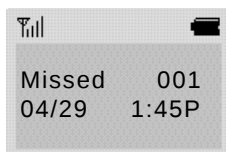

The number of missed calls is displayed on the idle screen immediately after the call was missed.

To view the missed call, refer to '**Incoming**' (1-2) under '**CAIS**' on page xx.

In-Call Options

Call Waiting

This feature enables you to receive a second call during conversation. When a Call Waiting call comes, the incoming call alert sounds, when set, and a text notification displays. Contact your service provider to activate Call Waiting call.

To answer a Call Waiting call:

1. To answer the call, Press **SEND** key. The phone connects the calling party, and places the current party on hold.
2. Press **SEND** key again to switch between two parties.

Three-Way Calling

This feature enables you to conduct conference calls with two separate parties at the same time. You are billed airtime for each outgoing call separately. Contact your service provider to activate Three-Way Calling.

To place a Three-Way call:

1. During conversation, press **SEND** key, enter the phone number for the third party, and then press **SEND** key again. The phone places the other party on hold.
2. When the third party answers, press **SEND** key again, to connect with the original party.

Call Forwarding

This feature provides the option of forwarding incoming calls to another phone number, even while your phone is off. Activating Call Forwarding does not affect outgoing calls made from this phone. Contact your service provider to activate Call Forwarding.

Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the volume keys on the left side of the phone. Press ▲ to increase and ▼ to decrease the volume.



Press the keys to adjust the volume.

In the idle mode, you can adjust the key tone volume using the same keys.

Quick Switching to Vibration Mode

You can quickly switch your phone to Vibration mode with a touch of #* key. Press and hold the key until the icon and **-Vibrate-** appears in the display. Your phone goes to the vibration mode immediately.

Press and hold #* key again to resume the phone's alert type which was previously set through the **Ring** menu under **SOUND** menu; see page xx for further details.

This feature is convenient when you are in a hurry to mute the phone's ringer in a theater for example.

Recording Voice Memo

You can access **VOICE MEMO** menu by pressing E key on the left side of the phone in the idle mode.

If you want to record voice memo, press and hold the E key. Your phone records voice up to 60 seconds while the key is pressed and held.



Press the E when you record a memo.

For more information on **VOICE MEMO** menu, refer to page xx.

Using the Menu

A three-level menu structure is available to set the various options available on your phone. You can set the menu options in two different ways.

Using the Scroll Keys

The following keys are used to set menu option by scrolling then selecting an option.

Key	Purpose
MENU	Enters the menu structure. <i>In the idle mode</i> , moves to the next menu in the main menu level and moves to the next screen in the sub-menu levels.
	<i>In the menu mode</i> , moves to the next menu or option. You can also use the ▼ or ▲ key on the left side of the phone to move to the next or previous option.
	Access the menu displayed or the highlighted option.

Example: Connecting the **Record** option in **VOICE DIAL** menu

1. Press **MENU** key to access the main menu.
2. Press **MENU** or  key repeatedly until **VOICE DIAL** is displayed, then press  key. The **VOICE DIAL** menus are displayed.
3. Press  key to select **Record** highlighted. You are connected to **Record** option.

Using the Index System



Each menu option is assigned a hierarchical number. You can use this number to access the corresponding option directly. Simply press **MENU** and key in the required number.

Example: Connecting the **Record** option in **VOICE DIAL** menu.

1. Press **MENU** key to access the main menu.
2. Press **5** to access **VOICE DIAL** menu. The **VOICE DIAL** menus are displayed.
3. Press **1** to select **Record**. You are automatically connected to **Record** option.

The numbers assigned to each option are indicated on the following menu map.

Menu Map

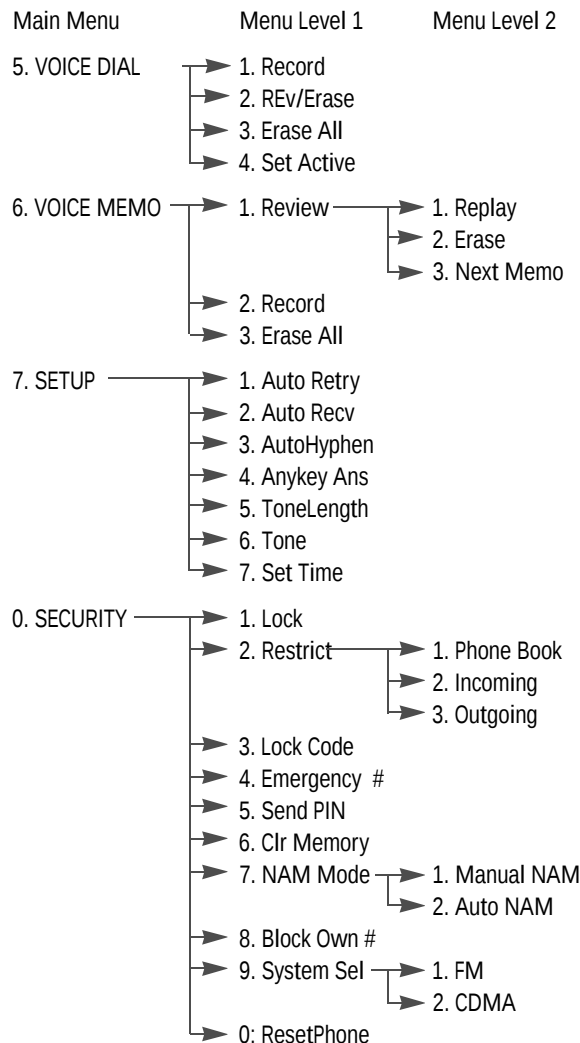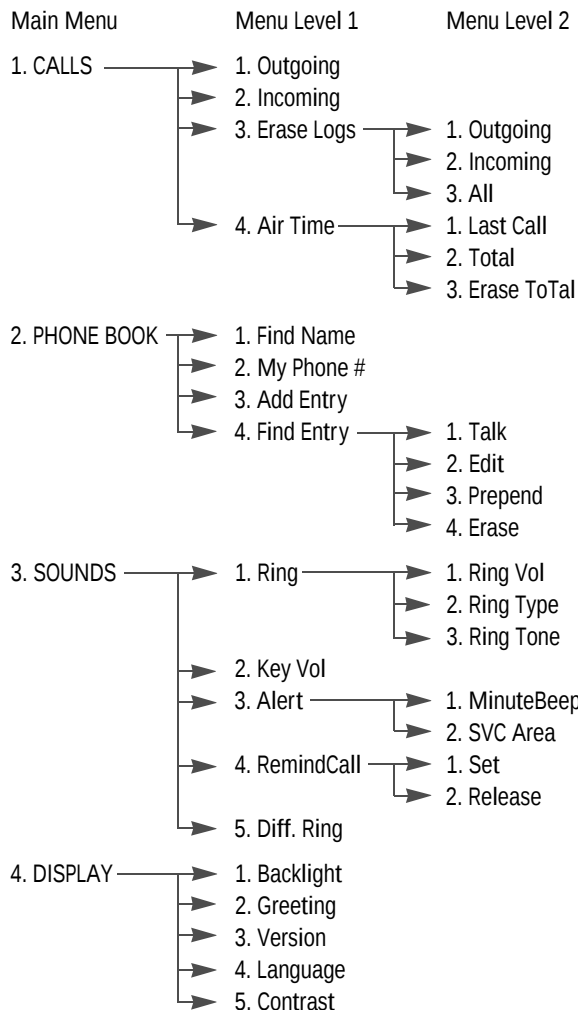

Calls

You can use the **CALLS** menu to:

- View and dial the last outgoing or incoming numbers.
- Erase the numbers in the CallLog memory
- View the duration of calls.

Outgoing

MENU 1-1

The phone stores up to nine outgoing calls you dialed. When you access this menu, the list of outgoing calls are displayed.

To...	Press...
Select an entry	 key
Dial the selected entry	SEND key
View the date and time at which the call was dialed and use option features	 key

When you press  key, you can view the date/time stamp for the selected entry. If there is a Phone Book match, the name displays.

Press **MENU** key to access Options. The following options are available:

Talk: dials the selected number.

Show Entry (or **Store** if the phone number is not currently stored in the Phone Book): shows Phone Book entry or stores the number in the Phone Book.

Prepend: allows to add an area code or feature code to the number before calling or saving the number.

Incoming

MENU 1-2

This option lets you view the last 9 calls received. When you access this menu, the last of incoming calls are displayed.

To...	Press...
Select entry	 key
Dial the selected entry	SEND key
View the date and time at which the call was received and use option features	 key

When you press  key, you can view the date/time stamp for the selected entry. If there is a Phone Book match, the name displays.

Press **MENU** key to access Options. The following options are available:

Talk: dials the selected number.

Show Entry (or **Store** if the phone number is not currently stored in the Phone Book): shows Phone Book entry or stores the number in the Phone Book.

Prepend: allows to add an area code or feature code to the number before calling or saving the number.

Erase Logs

MENU 1-3

You can erase the numbers stored in the Call Log memory.

Outgoing: The numbers you called are erased.

Incoming: The numbers you received are erased.

All: All calls you dialled and received are erased.

Air Time

MENU 1-4

Using this option, you can view the call time of the last call, as well as total air time for all calls since you last reset the timer.

Last Call: length of the last call

Total Call: total length of all calls made since the timer was last reset.

EraseTotal: resets the call timers.

The Phone book allows you to store frequently used phone numbers and the associated names in your personal directory to make it easy for you to make a call without having to remember or enter the phone number. You can store up to 79 numbers.

Find Name

MENU 2-1

This option displays the stored names in the Phone Book in alphabetical list.

Press  key to scroll to the desired name. You can also enter the first letter of the name by pressing the associated alphanumeric key. Using this method, the phone searches for the names in the list beginning with that letter, and then displays the first name in that section of the list. If desired, you can also enter the second letter in the name by pressing the associated alphanumeric key.

When the desired entry displays, press **SEND** key to place a call. If you press  key, you can access the following options:

Talk: dials the number.

Edit: allows you to edit phone number, name, or entry number. **Secret** option prevents the number from being displayed in the screen.

Prepend: prepends the number to add an area code or feature code to the number before dialing.

Erase: erases the number.

Note: You can locate Phone Book entries quickly when the phone is in the idle mode. Press  key to access Find Name menu in one step and then press  key to scan entries.

You can check your own phone number. If you have more than one own phone number, press  key to check the next number.

Note: You can block this feature by setting option to **ON**. Refer to page xx.

Add Entry

Using this option, you can store a phone number with a name in your Phone Book.

Enter the phone number and press  key. The first available location displays.

To accept the displayed location, press  key. To select another location, press  key to scroll to the desired location or enter the location number using number keys, then press  key.

To include a name with the phone number entry, enter the desired name, then press  key. For information on how to enter a name, see page xx.

Storing Phone Numbers at Call End

To store a phone number following conversation:

1. Press  key to end the call. The call time and the phone number display.
2. To store the phone number, press  key. The first available location displays.
3. To finish this process, follow above mentioned instructions.

Entering a Name

1. Press the key labeled with required letter.

Since each key has three or more letters, press the key repeatedly the desired letter appears in the display.

2. Select the other letters in the same way.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice (or a different letter on the same key), just wait for a second for the cursor to move right automatically, and then select the next letter. You can also move the cursor by using  and  keys. To delete letters, press **CLR** key.

Find Entry

This option allows you to find an entry by location number.

Enter the location by pressing the number keys or press  key to scroll to the desired location, then press  key to display the selected entry.

When the desired entry displays, press **SEND** key to place a call.

If you press  key, you can access Options. For details on Options, refer to **Find Name** menu on page xx.

Sounds

You can use the Sounds feature to customize various sound settings, such as the:

- Ring volume, type, and tone
- Alert sounds

Ring

MENU 3-1

Ring Volume

This option allows you to adjust the ringing volume to one of nine levels. You can also turn the ringer off. Use the ▼ or ▲ key on the left side of the phone. The greater the number of bars, the greater the volume. You will also hear a sample tone.

Note: During an incoming call, you can mute the ringer by pressing  key.

Ring Type

This option allows you to indicate how you are to be informed of any incoming calls. The following options are available.

Bell: The phone rings using the ring tone selected via the menu option.

Lamp: Only the backlight is switched on; the phone neither rings nor vibrates.

Vibrator: The phone vibrates but does not ring.

Vib + Bell: The phone both rings and vibrates.

Ring Tone

This option allows you to select the required ringing tone. You can choose between 20 different tones or melodies. Each time you select a tone, it is played for a few seconds.

Key Volume

MENU 3-2

This option allows you to adjust the tone volume that the keypad generates when you press a key. You can also use ▼ or ▲ key on the left side of the phone to adjust key volume in the idle mode.

Alert

MENU 3-3

Minute Beep

With this menu option set to **ON**, the phone beeps every minute during an outgoing call to keep you informed of the length of your call.

Service Area

With this menu option set to **ON**, the phone beeps when you are out of service area or when you return to a service area.

Remind Call

MENU 3-4

This option reminds you to call a specified number at a specified time, if you set the time and number. If the phone is switched off at the specified time, the alert will not sound.

Set: You need to enter the number and time you want to be reminded to call the number. The phone will sound an alarm at the specified time and displays the number. To dial the number, press **SEND**.

Release: The option cancels the reminder.

Differential Ring

MENU 3-5

This option allows you to activate a unique ring to signal an incoming call by a stored caller number.

You can specify up to 5 callers and select a unique ring type for each caller from 20 different tones and melodies.

Backlight

MENU 4-1

You can select whether or not the phone uses the LCD backlight. The following options are available.

8 SECONDS: The backlight comes on when you press a key or receive a call and switches off 8 seconds after the last key is pressed.

OFF: The backlight is not used.

Greeting

MENU 4-2

This option allows you to set a greeting message to be displayed in the idle mode. It is preset to SAMSUNG. You can change the greeting message according to your own preference.

Enter your personal greeting up to 12 digits by using the alphanumeric keys. For more information on entering a name, refer to page xx.



Version

MENU 4-3

This option allows you to view the software version of your phone.

Language

MENU 4-4

You can select a display language on your phone between **English** and **Hebrew**.

Contrast

MENU 4-5

This option allows you to adjust the LCD contrast by using ▼ or ▲ key on the left side of the phone.

You can call up to 20 stored entries by speaking the name into the microphone. Before using the Voice Dialing feature, you must record the name in your phone.

Record

MENU 5-1

This option allows you to register numbers for subsequent voice dialing. The phone provides voice prompts and screen displays to guide you through the recording process.

Respond to the prompt by saying the name you want to save. The phone stores the name as a first sample, and then prompts for the name again.

Respond to the prompt by repeating the name after the beep. The phone stores the name as a second sample, and then requests the phone number.

Enter the phone number by pressing the digit keys.

To store the phone number, press  key. The name (if matched up to Phone Book) and number display, along with the notification **Recorded**.

Tips on Recording Name

- Avoid recording similar names phonetically. If you record a similar name to the one already in memory, the phone requests another name.

- Speak clearly and natural.
- The person who will use the phone should record the name. The phone does not recognize the name if the voice sounds differently.
- Avoid too long or too short name. It is recommended to contain 2 to 5 syllables.
- Voice dial feature is available only in CDMA mode.
- If this feature does not work properly, erase the name, and record with another name.
- It is recommended to practice several times to obtain best result.
- You can record up to 20 names. If you record more than 20, the phone announces 'Memory is full'.

Review / Erase

MENU 5-2

This option allows you to check or erase an individual voice dial entry. A list of entries displays.

Press the digit key to select the desired entry, or press the  key to scan entries

When you select the desired entry, the recorded name plays audibly.

If you want to erase the selected entry, press  key

Erase All

MENU 5-3

This option allows you to delete all voice dialing entries. Press  key, when you asked to confirm. Otherwise, press **CLR** or  key to exit the function without deleting the voice dialing entries.

Set Active

MENU 5-4

Voice Dialing is always active once you have recorded a name and have entered the associated phone number. To place a call using Voice Dialing, simply press and hold  key in the idle mode and then say the name into the phone after you hear the prompt.

You can also initiate a Voice Dialing call just by opening the flip, when you select this option.

[] only: Enables Voice Dialing only by pressing and holding  key.

[]/Flip: Enables Voice Dialing by pressing and holding  key or by opening the flip.

Voice Memo

You can use the Voice Memo feature to:

- Record up to 10 voice memos
- Play the recorded voice memos
- Erase one or all voice memos

Review

MENU 6-1

This option allows you to play back all memos recorded, starting with the most recent memo. The screen displays the label if you have entered. If not, the screen displays the date and time when the memo was recorded.

While the memos are playing, the following options are available.

Replay: plays the current memo once again.

Erase: erases the memo currently being played.

Next Memo: skips to the next memo.

Record

MENU 6-2

This option allows you to record a memo. You can record up to 10 different memos.

Press and hold  key on the left side of the phone. While you hold down the key, you can record a memo for a maximum of 60 seconds.

To stop recording, just release the key. The following options display.

Add Label: allows you to add a label for the memo you have just recorded. Enter a proper name up to 12 digits using the number keypad. If you do not add label, the recorded date and time will be used to identify the memo.

Continue: allows you to continue recording the memo.

Erase: allows you to erase the memo you have just recorded.

Erase All

MENU 6-3

This option allows you to erase all the memos. Press  key when you are asked to confirm.

Setup

Many different features of your phone can be customized to suit your preferences.

Auto Retry

MENU 7-1

With this menu option set to **ON**, when you place a call and the call does not connect, your phone continues to place the call to the entered phone number.

Auto Receive

MENU 7-2

With this menu option set to **ON**, the phone automatically answers calls.

When a call comes in, your phone will answer the call automatically after 2 rings. The feature does not work if you have chosen **Vibrate** or **Off** as your ring volume.

Auto Hyphen

MENU 7-3

With this menu option set to **ON**, your phone automatically hyphenates numbers as follows: 123-456-7890.

Digits following a pause are not hyphenated.

Any Key Answer

MENU 7-4

With this menu option set to **ON**, you can answer an incoming call by pressing any key except **END** key.

Tone Length

MENU 7-5

Some phones you call can recognize only longer tones. You may have to change the length to **LONG** for some calls. When calling a paging system, your phone should be in the **SHORT** mode.

Tone

MENU 7-6

Release Tone: You can set your phone to sound the release tone when a call is released or dropped.

Connect Tone: You can set your phone to sound the connect tone when your call is connected to the system.

Set Time

MENU 7-7

The option enables you to set the current date and time. Enter the time and date.

The current time, if set, displays. The month, day, hour and minute must be entered with 2 digits. The year requires all four digits. If you do not input the time or you input the wrong time, **Invalid Time** displays.

Security

Your phone provides many security options, including a user-programmable lock code, and call restriction features.

To access the security menu, you must enter a four-digit lock code.

Lock

MENU 0-1

Locking the phone restricts outgoing calls to emergency numbers.

The following options are available:

OFF: the phone remains unlocked.

NOW: the phone locks immediately

ON POWER-UP: the phone locks automatically at the next power-up.

To place an emergency call on Lock mode:

- To call an emergency number, enter the number and then press **SEND** key.
- To place normal outgoing calls, press **MENU** key to display the Lock Code screen, and then enter the lock code. When the Standby screen displays, enter the phone number, and then press **SEND** key.

Restrict

MENU 0-2

This feature allows you to restrict your calls. Call Restriction can be set up in the following ways.

Phone Book: the phone restricts the use of the Phone Book.

Incoming Call: calls cannot be received.

Outgoing Call: calls cannot be made.

Each option can be restricted or unrestricted individually.

Lock Code

MENU 0-3

This feature allows you to change your current lock code to a new one. The lock code is preset to 0000 at factory.

Enter a new, four-digit lock code.

Emergency Number

MENU 0-4

This feature allows you to call to emergency numbers when the phone is locked or when the outgoing call is restricted.

This menu provides the option of storing three emergency numbers. Select a location and enter the desired number.

To dial emergency numbers in Lock mode; enter the emergency number, then press **SEND** key.

Send PIN

MENU 0-5

This feature prevents the phone from being used by unauthorized persons. The feature is only available when if your system supplier provides this service and you have a PIN assigned by the system supplier.

These options are available:

Never: The option is not activated

Prompt: When you make a call, you are asked to send PIN.

For information in this service in detail, contact your service provider.

Clear Memory

MENU 0-6

This menu option allows you to erase all numbers in the Phone Book memory.

NAM Mode

MENU 0-7

The NAM (Number Assignment Module) enables you to subscribe to one or more service networks.

The following options are available:

Manual NAM: You set the phone to the network you want to use. You can select a NAM from a maximum of 4 NAMs. If you select a new network manually, the phone shows the greeting message and sounds the starting beep, and then returns to the Standby mode. For details, contact your service provider.

Auto NAM: The phone selects the networks automatically based on system information for the area you are in.

Block Own Number

MENU 0-8

This feature allows you to block your own number display, and others cannot view your phone number. If you turn this feature on, the message **Blocked for phone number** displays when the **My phone #** feature is accessed.

System Selection

MENU 0-9

With this menu option, you can select the system service mode between FM (analog) and CDMA (digital). Each service mode allows you to select a roaming option. Roaming is a feature which is only relevant in areas where there are at least two cellular service providers and having valid roaming agreements.

Roaming, when available, allows you to register your phone on one of the networks, but use the facilities of the other if your own network is not available. This system priority feature allows you to program your phone for optimum operation when within your home service area or when outside your home service area.

Contact your home cellular service provider for information on the availability of this feature and roaming agreements they have with other cellular service providers.

There are five different roaming options:

A Only: the phone uses A system only.

A Pref: the phone tries A system first, then tries the other.

B Only: the phone uses B system only.

B Pref: the phone tries B system first, then tries the other.

Home Only: the phone uses your home network only.

Reset Phone

MENU 0-0

With this menu option, you can easily reset your phone to its default configuration. Also, all phone memories are cleared.

Messages

Your phone receives voicemail notification, text messages, and pages. And your phone transmits text messages and pages if your system supplier provides this service. When the phone receives a message, an alert sounds, and a text notification displays. The  icon remains on the screen until you read the pending text messages or until you listen to the voicemail notification messages

Your phone can store up to 20 pages and text messages, depending on the length of the message. If the message memory is full, an error message is displayed and you cannot receive any new messages. Delete obsolete messages.

Voicemail

 1

The screen displays **Voicemail**, the time, date and the number of new, unread messages.

Press **MENU** key to access the following options.

Listen: You can listen to the voicemail.

Reset: You can reset the counter for voicemail messages, if desired. (The system resets the counter automatically after you listen to all new messages.).

An indexed list of page messages displays. An exclamation point next to an entry indicates an urgent message. A check mark next to an entry indicates that you have read and stored the message.

Select the desired message to review, then press **OK** key. After reviewing the message, press **MENU** key to access the following options.

Talk: To call the phone number.

Save: To store the phone number in your Phone Book.

Next: To review the next message.

Previous: To review the previous message.

Text

An indexed list of text messages displays. An exclamation point next to an entry indicates an urgent message. A check mark next to an entry indicates that you have read and stored the message.

Select the desired message to review, then press **OK** key. After reviewing the message, press **MENU** key to access the following options.

Talk: To call the phone number.

Save: To store the phone number in your Phone Book.

Next: To review the next message.

Previous: To review the previous message.

Alert

The phone alerts you when a message is received. You can choose how frequently this happens. The three options are : **EVERY 2 MIN, OFF, ONCE.**

Erase All

This menu option allows you to erase all stored messages.

Batteries

Three types of Li Ion batteries are available for use with your phone:

- SLIM Battery
- STANDARD Battery
- EXTENDED Battery

Dual-Slot Desktop Charger

The Dual-Slot Desktop Charger Charges the battery at your home or office.

Cigarette Lighter Adapter

The Cigarette Lighter Adapter charges your phone in a vehicle while you drive and enables you to operate the phone from a vehicle cigarette lighter socket.

Travel Charger

The Travel Charger plugs into a wall outlet and enables you to charge a single battery at your home or office or while traveling.

Hands-Free Car Kit

The Hands-Free Car Kit provides safety, freedom and convenience in your vehicle. (Kit includes Cradle and Microphone.)

Ear-Microphone

The Ear-Microphone includes both the earpiece and microphone in a convenient, lightweight unit.

RS-232C Cable

???

Your phone is powered by a rechargeable Li-Ion 1000 mAh standard battery.

The following batteries are also available (ask your SAM-SUNG dealer for further details):

- SLIM battery (600 mAh)
- STANDARD battery (1000 mAh)
- LONG-LIFE battery (1600 mAh)

Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby times are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging times depend on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.

- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and life-time of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-Ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the back of the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road Safety

- Remember, road safety always comes first!
- Do not use a hand-held phone while driving a vehicle. Always park the vehicle before having a conversation.
- Make sure that the phone is stored safely and will not fall or be broken in the event of a collision or emergency stop.
- The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.
- Only qualified personnel should install or service the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the unit.
- Electronic fuel injection, anti-skid braking, electronic cruise control or any other electronic systems may malfunction due to the lack of protection from radio signals. Check regularly that all cellular phone equipment in your vehicle is mounted and operating correctly.

Operating Environment

- Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

- Operation of any radio transmitting equipment, including cellular phones, may interfere with inadequately protected medical devices. Consult a physician or the manufacturer of the medical device if you have any questions. Other electronic equipment may also be subject to interference.
- As with other mobile radio transmitting equipment, you are advised that for satisfactory operations and personal safety, the equipment should only be used in the normal operating position.
- Always switch off the phone when at a refuelling point (service station). You are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- Switch off your cellular phone when in an aircraft. The use of cellular phones in an aircraft is illegal and may be dangerous to the operation of the aircraft or disrupt the cellular network. Failure to observe these instructions may lead to the suspension or denial of cellular telephone services to the offender, legal action or both.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill the warranty obligations and enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids containing minerals will corrode the electronic circuits.
- Do not use or store the phone in dusty, dirty areas as its components may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up (to its normal temperature), moisture can form inside the phone, which may damage the electronic circuits.
- Do not attempt to open the phone. Non-expert handling of the phone may damage it.
- Do not drop or knock the phone. Rough handling may damage the internal circuits.

- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in mild, soapy water.
- If the phone or any of its accessories are not working properly, take them to your nearest qualified service centre. The personnel there will assist you, and if necessary, arrange for the phone to be repaired.

Emergency Calls

Important! This phone, like any cellular phone, uses radio signals, cellular and landline networks, as well as user-programmed functions that cannot guarantee connection in all conditions. Therefore, you should never rely solely on any cellular phone for essential communications (medical emergencies for example).

Remember, to make or receive any calls, the phone must be switched on and in a service area with adequate cellular signal strength.

Emergency calls may not be possible on all cellular phone networks or when certain network services and/or phone features are in use. Check with local cellular service providers.

Airtime - Actual time spent talking on the wireless phone. Most carriers bill customers based on how many minutes of airtime they use each month.

Antenna - A device for transmitting or receiving signals. The size and shape of antennas is determined, in part, by the frequency of the signal they receive. Wireless phones and the base station must have antennas.

Base Station - The fixed radio transmitter/receiver that maintains communications with mobile radio telephones within a given area. (Typically seen as cell or cell site)

CDMA - (Code Division Multiple Access) A spread-spectrum approach to digital transmission. With CDMA, each conversion is digitized and then tagged with a code. The mobile phone deciphers only a particular code to pick the right conversation off the air. The transmitted signal is just above noise level across the available bandwidth.

Channel - Communications signals transmit along paths called channels.

Codec - COmpression & DECompression.

Deactivation - The process of rendering a wireless phone inactive.

DTMF - (Dual-tone Modulated Frequency) You send DTMF signals when you enter numbers by pressing the digit keys.

EVRC - (Enhanced Variable Rate Codec) EVRC is a new global standard for compressing and decompressing voice signals. EVRC uses a lower bit rate (the number of bits sent per second) than existing CDMA vocoders, while providing significant improvements in voice quality. This technology enables your phone to provide superb voice quality while benefiting from the ability to process more cellular voice calls using less bandwidth than the voice codecs in CDMA networks today.

Frequency - A measure based on time, as one or more waves per second, in an electrical or light wave information signal. A signal's frequency is stated in cycles-per-second or Hertz (HZ).

Hands-Free - A feature that permits a driver to use a wireless phone without lifting or holding the handset - an important safety feature for automobiles, tractors and most other motorized vehicles.

LCD - (Liquid Crystal Display) Commonly used to refer to the screen display on the wireless phone.

LED - (Light Emitting Diode) Commonly used to refer to a small light on the wireless phone or on the Desktop Charger. The LED lights on the phone to indicate an incoming call. The lights on the charger to indicate that battery charging is taking place.

Prepend - The addition of a prefix, such as an area code, to a phone number.

RF - Radio Frequency

Roaming - The ability to use a wireless phone to make and receive calls in places outside of the home service area.

Service Charge - The amount paid each month to receive wireless service.

Standby Time - The amount of time a fully charged wireless portable or transportable phone can be on and idle without being in use. (See Talk Time)

Talk Time - The length of time a person can talk on a portable or transportable wireless phone without recharging the battery.

Vocoder - Voice Coder. A device used to convert speech into digital signals.

Voicemail - A computerized answering service that answers a call, plays a greeting and records a message. Depending on the sophistication of the service, it can notify the subscriber, via a pager, of an incoming call or message. (Also called voice messaging)

Wireless - Radio-based Systems that allow transmission of telephone or data signals through the air without a physical connection, such as a metal wire (copper) or fiber optic cable.

A

Answering a Call	xx
Alert	xx
Analog Call Option	xx
Aircraft	xx
Accessories	xx

B

Battery	vv
Battery Charge Indicator	xx
Battery Disposal and Recycling	xx
Basic Operations	xx
Basic Operations of Your Phone	xx
Backlight Control	xx
Block Own Number	xx
Blasting Areas	xx
Batteries	xx

C

Charging the Battery	xx
Caring for the Battery	xx
Call Quality	xx
Correcting a Misdialed Number	xx
Call Waiting	xx
Call Forwarding	xx
Calls Options	xx
Checking Recorded Name	xx
Call Restriction	xx

Clear Memory	xx
Choosing Alert Type for Message Receiving	xx
Compliance with Safety Standards	xx
Cigarette Lighter Adapter	xx
Charging Times with Accessories	xx

D

Description of Your Phone	vv
Display Messages	xx
Dual-Slot Desktop Charger	xx
Differential Ring	xx
Display Options	xx
Displaying Your Phone Number	xx
Dialing from the Phone Book	xx
Dialing Emergency Numbers	xx
Driving	xx
Dual-Slot Desktop Charger	xx

E

Emergency Dialing	xx
Ending a Call	xx
Erasing Call Logs	xx
Editing Phone Book Entries	xx
Erasing Phone Book Entries	xx
Erasing Voice Dialing Entries	xx
Emergency Numbers	xx
Erasing Messages	xx
Electronic Devices	xx
Earbud Headset	xx

F		M	
Features	xx	Menu Organization	xx
Finding Entries by Location	xx	Main Menu Structure	xx
Finding Entries by Name	xx	Memory Dialing Shortcuts	xx
		Message Services	xx
G		N	
Getting Stared	vw		
Glossary of Terms	xx	NAM Selection	xx
I		O	
Installing the Battery	xx	Overview of the PhoneBook	vw
Index	xx	Other Options	xx
		Other Dangerous Areas	xx
K		P	
Key Functions	xx		
Key Beep	xx	Pacing Calls	xx
		Prepend Dialing	xx
		Personal Greeting	xx
L		Phone Book	xx
		Placing a Call (using Voice dialing)	xx
Lock Mode	xx		
Lock Code Setting	xx		
Locking the Phone	xx		

R

Removing the Battery	xx
Receiving Calls	xx
Reviewing Airtime	xx
Ring Volume	xx
Ring Type	xx
Ring Tone	xx
Remind Call	xx
Reviewing Voice Dialing Entries	xx
Reset Phone	xx
Reviewing Messages	xx
Reviewing Voicemail Messages	xx
Reviewing Page and Text Messages	xx

S

Screen Display	xx
Status Indicators	xx
Standby Mode	xx
Sounds Options	xx
Selecting Display Languages	xx
Setup Options	xx
Setting Current Time	xx
Storing Phone Numbers	xx
Storing Phone Numbers at Call End	xx
Storing Secret Numbers	xx
Security Options	xx
Security Menu	xx
Short Emergency Numbers	xx
Send PIN	xx
Short Message Services and Voicemail	xx
Safety	xx

T

Turn On/Off	xx
Three-Way Calling	xx
The Menu	xx
Tracking Calls Through Call Logs	xx
Tips on Recording Name	xx
Transmitting Messages	xx
Transmitting Page and Text Messages	xx
Transmission Using Stored Messages	xx

U

Using Voice Dialing	xx
---------------------	----

V

Version Display	xx
Viewing Stored Entries	xx
Voice Dial	xx
Voice Dialing	xx