



SCH-850

Series CDMA
DIGITAL PORTABLE
CELLULAR TELEPHONE

OWNER'S MANUAL

Please read this manual before operating the phone,
and keep it for future reference.

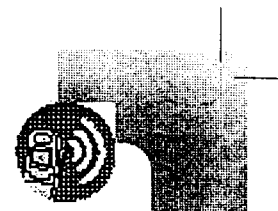 


Table of Contents

◆ GETTING STARTED

Features	6
Description of Your Phone	7
Screen Display	8
Key Functions	9
Status Indicators	10
Display Messages	11
Battery	12

◆ BASIC OPERATIONS

Basic Operations of Your Phone	18
Turn On/Off	19
Placing Calls	20
Receiving Calls	21

◆ THE MENU

Menu Organization	23
Calls Options	26
Sounds Options	28
Display Options	34
Setup Options	37

◆ PHONE BOOK

Overview of the Phone Book	41
Storing Phone Numbers	42
Inputting Characters	43
Viewing Stored Entries	45
Dialing from the Phone Book	46
Editing Phone Book Entries	47
Storing Secret Numbers	48
Erasing Phone Book Entries	48

◆ WEB BROWSER

◆ PERSONAL INFORMATION MANAGEMENT

Overview of the PIM	51
Schedule Management	52
To Do List	54
Count Down	55
World Time	56
Calculator	57

◆ VOICE DIAL

Voice Dialing	58
Training the Phone	58
Checking Recorded Name	59
Activation	60
Using Voice Dialing	61

◆ VOICE MEMO

VOICE MEMO	63
Recording Voice Memo	63
Reviewing Voice Memo	64
Erasing Voice Memo	64

◆ SECURITY OPTIONS

Security Menu	65
Lock Mode	66
Call Restriction	68
Priority Numbers	69
Other Options	70

Table of Contents

◆ MESSAGE SERVICES	
Short Message Services and Voicemail	72
Reviewing Messages	73
◆ SAFETY	
Compliance with Safety Standards	76
Driving	76
Electronic Devices	77
Aircraft	77
Blasting Areas	77
Other Dangerous Areas	78
◆ ACCESSORIES	
Batteries	79
Dual-Slot Desktop Charger	79
Cigarette Lighter Adapter	79
Travel Charger	79
Hands-Free Car Kit	79
Headset	79
◆ GLOSSARY OF TERMS	80
◆ INDEX	83

Precautions

Important Information

This manual is based on the production version of the included portable cellular telephone. Software changes may have occurred after this printing.

Safety Precaution

- For more detailed safety information, see "Safety" on page 76.
- Do not use your phone while driving; park the vehicle first.
- Do not use your phone when near medical equipment.
- Do not use your phone at any time while traveling on board a plane.
- Do not use your phone where a blasting operation is in progress.
- Do not use your phone at a refueling point.

FCC/IC Notice

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Getting Started

Features

 
Congratulations on the purchase of your SAMSUNG Phone. Using the latest digital technology, the phone operates in a similar manner to other wireless phones, while providing superior resonance and one quality.

The following options make your phone both fun and easy to use:

- Active Folder
- Variable Character Display
- Phone Book Memory - 229 Locations
- Voice Dialing - 20 Locations
- Programmable Lock Code
- Short Message Services(SMS) and Voicemail
- 9 Ring Types, 4 Melody Tones, Vibrator Alert
- Call Logs - 10 Locations Each: Outgoing and Incoming Calls
- Pause Dialing
- Ringer Mute During Incoming Call
- Alarm
- EVRC

Description of Your Phone

Function keys and other controls activate the features of your phone. The following illustration identifies the function keys, controls, and indicators:

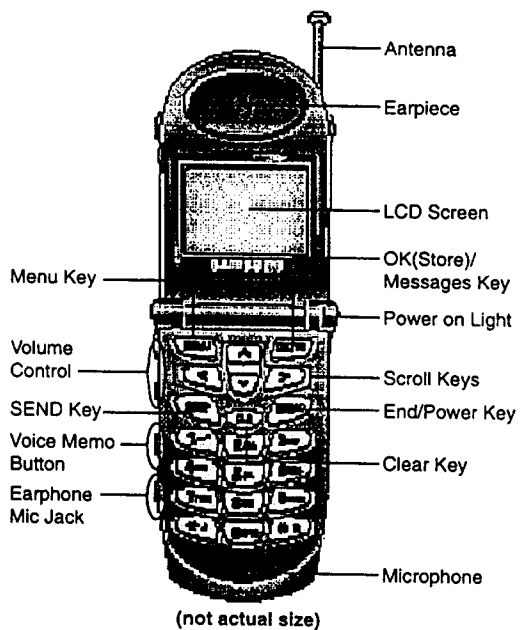


Screen Display

This phone features dynamic character sizing, which enables the screen to display from 12 to 16 characters per line. The five-line screen includes four text lines and one icon line, which displays active options and selected menu items.

During conversation, the screen displays the call timer and the name and number of the other party, if available. Active in-use options, such as Mute and Call Waiting, also display during conversation.

The following icons display at power-on:

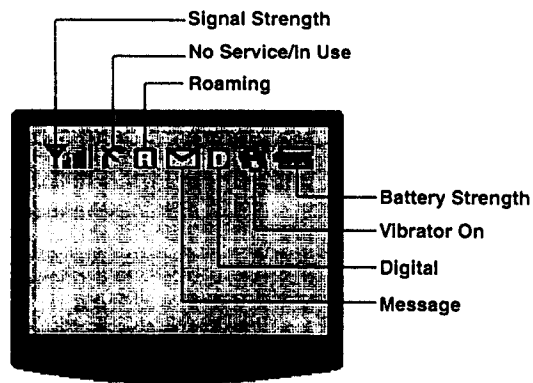 

Key Functions



Press SEND to:

- Place a call after dialing the number,
- Answer an incoming call,
- Initiate Three-way calling,
- Access Call Logs.



Press CLR to:

- Erase one character at a time while entering names and numbers,
- Go back on menu level at a time while viewing menu options,

Press and hold CLR to:

- Erase all displayed characters while entering names and numbers,
- Return to Standby mode while viewing menu options or dialing.



Press END to:

- End a call,
- Turn the phone on and off,
- Exit the current menu and return to Standby mode.
- Mute the ringer during an incoming call.



Press MENU to:

- Display the Main Menu,
- Scroll forward through menus,
- Enter a pause while entering numbers.



Press OK to:

- Save menu option settings
- Store your dialled digits quickly
- Enter menus
- Access to messages (from Standby mode)



Press the Scroll keys to:

- Scroll menu options.
- Press or to : Have one-button access to your phone book (from Standby mode).
- Press to : Have one-button access to the Today's event (from Standby mode).



Press and hold to :

- Initiate Voice Dialing when the folder is open.

Key Functions



Press and hold ****** to :

- Switch between bell and vibrator setting.



Press the **Volume** button to:

- Adjust voice volume during conversation.
- Adjust ring volume in Standby mode.
- Scroll Call Logs, Phone Book entries, and menu options.



Press the **Voice Memo** button to:

- Access to Voice Memo.
- Record voice.

Status Indicators



Signal Strength

Indicates current signal strength.



Service

It blinks while you try to make a call and lights when you are connected.



No Service

Indicates that the phone is outside a service area and cannot send or receive calls.



Roaming

Displays when the phone is outside the home service area but within the network.



Message

Indicates messages.



Digital

Indicates a Digital mode.



Vibrate

Indicates a Vibrate mode.



Battery Charge

Indicates the battery charge level.

Display Messages

**MAINTENANCE
REQUIRED**

The Phone number is not registered in the network.

**PHONE BOOK
RESTRICTED**

You have tried to access the memory while the phone is in the memory restricted mode.

**New Entry will replace
NAME**

A phone number is already stored in selected memory location. The name is displayed if previously stored.

**MATCHING ENTRY
NOT FOUND**

The phone number you are trying to recall does not exist.

**NO INCOMING CALL
LOG**

You have not received any incoming calls.

**NO OUTGOING CALL
LOG**

You have not made any outgoing calls.

NO SERVICE

The phone is out of the service area.

**INCOMING CALLS
RESTRICTED**

While the phone is restricted, you have tried to answer a call.

**OUTGOING CALLS
RESTRICTED**

While the phone is restricted, you have tried to make a call.

CALL FAILED

The call cannot be made completely.

Power Save Mode

The phone has been out of service.

Battery

Your phone package includes a partially charged rechargeable battery so that you can use the phone immediately after it is activated.

Installing the Battery

To attach the battery to your phone:

- 1 Hold the battery so that the metal contacts on the base of the battery line up with the metal contacts on the base of the phone.
- 2 Place the battery on the back of the phone with the top of the battery about a quarter of an inch from the latch.
- 3 Gently slide the battery toward the top of the phone until it snaps into place.

Removing the Battery

 
Make sure to turn the power off before removing the battery. Then press the battery release button while sliding the battery out of position.

Dual-Slot Desktop Charger

The Dual-Slot Desktop Charger Contains:

- Front compartment for charging the battery while attached to the phone
- Rear compartment for charging the battery alone (not attached to the phone)
- A three colored light for each compartment that indicates the status of the battery charge as follows:
Red light to indicate that the battery is charging.
Green light to indicate that the battery is fully charged.

A yellow light to indicate that the battery is operating at a temperature that is too high or too low, or that the battery is misaligned in the charger. If the light is yellow, check the charger and battery.

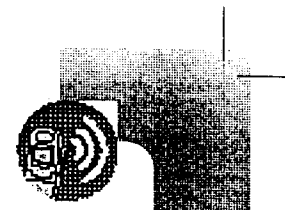


Charging the Battery

To charge the battery using the Dual-Slot Desktop Charger:

- 1 Plug the power cord of the charger into a wall outlet.
- 2 Select one of the following options:
 - Insert the entire phone with battery attached into the front compartment of the charger.
 - Insert a single battery (alone, not attached to the phone) into the rear compartment of the charger.

When two batteries are in the charger, the batteries charge simultaneously.

 Use only the SAMSUNG-approved Dual-Slot Desktop Charger with your phone by Samsung. Using the wrong charger could damage the battery.

Battery Charge Indicator

The Battery Charge Indicator displays in the upper right corner of the screen and indicates three levels of charge. Three solid bars indicate a fully charged battery. When the battery charge level is low or empty, a clear Battery Charge Indicator (no bars displayed) flashes on the screen.

 
Tip on Battery Use-up Time

The use-up time may be shorter than the time shown by in the following cases:

- Battery use-up time depends on the services (slot mode) of base stations where your phone is located.
- If you are not in service area for a long time, the waiting time gets shorter rapidly as it consumes much power.
- It requires much power in the areas where electric waves are weak or there are a lot of channels.
- The longer you talk over the phone, the shorter the waiting time gets.
- Answering the phone also needs power like making calls.
- Use-up time gradually gets shorter because batteries are expendables.
- If it gets shorter by half than the original time, buy a new one. The warranty term is 3 months from when you buy it.

Slot Mode:

Wireless base stations communicate at regular intervals to know where users' phones are. It is called slot mode. The more they communicate, the shorter the waiting time gets.

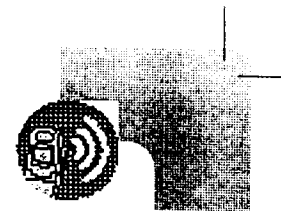

Caring for the Battery

Use only SAMSUNG-approved batteries, Desktop and Travel chargers. These chargers maximize battery life and performance. Using other batteries or chargers may invalidate your warranty and may damage the battery.

For proper battery care, please follow these guidelines:

- To avoid damage, charge the battery in temperatures that range from 32°F to 104°F (0°C to 40°C).
- Do not use the battery charger in direct sunlight or in high humidity areas (such as a bathroom).
- Never dispose of the battery by incineration (fire).
- Keep the metal contacts at the battery base clean.
- Do not attempt to disassemble or short-circuit the battery, as injuries or burns may result.
- Replace the battery when it no longer provides acceptable performance.
- Do not store the battery in high-temperature areas for a long time.
- Do not allow metal objects or liquids to contact or short-circuit the battery terminals, as injuries or burns may result.

Battery Disposal and Recycling

Please be aware of the following guidelines when disposing of or recycling the battery:

- Do not dispose of the battery in a fire; the cell may explode. Check the regulations in your area for special disposal instructions.
- Do not open or puncture the battery; the released electrolyte is corrosive and may cause damage to the eyes and skin. This substance also can be toxic if swallowed.
- Charge the battery in accordance with the instructions specified in this manual.

Call Quality

For optimum call quality with your phone, please follow these guidelines:

- Fully extend the antenna. While it may be possible to place calls with the antenna retracted, the phone operates best with the antenna fully extended.
- Hold the phone as you would hold any other telephone handset. Speak directly into the microphone, and position the antenna up and over your shoulder while talking.
- Do not hold the antenna while using the phone, as this may affect call quality.









Table 1: Phone and Battery Specifications

Phone Type	Dual Mode CDMA/AMPS 800MHz	
Graphic LCD	5 Lines (4 Text Lines, 1 Icon Line)	
Battery Type	Standard : 1000mAh Li-Ion	
	Extended: 1600mAh Li-Ion	
Phone with	Standard Battery	Extended Battery
Dimensions (HxWxD)	88X56X27.5mm	88X56X32mm
Weight	125g	152g
Talk Time	Up to 3.0hours	Up to 5.0hours
Standby Time	Up to 170hours	Up to 293hours

Alerts

You can set alerts to turn the Minute Beep, Service Alert Tone, Connect Tone and Disconnect Tone on and off. The Minute Beep indicates each minute on your call. The Service Alert indicates when you are out of a service area or when you return to a service area. The Connect indicates when your outgoing call is connected to the system. The Disconnect indicates when any call is released or dropped.

To select alert options:












- 1 Press  to display the Main Menu.
- 2 Press  for Sounds.
- 3 Press  for Alerts.
- 4 Press the associated digit key to select an option:
 - Press  for Minute Beep.
 - Press  for Service Alert.
 - Press  for Connect.
 - Press  for Disconnect.
- 5 Press the scroll keys to toggle between On/Off.
- 6 When the desired option displays, press  to save the setting.

 
Alarm

 The time must be set (  ) to sound an alarm at a specific hour and minute.

You can set the phone to sound an alarm at an appointed time. If you set an alarm time, the phone will sound an alarm automatically at the appointed time.

To set alarm:

- 1 Press  to display the Main Menu.
- 2 Press  for Sounds.
- 3 Press  for Alarm.
- 4 Press  for Set.
- 5 Press the scroll keys to choose the alarm mode.
 - One Time: Alarm will be activated one time.
 - Daily: Alarm will be activated on a specified time every day unless you release the alarm feature.
- 6 Press  to save the alarm mode.
- 7 Press the scroll keys to choose the time format (AM/PM).
- 8 Press  to save the time format.
- 9 Enter the time (in 12-hour clock) by pressing the digit keys. To correct a digit entered incorrectly, press  or  and then enter the correct digit.
 - If the current time is already set, you can specify the alarm time.
 - If the current time is not set, enter the time duration your phone has to wait in minutes.
- 10 Press  to save the setting. At the set time, the alert sounds and the 'A' is blinked.
- 11 To cancel alarm at any time, access the Alarm option (step 1, 2 and 3), Press  to cancel the setting, and then press  to confirm the action.

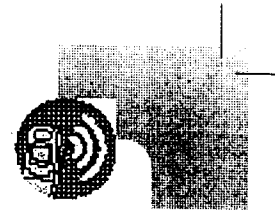

Display Options

Your phone provides several display options.

Backlight Control

When the phone is attached to the Hands-Free Car Kit, the backlight remains on. At other times, you can select backlight options.

To select backlight options:

- 1 Press to display the Main Menu.
- 2 Press for Display.
- 3 Press for Backlight.
- 4 Press the scroll keys to scan menu options: 30 seconds, 10 seconds, OFF, Flip Open (always on when the folder is open).
- 5 When the desired option displays, press to save the setting.

Personal Greeting

You can create a 12-character personal greeting that displays at power-on and in Standby mode.

To create a personal greeting:

- 1 Press to display the Main Menu.
- 2 Press for Display.
- 3 Press for Greeting.
- 4 Enter your personal greeting by pressing the alphanumeric keys on the keypad. (To input characters, refer to 43)
- 5 Press to save the setting.

Selecting the Animation

You can select the animation displayed on the screen when your phone is on/off.

To set the animation:

- 1 Press to display the Main Menu.
- 2 Press for Display.
- 3 Press for Animation.
- 4 Press the associated digit key to select an option:
 - Press for Opening.
 - Press for Closing.
- 5 Press the scroll keys to change the animation.
- 6 When the desired option displays, press to save the setting.

Displaying Your Phone Number

You can check your own phone number.





To display your phone number:

- 1 Press to display the Main Menu.
- 2 Press for Display.
- 3 Press for My Phone Number. The phone number of your phone displays. If you have more than one phone number, press the scroll keys to check the next number.
- 4 Press or to return to the previous screen.

Selecting Display Language

You can select the display language on your phone.








To set the language:

- 1 Press  to display the Main Menu.
- 2 Press  for Display.
- 3 Press  for Language Select.
- 4 Press the scroll keys to toggle between English and Spanish.
- 5 Press  to save the setting.

Version Display

You can view the software version of your phone during conversation or in Standby mode.














To view the version in Standby mode:

- 1 Press  to display the main Menu.
 - 2 Press  for Display.
 - 3 Press  for Version.
 - 4 Press / to return to the previous screen.
- To view the version in Conversation mode:**
- Press , .

Setup Options

Your phone contains many setup features that make communication easier and more efficient. Using them saves time and makes your phone even more fun to use.

To set setup options:

- 1 Press  to display the Main Menu.
- 2 Press  for Setup.
- 3 Press the corresponding digit key to select the desired option:
 - Press  for Automatic Retry.
 - Press  for Automatic Answer.
 - Press  for Automatic Hyphenation.
 - Press  for Answer Mode.
 - Press  for Tone Length.
 - Press  for Set Time.
 - Press  for Set NAM.
 - Press  for System Selection.
 - Press  for Data/Fax.
 - Press  for Analog Call.
- 4 Press the scroll keys to toggle, except Set Time.
- 5 Press  to save the setting.

Automatic Retry

When you place a call and the call does not connect, your phone continues to retry the call to the entered phone number for up to two minutes.

Automatic Receiving

When a call comes in, your phone will answer the call automatically after 2 rings. This feature does not work if you have chosen Vibrate or Lamp as your ring type.


Automatic Hyphenation

Automatic Hyphenation hyphenates numbers as follows:

- 123-456-7890

Digits following a pause are not hyphenated.

Answer Mode

Activate Answer Mode to answer incoming calls by pressing any key on the keypad, except .




 

Tone Length

Some phone systems can recognize only longer tones. This means you may have to change the Tone Length to LONG for some calls. Normally the Tone Length should be set to SHORT.

Setting Current Time

You can set the time and date on your phone.





To set the time:

- 1 Press  to display the Main Menu.
- 2 Press  for Setup.
- 3 Press  for Set Time.
- 4 The current time, if set, displays. The month, day, hour and minute must be entered with 2 digits. The year requires all four digits. If you don't input the time or you input the wrong time, "INVALID TIME" displays.
- 5 Press  to choose time format.(AM/PM)
- 6 Press  to set the time.

NAM Selection

The NAM(Number Assignment Module) enables you to subscribe to one or more service networks. You can the phone to the network you want to use.





To set NAM :

- 1 Press  to display the Main Menu.
- 2 Press  for Setup.
- 3 Press  for Set NAM.
- 4 Select a NAM:NAM-1,NAM-2.
- 5 Press  to save the setting.

System Selection

The system selection feature of your phone enables you to choose which of the system providers you will use.

To select system:

- 1 Press  to display the Main Menu.
- 2 Press  for Setup.
- 3 Press  for System Selection.
- 4 Press the scroll keys to select the desired option.
- 5 When the desired option displays, press  to save the selection.

Dialing from the Phone Book

Dialing By Memory Location

Your phone enables you to place calls quickly by pressing and holding the associated digit key(s) for the Phone Book memory location of the phone number you are calling.












The following table outlines dialing shortcuts:

Table 3: Memory Dialing Shortcuts


ACTIVITY	SHORTCUT
One-touch Dialing	Press and hold the associated digit key for the location (available in locations 1-9)
Two-touch Dialing	Press the first associated digit key and then press and hold the second digit key (available in locations 10-99).
Three-touch Dialing	Press the first and second associated digit key, and then press and hold the third digit key (available in locations 100-229).

Editing Phone Book Entries

To edit a Phone Book entry:

 - 1 Press  to display the Main Menu.
- 2 Press  for Phone Book.
- 3 Access the desired entry using one of the search methods described under "Viewing Stored Entries" on page 45.
- 4 When the desired entry displays, press  for context-specific options.
- 5 Press  for Edit. Additional options display.
- 6 Press the associated digit key to select an option:
 - Press  for Phone #. The phone number displays.
Press  to delete the phone number, and then enter the new phone number by pressing the digit keys.
Press  to save the new number.
 - Press  for Name. The name displays. Enter the new name by pressing the alphanumeric keys.
(To input characters, refer to page 43)
Press  to save the new name.
 - Press  for Entry #. The Phone Book location number displays. Press the scroll keys to scroll to the desired location, and then press  to save the new location.



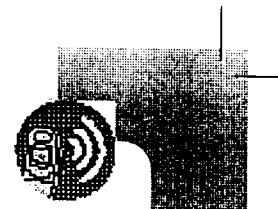



Web Browser



Storing Secret Numbers




 

You can select the Secret option to prevent dialed phone numbers from displaying on the screen.

To store a secret number in the Phone Book:

 
- 1 Press  to display the Main Menu.
- 2 Press  for Phone Book.
- 3 Store the phone number as described under "Storing Phone Numbers: on page 42, or access an existing entry as described under "Viewing Stored Entries" on page 45.
- 4 When the phone number displays, press  for context-specific options.
- 5 Press  for Edit. Additional options display.
- 6 Press  for Secret.
- 7 Press the scroll keys to toggle between No/Yes.
- 8 Press  to save the setting.

Erasing Phone Book Entries

To erase Phone Book entries:

- 1 Press  to display the Main Menu.
- 2 Press  for Phone Book.
- 3 Access the desired entry using one of the search methods described under "Viewing Stored Entries" on page 45.
- 4 When the desired entry displays, press  for context-specific options.
- 5 Press  for Erase. The screen prompts for confirmation.
- 6 Press  to erase the displayed entry. The "ERASED" notification displays, along with the name, number, and location.

Personal Information Management

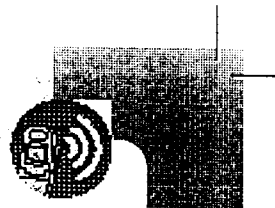

Overview of the PIM

You can use this phone conveniently as an personal information management.







 
- It signals at the designated time if you store an important schedule.
- It shows how many days remain or have passed if you set a Count Down.
- It shows the current time of foreign countries you would like to check.
- It also can be used as an electronic calculator.

Schedule Management




 
 






Today

You can enter up to 9 event you have Today.

To enter your event:





- 1 Press  to display the Main Menu.
- 2 Press  for Scheduler.
- 3 Press  for Today.
- 4 Input the contents of the event.(To input characters, refer to page 43)
- 5 Press .
- 6 Enter the Start Time and Date, and press .
- 7 Enter the End Time and Date, and press .
- 8 Set the alarm. The five options are : 10 minutes Before, 30 minutes Before, 1 hour Before, No Alarm, On time.
- 9 Press .

To see, add, edit or erase your event:







- 1 Press  to display the Main Menu.
- 2 Press  for Scheduler.
- 3 Press  for Today.
 - To See the rest of the event, press  or .
 - If you entered two or more events, check them with  or .
- 4 Press  or  to select the event you want to change and press .
- 5 Press the scroll keys to select one of New, Edit, Erase, and Exit.
- 6 Press .



View Month

To enter your schedule:

- 1 Press  to display the Main Menu.
- 2 Press  for Scheduler.
- 3 Press  for View Month.
 - It displays the current date in opposite phase.
 - Press the scroll keys to select the date.
- 4 Press .
- 5 To enter the schedule, follow the steps described under "Today" on page 52(step 4-9).
 - The set date will be under lined.





To see, add, edit or erase your schedule:

- 1 Press  to display the Main Menu.
- 2 Press  for Scheduler.
- 3 Press  for View Month.
- 4 Press the scroll keys to select the date and press .
- It displays your schedule if the date is underlined.
- 5 Press .
- 6 Press the scroll keys to select one of New, Edit, Erase, and Exit.
- 7 Press .

 If you press  after following the step 3, you can view or add your schedule.

Jump to Date






To enter your schedule:

- 1 Press  to display the Main Menu.
- 2 Press  for Scheduler.
- 3 Press  for Jump to Date.
- 4 Press the date by pressing the digit keys.
- 5 Press .
 - It displays the selected date in opposite phase.
- 6 To enter the schedule, follow the steps described under "Today" on page 52(step 4-9).






To Do List

You can enter up to 20 business you have to do.

To enter your business:

- 1 Press  to display the Main Menu.
- 2 Press  for Scheduler.
- 3 Press  for To Do List.
- 4 Input the contents of the business.(To input charaters, refer to page 43)
- 5 Press .
- 6 Enter the time and the date.
- 7 Select the priority between Low/High.
- 8 Press .








To see, Edit, Add, or Delete Your Business:

- 1 Press .
- 2 Press .
- 3 Press .
 - If you have entered two or more jobs, check them with the scroll keys.
- 4 Press the scroll keys to select the business you want to change and press .
- 5 Press the scroll keys to select one of New, Edit,Erase, and Exit.
- 6 Press .






Count Down

You can check how long time remains until or has passed after Count Down you enter.
You can input up to 5 Count Downs.

To Enter Count Downs:




- 1 Press  to display the Main Menu.
- 2 Press  for Scheduler.
- 3 Press  for Count Down.
 - The display is factory adjusted to show the remaining time until January 1, 2000.
- 4 Press  and select "New" and press .
- 5 Input the name of the Count Down.(To input charaters, refer to page 43)
- 6 Press .
- 7 Input the date.
 - You can enter the year from 1980 to 2099.
- 8 Press .


To see, add, edit, or erase Count Downs:

- 1 Press  to display the Main Menu.
- 2 Press .
- 3 Press  for Count Down.
 - It displays the earliest Count Down.
 - If you have stored two or more Count Downs, you can check them with the scroll keys.
- 4 Press the scroll keys to select the Count Down you want to change, and press .
- 5 Press the scroll keys to select one of New, Edit, Erase, and Exit.
- 6 Press .

World Time

You can check the current time of 24 foreign countries.








- 1 Press  to display the Main Menu.
- 2 Press  for Scheduler.
- 3 Press  for World Time.
- 4 Press the scroll keys to select the city you want to see.

• San Francisco	• Denver, Arizona
• Chicago, Mexico	• New York, D.C.
• Caracas	• Buenos Aires
• Mid Atlantic	• Cape Verde
• London, Madrid	• Paris, Berlin
• Athens, Helsinki	• Moscow
• Abu Dabi	• Tashkent
• Alma-ate	• Bang kok, Jakarta
• Hong Kong, Beijing	• Seoul, ToKyo
• Guam, Sydney	• Okhotsk
• Wellington	• Samoa, Midnay
• Honolulu, Hawaii	• Alaska
- 5 Press .

Calculator

You can calculate any numbers in relation to addition, subtraction, multiplication, division.

To input numbers and choose operation signs.

- 1 Press  to display the Main Menu.
- 2 Press  for Scheduler.
- 3 Press  for Calculator.
- 4 Input the number.
 - You can enter up to 9 digits.
 - Press  for minus and press  for decimal point. (You can enter up to 2 decimal places.)
 - If you entered numbers incorrectly, press .
- 5 Press the scroll keys to select the continue.
- 6 Input the number.
 - If you want to continue to operate with the same operator, enter numbers and press the scroll keys for selection.
 - If you want to continue to operate with a different operator, press the scroll keys to select an operation symbol, enter numbers, and press the scroll keys for selection.
- 7 Press  to see the result.





Voice Dial

 
Voice Dialing

Your phone features Smartspeak®, the new Voice Dialing system from Advanced Recognition Technology. You can call up to 20 stored entries by speaking the name into the microphone. Using the Voice Dialing option requires that you first train the phone to recognize the name.

Training the Phone

To train the phone for Voice Dialing:

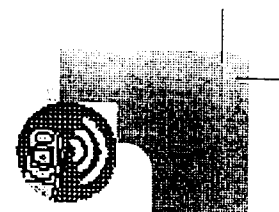


- 1 Press  to display the Main Menu.
- 2 Press  for Voice Dial.
- 3 Press  for Record. The system provides voice prompts and screen displays to guide you through the recording process.
- 4 Respond to the prompt by saying the name you want to save. The phone stores the name as a first sample, and then prompts for the name again.
- 5 Respond to the prompt by repeating the name after the beep. The phone stores the name as a second sample, and then requests the phone number.
- 6 Enter the phone number (including prefixes) by pressing the digit keys.
- 7 To store the phone number, press . the name (if matched up to Phone Book) and number display, along with the notification "Recorded". The screen then returns to the Voice Dialing menu.




Tips on Recording Name

- Avoid recording similar names phonetically. If you record a similar name to the one already in memory, the phone requests another name.
- Avoid recording in a noisy place.
- Speak clearly and natural.
- The person who will use the phone should record the name. The phone does not recognize the name if the voice sounds differently.
- Avoid too long or short name. It is recommended to contain 2 to 5 syllables.
- Voice dial feature is available only in CDMA mode.
- If this feature does not work properly, erase the name, and record with another name.
- It is recommended to practice several times to obtain best result.
- You can record up to 20 names. If you attempt to record more than 20, the phone announces "Memory is full."







Checking Recorded Name

- 1 Press  to display the Main Menu.
- 2 Press  for Voice Dial.
- 3 Press  for Review. A list of entries displays.
- 4 Press the digit key to select the desired entry, or press the scroll keys to scan entries. Your phone plays the recorded name.

Activation

Voice Dialing is always active once you have trained the phone to accept Voice Dialing entries. To place calls using Voice Dialing, simply press and hold , and then say the name into the phone after you hear the prompt. You can also initiate a Voice Dialing call just by opening the folder, when you select this option through the Main Menu.


To change Voice Dialing setup options:

- 1 Press  to display the Main Menu.
- 2 Press  for Voice Dial.
- 3 Press  for Set Active.
- 4 Press the scroll keys to toggle between options:
 - [*] only: Enables Voice Dialing by pressing and holding .
 - [*]/Folder: Enables Voice Dialing by pressing and holding , or by opening the folder.
- 5 When the desired option displays, press  to save the setting.

Using Voice Dialing





Placing a Call

To place a call using Voice Dialing:

- 1 To place the call, press and hold , or open the folder, depending on the setting.
- 2 At the voice prompt, say the name into the phone.
 - If the phone recognizes the name, the phone attempts a connection.
 - If the phone does not recognize the name, the screen prompts for the name again.
 - If the phone is unable to recognize the name after two attempts, the message "Cannot Recognize Name. Please check name." displays. Try the call again later, or check the recorded name.






Reviewing Voice Dialing Entries

To review Voice Dialing entries:





- 1 Press  to display the Main Menu.
- 2 Press  for Voice Dial.
- 3 Press  for Review. A list of entries displays.
- 4 Press the digit key to select the desired entry, or press the scroll keys to scan entries. The recorded names play audibly as you scroll through the list.
- 5 Press  to return to Standby mode.

Erasing Voice Dialing Entries

To erase an individual Voice Dialing entry:

- 1 Press  to display the Main Menu.
- 2 Press  for Voice Dial.
- 3 Press  for Review. A list of entries displays.
- 4 Press the digit key to select the desired entry, or press the scroll keys to scan entries. The recorded names play audibly as you scroll through the list.
- 5 When the desired entry displays, press  to select that entry.
- 6 Press  to erase the selected entry.

To erase all Voice Dialing entries:

- 1 Press  to display the Main Menu.
- 2 Press  for Voice Dial.
- 3 Press  for Erase All.
- 4 Press  to erase all Voice Dialing entries.

Voice Memo












Voice Memo

You can record voice in Standby mode or during conversation. The phone record up to 10 Voice Memo, 1 minute per 1 memo.

 
Recording Voice Memo

To record Voice Memo:

- 1 Press  to display the Voice Memo Menu.
- 2 Press  for Record.
- 3 Press and hold  to record Memo.
- 4 Press the associated digit key to select an option:
 - Press  for Add Label (up to 12 digits long).
 - Press  for Continue.
 - Press  for Erase.
- 5 Press .

 If you press and hold , you can record a voice without following the step 1 and 2.

Security Options

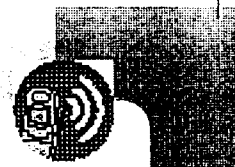

Reviewing Voice Memo

To review your Voice Memo:

- 1 Press to display the Voice Memo Menu.
- 2 Press for Review.
 - It displays the latest Memo on the screen.
- 3 Press the associated digit key to select an option:
 - Press for Replay.
 - Press for Erase.
 - Press for reviewing Next Memo.
 - Press for reviewing Previous Memo.

 
Erasing Voice Memo

To erase all your Voice memo:

- 1 Press to display the Voice Memo Menu.
- 2 Press for Erase All.
- 3 Press the corresponding key to select context-specific options.
 - Press to erase.
 - Press to cancel.

Security Menu

Your phone provides many security options, including a user-programmable lock code, and call restriction features. To access the security menu in Standby mode, press , . Press the associated digit key to access one of the Security options.
You must enter the four digit lock code to see any options in this menu. The default lock code is 0000.

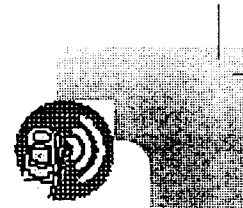




Lock Mode

Locking the phone restricts all outgoing calls except:

- The seven priority numbers (911, *611, 611, *911, *228, *2-2800, *2-2801)

To place an outgoing call in Lock mode:





- To call a priority number, enter the number and then press .

To unlock the phone and place normal outgoing calls, press  to display the Lock Code screen, and then enter the lock code. When the Standby screen displays, enter the phone number, and then press .

Lock Code Setting





The default lock code for your phone is 0000, depending on activation. You can enter a personal lock code, and then change the lock code as often as you like.

To enter a new lock code:

- 1 Press  to display the Main Menu.
- 2 Press  for Security and enter the Lock Code.
- 3 Press  for Lock Code.
- 4 Enter a new, four-digit lock code by pressing the desired digit keys.
- 5 Press  to save the new lock code.

Lock the Phone

To lock the phone:

- 1 Press  to display the Main Menu.
- 2 Press  for Security and enter the Lock Code.
- 3 Press  for Lock Phone.
- 4 Press the scroll keys to select an option:
 - Off: The phone remains unlocked.
 - Now: The phone locks immediately.
 - On Power-Up: The phone locks automatically at the next power-up.
- 5 Press  to save the setting.








Call Restriction

Restricting Calls

Your phone provides the following Call Restriction options in the Security menu:

- Restrict Phone Book Use
- Restrict Incoming Calls
- Restrict Outgoing Calls

To restrict calls:

- 1 Press  to display the Main Menu.
- 2 Press  for Security and enter the Lock Code.
- 3 Press  for Restrict.
- 4 Press the associated digit key to select an option:
 - Press  to restrict Phone Book use.
 - Press  to restrict Incoming calls.
 - Press  to restrict Outgoing calls.
- 5 Press the scroll keys to toggle between Unrestrict/Restrict.
- 6 Press  to save the setting.





Priority Numbers

Priority numbers (911, 611, *611, *911, *228, *2-2800, *2-2801) are programmed into your phone. And the Security Menu provides the option of editing your priority phone numbers(up to 10 digits long)

You can place calls to priority numbers when the phone is locked or when "Restrict Outgoing Calls" is active.


Editing Priority Numbers

 
To edit priority numbers:

- 1 Press  to display the Main Menu.
- 2 Press  for Security and enter the Lock Code.
- 3 Press  for Priority Numbers.
- 4 Press the 1,2 or key to select a location for the special number.
- 5 Enter the priority number by pressing the digit keys.
- 6 Press  to save the number.

Dialing Priority Numbers

To dial priority numbers in Lock mode:

- 1 Enter the priority number by pressing the digit keys.
- 2 Press  to place the call.

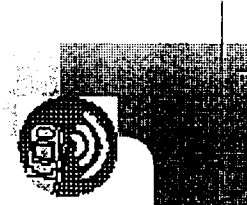

Other Options

PIN

If your system supplier provides this service and you have a PIN assigned by the system supplier, you can set your phone to send the PIN when you make a call. This feature prevents the phone from being used by unauthorized persons. For information on this service in detail, contact your service provider. Also your PIN is programmable and can be up to 24 digits.

To set the PIN function:

- 1 Press to display the Main Menu.
- 2 Press for Security and enter the Lock Code.
- 3 Press for PIN.
- 4 Press the corresponding digit key to select the desired option:
 - Press for Send PIN, and then toggle between Prompt/Never.
 - Press for PIN Code, and then Enter a new PIN code by pressing the desired digit keys.

Clear Memory

You can erase all numbers in the Phone Book. The screen displays "ALL ENTRIES ARE CLEARED."

To erase all numbers in the phone book:

- 1 Press to display the Main Menu.
- 2 Press for Security and enter the Lock Code.
- 3 Press for Clear Memory.
- 4 Press the corresponding key to select context-specific options.
 - Press to erase.
 - Press to cancel.

Hide Your Phone Number

This feature allows you to block your own number display. If you turn this feature on, the message "Hidden" displays when 'My Phone #' function is accessed by pressing , , .

To hide your phone number:

- 1 Press to display the Main Menu.
- 2 Press for Security and the enter the Lock Code.
- 3 Press for Hide My Number.
- 4 Press the scroll keys to toggle between On/Off.
- 5 Press to save the setting.

Reset Phone

If you want to reset all of your phone's features to the manufacturer's defaults, you can do so with this feature.

This feature doesn't affect the Phone Book, Call Logs, and SMS messages.

- 1 Press to display the Main Menu.
- 2 Press for Security and enter the Lock Code.
- 3 Press for Reset Phone.
- 4 Press the corresponding key to select context-specific options.
 - Press to reset.
 - Press to cancel.

Message Services

Short Message Services and Voicemail

 
Your phone receives voicemail notification, text messages, and pages. And your phone transmits text messages and pages(if your system supplier provides this service). When the phone receives a message, an alert sounds, and a text notification displays. The message indicator(✉) remains on the screen until you read the pending text messages or until you listen to the voicemail notification messages.

When message memory reaches 75 percent capacity, the screen displays a text notification and a prompt to erase old messages. At 100 percent capacity, the screen displays a text notification and rejects additional incoming messages until you erase some of the stored messages.

The phone automatically adjusts the incoming message alert volume to the lowest setting when the phone is in Conversation mode.

Incoming voicemail notification and text messages transmit even when the phone is in Lock mode. To access a message, or to return a call other than an emergency number, enter the lock code.

- Contact your service provider to activate Message Service. Not currently available in all markets.
- Voicemail notification and page message service may not be supported according to the service provider.

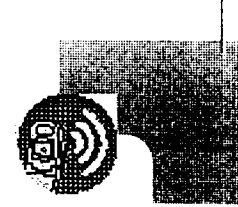

Reviewing Messages

Your phone accepts incoming messages in both Standby and Conversation modes. When a new message arrives, an alert sounds, and the message header displays. The message header includes the type of message(Text, Page, Voicemail Notification) and the name/phone number, if available.

You can review the message upon notification or store the message for later review. The Messages menu provides options for reviewing the name/phone number of the sender, date/time stamp, priority, and the message.

Your phone can store up to about 10 pages and text messages, depending on the length of the message. You can erase an individual message after reviewing it, or erase all stored messages at one time.

Reviewing Voicemail Messages

To review voicemail messages:

- 1 Press **[6-9]** to display the Messages Menu.
- 2 Press **[1-9]** for Inbox. The number of new messages displays next to the associated message type in the menu.
- 3 Press **[1-9]** for Voicemail. The screen displays "Voicemail", the time, date, and the number of new, unread messages.
- 4 Press **[6-9]** for context-specific options:
 - Press **[1-9]** to Listen to voicemail messages.
 - Press **[3-6]** to Reset the counter for voicemail messages, if desired.(The system resets the counter automatically after you listen to all new messages).



Reviewing Page and Text Messages

To review page and text messages:

- 1 Press **[MMS]** to display the Messages Menu.
- 2 Press **[1-9]** for Inbox. The number of new messages displays next to the associated messages type in the menu.
- 3 Press **[2-9]** for Page, or press **[3-9]** for Text.
An indexed list of page or text messages displays. An exclamation point next to an entry indicates an urgent message. A check mark next to an entry indicates that you have read and stored the message.
- 4 Press the scroll keys to highlight a message, and then press **[MMS]** to select the highlighted message for review. (You can also press the associated digit key to select a message by its entry number.)
- 5 When the message displays, press **[MMS]** to review the message.
- 6 After reviewing the message, press **[MMS]** for context-specific options:
 - Press **[1-9]** for Talk(to call the phone number).
 - Press **[2-9]** to Save the number(if there is no Phone Book match).
 - Press **[3-9]** to Erase the message.
 - Press **[4-9]** to review the Next message.
 - Press **[5-9]** to review the Previous message.
- 7 Press **[MMS]** to return to the previous screen.

Choosing Alert Type for Message Receiving

The phone alerts you when a message is received. You can choose how frequently this happens. The three options are: EVERY2 MIN, OFF, ONCE.

To set the frequency:

- 1 Press **[MMS]** to display the Message Menu.
- 2 Press **[1-9]** for Inbox.
- 3 Press **[4-9]** to select SMS Alert.
- 4 Press the scroll keys until you find desired type.
- 5 Press **[MMS]** to save the setting.

Erasing Messages

You can erase all stored messages.

To erase messages:

- 1 Press **[MMS]** to display the Message Menu.
- 2 Press **[1-9]** for Inbox.
- 3 Press **[2-9]** for Erase All.
- 4 Press **[MMS]** to confirm erasing, or press **[MMS]** to cancel.

Safety

For a variety of safety reasons, it is important to consider where you will be using your phone. When using your phone and its accessories, please follow these guidelines:

Compliance with Safety Standards

The SAMSUNG phone meets all standards and recommendations for the protection of the public from exposure to radio frequency(RF) electromagnetic energy established by governmental bodies and other qualified organizations. To reduce the risk of fire, electric shock, serious personal injury, or property damage, please follow these guidelines:

Driving

Using a wireless phone while driving is illegal in some states and countries. Know the laws and regulations for your area, and pull off the road and park if you need to make a call. If you must use the phone while driving, purchase and install the optional Hands-Free Car Kit.

Electronic Devices

Your wireless telephone is a radio transmitter and receiver. When the power is on, the phone receives and sends out RF energy. Most modern electronic equipment, such as equipment in hospitals and cars, contains an RF signal shield. RF energy may affect some inadequately shielded electronic equipment.

Turn off your phone in health care facilities, and always request permission before using the phone near medical equipment.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are shielded adequately from external RF signals.

Note if there are any regulations posted in the area regarding the operation of wireless phones, and learn where you can use them safely within the facility.

Aircraft

Turn off your phone before boarding any aircraft. The Federal Aviation Administration(FAA) requires that you have prior permission from the crew to use your phone while the plane is on the ground. FCC regulations prohibit using your phone while the plane is in the air. Do not use your phone at any time while traveling on board a plane.

Blasting Areas

Construction crews often use remote-control RF devices to set off explosives. To avoid interfering with blasting operations, turn off your phone when you are in a blasting area or in any area with signs posted that read "Turn off two-way radio."