

12. USER'S MANUAL

Getting Started

Key

Functions



Enters the menu facility. Also, scrolls through the menu options.

Performs several useful functions:

- In Standby mode, slide it up to find your phonebook entry by location number.
- In Standby mode, slide it down to view your phonebook (in alphabetical order).
- In Standby mode, slide it left to launch the PIM Scheduler.
- From Standby or Conversation mode, slide it right to access the Messages Menu, slide and hold it to listen to your voice mail.
- In Standby mode, press it to launch the Web Browser.
- When navigating a menu, press it to select the highlighted item.



Deletes characters from the display.
In the menu facility, returns to the previous menu level.



Makes or answers a call.
In Standby mode, enters the Outgoing Call log.



Ends a call. Also switches the phone on and off when pressed and held.
In the menu facility, returns to the idle mode and cancels your input.

FCC RF EXPOSURE INFORMATION

WARNING! *Read this information before using your phone*



In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these International standards.

CAUTION

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 1.0 cm. from the body. To maintain compliance with FCC RF exposure guidelines, use only belt-clips, holsters or similar accessories that maintain a 1.0 cm. separation distance between the user's body and the back of the phone, including the antenna, whether extended or retracted. The use of third-party belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure guidelines, and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov


Color Screens




Display


Display Layout


The display comprises two areas: an upper line of fixed icons, and the lower text and graphic area. The following icons display at power-on:

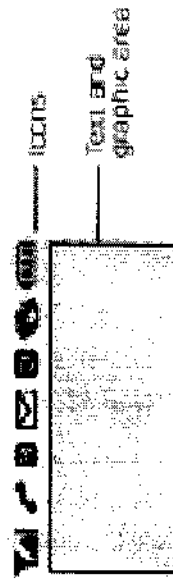



Buttons


- 


Signal strength: Shows the received signal strength. The greater the number of bars, the better the signal strength.
- 


Battery: Appears when a call is in progress.
- 

No service indicator: Appears when you are outside a service area. When it appears, you cannot make or receive calls until a time when a signal is more robust in an open area.
- 

Roaming: Appears when you are out of your home area and have registered with a different network (when travelling in other countries, for example).
- 

New Message: Appears when a new message has been received.
- 

Digital mode: Indicates that the phone is in a Digital mode.
- 

Vibrate on: Appears when vibrate mode is on. An incoming call will vibrate the phone rather than ring it.
- 

Battery strength: Shows the level of your battery. The more bars you see, the more power you have left.

Charging a Battery

Your phone is powered by a rechargeable Li-Ion Battery. A travel charger is provided with your phone. Use only approved batteries and chargers. Ask your local SAMSUNG dealer for further details.

The phone can be used while the battery is charging.

Note: You must fully charge the battery before using your phone for the first time.

1. Connect the lead from the travel charger to the bottom of the phone. Check that the arrow on the lead connector is facing towards the front of the phone.



2. Connect the charger to a standard AC wall outlet. The color indication of the lamps on the charger is as follows:
 - Red: charging
 - Green: fully charged

3. When charging is finished, disconnect the charger from the power outlet. Disconnect the adapter from the phone by pressing the grey tabs on the side of the connector and pulling the connector out.



Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, an empty battery icon (two bars displayed) flashes in the upper right corner of the screen. You will hear a warning tone.



When the battery becomes too weak for the phone to operate, it switches off automatically.

Switching the Phone On/Off

1. Open the phone.
2. Hold down the **Power** key for more than one second to switch the phone on.

The red light flashes, and an alert sounds.

- When the system locates services, the greeting message displays along with the date and time. You can now place and receive calls.
- If the system cannot locate service, the greeting message displays without the date and time. In this case, you cannot place and receive calls. You can try later when service is available.
- If your phone is locked, the lock icon appears. Press the **Power** key and enter the four digit lock code to unlock the phone.

3. When you wish to switch the phone off, hold down the **Power** key for more than two seconds.

WARNING: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Note: Your phone has a built-in antenna. As with any other radio-transmitting device, do not touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Standby Mode

Standby is the most basic state of your phone. The phone goes into Standby mode soon after you turn it on, or whenever you briefly press the **Power** key. When your phone is in Standby mode, you will typically see the greeting message and current date and time. If you enter a phone number, you can press the **Call** key to dial it, or press the **End** key to save it in the internal phone book.

Press the **Power** key at any time to return to Standby mode. Be careful; if you are on a call when you press the **Power** key, you will return to Standby mode, but your call will be disconnected. Press the **Call** key several times or hold it down to return to Standby mode without ending the call.

Call Functions

Making a Call

In Standby mode, key in the area code and phone number and press the **Call** key.

NOTE: If you have set **Auto Redial** option (B-1) to On (see page 55), and the call does not connect, the phone automatically retries to make the call.

Correcting the Number

To clear —

Then —

The last digit displayed

press the **Call** key.

The whole display

Hold down the **Call** key for more than one second.

Ending a Call

When you have finished your call, briefly press the **Call** key or close the phone.

Emergency Dialing

You can place calls to emergency numbers in your emergency number list even if your phone is locked or all outgoing calls are restricted. For further information on emergency numbers, refer to page 58.

Prepend Dialing

The Prepend option lets you add digits such as area codes and network routing activation codes to a phone number that is in your Internal Phone Book or Call Logs. (The prepended phone number cannot be more than 10 digits.)

To prepend existing phone numbers in the Phone Book or Call Logs:

1. Access the phone number entry.
2. When the dial tone phone number displays, press the **Call** key to access the **Options** menu.
3. Press the **Call** key or **Call** key in Call Logs to select the **Prepend** option.
4. Enter the area code or feature code.
5. Press the **Call** key to dial the number.

Call Functions

Making a Call from the Phone Book

You can store the phone numbers called regularly in memory, called the Phone Book. You then simply recall the number to dial for further information on Phone Book, refer to page 37.

Speed Dialing

Once you have stored phone numbers in the phone book memory, or you can dial them easily whenever you want.

One-Touch Dial

Memory locations 01 through 09 are special one-touch locations. You can dial the phone numbers stored in the Phone Book memory from 01 through 09 simply by pressing one button.

Press and hold the third digit of the memory location containing the number to be dialed.

Example: Location 009
Press and hold.

The number (and name) stored is displayed, then dialed.

Call Functions

Two-Touch Dial

Memory locations 10 through 99 are special two-touch locations.

Press the second digit briefly, then hold down the third digit of the memory cell.

Example: Location no. 023
Press 02, briefly and hold down 3.

The number (and name) stored is displayed, then dialed.

Three-Touch Dial

Memory locations 100 through 249 are special three-touch locations.

Press the first and the second digit briefly, then hold down the third digit of the memory cell.

Example: Location no. 123
Press 12, briefly and hold down 3.

The number (and name) stored is displayed, then dialed.

Note: When several numbers are saved in one location, only the phone number which is specified with Set Speed Dial option will be automatically dialed. For details, refer to this **Call** option under **Find Name** menu on page 38.

Last Number Redial

The phone stores the last 10 numbers dialed. To redial any of these numbers, proceed as follows:

1. If there are any characters on the display, clear the display by holding down the **Call** key for more than one second.
2. Press the **Call** key. The list of outgoing calls are displayed.
3. Slide the **Call** key to scroll through the list until you select the required name or number.
4. Press the **Call** key to dial the number displayed.

Answering a Call

When somebody calls you, the phone rings and the phone icon is displayed in the middle of the screen.



If the caller can be identified, the caller's phone number (or name if pre-stored in your Phone Book) is displayed. If the caller cannot be identified, only the phone icon appears.

1. To answer a call, open the flip cover. If the flip cover is already open, press any key except for the **Power** key.
2. End the call by closing the flip cover or pressing the **Power** key.

Note: You can answer a call while using the phone book or menu features. The current operation will be interrupted.

Call Functions

Viewing Missed Calls

If you are unable to answer a call for any reason, you can find out who was calling you, if this service is available. In this way, you can call the person back simply by pressing the **Call** key, if necessary.

The number of missed calls is displayed on the info screen immediately after the call was missed.

To view the missed call, refer to **Incoming (1-2)** under **Calls** on page 33.

In-Call Options

Your phone provides a number of functions that you can use during a call. You may not utilize all of these functions at all times. Many of the in-call options are network services.

Press the **Call** key during a call to access the following in-call options:

Mute/Unmute allows you to switch your phone's microphone off, so that the other party cannot hear you. Example: You wish to say something to another person in the room but do not want the other party to hear you.

Call allows you to access the **Calls** menu.

Phone Book allows you to access the **Phone Book** menu.

Call Functions

Silent Key: does not transmit the key codes that allow you to press keys without hearing accompanying key tones during a call.

Note: To communicate with answering machines or computerized telephony systems, the **Silent key option** must be disabled.

Send Tel #: sends DTMF tones of your number.

My Phone #: shows your phone number.

Send DTMF: sends DTMF tones of the currently displayed number. DTMF (Dual Tone Multi Frequency) tones can be used to control electronic phone services such as bank-by-phone or voicemail. During a call, key in the digits you want to send as DTMF tones for example, the bank account number and password. Then select this in-call option.

Call Functions

Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network. Contact your service provider to activate Call Waiting.

When a waiting call is detected, the incoming call alert sounds (network dependent) and a text notification displays.

To answer a waiting call:

1. To answer the call, press the **Call** key. The phone connects the calling party, and places the current party on hold.
2. Press the **Call** key again to switch between two parties.

Three-Way Calling

This feature enables you to conduct conference calls with two separate parties at the same time. You are billed airtime for each outgoing call separately. Contact your service provider to activate Three-Way Calling.

To place a Three-Way call:

1. During a conversation, enter the phone number for the third party and press the **Call** key, then press the **Call** key again. The phone places the other party on hold.

2. When the third party answers, press the **Call** key again to connect with the original party.

Call Forwarding

This feature provides the option of forwarding incoming calls to another phone number, even while your phone is off. Activating Call Forwarding does not affect outgoing calls made from this phone. Contact your service provider to activate Call Forwarding.

Adjusting the Volume

During a call, if you want to adjust the speaker volume, use the volume keys on the left side of the phone. Press the **Call** key to increase and the **Call** key to decrease the volume.

In Standby mode, you can adjust the ringer volume using the same keys.

Call Functioning

Quick Switching to Vibration Mode

You can quickly switch your phone to the vibration mode with a touch of the **VIB** key. Press and hold the key until the **Vibrate** icon - **Vibrate** - appears in the display. Your phone goes to the vibration mode immediately.

Press and hold the **VIB** key again to return to bell mode.

This feature is convenient when you are in a hurry to mute the phone sound (in a theater, for example).

Using the Menu

The phone offers a range of functions that allows you to customize the phone to your needs. These functions are arranged in menus and submenus.

The menus and submenus can be accessed by scrolling or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In Standby mode, press the **CALL** key to access the menu facility. Scroll with the **CALL** key (or slide the **CALL** key up/down) or press the **CALL** key to reach the desired main menu e.g. **Display**. Press the **CALL** key to enter the menu.
2. If the menu contains any submenus (for example, **Language**), find the one you want by scrolling with sliding the **CALL** key. Press the **CALL** key to enter the submenu.
If the menu you have selected contains submenus, repeat this step.

3. Scroll with the navigation key (left) to find the setting of your choice. Press the **CALL** key to confirm the chosen setting.

Notes:

- You can return to the previous menu level by pressing the **CALL** key.
- You can exit the menu without changing the menu settings by pressing the **CALL** key.

Accessing a Menu Function by Using its Shortcut

The menu items (menu, submenu and setting options) are numbered and can be accessed quickly by using their shortcut number.

1. In Standby mode, press the **Menu** key to access the menu item.

2. Within three seconds, key in the first digit of the shortcut number. Repeat this for each digit of the shortcut number.

Example: Accessing the Ring Tone option


Press **Menu**, **2**, and **3**.

3 for **Sounds 1** for **Ring 3** for **Ring Tone** menu function.

3. Find the setting of your choice by sliding the **Menu** key then press the **Menu** key.

Notes: The numbers assigned to each menu function are indicated on the list on page 31.

Menu Map

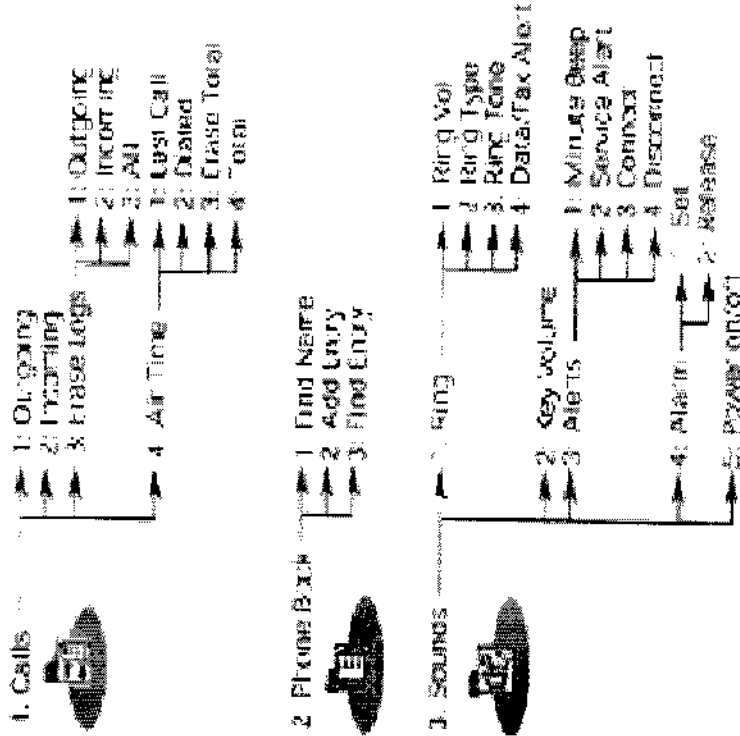

Using the Keypads

- 4. Display
 - 1: Backlight
 - 2: Banner
 - 3: Animation
 - 1: Opening
 - 2: Closing
 - 4: Language
 - 5: My Phone
 - 6: Contrast

- 5. Games & FM
 - 1: Today
 - 2: View Month
 - 3: Jump To Date
 - 4: Beeps
 - 5: World Time
 - 6: Calculator
 - 7: Game

- 6. Setup
 - 1: Auto Retry
 - 2: Auto Receive
 - 3: Auto Hyphen
 - 4: Anykey Answer
 - 5: Tone Length
 - 6: Set Time
 - 7: Set Name
 - 8: Data/Fax
 - 9: Terminal BPS

- 7. Web Browser (GoNext)
 - 1: Start Service
 - 2: Favorites
 - 3: Address Input
 - 4: Internet Setup

- 1: Homepage
- 2: Proxy Server
- 3: Page Title
- 4: DNS Server
- 5: Idle Timer
- 6: Cookies Setup
- 7: ID Setup
- 8: Access Number

- 0. Security
 - 1: Lock
 - 2: Resound
 - 1: Phone Book
 - 2: Incoming
 - 3: Outgoing
 - 4: New Numbers
 - 3: Lock Code
 - 4: Emergency#
 - 5: PIN
 - 1: Send PIN
 - 2: PIN Code
 - 6: Block Call#
 - 1: Settings
 - 2: Memory
 - 3: All
 - 7: Reset Phone

Calls

You can use the **Calls** menu to:

- View and dial the last outgoing or incoming numbers.
- Erase the numbers in the Call Log Memory.
- View the duration of calls.

Outgoing

Menu 1-1

The phone stores up to 10 outgoing calls you dialed.

When you access this menu, the list of outgoing calls is displayed.

To select an entry, slide the **Up** key up or down

To dial the selected entry, press the **Call** key.

To view the date and time at which the call was dialed and use option features, press the **Options** key.

When you press the **Options** key, you can view the date/time stamp for the selected entry. If there is a phone book match, the name displays.

Press the **Options** key to access **Options**. The following options are available:

Talk: dials the selected number.

Show Entry (or **Store** if the phone number is not currently stored in the Phone Book): shows the phone book entry or stores the number in the Phone Book.

Prepend: allows to add an area code or feature code to the number before calling the number.

Incoming

Menu 1-2

This option lets you view the last 10 calls received (if you are subscribed to the caller ID service). When you access this menu, the last incoming calls are displayed.

To select an entry, slide the **Up** key up or down.

To dial the selected entry, press the **Call** key.

To view the date and time at which the call was received and use action features, press the **Options** key.

When you press the **Options** key, you can view the date/time stamp for the selected entry. If there is a phone book match, the name displays.

Press the **Options** key to access **Options**. The following options are available:

Talk: dials the selected number.

Show Entry (or **Store** if the phone number is not currently stored in the Phone Book): shows the phone book entry (or stores the number) in the Phone Book.

Prepend: allows to add an area code or feature code to the number before calling the number.

Calls

Erase Logs

Menu 1-3

You can erase the numbers stored in the Call Log memory.

Outgoing: The numbers you called are erased.

Incoming: The numbers you received are erased.

All: All calls you dialed and received are erased.

Air Time

Menu 1-4

Using this option, you can view the call time of the last call, as well as total air time for all calls since you last reset the timer.

Last Call: duration of the last call.

Total: total duration of all calls made since the timer was last reset.

Erase Total: resets the call timers.

Totals the combined airtime of every phone call that has been made on your phone. You can reset the total airtime by resetting your phone (see page 10).

Phone Book

The Phone Book allows you to store frequently used phone numbers and the associated names in your personal directory to make it easy for you to make a call without having to dial a number or enter the phone number. You can store up to 248 numbers.

Find Name

Menu 2-1

This option displays the stored names in the Phone Book in alphabetical order.

Slide the **OK** key up or down to scroll to the desired name. You can also enter the first letter(s) of the name by pressing the associated alphanumeric key. Using this method, the phone searches for the names in the list beginning with that letter(s), and then displays the first name in that section of the list. Then, press the **OK** key to display the selected entry.

When the desired entry displays, press the **CALL** key to place a call.

Notes: If you have saved two or more numbers under the labels, such as Home, Work, Mobile, Fax and so on, under one name, you can find the desired number by sliding the **OK** key up or down when the entry displays.

Add Entry

Mon 1 2-2

If you press the **OK** key, you can access the following options:

Talk: dials the number.

Add Phone: allows you to add several different types of numbers to the name, such as work, office number or mobile number.

Edit: allows you to edit phone number, name, or entry number. **Set Secret** option prevents the number from being displayed on the screen. **Set Speed Dial** option allows you to designate the number to be dialed as a special-dial number. For details on speed dialing, refer to page 20.

Prepend: prepends the number to add an area code or feature code to the number before dialing.

Cancel: erases the number.

Name Ringtone: allows you to designate a unique tone to signal an incoming call by the number.

Note: You can locate Phone Book entries quickly when the phone is in Standby mode. Slide the **OK** key down to access Find Name menu in one step and then slide the **OK** key up or down to scan entries.

This menu allows you to store a number with a name in your Phone Book. You can save a person's various numbers, such as work, home, mobile, number and fax number under one entry. Using this feature, you can keep someone's information together. It also helps you to find numbers easily in the Phone Book.

Creating a New Entry

1. Enter a number and press the **OK** key. The phone book entries are displayed.
 2. Press the **OK** key to confirm **<New Name>**.
 3. You are asked to select a label. The following labels are available: **Home, Work, Mobile, Pager, Fax, No Label**. After selecting the label, using the **OK** key up or down, press the **OK** key.
 4. The first available location displays. To accept the displayed location, press the **OK** key. To select another location, slide the **OK** key to scroll to the desired location or enter the location number using the number keys, then press the **OK** key.
- Note:** An entry's location is also its special-dial code.
5. To include a name with the entry, enter the desired name, then press the **OK** key for information on how to enter a name, see page 41.

Note: You can enter a name up to 12 digits.

SOUNDS

VIBRATE: The phone vibrates but does not ring.
VIB+BELL: The phone vibrates and rings simultaneously.

Ring Tone

This option allows you to select the required ringing tone. You can choose among 19 different tones or melodies. Each time you select a tone, it sounds for a few seconds.

Data/Fax Alert

This option allows you to be alerted with a distinct ringing tone when you are faxed or received a data through the phone (network dependent). You can choose between 19 different tones or melodies. Each time you select a tone, it sounds for a few seconds.

Key Volume

This option allows you to adjust the tone volume that the keypad generates when you press a key.

Use **UP** or **DOWN** keys on the left side of the phone.

You can also use **UP** or **DOWN** keys on the left side of the phone to adjust key volume in Standby mode.

Menu 3-2

Alerts

Menu 3-3

Minute Beep: With this menu option set to **ON**, the phone sounds an alert 10 seconds before each elapsed minute to remind you of the length of the current call.

Service Alert: With this menu option set to **ON**, the phone beeps when you exit service area or when you return to a service area.

Connect: You can set your phone to sound the connect tone when your call is connected to the System.

Disconnections: You can set your phone to sound the connect tone when a call is disconnected or dropped.

Alarm

Menu 3-4

The option allows you to set the alarm ringing at a specific time.

To set the alarm, proceed as follows:

1. Select **Set option**.
2. Choose the alarm frequency option, and press the **OK** key.

Daily: the alarm rings every day at the same time.

One Time: the alarm rings only once and is then deactivated.

Sound

- 3. Enter the required time using the numeric keys
 - 4. Press the **OK** key.
- To stop the alarm when it rings, simply open the phone or press any key.
- To deactivate the alarm, select **Deactivate** option then press the **OK** key.

Power on/off

Menu: 3 5

This menu enables or disables the phone sounds when it is switched on or off. The following options are available:

- On Off:** The phone sounds when it is switched on and when switched off.
- Off On:** The phone sounds when it is switched off and does not sound when switched on.
- On On:** The phone sounds when it is switched on and does not sound when switched off.
- Off Off:** Neither does the phone sound when it is switched on or off.

Display

Backlight

Menu: 4-1

You can select how the phone uses the LCD backlight. The following options are available:

- 10 SECONDS:** The backlight comes on when you press a key or receive a call and switches off 10 seconds after the last key is pressed.
- 30 SECONDS:** The backlight comes on when you press a key or receive a call and switches off 30 seconds after the last key is pressed.
- OFF:** The backlight is not used.

Banner

Menu: 4-2

This option allows you to see a greeting message to be displayed in the idle mode. It is preset to **TYPE**. You can change the greeting message according to your own preference.

Enter your personal greeting up to 12 digits by using the alphanumeric keys. For more information on entering letters, refer to page 41.

Animation

Menu: 4-3

This menu allows you to select messages displayed when you switch the phone on and off.

Display


Opening You can select a power-on image. There are three graphics to choose.

Closing You can select a power-off image. There are three graphics to choose.

Language

Menu 4-4


Sets the language of menus and default key input.

Select the desired language sliding the  key.

Note: This setting does not affect the Web pages displayed, as they are set by the network.

My Phone Number

Menu 4-5

You can check your phone number. If you have more than one phone number, slide the  key to check the next number.

Note: You can block this feature by setting **Block Own #** option (0-6) to **ON**. Refer to page 70.

Contrast

Menu 4-6

This option allows you to adjust the contrast of the LCD screen.

Slide the  key until the desired value displays.

Games & PIM





This feature enables you to:

- Keep track of important dates and events
- Create a list of things to do
- Check the time in another part of the world
- Use the phone as a calculator
- Enjoy games

Today

Menu 5-1

You can schedule up to 9 events for the next 1 day, indicating each event's start and end times. You can even have your phone's calendar alert you before an event is to start. Events scheduled for future dates automatically appear on your Today events schedule when the day comes.

1. Enter your event information. You can enter up to 36 characters. For more information on entering letters, see page 41.
2. Press the  key to accept your entry.
3. Enter the Start Time and Date, and press the  key.
4. Enter the End Time and Date, and press the  key.
5. Select an alarm to notify you of your event. The available alarm options are: **10 minutes Before**, **30 minutes Before**, **1 hour Before**, **No Alarm** and **On Time**.
6. Press the  key to save your event.

Viewing a Scheduled Event

If you already scheduled an event when you select the Today menu option (5.1), the events are displayed. Slide the **Tab** key to select the event you want to view. If necessary, slide down the **Tab** key to display more contents in the selected event.

The following options are available when you press the **Tab** key:

New Event: allows you to add a new event.

Edit Event: allows you to edit a scheduled event.

Erase Event: allows you to erase a selected event.

Exit: exits the Options menu.

View Month

Menu 5-2

This option allows you to view in calendar format the current month, a past or future one. In this option, the current date is highlighted on the calendar. Days with the scheduled events are underlined.

- You can move up or down the Calendar by one week by sliding **Up** or **Down**.
- You can move right or left one day by sliding **Left** or **Right**.
- To display the next or previous month, press the **Tab** or **Tab** keys.

To schedule a new event or view a scheduled event for a specific day, select the desired month and day sliding in **Tab** key, and press the **Tab** key. If necessary, add, edit or erase events referring to "Viewing a Scheduled Event" as described above.

Jump To Date

Menu 5-3

This feature allows you to specify the calendar date you want to view. Once at your desired date you can enter edit and delete events in your calendar.

Enter the date using the number keys and press the **Tab** key.

To add, edit or erase the events, see "Viewing a Scheduled Event" on page 50.

Tasks

Menu 5-4

This feature allows you to:

- Draw up a list of tasks to be done.
- Assign a priority and dead line to each task.
- Sort the tasks by priority.

To create the Tasks List, proceed as follows:

1. Enter the first task.

Note: You can enter up to 32 characters. For further details on how to enter characters, see page 41.

3. Press the **Tab** key.
4. Enter your deadline using the number keys.
5. Select high or low priority sliding the **Tab** key, then pressing it.

Viewing the Tasks List

If tasks are already defined in the Tasks List when you select the **Tasks** menu option (6.4) the current contents are displayed with the deadline and the associated priority (1 for High or - for Low).

Scroll to the desired item by sliding the **Up** key. If necessary, slide the **Left** key to display more contents in the selected task.

The following options are available when you press the **Enter** key:

New Task: allows you to add a new task.

Edit Task: allows you to edit a saved task.

Erase Task: allows you to erase the selected task.

Exit: exits the Operator's menu.

World Time

Menu 5-5

This menu allows you to check the current time for Greenwich Mean Time (GMT), and the time at 24 major cities around the world.

The screen shows:

- The world map with the time zone line.
- City name • Current date and time.

Select the city corresponding to your time zone by pressing the navigation keys one or more times. The local date and time are displayed.

Note: A one hour difference from current time at destination may occur due to daylight savings time.

Calculator

Menu 5-6

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

Using the Calculator

1. Enter the first number using the numeric keys.
2. Press the **Op** key to set the operator for your calculator until the required arithmetic symbol appears: + (add), - (subtract), x (multiply), / (divide).
3. Enter the second number.
4. To calculate the result, press the **Eq** key.
5. Repeat steps 1 to 4 as many times as required.

Each time you change the operator, the previous calculation is performed, and the result is displayed as the top number in the display.

Notes:

- To erase mistakes and clear the display, press the **C** key.
- Use the **+/-** key to enter a decimal point and the **+/-** key to change the sign of a number to a negative (+/-).

Setup

Many different features of your phone can be customized to suit your preferences.

Auto Retry

Menu 6-7

With this menu option set to **ON**, when you place a call and the call does not connect, the phone automatically rings or vibrates to make the call.

Auto Receive

Menu 6-2

With this menu option set to **ON**, the phone automatically answers calls. This option is useful while driving, for instance.

When a call comes in, your phone will answer the call automatically after 2 rings. The feature does not work if you have chosen **VIBRATE** as a ring type or set the ring volume to off.

Auto Hyphen

Menu 6-3

With this menu option set to **ON**, your phone automatically hyphenates numbers as follows: (area code) (number). Dig is following a cause and effect hypothesis.

Game

Menu 5-7

This menu allows you to play games.

When the game start screen is displayed, press the **HELP** key to get help in playing the game. Some games doesn't support this option.

The following options are displayed:

KEY HELP: displays each key function.

GAME HELP: gives you a demo play to show how the game is played.

GAME EXIT: allows you to exit the game. You are asked to confirm. By selecting **Yes** you return to the idle mode.

Press **ESC** key to return to the game start screen and play the game.

Anykey Answer Menu 6-4

This feature allows you to choose how to answer an incoming call. The following options are available:

- OFF:** you can press only the **Call** key
- ON:** you can press any key except for the **Call** key

Tone Length Menu 6-5

Some phones you call can recognize only longer tones. You may have to change the length to **long** for some calls. When calling a paging system, your phone should be in the **SHORT** mode.

Set Time Menu 6-6

This option enables you to set the current date and time. Enter the date and time.

The current time is set, displayed, the month, day, year and minute must be entered with 2 digits. The year requires all four digits. If you do not set the time or you input the wrong time, **INVALID TIME** displays and the phone prompts you to enter again.

Set Name Menu 6-7

Your Samsung phone can store two NAMS (NAM) 5.0 files for **Home** and **My Number** - essentially your telephone number. This means you can have two phone numbers on your phone and you can quickly and easily switch your service back and forth between the two numbers.

Slide the **key** to select **NAM-1** or **NAM-2**. If you change the NAM, the phone will reboot and return service using the new NAM setting.

Data/Fax

Message 6-R

To receive data or fax through the phone, you have to see this option to **Incoming Data Only** or **Incoming Fax Only**. When you want to use the phone for a normal voice call, set to **Off: Voice Call Only**. The following options are available.

- Off: Voice Call Only**: receives a call
- Incoming Data Only**: receives data.
- Incoming Fax Only**: receives fax.

Terminal BPS (Bits Per Second)

Message 6-3

When using PC, PDA, or Palm Top, you can select the data transmission speed with this menu. If you are using PC Link, select **auto** or **115200** bps. If you are using W/IR, select **115200** bps.

Web Browser (GoNext)

About Web Browser

Your phone comes equipped with a Web Browser, making it possible for you to access the Wireless Web.

The Web Browser allows you to access up to the minute information through your phone. View specially designed text versions of popular Internet sites including Yahoo!, CNN, Mobilize and over the Weather Channel. Browsing the Wireless Web through your phone is like using your computer in that site providers have selected only the critical aspects of the site to present to wireless phone users, and have removed most graphics.

Each time you start the Web Browser, the phone will connect to the Wireless Web and the service indicator icon () will appear on the display. Whenever the service indicator icon is visible on the display, you are connected to the Wireless Web and will be billed accordingly. Rates will vary according to your service option.

The Web Browser will end the connection after a certain period of network inactivity and will automatically reconnect as necessary. For this reason, you may find that you are billed for several network connections within a single session. This is to mail and is designed to minimize your bill.

While Pressing the **Key** in Standby mode connects the phone to the Wireless Web.

Start Service

Menu 7-1

This menu connects your phone to the Wireless Web.

NOTE: Pressing the  key will directly start the Web Browser.










Once connected, the Home page will be displayed. An example of a home page is shown below.

- Go Next
- 1 What a new
- 2 Games
- 3 Parties
- 4 Sport
- 5 Internet

The opening page displayed when accessing the web browser is dependent on the wireless web service provider content. To scroll through the screen, use the  key.

To exit the Web browser, simply press the  key at any time.

Navigating the Web Browser

-  1. **OK Key:** Press  to select the highlighted item.
-  2. **CLR Key:** Clears out entered text or number's. When entering numbers or text, press to clear the last number, letter or symbol. Press and hold to completely clear the input field.
-  3. **Numbered Keys 0-9:** If the items on a page are numbered, you can use these keys to select them.
-  4. **0 Key:** Enters a 0.
-  5. **Round Key:** This key performs two functions. Press to move right in input mode. Press and hold to insert a space.
-  6. **END Key:** Exits the Web Browser and returns the phone to Standby mode.
-  7. **MEM Key:** Press this key to display additional options while browsing.
-  8. **Scroll Key/Backlight key:** Allows you to scroll up or down one page at a time. Turns on the backlight while browsing.

Favorites

Menu 7-2

You can bookmark most websites to save the address of the site into the Favorites List, which can then be opened at the future time. This feature saves you time by reducing the number of steps it takes to access a desired page.

To add the site to the Favorites list, select the STORE option while viewing the desired page.

To order the favor to site, scroll the Favorites list using the **Up** key, and press the **Enter** key when the desired item is highlighted. The following options are available at the bottom of the display. Slide the **Yes** key to select the desired option.

Go opens the site of the selected URL address.

Edit allows you to edit the selected item. You can edit the title (**Edit Title**) or the URL address (**Edit Address**).

Delete deletes the selected address from the Favorites list.

Cancel: cancels your input and returns to the Favorites list.

Entering Text, Numbers or Symbols in the Web Browser

When prompted, you can enter text, numbers or symbols using the same way as in the phone mode. See page 41 on how to enter letters.

Address Input

Menu 7-3

You can manually enter the address of a desired site you want to go to or add it to the favorites list.

1. Enter the address of the desired site by details on entering letters, see page 41.
2. Press the **yes** key.
3. Select the option on the bottom of the display using the navigation keys, and press the **yes** key.
 - If you want to go to the page right now, select **Go**.
 - If you only want to store the address for future visit, select **Store**. When you are asked to enter the title for the address, enter the title and press the **yes** key. The address will be saved in your favorites list.
 - If you want to cancel your input, select **Cancel**.

Internet Setup

Menu 7-4

This menu allows you to configure the setting for the internet connect on

Notes: internet configuration is set at factory. If you change the settings, your phone may not connect to the internet.

Homepage

This option shows the current start up homepage. To change the start up homepage manually, enter the desired URL address. For information on entering letters, see page 41.

Proxy Server

This option shows information on the proxy server.

Page Info

This option allows you to see how to display the information on the page you visit.

View Title: displays the title of the page.

View Addr: displays the URL address of the page.

The current setting is marked with **✓**.

DNS Server

This option shows information on DNS Servers

Main DNS: shows the main DNS server.

Secondary DNS: shows the secondary DNS server.

Establishing a Session for a

Idle Timer

This option allows you to define the length of time for the phone to wait for the Internet connection.

You can enter 60 through 180 seconds using the number keys.

Cookie Setup

Cookies are little pieces of information sent from the server to store a session information of the web sites you visit.

When you select **Yes**, the server is able to store and use information about your past visits on the visited web site. Selecting **No** disables the cookies functionality.

IP Setup

This option shows user information for the Internet service.

Access Number

You can edit/view the access number for the Internet service.

Security

Your phone provides many security options, including a user-programmable lock code and call restriction features.

To access the security menu, you must enter a four digit lock code. The lock code is preset to **0000** at factory.

Lock

Menu 0-1

When the phone is locked, you cannot operate the phone until you enter the lock code.

The following options are available:

OFF the phone remains unlocked.

NOW the phone locks immediately.

ON POWER-UP the phone locks automatically at the next power-up.

To place a call in Lock mode:

- To place an emergency call, enter the number and then press the **CALL** key. The phone recognizes 100, 101, 102, 105 or other numbers assigned by its emergency numbers (Menu 9-4).
- To place normal outgoing calls, press the **CALL** key to display the Lock Code screen, and then enter the lock code. When the Standby screen displays enter the phone number, and then press the **CALL** key.

Get Started

Restrict

Menu 0-2

This feature allows you to restrict your calls. Call Restriction can be set up in the following ways.

Phone Book: The phone book cannot be accessed

Incoming: calls cannot be received

Outgoing: calls cannot be made.

How numbers: Only calls to numbers stored in the phone book can be made. Additionally, new numbers cannot be added to the phonebook.

Each option can be restricted or unrestricted individually

Lock Code

Menu 0-3

This feature allows you to change your current lock code to a new one. The lock code is preset to 0000 at factory

Enter a new, four-digit lock code then press the **OK** key

Emergency Number

Menu 0-4

This feature allows you to store up to seven emergency numbers. These numbers can be dialed at any time when the phone is locked or when the outgoing call is restricted

Your phone has 4 default priority numbers

1: 100 2: 107 3: 102 4: 166

To store an emergency number, select a location using the number keys or the **OK** key and enter the desired number. Each emergency number can be up to ten digits long. The number already stored in the location is automatically deleted when you enter the new number.

To make an emergency call in Lock mode, simply enter the emergency number, then press the **OK** key.

PIN (Personal Identification Number)

Menu 0-5

Note: The feature is only available if your system supplier provides this service and you have a PIN assigned by the system supplier.

Contact your service provider for complete information about this feature. Your PIN is customizable and may consist of up to 24 digits.

Send PIN

This feature prevents the PIN from being read by unauthorized persons. The feature is only available if your system supplier provides this service and you have a PIN assigned by the system supplier. These options are available:

Monitor: The option is not activated

Prompt: When you make a call, you are asked to send the PIN

Change Display Colors

PIN Code

This feature allows you to change the PIN code. When the current PIN code is displayed enter a new PIN code by pressing the appropriate digit keys.

Block Own Number

Menu 0-5

This feature allows you to hide your own number from being displayed, so others cannot view your phone number. If you turn this feature on, the message **Blocked for privacy** displays when the **My phone #** menu (4-5) is accessed.

Reset Phone

Menu 0-0

With this menu option, you can easily reset your phone to its default configuration.

Settings resets all the settings to the factory default. **summary** clears all information saved in the phone memory, such as phone book, call records, or messages.

All resets all the settings to their default state and clears all information in the phone memory.

Call Forward Settings

Messages

Your phone receives an email box (16000) for messages, and pages and transmits text messages and pages if your system supplier provides this service. When the phone text was a message, an alert tone (9) and a text notification displays. The lock remains on the screen until you read the pending text messages or until you listen to the voicemail notification messages.

Your phone can store up to 100 pages and text messages depending on the length of the message. If the message memory is full, a message is displayed and you cannot receive any new messages (for data-oriented messages).

Inbox

1

The menu allows you to read voicemail notification text messages and pages.

The following options are available:

Voice (1-7) The screen displays the time, date and the number of new, unheard messages.

Press the **Call** key to access the following options:

- **Listen**: You can listen to the voicemail.
- **Reset**: You can manually reset the counter for voicemail messages. If desired, the system resets the counter automatically after you listen to a (new messages).

Outbox

Page (☑ 1-3): An indexed list of page messages displays an exclamation point next to an entry indicates an urgent message. A check mark next to an entry indicates that you have read and stored the message.

Select the desired message to review, then press the **OK** key. After reviewing the message press the **Left** key to access the following options:

- **Talk**: To call the phone number.
- **Save #**: To store the phone number in your Phone Book.
- **Erase**: To erase the message.
- **Next Msg**: To review the next message.
- **Previous Msg**: To review the previous message.

Text (1-3): An indexed list of text messages displays an exclamation point next to an entry indicates an urgent message. A check mark next to an entry indicates that you have read and stored the message. Select the desired message to review, then press the **OK** key. After reviewing the message press the **Left** key to access the following options. For details on options, refer to the **Page** (1-3) menu.

Via the **Alert** (☑) menu the phone alerts you when a message is received, you can choose how frequently this happens. The three options are **EVERY 2 MIN**, **OFF**, **ONCE**.

To delete all text and page messages you have received, select **Erase All** (☑ 1-3).

The menu allows you to transmit pages and text messages, and to store the messages you have transmitted.

The following options are available:

Paging (☑ 2-3): When prompted, enter the destination address number, then the number you want to be called back.

Messaging (☑ 2-3): When prompted write the message. You can write and edit text messages of up to 108 characters. For details on entering letters, see page 41.

Then enter its destination address number, then the number you want to be called back. You can also set text message's priority. Priority options are **URGENT**, **DEFERENTIAL**, or **URGENT**.

The messages you have transmitted are stored in **Send Items** (☑ 3-3).

- **Read**: This menu allows you to read the stored messages you have transmitted.
- **Erase All**: This menu allows you to delete all messages you have transmitted.

Using the Batteries

Your phone is powered by a rechargeable lithium standard battery.

Additional batteries are available for purchase (ask your SANYUNG dealer for further details).

Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power to talk and standby times are greatly affected by the signal strength of the cellular network and the parameters set by the network operator.
- Battery charging times depend on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.

Accessories

Battery

Union STAN-DARD battery is available for use with your phone. EXTENDED battery is also available.

Travel Charger

The travel charger plugs into a wall outlet and enables you to charge a single battery at your home or office.

Cigarette Lighter Charger

The cigarette lighter charges your phone in a vehicle while you drive and enables you to operate the phone from a vehicle cigarette lighter socket.

Hands-Free Car Kit

The hands-free car kit provides safety, freedom and convenience in your vehicle. (Kit includes cradle, speaker and microphone.)

Ear-Microphone

The ear-microphone includes the earpiece and microphone in a convenient, lightweight unit.

RS-232C Cable

The RS-232C cable connects your phone to a computer port, allowing you to use the Internet or other communication programs.

Using the Batteries

- Use only Samsung approved batteries and recharge your battery only with Samsung approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery. It may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and life-time of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Low temperatures below 0 °C (32 °F) or batteries are particularly affected by.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metal object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the back of the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Safety Information

Read Safety

- Remember, road safety always comes first!
- Do not use a hand-held phone while driving a vehicle. Always park the vehicle before having a conversation.
- Make sure that the phone is stored safely and will not fall or be broken in the event of a collision or emergency stop.
- The use of an in-let device to operate a vehicle's lights or horn or public address is not permitted.
- Only qualified personnel should install or service the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the unit.
- Electronic fuel injection, anti lock braking, electronic cruise control or any other electronic systems may malfunction due to the lack of protection from radio signals. Check regularly that all cellular phone equipment in your vehicle is mounted and operating correctly.

Safety Information

Operating Environment

- Remember to follow any special regulations in force in a city area and always switch off your phone whenever it is forbidden to use it or when it may cause interference or danger (in a hospital for example).
- Operation of any radio transmitting equipment including cellular phones, may interfere with inadequately protected medical devices. Consult a physician or the manufacturer of the medical device if you have any questions. Other electronic equipment may also be subject to interference.
- As with other mobile radio transmitting equipment, you are advised that for satisfactory operations and personal safety, the equipment should only be used in the normal operating position.
- Always switch off the phone when at a refuelling point (service stations). You are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.
- Do not store or carry flammable liquids, cases or explosive materials in the same compartment as the phone, its parts or accessories.

Safety Information

- Switch off your cellular phone when in an aircraft. The use of cell air phones in an aircraft is illegal and may be dangerous to the operation of the aircraft or disrupt the cellular network. Failure to observe these instructions may lead to the suspension or denial of cellular telephone services to the operator, legal action or both.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill the warranty obligations and enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids containing minerals will corrode the electronic circuits.
- Do not use or store the phone in dusty, dirty areas as its components may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries or warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal temperature, moisture can form inside the phone, which may damage the electronic circuits.

Safety Information

- Do not attempt to open the phone. Unauthorized handling of the phone may damage it.
- Do not drop or knock the phone. Rough handling may damage the internal circuits.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in mild, soapy water.
- If the phone or any of its accessories are not working properly, take them to your nearest qualified service center. The personnel there will assess you, and if necessary, arrange for the phone to be repaired.

Emergency Calls

Important! This phone, like any cellular phone, uses radio signals, cellular and landline networks, as well as user-programmed functions that cannot guarantee connection in all situations. Therefore, you should never rely solely on any cellular phone for essential communications (medical emergencies for example).

Remember, to make or receive any calls, the phone must be switched on and in service at 50 with adequate cellular signal strength.

Emergency calls may not be possible on all cellular phone networks or when cellular network services and/or phone features are in use. Check with local cellular service providers.

Glossary of Terms

- Mobile** - Actual time spent talking on the wireless phone. Most carriers bill customers based on how many minutes of airtime they use each month.
- Antenna** - A device for transmitting or receiving signals. The size and shape of antennas is determined, in part, by the frequency of the signal they receive. Wireless phones and the base station must have antennas.
- Base Station** - The fixed radio transmitter/receiver that maintains communications with mobile radio telephones within a given area. (Typically called a cell or cell site).
- CDMA** (Code Division Multiple Access) - A spread spectrum approach to digital transmission. With CDMA, each conversation is digitized and then tagged with a code. The mobile phone deciphers only a particular code to pick the right conversation off the air. The transmitted signal is just above noise level across the available bandwidth.
- Channel** - Communications signals travel along paths called channels.
- Code** - Compression & Decompression.
- Decompression** - The process of restoring a wireless phone inactive.

- DTMF** - (Dual Tone Modulated Frequency) You send DTMF signals when you enter numbers by pressing the digit keys.
- EVRC** - (Enhanced Variable Rate Codec) EVRC is a new global standard for compressing and decompressing voice signals. EVRC uses a lower bit rate (the number of bits sent per second) than existing CDMA codecs, while providing significant improvements in voice quality. This technology enables your phone to provide superb voice quality while benefiting from the ability to process more cellular voice calls using less bandwidth than the voice codecs in CDMA networks today.
- Frequency** - A measure based on time, as one or more waves per second, in an electrical or light wave transmission signal. A signal's frequency is stated in cycles per second or Hertz (Hz).
- Hands-Free** - A feature that permits a driver to use a wireless phone without lifting or holding the handset - an important safety feature for automobiles, tractors and most other motorized vehicles.
- LCD** - (Liquid Crystal Display) Commonly used to refer to the screen display on the wireless phone.

- LED** - (Light Emitting Diode) Commonly used to refer to a small light on the wireless phone or on the Desktop Charger. The LED lights on the phone to indicate an incoming call. The lights on the charger indicate that battery charging is taking place.
- Prefix** - The addition of a prefix, such as an area code to a phone number.
- RF** - Radio Frequency
- Roaming** - The ability to use a wireless phone to make and receive calls in places outside of the home service area.
- Service Charge** - The amount paid each month to receive wireless service.
- Standby Time** - The amount of time a fully charged wireless phone or transportable phone can be on and idle without being in use. (See Talk Time).
- Talk Time** - The length of time a person can talk on a portable or transportable wireless phone without recharging the battery.
- Modem** - (Voice Codec) A device used to convert speech into digital signals.
- Wireless** - Radio-based Systems that allow transmission of telephone or data signals through the air without a physical connection, such as a metal wire (copper) or fiber optic cable.

MENU TREE

Press [Left Arrow] to move left, [Right Arrow] to move right.

1: Calls

- 1: Outgoing
- 2: Incoming
- 3: Erase Logs
- 4: Air Time

2: Phone Book

- 1: Find Name
- 2: Add Entry
- 3: Find Entry

3: Sounds

- 1: Ring
- 2: Key Volume
- 3: Alerts
- 4: Alarm
- 5: Power-on/off

4: Display

- 1: Backlight
- 2: Banner
- 3: Animation
- 4: Language
- 5: My Phone #
- 6: Contrast

5: Games & PIM

- 1: Today
- 2: View Month
- 3: Jump to Date
- 4: Tasks
- 5: World Time
- 6: Calculator
- 7: Game

6: Setup

- 1: Auto Retry
- 2: Auto Receive
- 3: Auto Hyphen
- 4: Anykey Answer
- 5: Tone Length
- 6: Set Time
- 7: Set Name
- 8: Data/Fax
- 9: Terminal EPS

7: Web Browser (Go Next)

- 1: Start Service
- 2: Favorites
- 3: Address Input
- 4: Internet Setup

0: Security

- 1: Lock
- 2: Restrict
- 3: Lock Code
- 4: Emergency #
- 5: PIN
- 6: Block Owner
- 0: Reset Phone

6. After entering is done, press the **OK** key. The number is saved.
7. You are asked to select a label. If you want to add a number to the entry you have just saved, repeat steps 3 to 6.

If you want to stop, press the **ESC** key.

Storing Phone Numbers when a call ends

To store a phone number when your call ends:

1. Press the **END** key to end the call. The call time and the phone number display.
2. To store the phone number, press the **END** key.
3. To complete storing the number follow the instructions on page 39.

Adding a Number in an Existing Entry

1. Enter a number and press the **OK** key. The phone book entries are displayed.
2. Select the entry you want to add a number to with the **UP** key, then press the **OK** key.
3. Available labels are displayed. After selecting the desired label, press the **OK** key to save the setting.

Entering a Name

Use the keys labeled with letters (A-Z, 0-9, *, #) to enter the name. Press once for the first labeled letter, twice for the second and three times for the third etc. Pressing the **OK** key brings up a list of special characters.

- You can change the input mode by pressing the volume keys on the left side of the phone. The **English**, **Hebrew** and **Number** modes are toggled each time you press the keys.

Note: To enter the number in the English or Hebrew mode, you can press and hold down the appropriate key.

- To insert a space, press the **SPACE** key twice.
- If you make a mistake, you can remove characters to the left of the cursor by pressing the **DEL** key as many times as necessary. Pressing and holding the **DEL** key clears the screen.
- The cursor moves to the right when you press a different key. When entering the same letter twice (or a different letter on the same key) just wait for a few seconds for the cursor to move right automatically and then select the next entry.
- You can enter special letters, such as punctuation or symbols by pressing the **OK** key repeatedly.
/ : * () , ? ; % & _ + = < > [] { } ~

Phone Book

Find Entry

Menu: 2-3

This option allows you to find an entry by location number.

Enter the location by pressing the number keys or slide the **key** key to scroll to the desired location then press the **key** key to display the selected entry.

When the desired entry displays, press the **key** key to place a call.

If you press the **key** key, you can access **Options**. For details on **Options**, refer to **Options** under the **Find Name** menu on page 38.

Note: You can locate Phone Book entries quickly when the phone is in Standby mode. Press the **key** key up to access **Find Entry** menu in one step and then slide the **key** to scan entries.

Sounds

You can use the **Sounds** menu to customize various sound settings, such as the

- Ring volume, type, and tone
- Alert sounds
- Alarm

Ring

Menu: 3-1

Ring Volume

This option allows you to adjust the ringing volume to one of nine levels. You can also turn the ringer off. The **▲** or **▼** keys on the left side of the phone. The more the bars, the louder the volume.

Note: During an incoming call, you can mute the ringer by pressing the **key** key.

Ring Type

This option allows you to indicate how you are to be informed of incoming calls. The following options are available:

BELL: The phone rings using the ring tone selected via the menu option.

LAMP: The backlight is switched on and the lamp blinks; the phone neither rings nor vibrates.