

Call Duration

Menu 3-5

Your phone records the amount of air time, or talk time, used. Using this option, you can view the number of the calls to or from your phone, and the air time for all of the calls. You can easily erase the call time record at any time. This option is convenient for estimating your usage.

Note: This feature is not intended to be used for billing purposes.

The following options are available:

Last Call: shows the time of the last call.

Total Dialed Call: shows the number of all calls you made and the total duration of the calls since the time counter was last set to zero by using the **Reset All** option.

Total Received Call: shows the number of all calls you received and the total duration of the calls since the time counter was last set to zero by using the **Reset All** option.

Reset All: erases all of the time measurements and resets all of the air time counters.

Life Time: shows the number and total duration of all calls made to or from your phone since the phone was shipped from the factory.

Sounds

You can use the **Sounds** menu to customize various sound settings, such as the:

- ringer volume, type, and tone.
- alert sounds and key tone.
- sound which plays when the phone is switched on or off.

Ring Tones

Menu 4-1

This option allows you to set the unique ringer melodies for the following items:

Calls: allows you to set a unique ringer for incoming voice calls.

Messages: allows you to have a distinctive ringer for incoming text messages and voicemail messages independently.

Schedules: allows you to have a distinctive ringer for schedule alarm settings.

Select a unique ringer melody using the Navigation keys. After you change it, it plays for a few seconds.

Ringer Volume

Menu 4-2

This menu allows you to adjust the ringer volume.

Calls: allows you to adjust the ringer volume for incoming voice calls.

Messages: allows you to adjust the ringer volume for incoming messages.

Alarms/Schedules: allows you to adjust the ringer volume for alarm settings or scheduled events.

Press the Navigation keys to adjust the volume level or select a ringer type. The following options are available:

- Silent: the phone does not sound a ring.
- Vibrate: the phone switches to the vibration mode. An incoming call vibrates the phone.
- 1-Beep: the phone sounds a beep.
- Level 1 ~ 8: adjust the volume level. The more bars, the louder.
- High+Vib: the phone rings in the highest volume level and then vibrates.

Notes:

- The options available may be different depending on the selected ringer item.
- When “Emergency call only” appears after you end an emergency call, the ringer volume for calls and messages is automatically set to Level 4.

Alerts

Menu 4-3

Your phone gives audible alerts (beeps) at a specified time to inform you that certain things have happened. The alerts only occur in your earpiece so that the other person does not hear them.

The available alerts are:

Service : when this option is set to **On**, the phone sounds an alert when you exit or return to a service area.

Call Connect: when this option is set to **On**, the phone sounds the connect tone when your call is connected to the system.

Call Disconnect: when this option is set to **On**, the phone sounds the disconnect tone when a call is disconnected.

Folder Open/Closed: when this option is set to **On**, the phone sounds an alert when you open or close the folder.

Key Tone

Menu 4-4

In this menu, you can set up the sound your phone generates when you press a key.

The following options are available:

Volume: adjusts the volume using the Navigation keys or the volume keys on the left side of the phone.

Note: When “Emergency call only” appears after ending an emergency call, the key tone is automatically set to Level 4.

Type: allows you to select the type of the key tone. Choose one of **Beep**, **Drum**, **Piano**, and **Lady’s Voice**.

Length: enables you to select **Short** or **Long** DTMF (dual-tone multi-frequency) tones. DTMF tones are sent by your phone to access teleservices, such as a bank account. The system used by the bank or other service determines if you need short or long DTMF tones. If the service is digital, as most are, short DTMF tones will almost always work.

Power On/Off Melody

Menu 4-5

You can turn on or off the melody that the phone plays when it is switched on or off.

Choose **On** to use the power on/off sound or **Off** not to use it.

Display

The Display feature enables you to customize various settings for the display and the light.

Language

Menu 5-1

This menu allows you to change the language of voice prompts, menus and key input.

You can choose a language, either **English**, **Hindi**, **Marathi** or **Gujarathi**.

Service Area

Menu 5-2

This menu displays the service area where you currently are. The service area is also displayed for about 5 seconds when your phone is registered onto a network or when you make or receive a call.

Menu Theme

Menu 5-3

This menu allows you to select the menu display style.

You can choose a style, either **Nature** or **Camera**.

Wallpaper

Menu 5-4

You can change the background image (wall paper) to be displayed in Standby Mode.

On the Image Wallpaper list, you can select one from the default animation images and downloaded images.

In addition, you can choose **Digital Clock, Analog Clock** or **Dual Clock**.

When you select **Dual Clock**, the phone displays the analogue clocks for the two time zones selected in the **Set Dual Clock** menu (**Menu 5-7**). See page xx

On the Photo Wallpaper list, you can choose from the photos you took using the camera on your phone.

Note: To view your photos on this list, you need to set them as a wallpaper in the **Photo Wallet** menu (**Menu 0-4**). See page xx.

Banner

Menu 5-5

This option allows you to set a banner message to be displayed at the bottom of the display in Standby Mode.

1. If necessary, press the **CLR** key to delete each letter of the old greeting. Press and hold the **CLR** key to clear the display.
2. Enter your banner message.
For further information about how to enter characters, see page xx.
3. When you finish entering the message, press the **Next** soft key.
The screen allowing you to change the banner colour appears.
4. Press the Left or Right key to change the colour for the text font and press the Down key.
5. Press the Left or Right key to change the colour for the text shadow and press the **Save** soft key.

Backlight

Menu 5-6

You have several options for setting how the LCD backlight operates. Remember that backlight use drains your battery faster.

The following options are available:

Folder open: the backlight remains on when the folder is open.

30 seconds: the backlight switches on when you press a key or open the folder and switches off 30 seconds after that.

8 seconds: the backlight switches on when you press a key or open the folder and switches off 30 seconds after that.

Dimming: the backlight is not used.

Set Dual Clock

Menu 5-7

You can choose two time zones to be displayed when you select **Dual Clock** for the wallpaper image; for details, see page xx.

To select time zones for the dual clock:

1. When **Location** is highlighted, press the Down key.
2. Select the time zone for the first clock by pressing the Left or Right key and press the Down key.

3. Select the time zone for the second clock by pressing the Left or Right key.
4. Press the **Save** soft key to confirm the selection.

To apply the daylight saving time:

1. When **Location** is highlighted, press the Left or Right to display **DST**. Press the Down key.
2. Select **Yes** to use the daylight saving time for the first clock. Otherwise, select **No**.
3. Press the Down key and repeat step 2 for the second clock.
4. Press the **Save** soft key to confirm the selection.

Service LED

Menu 5-8

This option allows you to select whether or not the service light on the folder is used.

Voice Tools

In this menu, you can use the phone's voice features, allowing you to:

- dial a number by saying an associated name.
- record a voice memo.
- set the phone to answer a call and record the caller's message.

Voice Dial

Menu 6-1

When your phone is in the digital mode, you can call up to 20 stored entries by speaking the name into the microphone. Using the voice dialling option requires that you first program the phone to recognise the name of the person you are calling.

Record *(Menu 6-1-1)*

This option allows you to record names and register numbers for subsequent voice dialling. The phone provides voice prompts and screen displays to guide you through the recording process.

1. Say the name you want to program at the prompt. The phone stores the name as a first sample.
2. Respond to the prompt by repeating the name after the beep. The phone stores the name as a second sample, and then prompts you to enter the phone number.
3. Enter the phone number by pressing the number keys and press the **OK** soft key.

Tips for Recording a Name

- Avoid recording similar names phonetically. If you record a similar name to one already in the memory, the phone requests another name.
- Speak clearly and naturally.
- The person who will use the phone should record the name. The phone does not recognize the name if the voice is different.
- Avoid too long or too short a name. Names with two to five syllables are recommended.
- If this feature does not work properly, erase the name and try again with another name.
- Practice several times to obtain the best result.
- You can record up to 20 names. If you try to record more than that, the phone announces "Out of space to store voice dial."

Review *(Menu 6-1-2)*

When a list of your stored voice dial numbers displays, scroll to the entry you want to review and press the **Play** soft key. The recorded name plays audibly.

You can erase the selected number by pressing the **Erase** soft key.

Erase All *(Menu 6-1-3)*

This option erases all of the entries on the Voice Dial list.

When a confirming message displays, select **Yes** and press the **OK** soft key.

Activate By *(Menu 6-1-4)*

Voice Dialling is always active once you have programmed the phone to accept voice dialling entries and the associated phone numbers.

To place a call using voice dialling, simply press and hold the ***** key in Standby Mode and then say the name into the phone after you hear a prompt.

Using the **Activate By** menu, you can set how to initiate a voice dialling call. The following options are available:

[*] Only: enables voice dialling only by pressing and holding the ***** key.

[*]/Folder: enables voice dialling by pressing and holding the ***** key or by opening the folder.

[*]/Headset: enables voice dialling by pressing and holding the ***** key or the button on your ear-microphone.

Voice Memo

Menu 6-2

Note: You can quickly enter this menu by pressing the **Down** key in Standby Mode.

Record *(Menu 6-2-1)*

You can record up to voice memos of 4 minutes total. This feature shares the memory with the Voice Answer feature and the amount of time for memos are dependent on the available memory less any callers' messages; for example, if your phone has the callers' messages of 4 minutes total, you cannot record any voice memo.

1. Record a memo by speaking to the microphone.

While you are recording, a timer displays to show you the elapsed time.

You can pause recording by pressing the **Left** key and then resume by pressing the **Right** key.

2. Press the **Stop** soft key to end recording. The screen provides you with the following choices. Scroll to an option and press the **Select** soft key.

- **Review:** allows you to review the voice memo. The screen displays the length of the memo along with the date and time.
- **Rerecord:** allows you to discard the current memo and record another one.
- **Save:** allows you to save the voice memo.

- When you are satisfied, select the **Save** option and press the **Select** soft key.
- Enter a title for the memo and press the **Next** soft key.

Review *(Menu 6-2-2)*

When a list of your voice memos displays, scroll to the memo you want to review and press the **Play** soft key. The phone plays back the memo.

You can pause the playback by pressing the Left key and then resume by pressing the Right key.

On the memo list, press the **Options** soft key to use the following options:

Erase: erases the selected memo.

Info: shows detailed information about the memo, such as title, length, memory size and date and time when the memo was recorded.

Erase All *(Menu 6-2-3)*

This menu allows you to erase all of the voice memos.

When a confirming message displays, select **Yes** and press the **OK** soft key.

Cannot be checked with the current phone.

Answer Machine

Menu 6-3

If you are not able to answer an incoming call, you can set your phone to answer a call with the default greeting message and record the caller's message. As this feature shares the memory with voice memos, the total length of messages is dependent on the available memory less any voice memos.

Note: The voice answer feature does not work when your phone is in the analogue mode.

On/Off *(Menu 6-3-1)*

This option allows you to enable or disable the voice answer mode.

Voice Message *(Menu 6-3-2)*

You can listen to the callers' messages recorded in your phone. When you access this option, a list of the recorded messages appears.

Note: If the phone has the callers' messages waiting to be checked, it displays the total number of the messages and the date and time when the last message was recorded. Pressing the **Play(??)** soft key takes you to the Inbox.

Press the Up or Down key to scroll to a message and press the **Play** soft key to play it back.

You can pause the playback by pressing the Left key and then resume by pressing the Right key.

On the message list, press the **Options** soft key to the following options:

Erase: erases the selected message.

Info: shows detailed information about the message, such as caller's number if identified, elapsed time, length, memory size and date and time when the message was recorded.

Talk: places a call to the caller's number, if identified.

Settings *(Menu 6-3-3)*

You can change the settings for the voice answer mode. The following options are available:

Greeting: Your phone provides you with the two default greeting messages to be played when a call comes in. You can also record up to two own greeting messages.

To record a greeting message:

1. Select **Record** and press the **Select** soft key.
2. Select the entry either **My Message 1** or **My Message 2** by pressing the **OK** soft key.
3. Wait until a beeping prompt sounds and record a greeting message by speaking into the microphone.

You can pause recording by pressing the Left key and then resume by pressing the Right key.

4. When recording is complete, press the **Save** soft key. The phone automatically saves and activates the message.

To play back the currently selected message, highlight **Play** and press the **Select** soft key.

To select a greeting message:

1. Highlight **Select** and press the **Select** soft key.
2. Select **My Message 1/2** to use one of your messages or **Default 1/2** to use one of the default messages.
3. Press the **OK** soft key to save your selection.

Screening: allows you to enable or disable the screening speaker which allows you to listen to the caller's message while the caller is leaving it.

Wait Time: allows you to set how long the phone waits before answering a call with the greeting message. Selecting **Off** means that the phone plays back the message as soon as a call comes in.

Organiser

The Organiser feature enables you to:

- keep track of important dates and events.
- create a list of things to do and memos of things you need to remember.
- set an alarm to ring at a specific time.
- use the phone as a calculator.
- check the time in another part of the world.

Scheduler

Menu 7-1

In this menu, you can keep track of your daily or monthly schedule.

Today *(Menu 7-1-1)*

You can schedule up to 9 events for the current day, indicating each event's start and end time. You can even have your phone's calendar alert you before an event commences. Events scheduled for future dates automatically appear on your Today schedule on that day.

Scheduling a New Event

1. Enter your event contents and press the **Next** soft key.

For further details about how to enter characters, see page xx.

2. Enter the start time and date using the numeric keys.

Note: You can move through the input fields using the Navigation keys.

3. Enter the end time and date using the number keys.
4. Select when an alarm will inform you of the event, by pressing the Left or Right key. Selecting **No Alarm** means that the phone does not ring the alarm.
5. Press the **Save** soft key to store your event.

Viewing Your Today's Schedule

The list of the events stored on the current day displays when you select the **Today** menu (**Menu 7-1-1**).

While viewing the schedule list, press the Up or Down key to scroll to an event and:

- To view details, press the **View** soft key. To view the Start and End time settings, use the Left or Right keys. You can move to the previous or next event by pressing the Left or Right key.

While viewing the event, press the **Edit** soft key to change the event, or press the **Erase** soft key to erase the event.

- Press the **Options** soft key to use the following options:

Add New: allows you to add a new event.

Erase : allows you to erase the event.

Erase All: allows you to erase all of the events.

All *(Menu 7-1-2)*

This option allows you to view the current month, as well as past or future months, in calendar format. On the calendar, the current day is boldfaced and days with scheduled events are indicated by a box inside the calendar day.

Note: You can quickly access this menu by pressing the Left key in Standby Mode.

Scrolling Through the Calendar

- You can move up or down by one day by pressing the Left or Right key.
- You can move right or left by one week by pressing the Up or Down key.
- To display the next or previous month, press the ▲ or ▼ key.

Creating a New Schedule

You can store up to 70 events total in the scheduler, with up to 9 events for one day.

1. Select a day on the calendar, referring to “Scrolling Through the Calendar” on page xx and press the **Add** soft key.
2. Follow the procedure in “Scheduling an Event” on page xx.

Viewing Your Schedule

Select a day with scheduled events on the calendar, referring to “Scrolling Through the Calendar” on page xx and press the **View** soft key. The first event stored on the selected day displays.

To view the Start and End time settings, use the Up and Down key. You can move to the previous or next event by pressing the Left or Right key.

While viewing the event, press the **Edit** soft key to change the event, or press the **Erase** soft key to erase the event.

Task List

Menu 7-2

This feature allows you to enter up a list of tasks to be done and assign both a priority and a deadline to each task.

Creating a New Task

1. Enter the first task and press the **Next** soft key to confirm.
For further details about how to enter characters, see page xx.
2. Enter the time and date by which the task needs to be done, by using the numeric keys.

Note: You can move through the input fields using the Navigation keys.

3. Select High or Low priority using the Left or Right key.
4. Press the **Save** soft key to store the task.

Viewing a Task

The list of the tasks displays when you access the **Task List** menu (**Menu 7-2**).

While viewing the task list, press the Up or Down key to scroll to a task and:

- To view details, press the **View** soft key. You can move to the previous or next task by pressing the Navigation keys.

While viewing the task, press the **Edit** soft key to change the task, or press the **Erase** soft key to erase the task.

- Press the **Options** soft key to use the following options:

Add New: allows you to add a new task.

Erase : allows you to erase the selected task.

Erase All: allows you to erase all of the tasks.

Memo Pad

Menu 7-3

This feature allows you to write down memos about anything you need to remember.

Writing a New Memo

1. Enter the memo contents.

For further details about how to enter characters, see page xx.

2. Press the **Save** soft key to save the memo.

Viewing a Memo

The list of your memos displays when you access the **Memo Pad** menu (**Menu 7-3**).

While viewing the memo list, press the Up or Down key to scroll to a memo and:

- To view details, press the **View** soft key. You can move to the previous or next memo by pressing the Navigation keys.

While viewing the memo, press the **Edit** soft key to change the memo, or press the **Erase** soft key to erase the memo.

- Press the **Options** soft key to use the following options:

Add New: allows you to add a new memo.

Erase : allows you to erase the selected memo.

Erase All: allows you to erase all of the memos.

Alarm

Menu 7-4

This option allows you to set up to three alarms to ring at a specific time.

To set an alarm:

1. Select an alarm type, **Daily Alarm** or **Weekly Alarm**, and press the **Set** soft key.
2. Select **On** by pressing the Left or Right key.
3. Press the Down key and enter the time and date for the alarm to ring.
4. Press the Down key and select an alarm melody by pressing the Left or Right key.
5. Press the Down key and select a repeat option by pressing the Left or Right key.

You can choose either **Daily** or **Once** for the daily alarm, or select a day of the week for the daily alarm.

6. Press the **Save** soft key to save the alarm setting.

To stop the alarm when it rings, press the **Stop** soft key. If you stop the alarm using other keys, the Snooze function is activated and the phone rings the alarm after 5 minutes. (Pls confirm this feature???)

To deactivate an alarm setting, access it from the alarm list and select **Off**.

Calculator

Menu 7-5

Using this feature, you can use the phone as a calculator. The calculator provides you with the basic arithmetic functions; addition, subtraction, multiplication and division.

1. Enter the first number on the first line using the numeric keys.

Notes:

- To erase any mistakes or clear the display, press the **CLR** key.
 - Use the **÷** key to enter a decimal point and the **#** key to change the sign of a number to a negative (-).
2. Enter the operation for your calculation on the second line by pressing the Navigation keys, according to the graphic on the display.
 3. Enter the second number.
 4. Repeat step 2 and 3 as many times as required.
 5. To view the result, press the **=** soft key.
 6. To perform another calculation, press the **CLR** key to reset the calculator and repeat from step 1.

World Time

Menu 7-6

This menu allows you to check the current time for 24 major cities around the world.

Select the city corresponding to your time zone by pressing the Navigation keys one or more times. The local date and time display.

To turn the DST (Daylight Saving Time) setting on:

1. After selecting the time zone, you want to apply the DST, press the **DST** soft key.
2. Select **On** and press the **OK** key.

The DST icon appears on the left of the time.

To cancel the setting, select **Off**.

Count Down

Menu 7-7

This menu helps you know how much time it takes for you to do something, or how many months, days, hours and minutes until a specific day arrives. You can create up to 9 counters using this menu.

Creating a New Counter

1. Enter the contents for your counter and press the **Next** soft key.

For further details about entering characters, see page xx.

2. Enter the time and date you want to count down from.

Note: You can enter a year between 1980 and 2099.

3. Press the **Save** soft key to store the counter.

Viewing a Counter

The list of the counters displays when you access the **Count Down** menu (**Menu 7-7**).

While viewing the counter list, press the Up or Down key to scroll to a counter and:

- To view details, press the **View** soft key. You can move to the previous or next counter by pressing the Navigation keys.

While viewing a counter, press the **Edit** soft key to edit the counter, or press the **Erase** soft key to erase the counter.

- Press the **Options** soft key to use the following options:

Add New: allows you to add a new counter.

Erase : allows you to erase the selected counter.

Erase All: allows you to erase all of the counters.

Settings

Many different features of your phone can be customised to suit your preferences.

Call

Menu 8-1

This menu contains the suboptions for answering or redialling a call.

Auto Redial *(Menu 8-1-1)*

When this menu is activated, your phone automatically redials the call up to 10 times when a connection fails.


To activate this feature, select how often the phone will automatically retry the call; **60 Seconds**, **30 Seconds** and **10 Seconds** are available.


Select **Off** to deactivate the Auto Redial feature.


Answer Mode *(Menu 8-1-2)*

This menu allows you to select how to answer an incoming call.

The following options are available:

Any Key: the phone answers when you press any key except for the  key.

Folder Open: the phone answers when you open the folder. When the folder is already open, you can press the  key.

SEND Key: the phone answers only when you press the  key.

Call Forward *(Menu 8-1-3)*

This menu allows you to forward your incoming calls to another number. When the call forwarding option is enabled, the phone does not ring or accept incoming calls. You can still make outgoing calls without any problems.

Note: This feature is only available when your network operator supports it. Contact Reliance to check its availability.

The following options are available:

Unconditional: calls are always forwarded.

When Busy: calls are forwarded when you are already on the phone.

No Reply/Not Reachable: calls are forwarded when you do not answer the phone or the phone is powered off or out of the service area.

To set your forwarding options:


1. Choose the type of call forwarding by pressing the Up or Down key and press the **Select** soft key.
2. Select **Activate** and press the **OK** soft key.
Select **Deactivate** to disable the call forwarding option.
3. Enter a phone number to which your calls will be forwarded and press the **Save** soft key.

Once Call Forwarding is enabled, a notification text appears to inform you that your calls will be diverted, each time a call is forwarded or you switch the phone on. *(Pls confirm this feature???)*

Call Waiting *(Menu 8-1-4)*

Call Waiting lets you receive a second call during a conversation.

Select **Activate** to enable the call waiting feature; otherwise **Deactivate**.

When Call Waiting is enabled, you can respond to an incoming call by pressing the  key while you are on a call. This puts the first caller on hold and answers the second call. For further details about answering a waiting call, see page xx.

Phone/System

MENU 8-2

Set Time *(Menu 8-2-1)*

To display the correct date and time on the idle screen or to use the Organiser features, such as **Scheduler**, **Task List**, **Count Down**, **Alarm** and **World Time**, you need to set the current time and date using this menu.

Enter the time and date using the numeric keys. You need to enter the time in 24-hour format. The minute, hour, month and day each must be entered using 2 digits and the year requires all 4 digits.

Set NAM *(Menu 8-2-2)*

NAM stands for numerical assignment module, essentially your phone number. Your phone can have two NAMs. This means that you can have two phone numbers for using your phone and can quickly and easily switch your service back and forth between the two numbers.

If you change the NAM, the phone turns off by itself and back on, and then acquires service using the new NAM setting.

Version *(Menu 8-2-3)*

This menu allows you to view the software and hardware versions of your phone. This feature is helpful if you need to the call customer care.

Security

Menu 8-3

Your phone provides you with many security options, including a user-programmable lock code and call restriction features.

To access the **Security** menu, you need to enter a lock code. The lock code is preset to "0000" at the factory.

Lock Mode *(Menu 8-3-1)*


When the phone is locked, you cannot operate the phone until you enter the lock code.

The following options are available:

Never: the phone remains unlocked.

On Power-Up: the phone locks automatically the next time you turn it on.

Now: the phone locks immediately.

To place an emergency call, enter the number and then press the  key. The phone recognises three emergency numbers stored in the **Emergency Numbers** menu (**Menu 8-3-3**).

To unlock the phone, press the **Unlock** soft key and enter the lock code. The phone returns to Standby Mode.

Change Code *(Menu 8-3-2)*

This feature allows you to change your current lock code to a new one. The lock code is preset to "0000" at the factory.

Enter a new, four-digit lock code and then press the **Save** soft key.

Emergency Numbers *(Menu 8-3-3)*

Your phone provides you with the option for storing three emergency numbers. All of these numbers can be manually dialled at any time even when your phone is locked.

IMPORTANT NOTICE!

Emergency calling may not be available on all wireless networks at all times. A connection cannot always be guaranteed, due to various transmission methods, network parameters and user settings used to complete a call from your wireless phone.


DO NOT depend on this phone as a primary method of dialling 100 or for any other essential or emergency communications.

Remember to always turn your phone on and check for the adequate signal strength before placing a call.

To store an emergency number:

1. Press the Up or Down key to select a number location and press the **Select** soft key.

2. If necessary, press and hold the **CLR** key to clear the existing number.
3. Enter the required number.
Each emergency number can be up to 24 digits long.
4. Press the **Save** soft key to store the number.

To make an emergency call in the lock mode, simply enter one of the stored emergency numbers, and then press the  key.

Voice Privacy *(Menu 8-3-4)*

Used only in digital networks, Voice Privacy encrypts the voice channel so that people cannot eavesdrop on your conversation.

The following options are available:

Standard: turns this feature off. The phone will use a standard line for calls.

Enhanced: turns this feature on. The phone will make and receive calls on an encrypted high security line.

Note: This feature may not be available in all areas. Contact Reliance for details and its availability.

Clear Phone Book *(Menu 8-3-5)*

This menu allows you to erase your Phonebook entries. When a confirming message displays, select **Yes** and press the **OK** soft key to confirm.

Reset Phone *(Menu 8-3-6)*

Resetting the phone restores the default settings of all of user-selectable options.

When a confirming message displays, select **Yes** and press the **OK** soft key to confirm. The phone reboots, turning itself off and then back on, and returns to Standby Mode.

R World

Cannot be checked with the current phone.

This **R World** menu allows you to:

- launch the web browser.
- play the downloaded multimedia items.
- enjoy the games.
- reset the web browser.

R-Menu

Menu 9-1

Your phone comes equipped with a web browser which makes it possible for you to access the wireless web.

The web browser allows you to access up-to-the minute information through your phone. Browsing the wireless web through your phone is unlike using your computer; site providers have selected only the critical aspects of their sites to present to wireless phone users and they have removed most of the graphics.

Each time you start the web browser, the phone will connect to the wireless web and the Service icon (📶) will appear on the display. Any time this icon is visible on the display, you are connected to the wireless web and will be billed accordingly. Rates will vary according to your service plan.

The web browser will end the connection after a certain period of network inactivity and will automatically reconnect as necessary. For this reason, you may find that you are billed for several network connections within a single session. This is normal and is designed to minimise your bill.

Launching the Web Browser

Note: The first time you use the web browser, you will go through a security setup process that takes 3 to 5 minutes. Please follow the on-screen prompts to complete the security setup process. This initial setup process occurs only the first time you access the service.

1. Accessing the **R-Menu** menu (**Menu 9-1**) connects your phone to the wireless web. You can also press the **z** key in Standby Mode.
2. Once you are connected, the home page or the last page you visited displays.
The opening page contents may be different according to your wireless web service provider.
3. To scroll through the screen, use the Up or Down key.

Exiting the Web Browser

To exit the web browser, simply press the **Ⓜ** key at any time.

Navigating the Web Browser

When you use the web browser, some keys on your phone operate differently than when on a normal phone call. These keys are explained below. The web browser presents on-screen items in one of the following ways:

- text or numeric input
- links (embedded in content)
- numbered options (some options may not be numbered)
- simple text

Here's how the keys work in the web browser:



Navigation keys: Use these keys to scroll to and select browser options. The currently selected option is indicated by an arrow. You can also use them to move the cursor when editing text.



Left soft key: This is the left soft key used to execute the commands at the bottom left of the browser display.



Right soft key: This is the right soft key used to execute the commands at the bottom right of the browser display.



Cursor keys: Use these keys to move the cursor when editing text.



END key: This key ends the web browser connection and returns the phone to Standby Mode.



Clear key: This key performs two important functions:

- Sends you back in the browser. Pressing it once sends you back one page. Pressing and holding this key sends you back to the home page.
- Clears out the entered text or numbers. When entering characters, press this key to clear the last number, letter or symbol. Press and hold this key to completely clear the input field.



Numbered keys 0 - 9: If the items on a page are numbered, you can use these keys to select them.



Volume keys: These keys allows you to scroll up or down by a page or change the volume setting.

Using the Web Browser Menus

On the web browser, you can access the following options by pressing the **Menu** soft key:

Reload: reloads the current web page.

Home: takes you back at any time to the homepage of the wireless web service provider.

Bookmarks: allows you to load a bookmarked web page directly.

Mark Site: allows you to set a bookmark for most pages; they can be accessed directly from any web page. Bookmarks save you time by reducing the number of steps required to access a given page.

About Openwave: provides you with information about Openwave and your version of the web browser.

Advanced: gives you access to the following advanced features:

- Show URL: displays the URL address of the site where you are currently connected. It also enables you to declare the current site as the startup homepage.
- Homepage: allows you to change the startup homepage manually.
- Set WAP Proxy: allows you to configure the proxy settings required for connecting to the wireless web.
- Offline Service: Most applications are stored on a server that cannot be accessed outside your wireless coverage area. However, some applications can be stored in the cache of your phone, enabling you to use them offline. You can remove the associated site from the cache at any time.
- Outbox: stores outgoing requests from the browser so that they can be processed at a later date.
- Restart Browser: restarts the browser without exiting it.
- Encryption: This option is automatically set by the service provider. You do not need to change it.

Entering Text in the Web Browser

When prompted, you can enter letters, numbers or symbols same way as in the phone mode. See page xx for more information about how to enter characters.

Multimedia

Menu 9-2

In this menu, you can use the multimedia files downloaded from R-World. You can download up to 3 items.

To play back a multimedia file:

1. When the **Show List** highlights, press the **Select** soft key.
2. When the list of the downloaded items displays, scroll to the item you want to play by pressing the Up or Down key.
3. Press the **Select** soft key to start playing the file.

4. To	Press the
pause	Pause soft key.
resume the playback	Play softkey.
adjust the volume	volume keys.
repeat the playback	Loop soft key.
cancel the repeating mode	End-Loop soft key.

5. To exit the screen, press the **CLR** key.

To remove a multimedia file from the phone's memory:

1. Select the **Erase List** by pressing the Up or Down key.
2. When the list of the downloaded files displays, scroll to the file you want to delete by pressing the Up or Down key.

To delete all of the files, select **All**.

3. Press the **Select** soft key.
4. When a confirming message displays, select **Yes** and press the **OK** soft key.

Games

Menu 9-3

This menu allows you to play the three games: **Push Push**, **X-Flighter** and **Space War**.


1. Press the Up or Down key to scroll to a game and press the **Select** soft key.

The game start screen displays.

2. For **Push Push**, press the **OK** soft key and the key helper screen appears. Press the **OK** soft key to start the game.

For **X-Flighter** or **Space War**, press the corresponding number key to select an option:

- **New game**: starts a new game.
- **HighScore**: shows you the High Score table.

- **Key Info.**: shows you the key helper screen.
 - **Continue**: allows you to continue the last game you played. This option is activated only when you already played the game.
4. To stop the game, press the  key or the **CLR** key.

Reset R-Menu

Menu 9-4

If the screen is not clear or it often freezes when you are navigating the web browser, you can use this feature to clear the problem.

When a confirming message displays, select **Yes** and then press the **OK** soft key.

Photos

Using the camera module built in your phone, you can take pictures of people or events while on the move. You can set a picture as a wall paper image or caller image.


Camera

Menu 0-1

In this menu, you can take a picture. The camera produces JPEG pictures.

Note: When you take a picture in direct sunlight or under too bright illumination, shading may occur on the picture.

To take a picture:

1. Accessing the **Camera** menu turns on the camera at the top left of the phone. Or, press and hold the  key in Standby Mode.

The image to be captured appears on the display.

2. Adjust the image by rotating the camera module and aiming it at the subject.




3. To	Press the
flip the image vertically	volume keys.
change the image size	Left or Right key.
change the image resolution	Up or Down key.
use the options	Options soft key. See below.
review the picture stored in your Photo Album	Review soft key.
return to the capture mode from the review screen	CLR key.

4. Press and hold the  key to take the picture.

The phone automatically saves the picture in the **Photo Album** menu (**Menu 0-2**) and returns to the capture mode.

5. Press the **Review** soft key to view the taken picture.

If you want to use the camera options, press the **Options** soft key. See page xx.

6. When you are finished, press the  key to return to Standby Mode.


Using the Camera options

When you press the **Options** soft key in the capture mode, the following options are available for the current shot:

Flash

You can use the flash which allows you to take a picture of the best quality when it is dark. Select **On this Shot** to use the flash only for the current shot and **Always On** to use it for all of the pictures you take. When the flash turns on, the flash icon (???) appears on the top right of the image

Self Timer

You can set the phone to take a picture at a predefined time. Once you set the time, the timer (???) appears on the top right of the image. When you press and hold the  key, it counts down and turns red before 3 seconds. The phone automatically takes and saves a picture when the specified time expires.

Brightness

You can adjust the brightness of the image. When the brightness is selected **Auto**, the phone automatically determines the setting.

Fun Frames

This option allows you to use a frame on the picture. Press the Navigation keys to find the frame format you want to use.

Color Tones

This options allows you to change the color tone of the picture. Press the Navigation keys to find the tone you want to use. **Mono, Sepia, Negative, Emboss, Sketch, UV Positive** and **UV Negative** are available. To set the phone to adjust the color automatically, select **Auto**.

White Balance

This setting adjusts the color balance of the picture to remove the current lighting conditions add. With this setting, you can make your picture appear warm or cool. Scroll to the setting you want to use by pressing the Up or Down key. When you select **Manual**, you can adjust the balance using the Navigation keys.

Photo Album

Menu 0-2

In this menu, you can review the pictures you have taken. By default, your phone displays them in the thumbnail mode, which shows pictures as a small image.

To	Press the
scroll through the pictures	Navigation keys.
use the options	Options soft key. For details, see below.
view the selected picture in a large size on the full screen	Expand soft key.
return to the thumbnail mode	Thumbnail soft key.

Using the Picture Options

Press the **Options** soft key while reviewing a picture, and the following options are available:

Camera

You can switch the display to the capture mode.

Save to Wallet

This option copies the picture to the **Photo Wallet** menu (**Menu 0-3**). See the next page.

Erase

You can erase the selected picture or all of the pictures.

Edit Caption

This option allows you to change the picture's title displayed on the right top of the picture in the expand mode.

Photo Info.

This option shows you information about the current picture, such as title, time and date when it was taken, image size and quality.

The display scrolls the information screen automatically. Press the Up or Down key to scroll the screen by one item. You can also scroll by one page by pressing the **Scroll** soft key.

Thumbnail/Expand

You can switch the display to the thumbnail mode or the expand mode.

Photo Wallet

Menu 0-3

Photo Wallet allows you to store the pictures independently, like your photo album. By default, your phone displays them in the thumbnail mode, which shows pictures as a small image.

To	Press the
scroll through the pictures	Navigation keys.
use the options	Options soft key. For details, see below.
view the selected picture in a large size on the full screen	Expand soft key.
return to the thumbnail mode	Thumbnail soft key.

When you press the **Options** soft key while reviewing a picture, the following options are available:

Wallpaper: copies the picture into the Photo Wallpaper image folder. You can use it in the **Wallpaper** menu (**Menu 5-4**).

Phonebook: allows you to set the picture as a caller image for a Phonebook entry.

Erase: allows you to erase the selected picture or all of the pictures from Photo Wallet.

Settings

Menu 0-4

This menu allows you to set up the options for using the camera and pictures.

Security *(Menu 0-4-1)*

You can lock the pictures so that a person without your approval cannot review them.

To access the **Security** menu, you need to enter the lock code. It is preset to "0000" at the factory.

Select **On** and press the **OK** soft key. Once you have locked the pictures, you need to enter the lock code each time you access the **Photo Album** and **Photo Wallet** menus.

To deactivate this feature, select **Off**.

Camera Settings *(Menu 0-4-2)*

You can change the default image settings. The following options are available:

Resolution: allows you to adjust the resolution of the image. You can select either **High:640*480**, **Med:320*240** or **Low:160*120**.

Quality: allows you to change the image quality. You can select either **Economy**, **Normal** or **Fine**.

Health and Safety Information

Precautions When Using Batteries

Your phone is powered by a rechargeable Li-ion standard battery.

- Never use any charger or battery that is damaged in any way.
 - Use the battery only for its intended purpose.
 - If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
 - Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time, including talk time and standby time, is noticeably shorter than normal, it is time to buy a new battery.
 - If left unused, a fully charged battery will discharge itself over time.
 - Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
 - Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and life-time of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
 - Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and – terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.
 - Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an extra layer of convenience and safety to your wireless phone with one of the many hands-free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving: if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a To do list or flipping through your phonebook takes your attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make the people with whom you are talking aware that you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial the emergency number in the case of fire, traffic accident or medical emergencies.
9. Use your wireless phone to help others in emergencies. If you see a car accident, crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.
10. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or any other special non-emergency wireless number.

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic Devices

Most modern electronic equipment are shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on;
- should not carry the phone in a breast pocket;
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.


Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and Reliance.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phones in aircraft may be dangerous to the operation of the aircraft, and is illegal.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Glossary

Airtime - Actual time spent talking on the wireless phone. Most carriers bill customers based on how many minutes of airtime they use each month.

Antenna - A device for transmitting or receiving signals. The size and shape of antennas is determined, in part, by the frequency of the signal they receive. Wireless phones and the base station must have antennas.

Base Station - The fixed radio transmitter/receiver that maintains communications with mobile radio telephones within a given area. (Typically called a cell or cell site)

CDMA (Code Division Multiple Access) A spread-spectrum approach to digital transmission. With CDMA, each conversation is digitized and then tagged with a code. The mobile phone deciphers only a particular code to pick the right conversation off the air. The transmitted signal is just above noise level across the available bandwidth.

Channel - Communications signals transmit along paths called channels.

Codec - Compression & Decompression.

Deactivation - The process of rendering a wireless phone inactive.

DTMF - (Dual-tone Multi-Frequency) You send DTMF signals when you enter numbers by pressing the digit keys.

EVRC - (Enhanced Variable Rate Codec) EVRC is a new global standard for compressing and decompressing voice signals. EVRC uses a lower bit rate (the number of bits sent per second) than existing CDMA vocoders, while providing significant improvements in voice quality. This technology enables your phone to provide superb voice quality while benefiting from the ability to process more cellular voice calls using less bandwidth than the voice codecs in CDMA networks today.

Frequency - A measure based on time, as one or more waves per second, in an electrical or light wave information signal. A signal's frequency is stated in cycles-per-second or Hertz (Hz).

Hands-Free - A feature that permits a driver to use a wireless phone without lifting or holding the handset - an important safety feature for automobiles, tractors and most other motorized vehicles.

LCD - (Liquid Crystal Display) Commonly used to refer to the screen display on the wireless phone.

LED - (Light Emitting Diode) Commonly used to refer to a small light on the wireless phone or on the Desktop Charger. The LED lights on the phone to indicate an incoming call. The lights on the charger indicate that battery charging is taking place.

Prepend - The addition of a prefix, such as an area code, to a phone number.

RF - Radio Frequency

Roaming - The ability to use a wireless phone to make and receive calls in places outside of the home service area.

Service Charge - The amount paid each month to receive wireless service.

Standby Time - The amount of time a fully charged wireless portable or transportable phone can be on and idle without being in use. (See Talk Time)

Talk Time - The length of time a person can talk on a portable or transportable wireless phone without recharging the battery.

Vocoder - Voice Coder. A device used to convert speech into digital signals.

Wireless - Radio-based Systems that allow transmission of telephone or data signals through the air without a physical connection, such as a metal wire (copper) or fiber optic cable.

Index

The index will be updated in a later version

A

Accessories • 9
Air time (**1-5**) • 55
Alarm (**5-5**) • 84
Alerts (**7-3**) • 98
Animation • 101
Auto answer (**0-1**) • 105
Auto retry (**0-3**) • 106

B

Backlight (**8-4**) • 102
Banner (**8-3**) • 102
Battery
 charging • 18
 installing • 17
 low battery indicator • 20
 removing • 18
 precautions • 116

C

Calculator (**5-6**) • 85
Call
 answer (**0-2**) • 105
 answering • 34
 emergency • 25
 ending • 25
 forwarding • 37
 from Phone Book • 26
 incoming (**1-2**) • 53
 making • 24
 missed • 36
 outgoing (**1-1**) • 52
 redialling last • 25
 restriction • 111
 three way • 39
 waiting • 38
Caller ID • 36
Camera (#) • 114
Care • 126
Characters, entering • 40
Charging batteries • 18
Clock • 103

Connect tone • 98
Contrast (**8-6**) • 103
Correcting number • 25

D

Data/fax
 receiving/sending • 109
 Data/fax (**0-7**) • 108
Dialling
 pause • 29
 prepend • 26
 speed • 27
 voice • 32, 88
Disconnect tone • 98
Display
 LCD • 10
 external • 15
DTMF tone
 length (**7-6**) • 99
Dual clock (**8-5**) • 103

E

Erasing History (**1-4**) • 54
Erase Msg (**3-7**) • 69
External Display • 15

F

Finding
 phonebook • 56

G

Games (**9**) • 104
Greeting • 94

I

Icon description • 13
 Inbox (**3-3**) • 66
 In-call options • 35
 Incoming calls (**1-2**) • 53
 Installing battery • 17

K

Key Beep (**7-5**) • 99
 Keys
 description • 11
 location • 10

L

Language (**0-4**) • 106
 Last number redialling • 25
 Letters, entering • 40
 Listening
 voicemail • 65
 Lock code • 111
 Low battery indicator • 20

M

Maintenance • 126
 Memo pad (**5-4**) • 83
 Memory (**2-5**) • 61
 Memory, clearing • 113
 Menus
 list • 49
 scrolling • 47
 shortcuts • 48
 Messages
 erasing • 69
 filed • 68
 greeting • 94
 setup (**3-8**) • 70
 voice • 65
 Minute beep • 98
 Missed calls • 36
 Modes
 phone • 22
 text input • 40
 Mute
 microphone • 35

N

Names
 entering • 40
 find (**2-1**) • 56
 NAM setting (**0-5**) • 107
 Number
 adding in an entry • 60
 correcting • 25
 my phone # (**2-4**) • 61
 searching • 56

O

Outbox (**3-4**) • 67
 Outgoing calls (**1-1**) • 52

P

Phone
 layout • 10
 lock • 110
 my number (**2-4**) • 61
 Phonebook (**2**) • 56
 PIN
 code • 112
 Planner (**5**) • 79
 Power save mode • 23
 Prepend dialling • 26

R

Redialling
 auto • 106
 last call • 25
 Removing battery • 18
 Reset phone • 113
 Restrict • 111
 Ring
 type (**7-2**) • 97
 volume (**7-1**) • 96
 Roam ringer (**7-4**) • 99

S

Safety
 batteries • 116
 information • 116
 precautions • 7
 Scheduler (**5-2**) • 81
 Searching
 phonebook • 56
 Security (**0-9**) • 110
 Service alert • 98
 Service light • 16
 Setting NAM (**0-5**) • 107
 Setting system (**0-6**) • 107
 Setting time (**5-9**) • 87
 Setup (**0**) • 105
 Sounds (**7**) • 96
 Speed dialling • 27
 Standby mode • 22
 Switching on/off
 phone • 21

T

Task List (**5-3**) • 82
 Text, entering • 40
 Today (**5-1**) • 79
 Tone length (**7-6**) • 99
 T9 text mode • 42

U

Unpacking • 9

V

Version (**0-8**) • 110
 Voice answer (**6-3**) • 92
 Voice dial (**6-1**) • 88
 Voice memo (**6-2**) • 91
 Voice message (**3-2**) • 65
 Volume, adjusting
 ring (**7-1**) • 96
 key (**7-5**) • 99

W

Web Browser
 get in web (**4-1**) • 73
 prompt (**4-2**) • 78
 World time (**5-7**) • 86
 Writing new message • 62



BASIC OPERATIONS

Make a call	Phone number +	Save a Number	Number + Save + Select + / (Category) + Select + Name + Next + If necessary, / + / to change the settings or Edit to enter information + Save
End a call			
Receive a call	or open the phone		
Adjust the key beep volume	(<i>In Standby Mode</i>) / on the left side	Speed dialling	Enter memory location of desired number, holding the last digit to automatically dial.
Adjust the speaker volume	(<i>during a conversation</i>) / on the left side		
Redial the last call	twice	Phonebook Search	Press + / / + / + OK or
Switch to the vibrate mode	Hold #	Launch the web browser	Press
Voice dial	Hold * or open the folder + Say a name	Take a picture	Press +

Main Menu (To access, press the **Menu** soft key)

1 : Phone Book	1 : Find 2 : Add Entry 3 : Groups 4 : Memory Status	6 : Voice Tools	1 : Voice Dial 2 : Voice Memo 3 : Answer Machine
2 : Messages	1 : Write 2 : Inbox 3 : Outbox 4 : Saved 5 : Templates 6 : Erase Msgs 7 : Settings 8 : Voice Mail	7 : Organiser	1 : Scheduler 2 : Task List 3 : Memo Pad 4 : Alarm 5 : Calculator 6 : World Time 7 : Count Down
3 : Call History	1 : Missed 2 : Received 3 : Dialed 4 : Erase History 5 : Call Duration	8 : Settings	1 : Call 2 : Auto Redial 3 : Answer Mode 4 : Call Forward 5 : Call Waiting 6 : Set Time 7 : Set NAM 8 : Version
4 : Sounds	1 : Ring Tones 2 : Ring Volume 3 : Alerts 4 : Key Tone 5 : Power On/Off Melody		1 : Lock Mode 2 : Change Code 3 : Emergency Numbers 4 : Voice Privacy 5 : Clear Phone Book 6 : Reset Phone
5 : Display	1 : Language 2 : Service Area 3 : Menu Theme 4 : Wallpaper 5 : Banner 6 : Backlight 7 : Set Dual Clock 8 : Service LED	9 : R World	1 : R-Menu 2 : Multimedia 3 : Games 4 : Reset R-Menu
		0 : Photos	1 : Camera 2 : Photo Album 3 : Photo Wallet 4 : Settings

Licensed by QUALCOMM Incorporated under one or more of the following Patents.

U.S Patent No. 4,901,307 5,056,109 5,099,204
5,101,501 5,103,459 5,107,225
5,109,390