

ATTACHMENT M – USER’S MANUAL

8. User Manual

Contents

Unpacking
Your Phone
Installing the Battery
Switching the Phone On/Off ..
Using the Touchscreen

General Functions

General Functions
Making a Call
Answering a Call
Viewing Missed Calls
In-Call Options
Adjusting the Volume
Selecting Bell/Vibrator

Quick Switching to Manner Mode

Viewing Calls List
Viewing Air Time

The Menu System

The Menu System
Accessing a Menu Item.....
Brief Description on Home Menu Functions.....
Opening Text and Number Input Screen.....

Default

Control



Accessing Control Menu

Bell

Sounds

Display

Security

Battery

System

Network

Memory

Owner Information

Calibration

Contrast

PC Synchronization

Data Sync

Data Capability



Personal Information Manager

Address



Creating Your Address Book

Viewing Address Book

Finding Address

Address Book Setup Options

Date
Recording a New Appointment
Viewing Scheduled Appointments
Editing Details of a Selected Appointment
Removing a Selected Appointment

To Do
Creating a New ToDo List
Viewing the ToDo List
Editing the ToDo List
Deleting a Task in the List

Clock
Setting Home Time
Setting Alarm
Viewing World Time

Answer
Turning the Answering Mode On
Recording Your Own Guide Message
Selecting the Guide Message
Listening to a Caller Message

Memo
Creating a New Memo
Viewing a Memo
Attaching in a Memo
Sending a Memo as an SMS Message
Configuring Categories

Calculation
Accessing the Calculator
Editing
Error Message Display

Communication

SMS (Short Message Service)

Sending a SMS Message

Viewing SMS Messages

Reading a Text or a Pager Message

Listening To Voicemail

Deleting SMS Messages

AnyWeb

Opening the AnyWeb Internet Homepage

Navigating AnyWeb Internet Pages

Configuring the AnyWeb Internet Properties

Viewing the Current Web Page Information

Saving the Current Web Page As a Memo

Viewing Your Network Information

E-mail

Setting Up a Connection to Receive E-mail

Setting Up a Connection to Send E-mail

Reading an E-mail Message

Sending an E-mail Message

Writing a Signature

Fetching an E-mail Message from the Server

Sending All Messages Stored in the Outbox

Setting Up Filters

Setting Delete Options

Editing and Clearing Folder

Game

Othello

Configuring the Properties

Playing Othello

 
Samsung is a registered trademark of Samsung Electronics, Korea.

Using This Guide


A number of features included in this guide are called network services. They are special services provided by wireless service providers. Before you can take advantage of any of these network services, you must subscribe to these service(s) from your home service provider and obtain instructions for their use.

Unpacking


Check to make sure that all of the following items are included in the box when you unpack it.

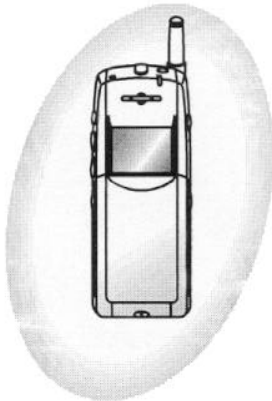


The phone

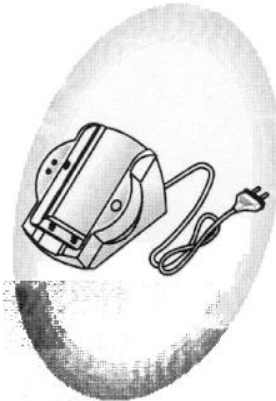 


Desktop charger

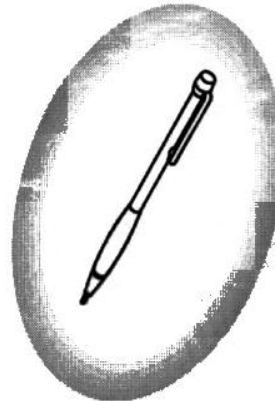 


Stylus

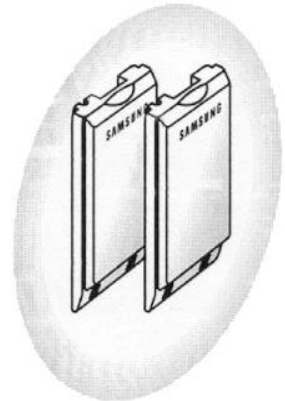 


Batteries

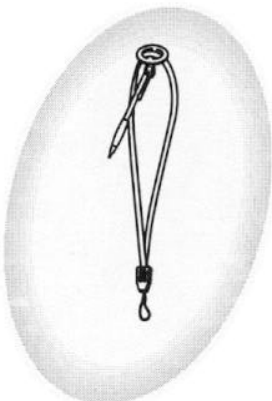 


Hand strap with
a stylus

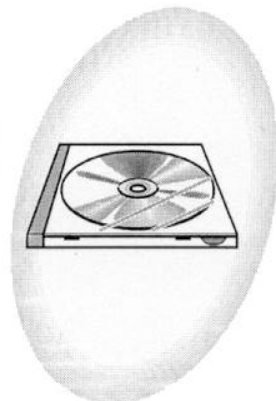 

CD-ROM for
data synch

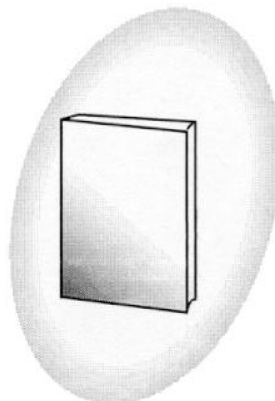 

User's guide

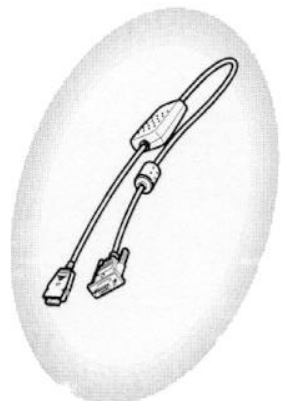 


Data
communication

Your Phone

Phone Layout

The following illustrations show the main elements of your phone.

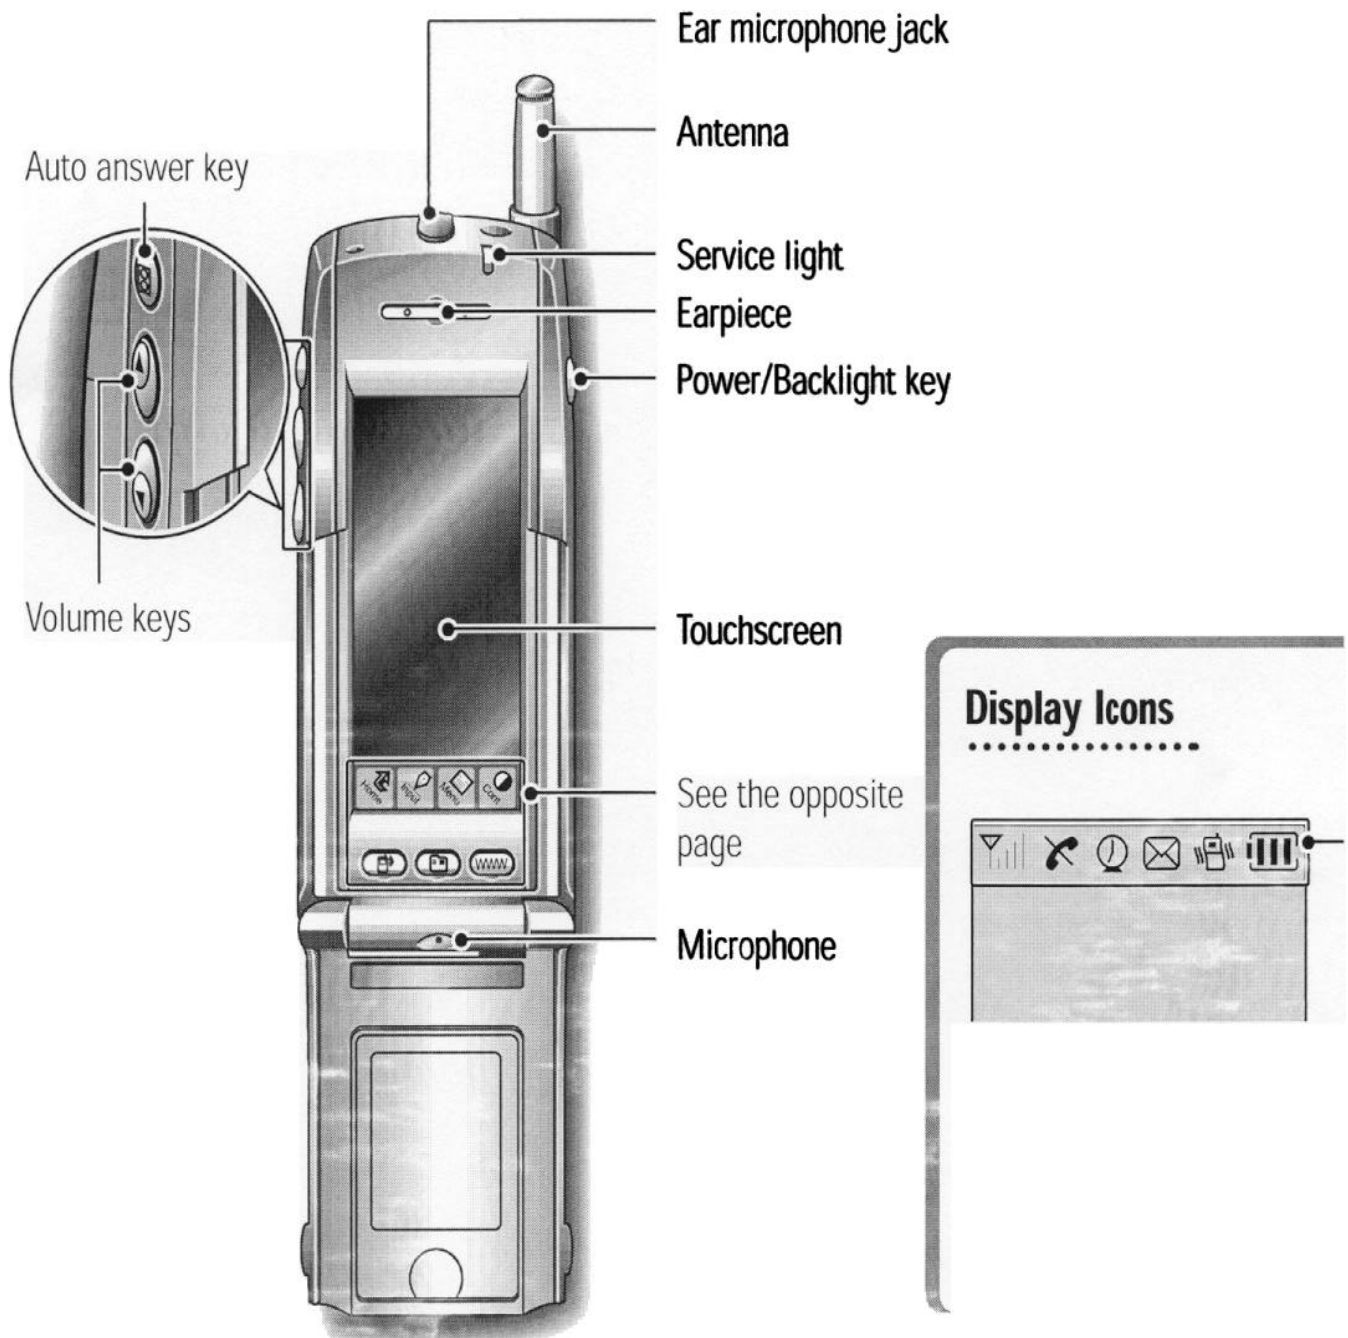 

Key	Description	Key	Description
	Opens the Home menu.		Allows you to quickly access the Address screen in idle mode.
	Brings alphanumeric character input screen.		Allows you to quickly access the Internet menu screen in idle mode.
	Opens up a set of options which depend on the menu function you are in.		Switches the phone on/off. Also turn the backlight of the screen on/off.
	Allows you to adjust the contrast of the screen.		During a call, adjust the earpiece volume.
	Allows you to access the phone main screen.		Allows you to set the phone to an automatic answering mode.

 
-  Shows the received signal strength. The greater the number of bars, the better the signal strength.
-  Appears when a call is in progress.
-  Appears when the phone is out of service area.
-  Appears when you set an alarm.
-  Appears when a new message has been received.
-  Appears when the vibrate mode is active.
-  Shows the level of your battery. The more bars you see, the more power you have left.

Installing the Battery


Your phone comes with rechargeable standard and extended-life batteries. A medium battery is available as an option.

To Attach the Battery Pack

1. To attach the battery pack, align it with the phone so that the two arrows labeled on the back of the phone are seen, the battery charge contacts pointing downward.

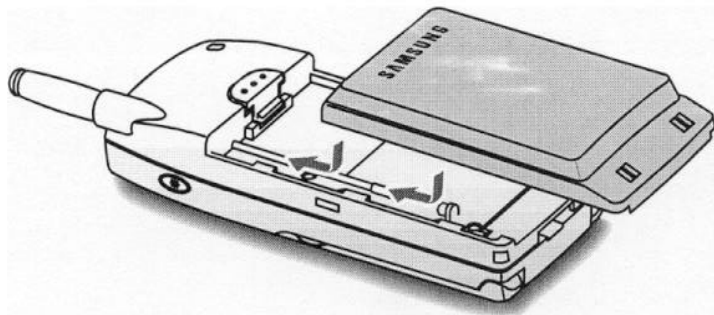


 2. Slide the battery pack upwards until it clicks firmly into position.

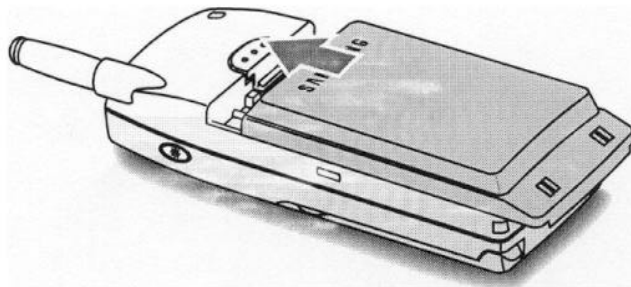

To Remove the Battery Pack

 1. Release the battery pack by pressing the latch on the rear of the phone.

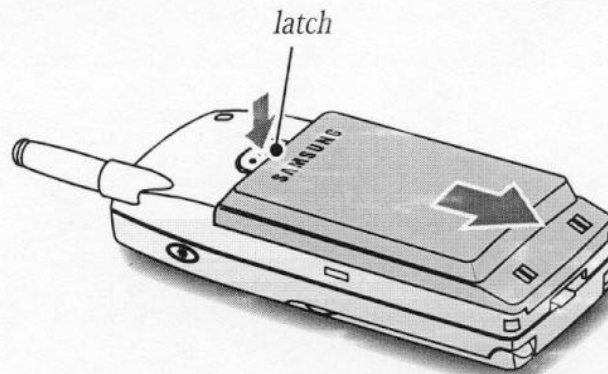


2. Slide the battery pack downward and lift it away from the phone.

Charging the Battery Pack


When you purchase the phone, the battery pack is not fully charged. Please charge the battery fully before you operate your phone.

 1. Plug the power cord of the charger into a standard AC outlet. When the power is connected properly, the yellow lamp on the charger flickers once.

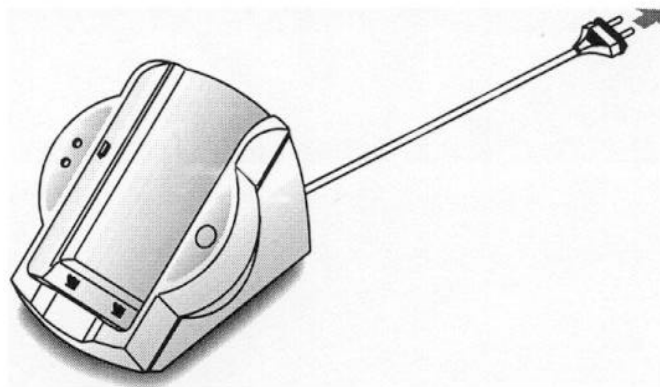

2. Select one of the following options:

 
- Insert the entire phone with battery attached into the front compartment of the charger.
- Insert a single battery (alone, not attached to the phone) into the rear compartment of the charger.

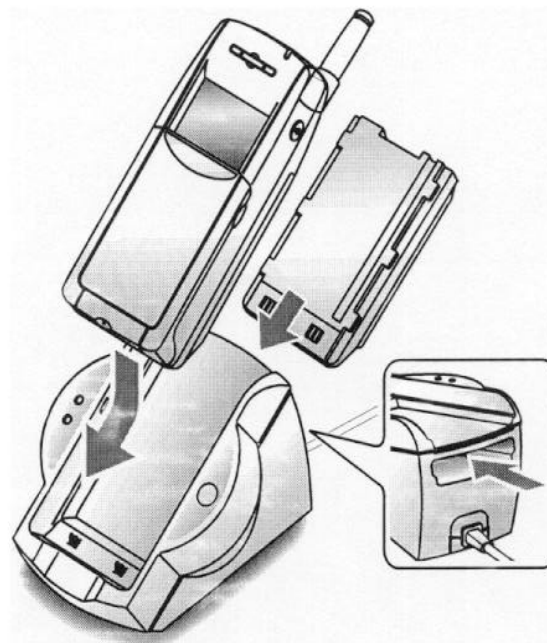

3. The color indication of the lamps on the charger is as follows:

- Red: charging
- Green: fully charged.
- Yellow: waiting to be charged. The yellow light comes on when two batteries are in the charger simultaneously.

 A completely discharged standard battery recharges fully in approximately 2 hours. The extended battery recharges in approximately 3 hours. You can leave your phone powered on during charging. Leaving the battery in the charger once it is fully charged does not harm the battery. For more information on battery, see page xx.

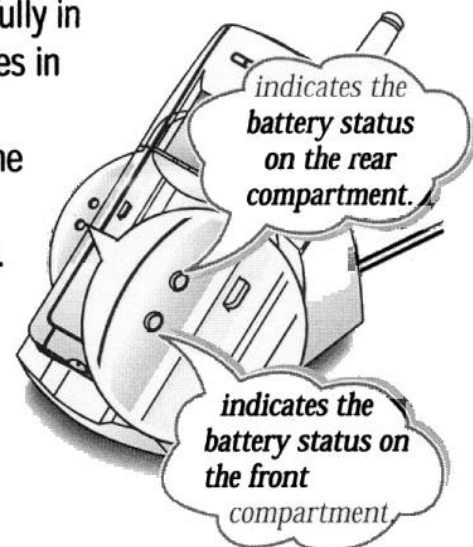

Checking the Battery Charge Level

The battery charge level is displayed at the right corner of the LCD display, when the phone is powered on.

The number of blocks represent the battery charge level.

Example:  Battery fully charged

 Battery low

When the battery drops to a low level, the phone beeps and the battery icon turns to 

When the battery is fully discharged, a warning tone sounds three times and the power turns off.

Switching the Phone On/Off

- 1 Hold down the (power) key on the right side of the phone for more than one second to switch the phone

The phone beeps and displays the greeting message, current date and time.

2. To turn off the phone, press the key until you hear a beep tone.

 
Backlight

The backlight comes on when you open the cover, receive a call, and switches off 8 seconds after the last touch. If you want to turn the backlight manually, press the power button briefly.

Using the Touchscreen


Your phone is equipped with a large, sensitive touchscreen. The screen provides a number keyboard you would expect on a normal phone and has versatile menu functions.

Your phone system recognizes input from both the stylus pen, which comes with your phone, or a finger. To make your selection, tap the screen lightly with the stylus pen. Touching a button or menu item on the screen activates the button or menu function. Alternatively, you can use your fingers to tap the screen, though it is best to use the pen to avoid fingerprints or smudges on the screen.

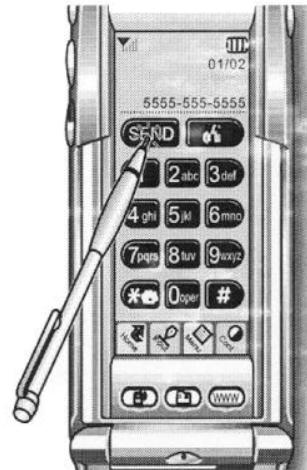

When you are not using the pen, place it in the pen holder on the right side of the charger, as shown in the figure.

 To make the screen respond correctly to a stylus tap, calibrate it with the pen before using your phone. See page xx.

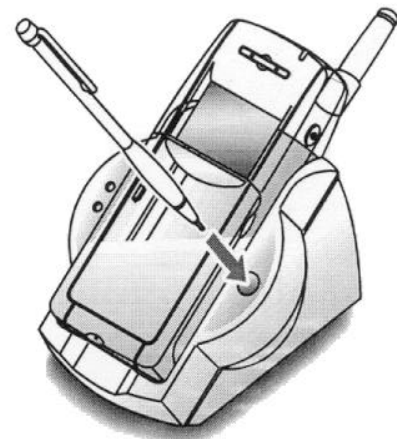


This user guide uses the following terminology:

- *Touch* means to place the supplied stylus or your finger on the screen.
- *Tap* means to touch the screen and lift the stylus or your finger off the screen.
- *Drag* means to touch the object and slide the stylus or your finger. When you are finished dragging the object to a new location, lift the stylus or your finger off the

Adjusting Screen Contrast

 You can adjust the screen contrast at any time, without going to the menu, by tapping  in the bottom of the screen.

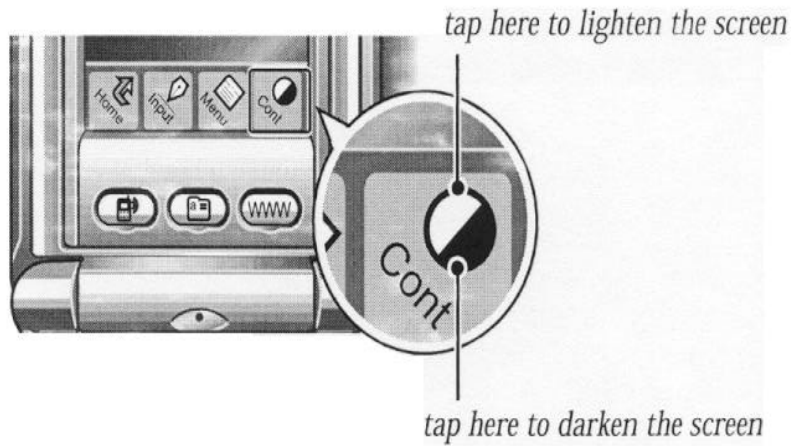

To lighten the screen, tap the light side of the  icon until you get the desired lightness.

To darken the screen, tap the dark side of the  icon until you get the desired darkness.

General Functions

 
Making a Call

When the phone is powered on or when the cover is open, the phone displays the Phone window, allowing you to dial a number.



§ Phone window

1. If the Phone window is not displayed, press the  key below the screen.

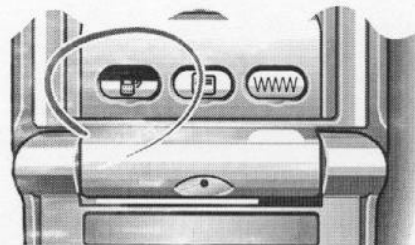

You can also bring the Phone window by selecting the icon from the Home menu.



Key the area code and the phone number by tapping the number digits the Phone window with the stylus your finger

3. Tap **SEND**

You can also start dialing by holding down the last digit the phone number without tapping **SEND**

Correcting the Number

When you key the number  key the screen if displayed replaced with the **CLR** key

To clear the last digit displayed tap **CLR** briefly

To clear the whole display touch and hold down **CLR** for more than one second

Ending a Call

When you have finished your call tap **END** close the flip cover

Voice Dialing

If you have set voice dial for the number you want to call (see page xx), you can use voice to make a call.

To place voice dialing calls:

1. In the Phone window, tap  key on the screen.

Note: If the phone is set to the **Auto Voice Dial** mode, you do not need to tap the key in the phone window.

 
2. At the voice prompt, say the name into the phone.

- If the phone recognizes the name, the phone attempts a connection.
- If the phone does not recognize the name, the screen prompts for the name again.
- If the phone does not recognize the name after two attempts, the message 'Not Processed' displays. Try the call again later, or check the recorded name.

You can also initiate a voice dialing call by opening the flip, when you select this option through the phone menu.

To change voice dialing setup options:

1. In the Phone window, tap  . The phone menu list appears.

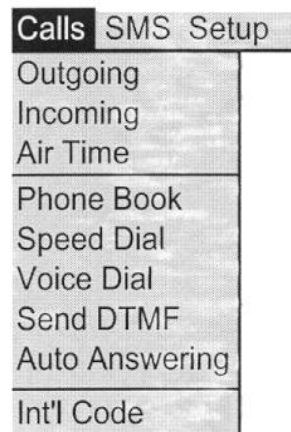

2. Tap the **Setup** tab, and select **Auto Voice Dial** from the **Setup** menu.

 
This option enables voice dialing by opening the flip.

If you access the same menu next time, you will find **Hand Voice Dial** instead **Auto Voice Dial**. The Hand Voice Dial enables voice dialing only by tapping the  key on the Phone window.

3. When the desired option displays, tap **OK**.

To scan through the voice dial list you have recorded:

1. In the Phone window, tap . The phone menu list appears.
2. Tap **Voice Dial** from the **Calls** menu. The Phone Book list which shows the names set to voice dial appears.
3. To scroll through the list, tap  or  in the lower right corner of the screen.

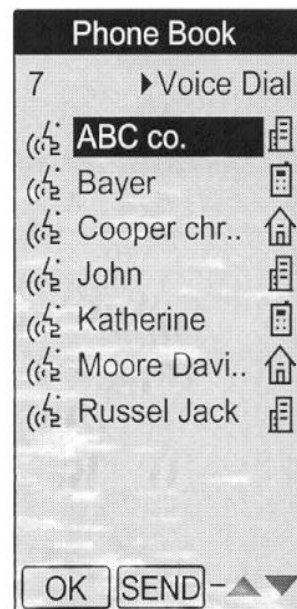

4. To dial the selected name highlighted, tap **SEND**.

Speed Dialing

Your phone enables you to place calls quickly by entering the speed dial code you specified when you have stored the phone number in your internal Address Book. For information on setting Speed Dial, see page xx.

To speed dial:

In the Phone window, touch and hold the speed number. If the number contains more than one digit, tap briefly the first digit(s) and touch and hold the last digit.

To scan through the speed dial list you have set:

1. In the Phone window, tap . The phone menu list appears.
2. Select **Speed Dial** from the **Calls** menu. The Phone Book list which shows the names set to speed dial appears.



3. To scroll through the list, tap  or  in the lower right corner of the screen.
4. To dial the selected name highlighted, tap **SEND**.

Redialing the Last Number

 
The phone stores the last number dialed. To redial the number, just touch and hold down the **SEND** key in the Phone window.

Making a Call from the Phone Book

You can store the phone numbers called regularly in memory, called the Address Book. You then simply recall the number to dial. For further information on Address Book, see page xx.

1. In the Phone window, tap . The phone menu list appears.
2. Select **Phone Book** from the **Calls** menu. The Phone Book list appears in alphabetic order.

Tap letter to find the name and number beginning with the specified letter quickly.

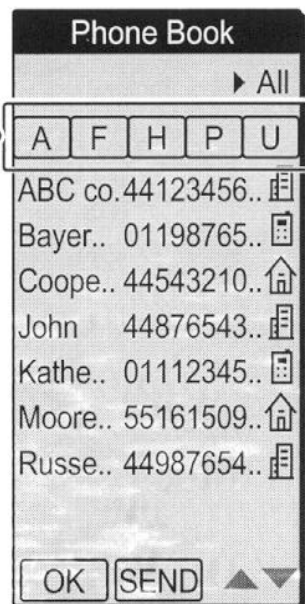

3. To scroll through the list, tap  or  in the lower right corner of the screen.
4. To dial the selected number highlighted, tap **SEND**. To exit, tap **OK**.