 


## Four-digit Dialing

Your phone provides the option of four-digit dialing of numbers stored in the internal Address Book or the outgoing calls list. This allows you to enter the last four consecutive digits of someone's phone number, have your phone remember the rest, and then dial it for you.

### To place a call using four-digit dialing:

1. In the Phone window, key in the last four consecutive digits of a phone number that you have stored in your Address Book or you have dialed before.
2. The phone displays the number matching your input.

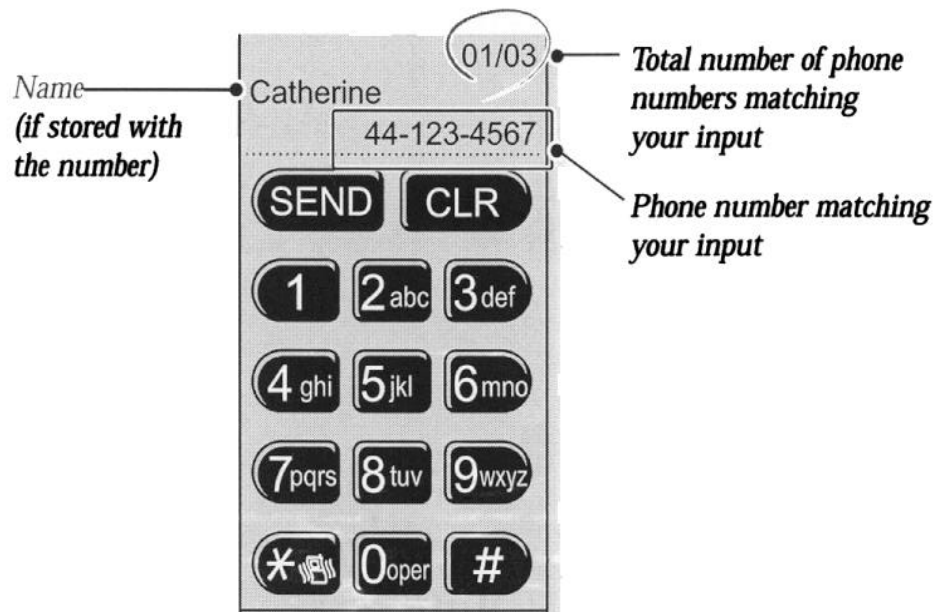

3. If the phone contains more than one phone number in which the last four consecutive digits are the same, it displays a phone number matching your input either from Outgoing call log or Phone Book in the upper right corner of the screen.

 
Select the desired number by pressing the up/down key on the left side of the phone.

4. To dial the number, tap **SEND**.

## Making an International Call

### To find an international country code:

1. In the Phone window, tap . The phone menu list appears.
2. Select **Int'l Code** from the **Calls** menu. The International Code list appears.

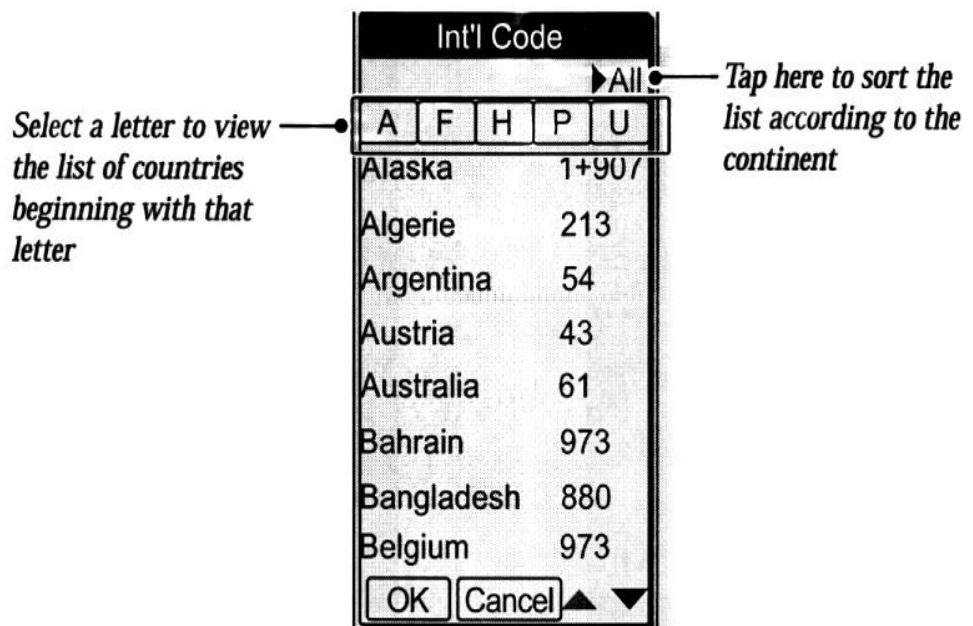


3. To scroll through the list, tap  or  in the lower right corner of the screen.
4. Tap the desired code, and tap **OK**.
5. You will find the code is displayed in the number field on the Phone window. Enter the desired area code and phone number to dial. Then tap **SEND**.

## Automatic Hyphenation

 Your phone is set to hyphenate phone numbers as follows:  
800-123-4567.

To turn this feature off or turn it back on:

1. In the Phone window, tap . The phone menu list appears.
2. Select **Display** from the **Setup** menu. The Display screen appears.

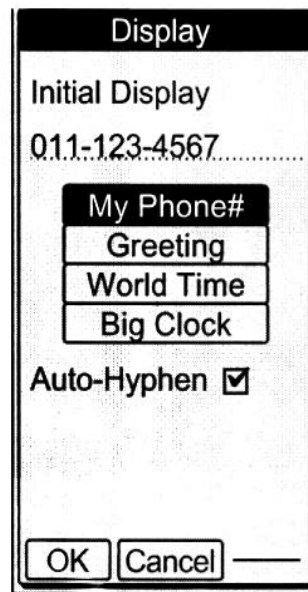

3. Find the **Auto-Hyphen** checkbox in the screen. Tap the box to turn the feature on ( ☒ ) and tap again to turn the feature off ( ☐ ).
4. To exit, tap **OK**.

## Answering a Call

 
When somebody calls you, the phone rings. If the caller can be identified, the caller's phone number (or name if pre-stored in your Address Book) is displayed. If the caller cannot be identified, only the message **'Phone Call'** is displayed.

### To answer the call:

Open the flip cover. If the flip is already open, tap any key on the Phone window, any hot key (  ,  ,  ), or any icon (  ,  ,  ,  ).

You can also answer the call without opening the flip by pressing volume keys on the left side of the phone.

**Note:** You can answer a call while using a menu feature. The screen alerts you with the incoming call message. Tap **Yes** to answer the call, or **No** to reject the call. If you tap  key, the Answering feature is activated.

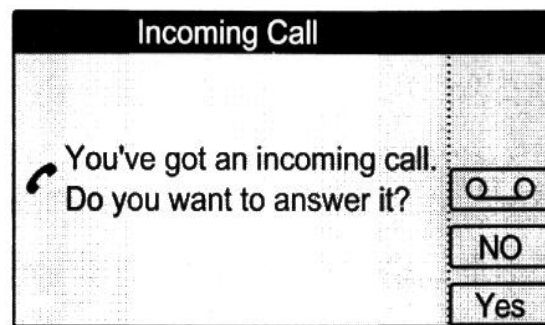

---

## Viewing Missed Calls

If you are unable to answer a call, you can find out who was calling you, if this service is available. In this way, you can call the person back, if necessary.

 
The number of missed calls is displayed on the idle screen immediately after the call was missed.

To view the missed calls, see page xx.

## In-Call Options

Your phone provides a number of functions that you can use during a call. You may not utilize all of these functions at all times. Many of the in-call options are network services.

Tap  at the bottom of the screen during a call. The Busy menu appears on the screen which allows you to access the following in-call options.

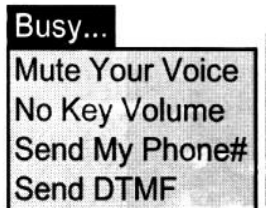

### Mute Your Voice

This option allows you to switch your phone's microphone off, so that the other party cannot hear you. **\*Mute\*** displays on the screen.

To resume, tap  and select this option again in the Busy menu.

### No Key Volume

This option does not transmit the key tones. It allows you to tap keys without hearing annoying key tones during a call.

### Send My Phone Number

Selecting this option sends DTMF (Dual Tone Multi Frequency) tones of your phone number. Use this option when you leave your phone number for the person to return your call.

---

## **Send DTMF**

This option allows you to send DTMF tones of the numbers you have previously stored in the Send DTMF list. DTMF tones can be used to control electronic phone services, such as bank-by-phone or voice mail.

To use this option, you should store the numbers you want to send as DTMF tones, for example, the bank account number and password. See page xx.

1. After you call the service, select this option from the Busy menu when the service asks to enter the DTMF code.
2. Select the desired number in the Send DTMF list.
3. Tap **Send**.

## **Call Waiting**

You can answer an incoming call while you have a call in progress, if this service is supported by the network. Contact your service provider to activate Call Waiting.

During a call in progress, an incoming alert will sound for another incoming call.

 
### **To answer a waiting call:**

1. Tap **SEND**. The phone connects the calling party, and places the current party on hold.
2. Tap **SEND** again to switch between the two parties.

## Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the volume keys on the left side of the phone. Press  to increase and  to decrease the volume.

In the idle mode, you can adjust the key tone volume using the same keys.

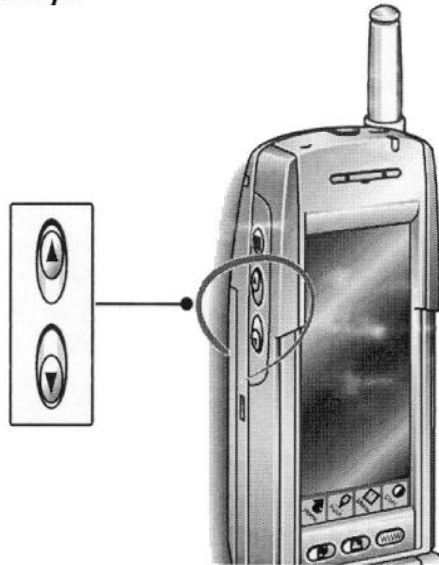

You can also adjust several sounds volume using the Control menu. See page xx.

**Note:** You cannot adjust the volume when the phone is in the manner mode.

## Selecting Bell/Vibrator

You can set your phone to signal an incoming call or message in the following ways:

- the ringer sounds.
- the phone vibrates.
- the red LED on the top of the phone flashes.
- the phone vibrates three times, then the ringer sounds if you do not answer the call.

### To select the ring type:

1. In the Phone window, tap  at the bottom of the screen. A menu list appears.
2. Select **Ring/Vibrate** from the **Setup** menu.



3. Select the desired ring type, then tap **OK**.



## Quick Switching to Manner Mode

You can quickly switch your phone to vibration mode with a touch of # key on the Phone window.

### To switch to the manner mode:

Touch and hold the # key on the Phone window until  icon and **Go To Manner Mode** displays on the screen. Your phone goes to the vibration mode immediately.

Touch and hold the # key again to resume the phone's alert type, which was previously set. For further details, see page xx.

This feature is convenient when you are in a hurry to mute the phone's ringer, in a theater, for example.

When the phone is in manner mode, the following tones type will be changed as follows:

Ring tone and alarm tone: vibrates and the lamp on the top of the phone flickers.

- Key tone: muted
- Schedule alarm: vibrates
- Message alert: lamp on the top of the phone flickers.
- Call drop alert: not sound
- Automatic voice dial: not activated

 
## Viewing Calls List

Your phone stores up to 20 incoming calls and 20 outgoing calls information. You can view the incoming and outgoing calls list independently and dial a number from the list. You can also save or delete the number.

### To view the calls list:

1. In the Phone window, tap  at the bottom of the screen. A menu list appears.
2. Select **Outgoing** from the **Calls** menu for outgoing calls and **Incoming** for incoming calls .
3. The selected calls list appears. The date/time stamp displays for each log.

If there is an internal Address Book match, the name displays. If not, only the phone number displays.  symbol indicates you have successfully dialed or received the call.  symbol indicates you have not connected or missed the call.

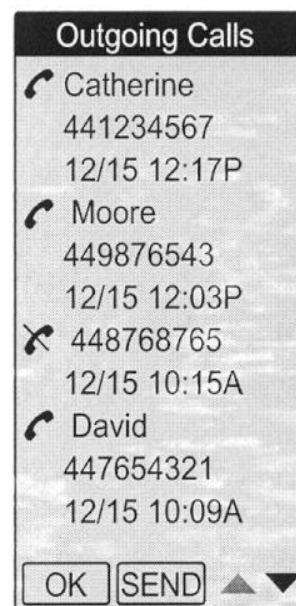

4. To scroll through the list, tap  or  in the lower right corner of the screen.

5. To dial the selected number highlighted, tap **SEND**

To delete or save the selected number, tap  and select the corresponding menu item.

**Note:** In case of duplicate entries, the phone stores the number with each time and date in which the call arrives.

## Viewing Air Time

You can review the air time of the most recent call, as well as total air time for all calls since the last reset action. You can also reset the call timer.

**To review the air time:**

1. In the Phone window, tap  at the bottom of the screen. A menu list appears.
2. Select **Air Time** from the **Calls** menu.

3. The Air Time window appears. You can review the last call time, the total number of calls and the air time for all voice calls and data calls, independently, since the last reset action.

| Air Time         |       |
|------------------|-------|
| Last Call        |       |
| 441234567        |       |
| 02min 11sec      |       |
| Total Calls      |       |
| Voice Calls      |       |
| Total 6 Calls    |       |
| 02hr 10min 34sec |       |
| Data Calls       |       |
| Total 2 Calls    |       |
| 00hr 58min 12sec |       |
| OK               | Reset |

4. If you want to reset the call timer, tap **Reset**, then **OK**.

 
 
To exit, tap **OK**.

# The Menu System

The menu system of your phone allows you to control the phone's functions and to customize them to suit your personal preferences. Each menu has a set of options you can choose from. Some of the options contain sub menus with additional options.

## Accessing a Menu Item

1. Tap  on the menu bar at the bottom of the screen to bring up the Home menu.

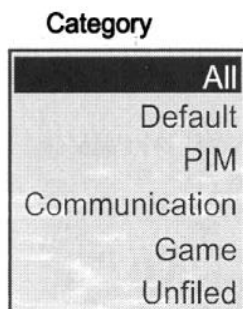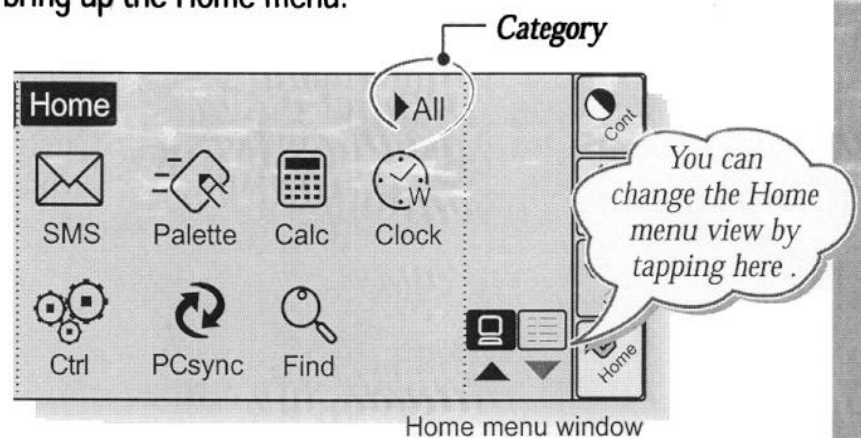

2. To scroll through the menus, tap  or  in the right corner of the window.

You can sort the menus according to a selected category. To sort the menus, tap the category field in the upper right side of the window and select one from the pop-up list as shown left.

3. If the selected menu has additional sub options, tapping  at the bottom of the window opens a menu bar on the screen (This varies depending on the menu you have selected).
4. Select a menu tab, if there is more than one item. Then select a menu option from the pull-down list.

## Brief Description on Home Menu Functions



Used for managing voice calls. In the Phone window, you can access many Calls options, SMS and Setup options by tapping  at the bottom of the window.



You can surf Internet with the AnyWeb browser. Also, you can get AnyWeb service, which enables you to easily access Web-based, interactive information and services, such as stock trading, banking services, directory services, flight schedules, and train and bus timetables.



Enables you to send and receive e-mail on your phone.



You can view and maintain detailed information about personal and business numbers with the accompanying names. You can add, change and delete address information, including notes, and quickly search for a particular address. You can also make calls quickly using phone numbers in the phone's Address.



Use this menu to keep track of your schedule. You can schedule appointments and recurring events. You can even have the phone remind you automatically of an upcoming commitment. It's easy to change or delete events, as necessary. You can view the information in your calendar by the day, the week, or the agenda.



You can set the phone to answer calls automatically with a recorded outgoing announcement.



It keeps track of the tasks that you enter, including their priorities and due dates, and lets you check them off as you complete them. You can even include recurring tasks and associated reminders with particular items.



This feature allows you to write a memo (including a graphic image) on the screen. You can send the memo on the phone.



You can manage voice, text or paging messages you send and receive.



This feature allows you to make your handwriting e-message on the touch screen. You can also send and receive the message between the SCH-i201 users.



### **Calc** (Calculator)

Use this function to perform common calculations.



### **Clock**

Use this menu to set the system clock for your phone and to keep track of the time and date around the world. You can also set alarms via this menu.



### **Cntl** (Control)

Contains security and other system-related feature settings.



### **Pcsync** (PC Synchronization)

With the supplied CD-ROM, if you built your phone database on the PC, use this menu to transfer the data into your phone. You can also load the data, in your phone, to the PC.



### **Find**

You can find data in your phone's internal Address, Date, ToDo, Memo and SMS.



### **Othello**

You can enjoy the Othello game.

 
## Opening Text and Number Input Screen

When you set a menu function and you are asked to enter a number, name, or message on the screen, a cursor flashes on the field.

Tap  at the bottom of the screen. The text input window opens.


Your phone provides two ways to enter text:

- **Pen mode:** allows you to write letter, number and symbols directly on the screen.
- **Keyboard mode:** allows you to select the desired letter, number and symbol on the keyboard, which appears on the screen.

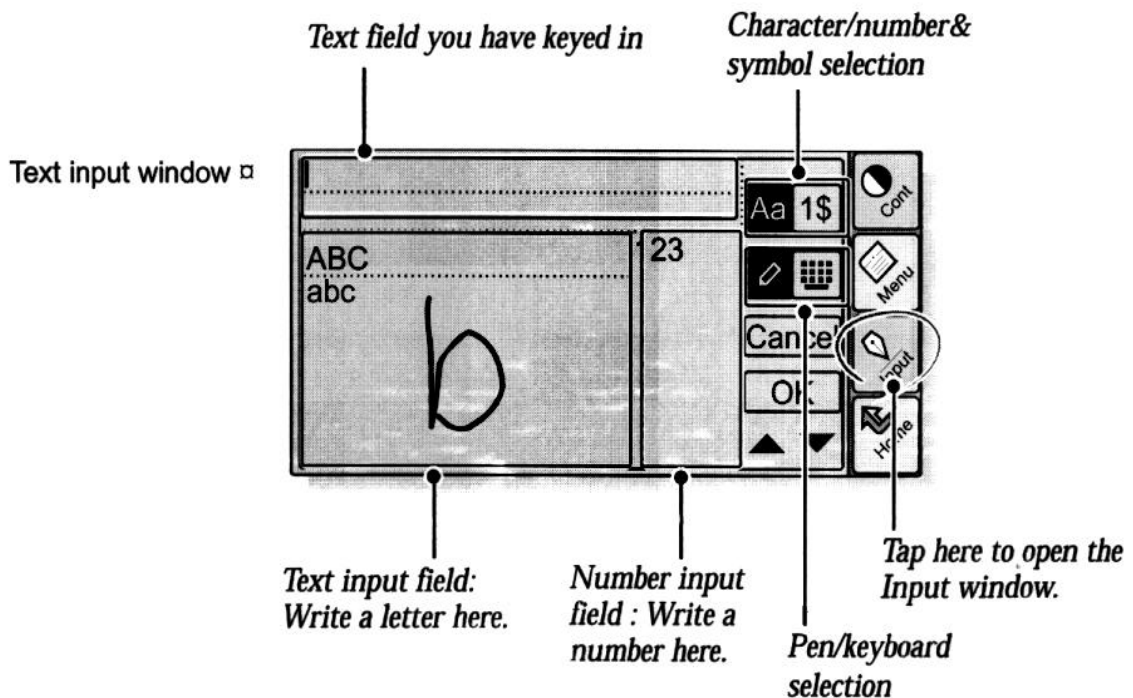

## **To Enter Text in Pen Mode**

 1. In the text input window, select  on the right column of the window to write a text directly on the screen.
2. Write in the text input field, one character at a time, as you would normally on paper. To reduce an unrecognizable letter, refer to 'How To Write Characters To Increase Recognition Accuracy' on page xx.
- If you want to include a number, write a number on the number input field. See the page xx.
3. If you include a special symbol, tap  to open the symbol input window. For information on the symbols, available in the pen mode, see page xx.

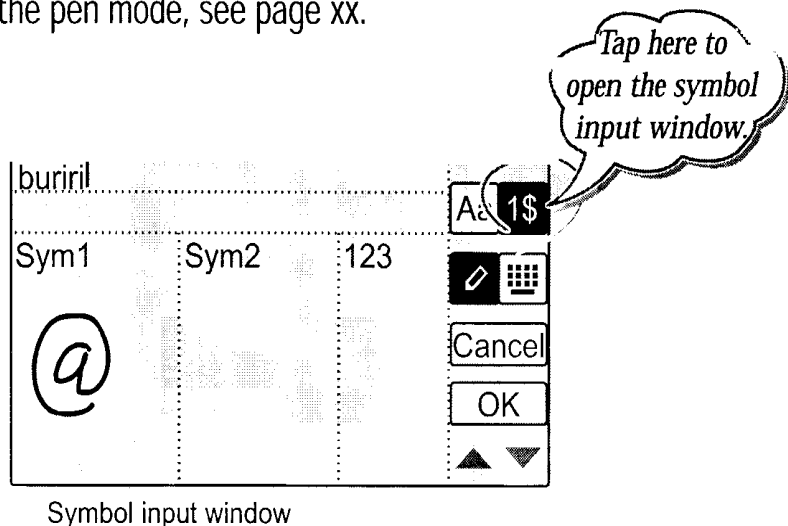

4. When the desired text is filled in, tap **OK**.

## HOW TO WRITE CHARACTERS TO INCREASE RECOGNITION ACCURACY

### Alphabet

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| Q | A | b | B | C | d | D | e | E | f |
| F | g | G | h | I | i | j | J | k | i |
| L | m | M | n | O | p | q | Q | r | R |
| S | t | u | v | w | X | x | y | z |   |

### Numbers

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|   |   |   |   |   | 5 |   | 7 | 8 |   |

### Symbols

 
These symbols should be written inside upper one-third area.

|   |    |    |    |   |   |   |   |   |   |
|---|----|----|----|---|---|---|---|---|---|
| ! | ## | ## | \$ | % | % | & | ^ | ^ | ^ |
| ^ | ×  | ×  | +  | + | — | / | : | : | : |
| : | <  | =  | >  | ? | @ | [ | ] | ] | ] |
| { |    | }  | ~  | / | w |   |   |   |   |


These symbols should be written inside lower one-third area.

## To Change Letter Case

To change the letter case, write a letter in the corresponding input field.

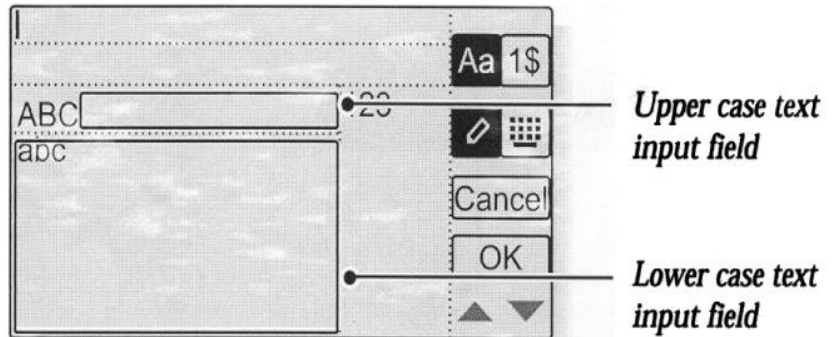


 If you write a letter (even though you write a lower case letter) in the upper case input field, the phone recognizes it as an upper case letter. And if you write in the lower case input field, the phone recognizes it as a lower case letter.

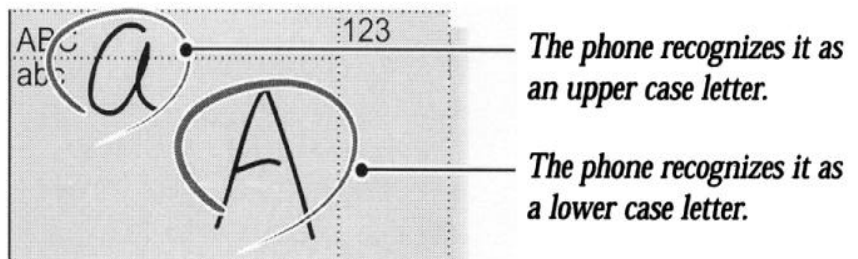

## To Clear Last Entry

 Write a line, in any input field, in the arrow direction as shown right. Each time you write a line in the direction, the last digit is cleared.

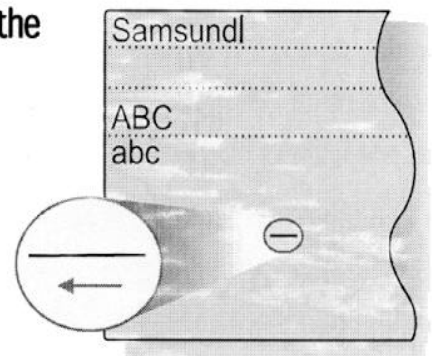

## To Edit a Portion in the Middle of Text or Number

 
If you want to edit or clear a wrong digit in the middle of a name or number, tap the wrong digit (to place the cursor behind the digit), on page 36. and draw a line in the input field, as described on page 36.

You can select a part of the name or number by dragging the stylus. The cursor flashes in front of the selection.

To clear the part, draw a line in the input field. If you wish, you can enter correct numbers or letters in the place.


## To Insert a Space

Write a line, in the text input field, in the arrow direction as shown right.

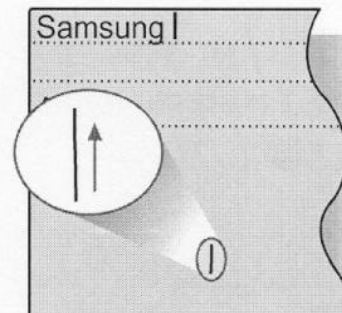


## To Start with a Next Line

 This feature is equivalent to pressing the **Enter** key on the computer keyboard. Write a line in the arrow direction as shown right.

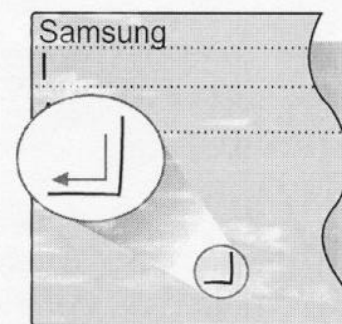


## To Enter Text in Keyboard Mode

 1. In the text input window, select  to select characters on the keyboard, which appears on the window.

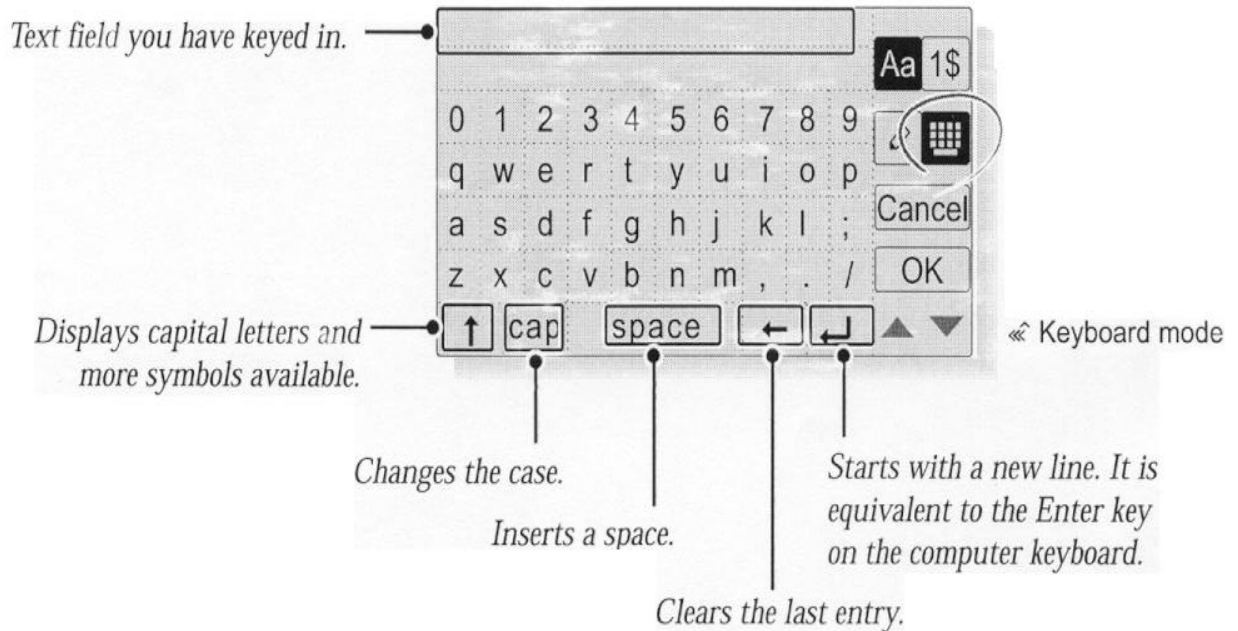

2. Tap the desired number or letter on the keyboard. The selected number or letter displays in the text field.

 3. If you want to include a special symbol, tap  to open the symbol keyboard.

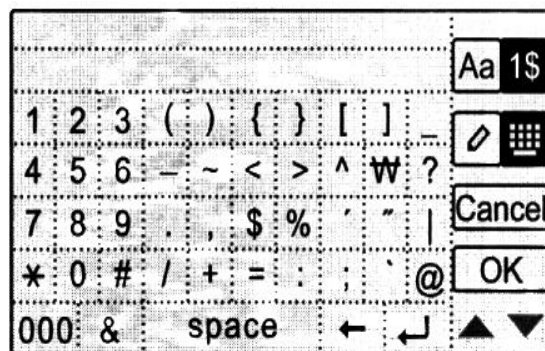

4. When the desired text is filled in, tap **OK**.


# Control

 You can personalize and customize your phone by adjusting bell and sounds, display, and setting security menu options.

## Accessing Control Menu

1. Tap  to bring up the Home menu, then select the  icon in the Home menu.

If necessary, tap  in the lower right corner of the screen to find the  icon in the Home menu window.

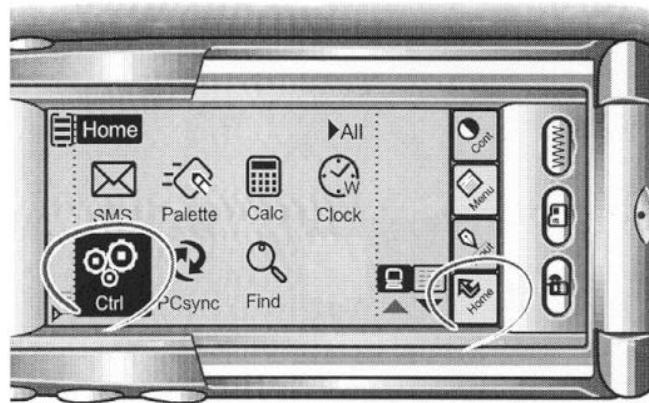

2. The Control window opens. The following menu options are available in the window. Select the desired menu icon.

